


**IBM 6361 Mag Card Unit
Customer Setup Guide**

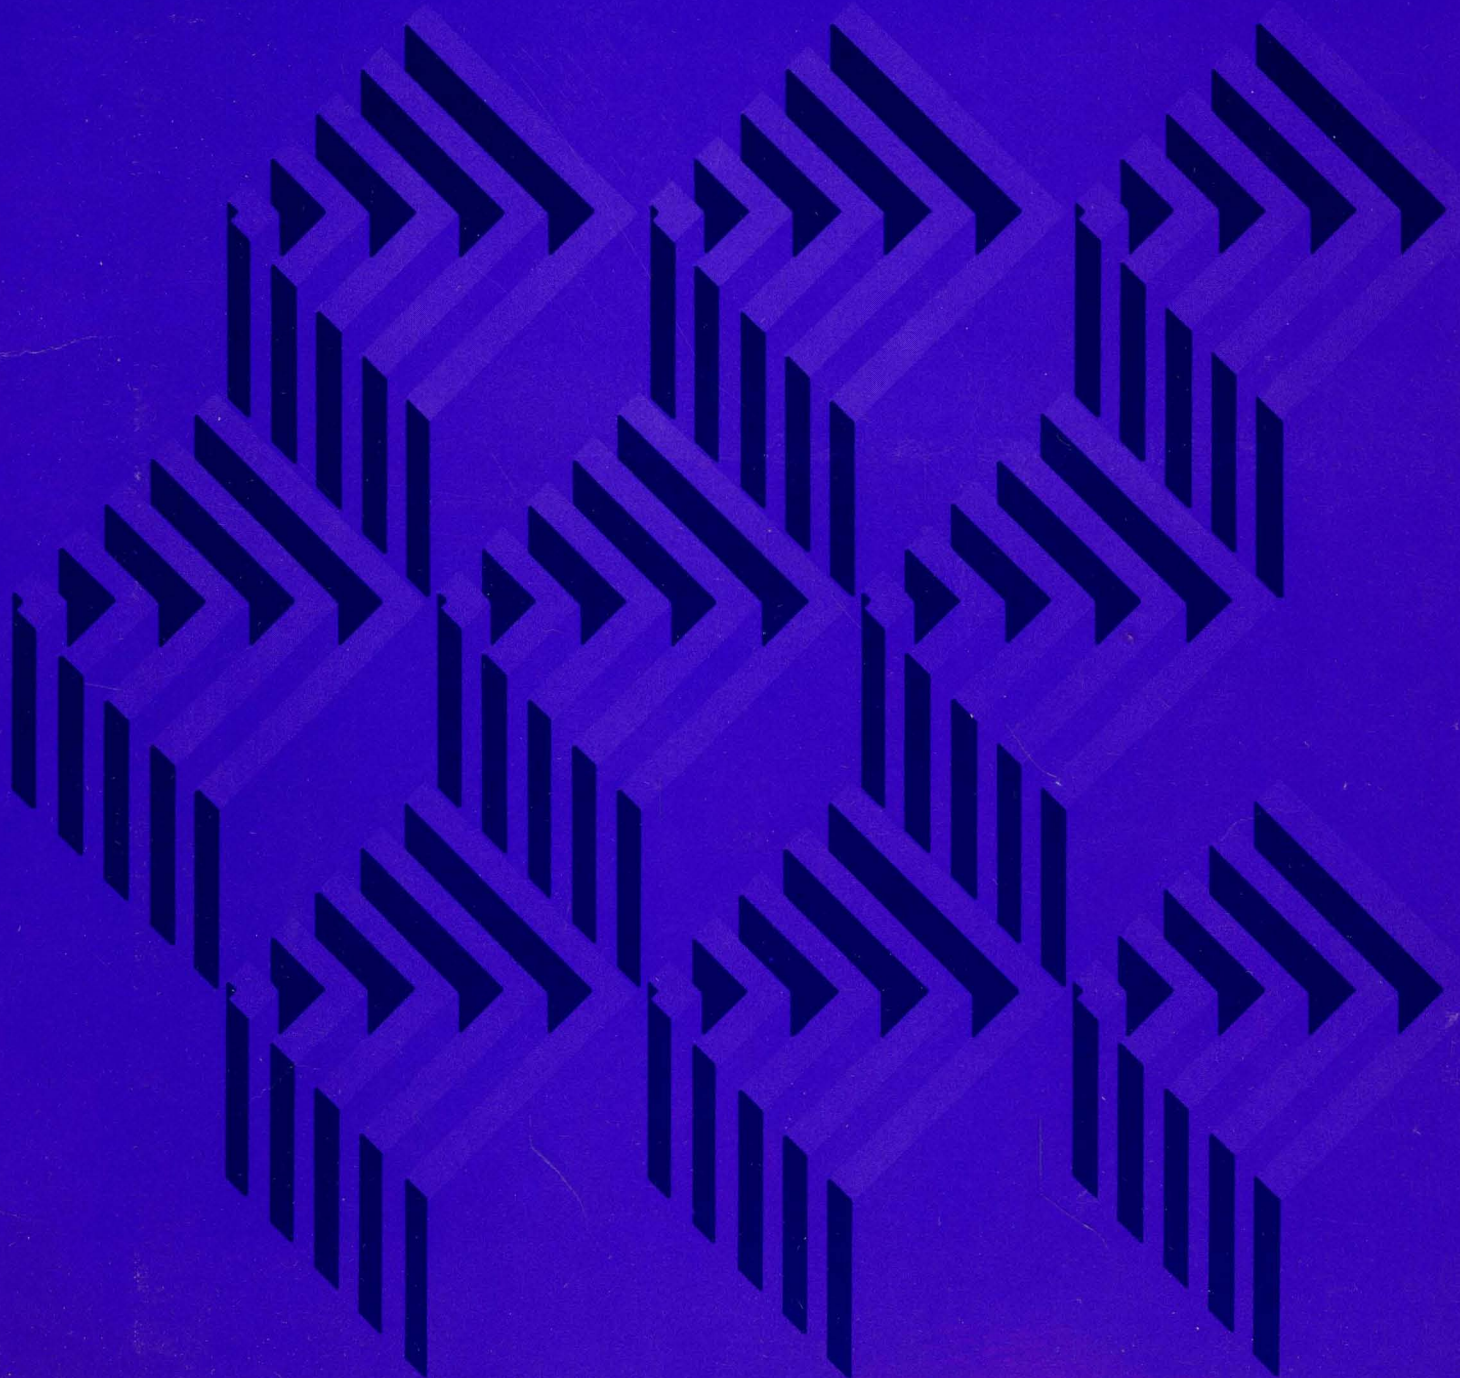

G544-2002-0

IBM 6361 Mag Card Unit Customer Setup Guide



Warning: This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

First Edition (July 1981)

Changes are periodically made to the information herein; these changes will be incorporated in new editions of this publication.

Use this publication only for the purposes stated in the *Preface*.

Publications are not stocked at the address below. Requests for copies of IBM publications and for technical information about the system should be made to your IBM representative or to the branch office serving your locality.

This publication could contain technical inaccuracies or typographical errors. Use the Reader's Comment Form at the back of this publication to make comment about this publication. If the form has been removed, address your comments to IBM Corporation, Information Development, Department 95H, Building 998, 11400 Burnet Road, Austin, Texas, 78758. IBM may use and distribute any of the information you supply in any way it believes appropriate without incurring any obligation whatever. You may, of course, continue to use the information you supply.

Preface

Purpose

This publication provides step-by-step instructions for setting up the IBM 6361 Mag Card Unit and cable-connecting it to the IBM Displaywriter System.

Audience

This publication is intended for IBM Displaywriter System customer personnel who are responsible for setting up the system in the work area.

Contents

This guide has two sections:

- Section 1, "Operator Information," contains information the operator needs if setup problems are encountered.
- Section 2, "Setting up the IBM 6361 Mag Card Unit," contains instructions for placing and cabling the Mag Card Unit to the work station.

Prerequisite Reading

The *Customer Planning Guide for the IBM Displaywriter System*, G544-0852. This publication provides the information needed to successfully prepare for the arrival and setup of the system. The guide discusses such topics as system component sizes and weights, furniture dimensions, supplies, and physical, electrical, and environmental requirements of the system.

Related Publication

The *IBM Displaywriter System Customer Setup Guide*, G544-0858. This guide gives detailed step-by-step instructions for system setup. With this guide, customer personnel can unpack system components, arrange them in the work area, connect power cords and intermachine cables, prepare the units for operation, and run the system verification tests. This guide is shipped with the system.

Contents

Section 1. Operator Information 1

Section 2. Setting Up The IBM 6361 Mag Card Unit 3

Section 1. Operator Information 1

SECTION 1. OPERATOR INFORMATION

Shipping Damage

If your Mag Card Unit has physical *shipping damage* that *will prevent setup*, stop setup and call your local IBM branch office for service.

If the shipping damage is minor, and *will not prevent setup*, complete setup and then call your local IBM branch office for service.

Missing Items

If your Mag Card Unit arrives with any items missing, such as magnetic cards used for setup, call your IBM marketing representative.

Setup Problems

If you have any setup problems you cannot correct, call the IBM Office Systems Support Center (OSSC) for Assistance. You must have the system's access code when you call for assistance.

Access Code

The last seven digits of the IBM 6580 serial number are the access code. This code is required whenever you call the IBM Office Systems Support Center (OSSC) for assistance.

Telephone Numbers

Use one of the following toll free telephone numbers to call for assistance:


U.S. Outside of Texas (Including Puerto Rico)	800-527-9293
Alaska, Hawaii and Guam	0-214-748-1560 (Call Collect)
Within Texas	1-800-492-9774
Within Dallas	748-1560

Section 2. Setting Up the IBM 6361 Mag Card Unit

SECTION 2. SETTING UP THE IBM 6361 MAG CARD UNIT


STEP 1. Place the Mag Card Unit in its permanent location in the work area.

Route the cable (number 1) to the work station electronics module.

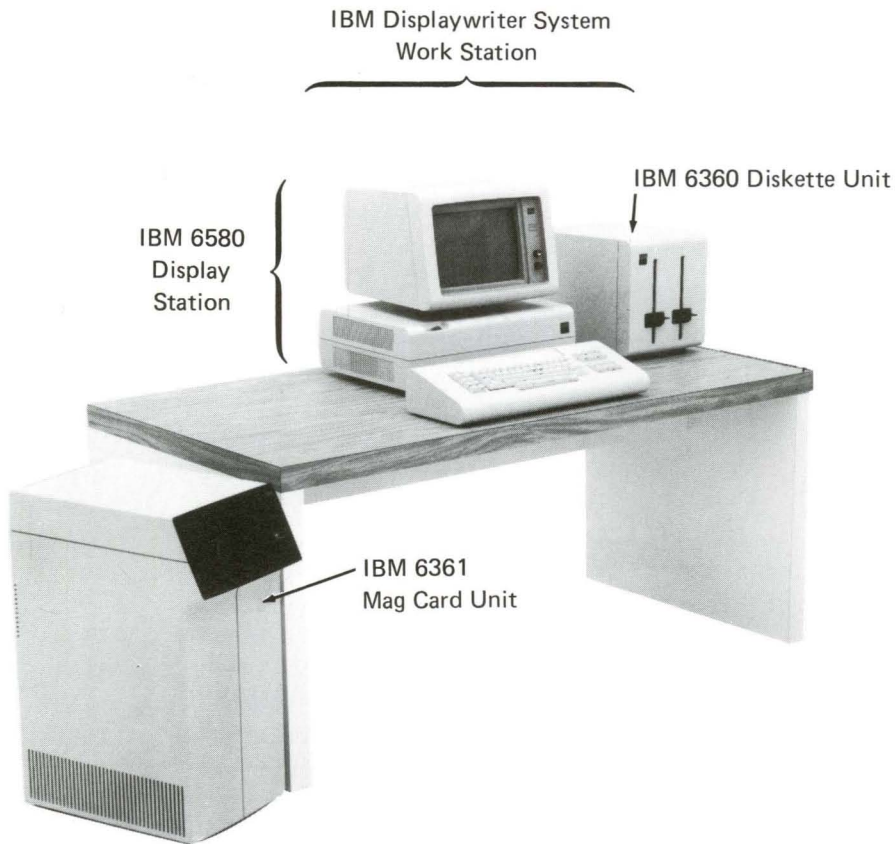


Note: The Mag Card Unit can be placed at the right or the left of the work station for operator convenience.


STEP 2. Make sure the work station power switch is OFF, then connect the Mag Card Unit cable 1 to socket 1 on the work station electronics module.

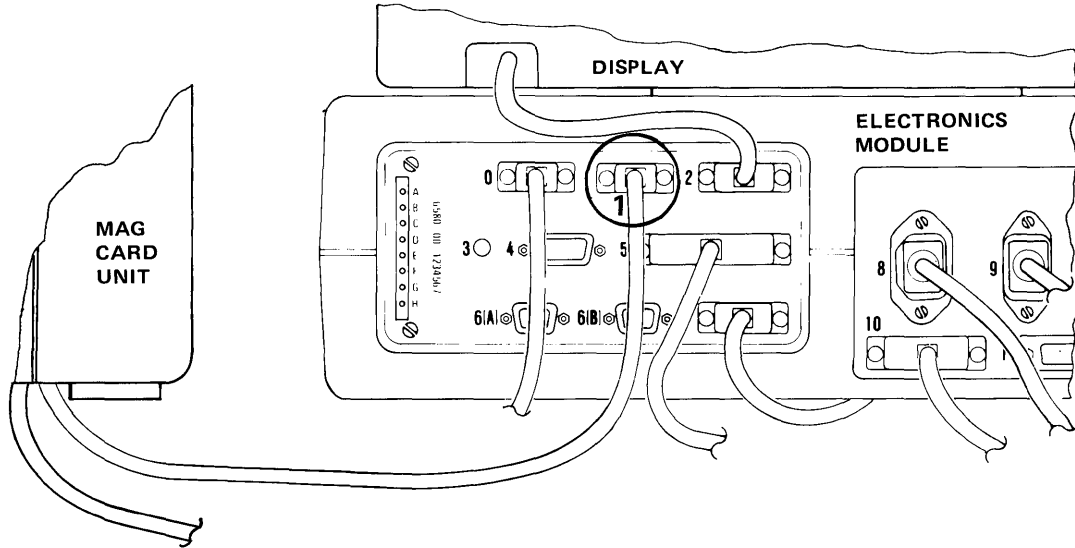


When connecting the cable plug, tighten the holding screws *finger tight* only.

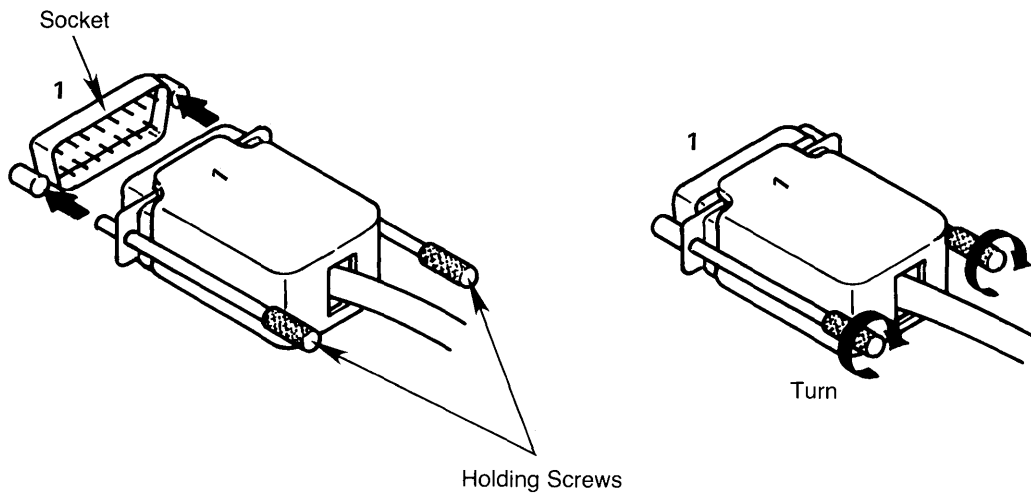

STEP 3. Connect the Mag Card Unit power cord to the wall socket.

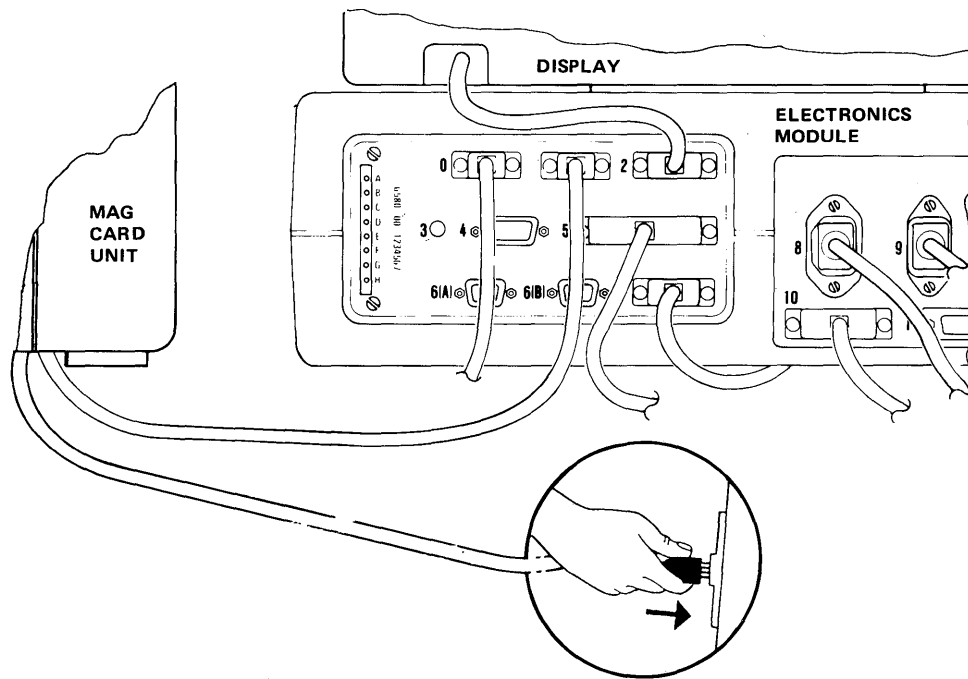


STEP 4. Turn ON the Mag Card Unit Power switch.

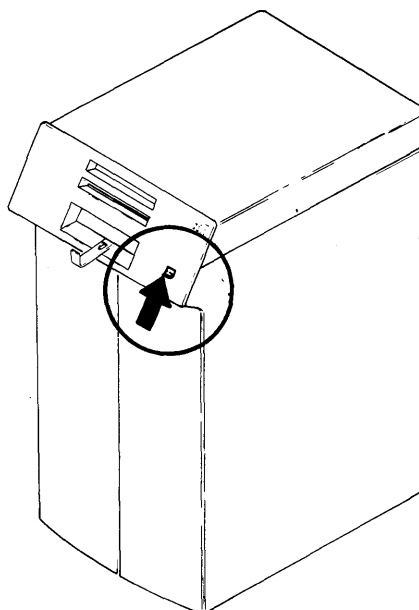


STEP 5. Locate the two magnetic cards that were shipped *with* the machine.

Insert *ONE* of the magnetic cards in the *Pack Feed Slot*, as shown. (Note the position and direction of the arrow on the card)

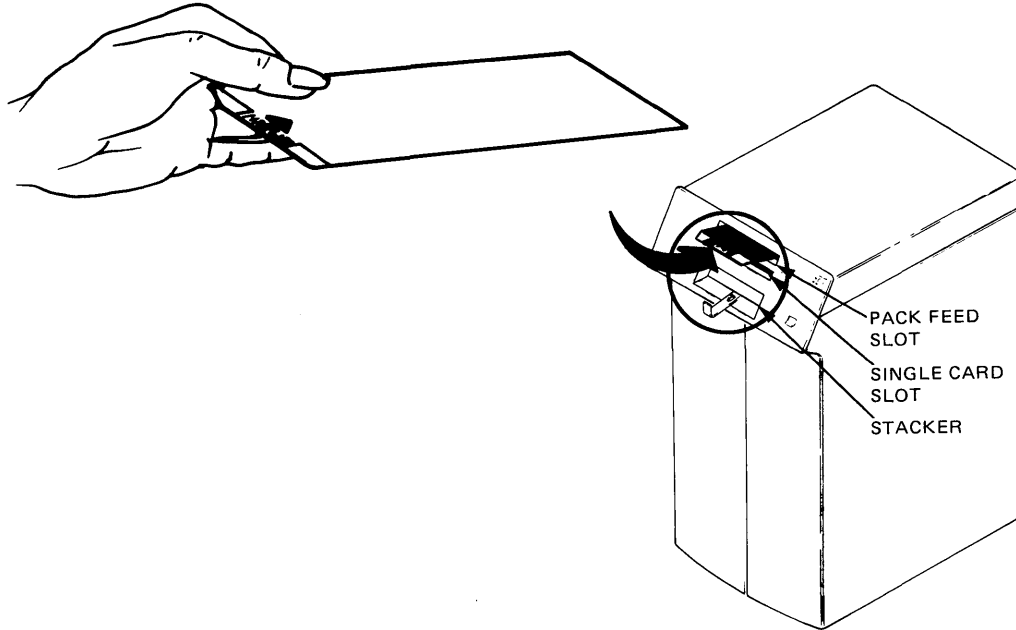

STEP 6. Make sure the Mag Card Unit has good stability (does not wobble) when it is in its final location.

If necessary, rotate the adjustable base pad (right front corner) to provide stability.

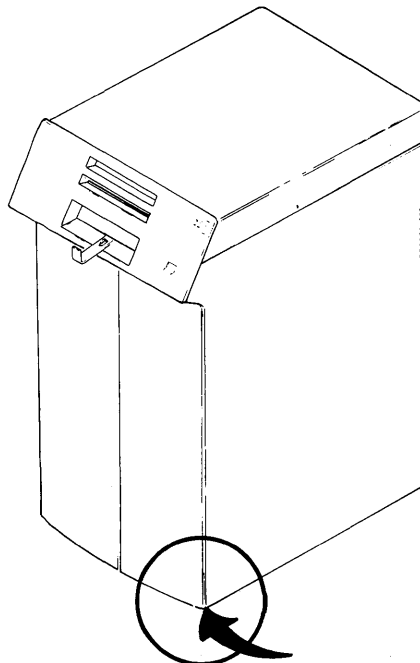

YOU HAVE COMPLETED SETUP OF THE MAG CARD UNIT.

INSTRUCTIONS FOR TESTING THE MAG CARD UNIT WITH THE IBM
DISPLAYWRITER SYSTEM ARE IN THE SYSTEM SETUP GUIDE.

This form may be used to communicate your views about this publication. They will be sent to the author's department for whatever review and action, if any, is deemed appropriate.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation whatever. You may, of course, continue to use the information you supply.

Note: *Copies of IBM publications are not stocked at the location to which this form is addressed.*

Please direct any requests for copies of publications, or for assistance in using your IBM system, to your IBM representative or to the IBM branch office serving your locality.

Possible topics for comments are:

Clarity Accuracy Completeness Organization Legibility

If you wish a reply, give your name and mailing address:

Note: Staples can cause problems with automated mail sorting equipment.
Please use pressure sensitive or other gummed tape to seal this form.

What is your occupation? _____

Number of latest Newsletter associated with this publication: _____

Thank you for your cooperation. No postage stamp necessary if mailed in the U.S.A. (Elsewhere, an IBM office or representative will be happy to forward your comments or you may mail directly to the address in the Edition Notice on the back of the title page.)

Reader's Comment Form

Cut or Fold Along Line

Fold and Tape

Please Do Not Staple

Fold and Tape




NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO 00040 AUSTIN, TEXAS

POSTAGE WILL BE PAID FOR BY ADDRESSEE

International Business Machines Corporation
Department 95H, Bldg. 998
11400 Burnet Road
Austin, Texas 78758

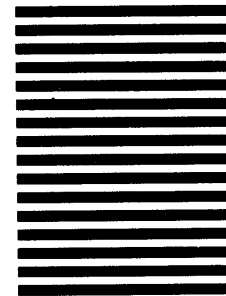

Fold and Tape


Please Do Not Staple

Fold and Tape

IBM 6361 Mag Card Unit Customer Setup Guide Printed in USA G544-2002-0



International Business Machines Corporation
Office Products Division
Parson's Pond Drive
Franklin Lakes, N. J. 07417

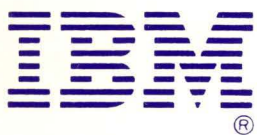

International Business Machines Corporation
Office Products Division
Parson's Pond Drive
Franklin Lakes, N.J. 07417