

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

.REM E

IDENTIFICATION

PRODUCT CODE: AC T7068 MC
PRODUCT NAME: CZKOKBO KDJ11 MEMORY MANAGEMENT DIAGNOSTIC
PRODUCT DATE: 15 MAR 84
MAINTAINER: DIAGNOSTIC ENGINEERING
AUTHORS: HENRY ENMAN, JIM PITTMAN, BARRY IRRGANG

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY DIGITAL EQUIPMENT CORPORATION. DIGITAL EQUIPMENT CORPORATION ASSUMES NO RESPONSIBILITY FOR ANY ERRORS THAT MAY APPEAR IN THIS DOCUMENT.

NO RESPONSIBILITY IS ASSUMED FOR THE USE OR RELIABILITY OF SOFTWARE ON EQUIPMENT THAT IS NOT SUPPLIED BY DIGITAL OR ITS AFFILIATED COMPANIES.

COPYRIGHT (C) 1984 BY DIGITAL EQUIPMENT CORPORATION

THE FOLLOWING ARE TRADEMARKS OF DIGITAL EQUIPMENT CORPORATION:

DIGITAL	POP	UNIBUS	MASSBUS
DEC	DECUS	DECTAPE	

E

39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55

HISTORY

.REM 6

OC7-83 REV. A
FEB-84 REV. B

FIRST RELEASE

CORRECTIONS MADE TO:

1. CORRECT VECTOR AREA MAINTENANCE PROBLEM
2. PREVENT #TESTN FROM GETTING OUT OF SYNC WHEN SKIPPING Deselected TESTS.
3. TURN CACHE MEMORY SYSTEM OFF DURING NON-CACHE TESTS.
4. ENSURE THAT CPU ERROR REGISTER IS CLEARED AFTER COMPLETION OF TEST THAT MIGHT CAUSE IT TO BE SET.
5. SAVE PC AND CONTENTS OF R6 ON UNEXPECTED INTERRUPTS

ADDITIONAL TESTS TO IMPROVE TEST COVERAGE INCLUDE:

1. NON EXISTANT MEMORY TRAP TEST

6

.REM E

56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78

TABLE OF CONTENTS

- 1.0 GENERAL INFORMATION
- 1.1 PROGRAM ABSTRACT
- 1.2 SYSTEM REQUIREMENTS
- 1.3 RELATED DOCUMENTS AND STANDARDS
- 1.4 DIAGNOSTIC HIERARCHY PREREQUISITES
- 1.5 ASSUMPTIONS
- 2.0 OPERATING INSTRUCTIONS
- 2.1 LOADING AND STARTING PROCEDURE
- 2.2 PROGRAM OPTIONS
- 2.3 OPERATION UNDER APT
- 3.0 ERROR INFORMATION
- 4.0 PROGRESS REPORT

E

.REM 6

79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134

1.0 GENERAL INFORMATION

1.1 PROGRAM ABSTRACT

THIS IS AN APT COMPATIBLE VERSION OF THE KDJ11 MEMORY MANAGEMENT DIAGNOSTIC. IT FOCUSES ON TESTING THE FUNCTIONALITY OF THE MEMORY MANAGEMENT FEATURES. THE TEST REQUIRES 4 MEGABYTES OF QBUS MEMORY TO FULLY TEST THE MMU ADDER. A SUBSET OF THE ADDER IS TESTED IF LESS THAN 4 MEGABYTES OF MEMORY IS AVAILABLE (MINIMUM OF 28 KBYTES). IN ADDITION; FOR TESTING IN QBUS SYSTEMS WITH ONLY 18 ADDRESS BITS, A MEANS IS PROVIDED TO SKIP TESTS WHICH REQUIRE 22 BIT ADDRESSES. THIS FEATURE IS IMPLEMENTED BY SETTING BIT 08 IN THE SOFTWARE SWITCH REGISTER (LOCATION 176) TO A ONE. DEFAULT IS TO TEST 22 BIT ADDRESSES.

1.2 SYSTEM REQUIREMENTS

KDJ11-A PROCESSOR MODULE
ENSURE THAT HALT TRAP OPTION IS DISABLED (JUMPER W9 INSTALLED)
32KW MEMORY
Q-22 BACKPLANE (18 BIT QBUS MAY BE USED WITH REDUCED TEST COVERAGE)
SERIAL LINE UNIT AND CONSOLE TERMINAL (CONSOLE TERMINAL NOT REQUIRED FOR APT)

1.3 RELATED DOCUMENTS AND STANDARDS

KDJ11-A MODULE SPECIFICATION REV 2.2
PDP11 MAINDEC SYSMAC PACKAGE
J11 CONTROL CHIP SPECIFICATION 21-17679-00
J11 DATA CHIP SPECIFICATION 21-17677-00

1.4 DIAGNOSTIC HIERARCY PREREQUISITES

THE KDJ11 CPU DIAGNOSTIC MUST RUN SUCCESSFULLY PRIOR TO RUNNING THE MEMORY MANAGEMENT TEST.

1.5 ASSUMPTIONS

IT IS ASSUMED THAT THE DIAGNOSTIC OPERATOR IS FAMILIAR WITH THE XXDP+ OPERATING SYSTEM AND THE J11 MICRO-ODT.

2.0 OPERATING INSTRUCTIONS


2.1 LOADING AND STARTING PROCEEDURE

LOAD PROGRAM INTO MEMORY USING STANDARD XXDP+ PROCEEDURES. THE PROGRAM IS STARTED BY LOADING ADDRESS 200 AND USING THE J11 MICRO-ODT G COMMAND TO START. THE PROGRAM IDENTIFICATION MESSAGE WILL BE TYPED AFTER THE FIRST PASS OF THE COMPLETE PROGRAM.

2.2 PROGRAM OPTIONS

135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184

THE FOLLOWING ASSIGNMENTS HAVE BEEN MADE FOR THE KDJ11 A
DIAGNOSTIC SWITCH REGISTER BITS:

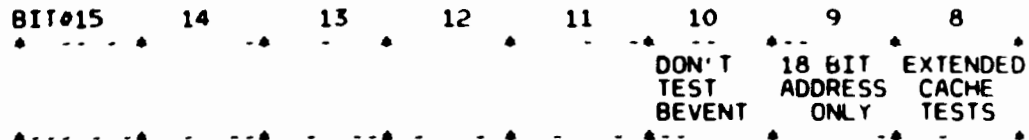

DEFAULT SETTINGS ARE TO TEST 22 BIT ADDRESSES. THE OTHER BITS HAVE
NO EFFECT ON THE OPERATION OF THE PROGRAM.

PRIOR TO EXECUTING THE FIRST PASS OF THE DIAGNOSTIC THE OPERATOR
WILL BE DIRECTED TO SET THE SWITCH REGISTER TO INDICATE WHETHER
THE KDJ11-A UNDER TEST IS IN A SYSTEM CONFIGURED FOR 18 OR 22 BIT
ADDRESSING. AN 18 BIT ADDRESS CONFIGURATION SHOULD BE INDICATED IF
ANY 18 ADDRESS BIT ONLY MEMORY BOARDS RESIDE IN THE SYSTEM OR IF
THE SYSTEM BACKPLANE DOES NOT SUPPORT 22 ADDRESS BITS.

TO CHANGE THE SWITCH REGISTER; HALT THE PROGRAM, AND EITHER RESTART
THE PROGRAM AT 200 ANSWERING THE INITIAL QUESTIONS, OR LOAD THE
SOFTWARE SWITCH REGISTER (ADDRESS 176) WITH THE DESIRED OPTIONS AND
RESTART THE PROGRAM USING THE J11 MICRO ODT P COMMAND.

2.3 OPERATION UNDER APT

THERE ARE NO DIFFERENCES IN THE EXECUTION OF THIS DIAGNOSTIC
WHEN OPERATING IN AN APT ENVIRONMENT. PROBLEMS CAUSED BY THE
ASYNCHRONOUS HALTS OF THE DIAGNOSTIC BY THE APT MONITOR HAVE
NOT BEEN NOTED.

3.0 ERROR INFORMATION

ERRORS WILL CAUSE THE FOLLOWING ERROR MESSAGE TO BE PRINTED:

ERROR DURING MMU TESTING
ERROR # = (UNIQUE ERROR NUMBER)
ERROR PC = (PC AT TIME OF ERROR)

THE ERROR WILL THEN BE REPORTED TO APT AND THE PROGRAM
WILL HALT.

4.0 PROGRESS REPORT

AT THE END OF EACH PASS THE DIAGNOSTIC NAME AND PASS COUNT ARE PRINTED.

```

185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205

```

```

.TITLE PROGRAM HEADER AND TABLES
.SBTTL PROGRAM HEADER

.MCALL NEWTST,ERRDEF,,EQUAT,,KT11,,%4OCAT,,%EOP,,%APTBL5,SETUP
.MCALL .%TYPE,,%TYPDEC,ERRDF,BGNTST,ENDTST,BGNMOD,ENDMOD,CKLOOP
.MCALL .HEADER,,SETUP,,%TRAP,BGNSUB,ENDSUB,,%ACT11,,%APTHDR
.MCALL .%ATYPE,,%ERROR,,%TYPOCT,,%READ

.TITLE KDJ11: A MEMORY MANAGEMENT DIAGNOSTIC
;*COPYRIGHT (C) MARCH,1984
;*DIGITAL EQUIPMENT CORP.
;*MAYNARD, MASS. 01754
;*
;*
;*THIS PROGRAM WAS ASSEMBLED USING THE PDP-11 MAINDEC SYSMAC
;*PACKAGE (MAINDEC-11-DZQAC-C3), JAN 19, 1977.
;*
$TN=1
$SWR=160000 ;:HALT ON ERROR, LOOP ON TEST, INHIBIT ERROR TYP0UT

```

```

C00001
160000

```

```

206 .TITLE GLOBAL AREAS
207 .SBTTL GLOBAL EQUATES SECTION
208
209 ***
210 ; THE GLOBAL EQUATES SECTION CONTAINS PROGRAM EQUATES THAT
211 ; ARE USED IN MORE THAN ONE TEST.
212 ;
213 .SBTTL BASIC DEFINITIONS
214
215 ;*INITIAL ADDRESS OF THE STACK POINTER *** 1000 ***
216 001000 STACK= 1000
217 .EQUIV EMT,ERROR ;;BASIC DEFINITION OF ERROR CALL
218 .EQUIV IOT,SCOPE ;;BASIC DEFINITION OF SCOPE CALL
219
220 ;*MISCELLANEOUS DEFINITIONS
221 000011 MT= 11 ;;CODE FOR HORIZONTAL TAB
222 000012 LF= 12 ;;CODE FOR LINE FEED
223 000015 CR= 15 ;;CODE FOR CARRIAGE RETURN
224 000200 CRLF= 200 ;;CODE FOR CARRIAGE RETURN LINE FEED
225 177776 PS= 177776 ;;PROCESSOR STATUS WORD
226 .EQUIV PS,PSW
227 177774 STKLMT= 177774 ;;STACK LIMIT REGISTER
228 177772 PIRQ= 177772 ;;PROGRAM INTERRUPT REQUEST REGISTER
229 177570 DSWR= 177570 ;;HARDWARE SWITCH REGISTER
230 177570 DDISP= 177570 ;;HARDWARE DISPLAY REGISTER
231
232 ;*GENERAL PURPOSE REGISTER DEFINITIONS
233 000000 R0= #0 ;;GENERAL REGISTER
234 000001 R1= #1 ;;GENERAL REGISTER
235 000002 R2= #2 ;;GENERAL REGISTER
236 000003 R3= #3 ;;GENERAL REGISTER
237 000004 R4= #4 ;;GENERAL REGISTER
238 000005 R5= #5 ;;GENERAL REGISTER
239 000006 R6= #6 ;;GENERAL REGISTER
240 000007 R7= #7 ;;GENERAL REGISTER
241 000006 SP= #6 ;;STACK POINTER
242 000007 PC= #7 ;;PROGRAM COUNTER
243
244 ;*PRIORITY LEVEL DEFINITIONS
245 000000 PRO= 0 ;;PRIORITY LEVEL 0
246 000040 PR1= 40 ;;PRIORITY LEVEL 1
247 000100 PR2= 100 ;;PRIORITY LEVEL 2
248 000140 PR3= 140 ;;PRIORITY LEVEL 3
249 000200 PR4= 200 ;;PRIORITY LEVEL 4
250 000240 PR5= 240 ;;PRIORITY LEVEL 5
251 000300 PR6= 300 ;;PRIORITY LEVEL 6
252 000340 PR7= 340 ;;PRIORITY LEVEL 7
253
254 ;*"SWITCH REGISTER" SWITCH DEFINITIONS
255 100000 SW15= 100000
256 040000 SW14= 40000
257 020000 SW13= 20000
258 010000 SW12= 10000
259 004000 SW11= 4000
260 002000 SW10= 2000
261 001000 SW09= 1000
  
```

262	000400	SW08=	400
263	000200	SW07=	200
264	000100	SW06=	100
265	000040	SW05=	40
266	000020	SW04=	20
267	000010	SW03=	10
268	000004	SW02=	4
269	000002	SW01=	2
270	000001	SW00=	1
271		.EQUIV	SW09,SW9
272		.EQUIV	SW08,SW8
273		.EQUIV	SW07,SW7
274		.EQUIV	SW06,SW6
275		.EQUIV	SW05,SW5
276		.EQUIV	SW04,SW4
277		.EQUIV	SW03,SW3
278		.EQUIV	SW02,SW2
279		.EQUIV	SW01,SW1
280		.EQUIV	SW00,SW0
281			
282		; *DATA BIT DEFINITIONS (BIT00 TO BIT15)	
283	100000	BIT15=	100000
284	040000	BIT14=	40000
285	020000	BIT13=	20000
286	010000	BIT12=	10000
287	004000	BIT11=	4000
288	002000	BIT10=	2000
289	001000	BIT09=	1000
290	000400	BIT08=	400
291	000200	BIT07=	200
292	000100	BIT06=	100
293	000040	BIT05=	40
294	000020	BIT04=	20
295	000010	BIT03=	10
296	000004	BIT02=	4
297	000002	BIT01=	2
298	000001	BIT00=	1
299		.EQUIV	BIT09,BIT9
300		.EQUIV	BIT08,BIT8
301		.EQUIV	BIT07,BIT7
302		.EQUIV	BIT06,BIT6
303		.EQUIV	BIT05,BIT5
304		.EQUIV	BIT04,BIT4
305		.EQUIV	BIT03,BIT3
306		.EQUIV	BIT02,BIT2
307		.EQUIV	BIT01,BIT1
308		.EQUIV	BIT00,BIT0
309			
310		; *BASIC "CPU" TRAP VECTOR ADDRESSES	
311	000004	ERRVEC=	4 ;: TIME OUT AND OTHER ERRORS
312	000010	RESVEC=	10 ;: RESERVED AND ILLEGAL INSTRUCTIONS
313	000014	TBITVEC=	14 ;: "T" BIT
314	000014	TRTVEC=	14 ;: TRACE TRAP
315	000014	BPTVEC=	14 ;: BREAKPOINT TRAP (BPT)
316	000020	IOTVEC=	20 ;: INPUT/OUTPUT TRAP (IOT) **SCOPE**
317	00C024	PWRVEC=	24 ;: POWER FAIL


```

318      000030      EMTVEC= 30      ;;EMULATOR TRAP (EMT) **ERROR**
319      000034      TRAPVEC=34      ;;"TRAP" TRAP
320      000060      TKVEC= 00      ;;TTY KEYBOARD VECTOR
321      000064      TPVEC= 64      ;;TTY PRINTER VECTOR
322      000240      PIRQVEC=240    ;;PROGRAM INTERRUPT REQUEST VECTOR
323      .SBTTL      MEMORY MANAGEMENT DEFINITIONS
324
325      ;*KT11 VECTOR ADDRESS
326
327      000250      MMVEC= 250
328
329      ;*KT11 STATUS REGISTER ADDRESSES
330
331      177572      SRO= 177572
332      177574      SR1= 177574
333      177576      SR2= 177576
334      172516      SR3= 172516
335
336      ;*USER "I" PAGE DESCRIPTOR REGISTERS
337
338      177600      UIPDR0= 177600
339      177602      UIPDR1= 177602
340      177604      UIPDR2= 177604
341      177606      UIPDR3= 177606
342      177610      UIPDR4= 177610
343      177612      UIPDR5= 177612
344      177614      UIPDR6= 177614
345      177616      UIPDR7= 177616
346
347      ;*USER "D" PAGE DESCRIPTOR REGISTORS
348
349      177620      UDPDR0= 177620
350      177622      UDPDR1= 177622
351      177624      UDPDR2= 177624
352      177626      UDPDR3= 177626
353      177630      UDPDR4= 177630
354      177632      UDPDR5= 177632
355      177634      UDPDR6= 177634
356      177636      UDPDR7= 177636
357
358      ;*USER "I" PAGE ADDRESS REGISTERS
359
360      177640      UIPAR0= 177640
361      177642      UIPAR1= 177642
362      177644      UIPAR2= 177644
363      177646      UIPAR3= 177646
364      177650      UIPAR4= 177650
365      177652      UIPAR5= 177652
366      177654      UIPAR6= 177654
367      177656      UIPAR7= 177656
368
369      ;*USER "D" PAGE ADDRESS REGISTERS
370
371      177660      UDPAR0= 177660
372      177662      UDPAR1= 177662
373      177664      UDPAR2= 177664

```

374	177666	UDPAR3= 177666
375	177670	UDPAR4= 177670
376	177672	UDPAR5= 177672
377	177674	UDPAR6= 177674
378	177676	UDPAR7= 177676

;*SUPERVISOR "I" PAGE DESCRIPTOR REGISTERS

380		
381		
382	172200	SIPDR0= 172200
383	172202	SIPDR1= 172202
384	172204	SIPDR2= 172204
385	172206	SIPDR3= 172206
386	172210	SIPDR4= 172210
387	172212	SIPDR5= 172212
388	172214	SIPDR6= 172214
389	172216	SIPDR7= 172216

;*SUPERVISOR "D" PAGE DESCRIPTOR REGISTERS

390		
391		
392		
393	172220	SDPDR0= 172220
394	172222	SDPDR1= 172222
395	172224	SDPDR2= 172224
396	172226	SDPDR3= 172226
397	172230	SDPDR4= 172230
398	172232	SDPDR5= 172232
399	172234	SDPDR6= 172234
400	172236	SDPDR7= 172236

;*SUPERVISOR "I" PAGE ADDRESS REGISTERS

401		
402		
403		
404	172240	SIPAR0= 172240
405	172242	SIPAR1= 172242
406	172244	SIPAR2= 172244
407	172246	SIPAR3= 172246
408	172250	SIPAR4= 172250
409	172252	SIPAR5= 172252
410	172254	SIPAR6= 172254
411	172256	SIPAR7= 172256

;*SUPERVISOR "D" PAGE ADDRESS REGISTERS

412		
413		
414		
415	172260	SDPAR0= 172260
416	172262	SDPAR1= 172262
417	172264	SDPAR2= 172264
418	172266	SDPAR3= 172266
419	172270	SDPAR4= 172270
420	172272	SDPAR5= 172272
421	172274	SDPAR6= 172274
422	172276	SDPAR7= 172276

;*KERNEL "I" PAGE DESCRIPTOR REGISTERS

423		
424		
425		
426	172300	KIPDR0= 172300
427	172302	KIPDR1= 172302
428	172304	KIPDR2= 172304
429	172306	KIPDR3= 172306

```

430      172310      KIPDR4= 172310
431      172312      KIPDR5= 172312
432      172314      KIPDR6= 172314
433      172316      KIPDR7= 172316
434
435      ;*KERNEL "D" PAGE DESCRIPTOR REGISTERS
436
437      172320      KDPDR0= 172320
438      172322      KDPDR1= 172322
439      172324      KDPDR2= 172324
440      172326      KDPDR3= 172326
441      172330      KDPDR4= 172330
442      172332      KDPDR5= 172332
443      172334      KDPDR6= 172334
444      172336      KDPDR7= 172336
445
446      ;*KERNEL "I" PAGE ADDRESS REGISTERS
447
448      172340      KIPAR0= 172340
449      172342      KIPAR1= 172342
450      172344      KIPAR2= 172344
451      172346      KIPAR3= 172346
452      172350      KIPAR4= 172350
453      172352      KIPAR5= 172352
454      172354      KIPAR6= 172354
455      172356      KIPAR7= 172356
456
457      ;*KERNEL "D" PAGE ADDRESS REGISTERS
458
459      172360      KDPAR0= 172360
460      172362      KDPAR1= 172362
461      172364      KDPAR2= 172364
462      172366      KDPAR3= 172366
463      172370      KDPAR4= 172370
464      172372      KDPAR5= 172372
465      172374      KDPAR6= 172374
466      172376      KDPAR7= 172376
467
468      ;THESE ARE FLOATING POINT ACCUMULATOR EQUATES
469      000000      AC0=    #0
470      000001      AC1=    #1
471      000002      AC2=    #2
472      000003      AC3=    #3
473      000004      AC4=    #4
474      000005      AC5=    #5
475      000006      AC6=    #6
476      000007      AC7=    #7
477
478      000244      FPVEC=  244
479
480      ;THESE ARE CACHE REGISTER EQUATES
481      177746      CCR=    177746      ;CACHE CONTROL REGISTER
482      177744      MSER=   177744      ;MEMORY SYSTEM ERROR REGISTER
483      177752      HITMIS= 177752      ;HIT/MISS REGISTER
484      177766      CPereg= 177766      ;CPU ERROR REGISTER
485

```

```

486                                     ;MISCELANEOUS DEFINITIONS
487     177546     BEVENT= 177546         ;BEVENT CONTROL REGISTER
488     177560     RCSR= 177560
489     177562     RBUF= 177562
490     177564     XCSR= 177564
491     177566     XBUF= 177566
492     000000     ERRTN= HALT
493     000001     $TSTNU=1
494     000001     ERRNUM= 1             ;INITIALIZE ERROR NUMBER COUNTER
495     002000     ASWREG= 2000         ;SWR FOR APT--NO BEVENT TESTING
496
497
498                                     ;THIS EQUATE DEFINES THE BOTTOM OF THE PROGRAM STACK POINTER
499     001000     STBOT= 1000
500     000000     .ASECT
501     .SBTTL TRAP CATCHER
502
503     000000     .=0
504                                     ;*ALL UNUSED LOCATIONS OF THE VECTOR AREA CONTAIN
505                                     ;*A ".+2, IOT" SEQUENCE TO CATCH AND PROCESS ILLEGAL
506                                     ;*TRAPS AND INTERRUPTS THAT MIGHT OCCUR.
507                                     ;*THE IOT TRAP WHICH IS TAKEN ON THE ILLEGAL TRAP/INT
508                                     ;*TRAPS TO THE $SCOPE ROUTINE WHICH (IF THE RETURN PC IS
509                                     ;*LESS THAN 1002) JUMPS TO THE $ERROR ROUTINE.
510                                     ;*THE $ERROR ROUTINE WILL REPORT THE ERROR AS FOLLOWS:
511                                     ;* PC=YYYYYY UNEXPECTED TRAP TO XXX
512                                     ;*AND RETURN TO THE PROGRAM AT PC=YYYYYY+2
513                                     ;*WHERE XXX=LOCATION OF ILLEGAL TRAP
514                                     ;* YYYYYY=PC AT TIME OF TRAP
515                                     ;*NOTE: IF THE PROCESSOR IS NOT AN 11/05 THE PROGRAM
516                                     ;* CAN BE STARTED AT ADDRESS 0 AS WELL AS ADDRESS 200.
517
518     000000     000000     $40CAT: HALT                ;;HALT
519     000002     000737     BR      .-100              ;;BRANCH TO 177700 & TIME OUT (NOT ON
520                                     ;;11/05)
521     000004     001604     .WORD  START              ;;VECTOR TO STARTING ADDRESS
522     000006     000340     .WORD  340                ;;WITH PRIORITY LEVEL 7
523                                     .-174
524     000174     000000     DISPREG: .WORD  0          ;;SOFTWARE DISPLAY REGISTER
525     000176     000000     SWREG:  .WORD  0           ;;SOFTWARE SWITCH REGISTER
526                                     .SBTTL STARTING ADDRES(ES)
527     000200     000137     001604     JMP      @*START ;;GO TO START OF PROGRAM
528                                     .SBTTL ACT11 HOOKS
529
530                                     ;;*****
531     ;HOOKS REQUIRED BY ACT11
532     000204     $SVPC=.                ;SAVE PC
533     000046     .-46
534     000046     020026     $ENDAD        ;;1)SET LOC.46 TO ADDRESS OF $ENDAD IN .EOP
535     000052     .-52
536     000052     000000     .WORD  0                ;;2)SET LOC.52 TO ZERO
537     000204     .=$SVPC                ;; RESTORE PC
538     .SBTTL APT PARAMETER BLOCK
539
540                                     ;;*****
541     ;SET LOCATIONS 24 AND 44 AS REQUIRED FOR APT

```

```

542      ;*****
543      . $X=.      ;;SAVE CURRENT LOCATION
544      . =24      ;;SET POWER FAIL TO POINT TO START OF PROGRAM
545      000024 200  ;;FOR APT START UP
546      000044 . =44  ;;POINT TO APT INDIRECT ADDRESS PNTR.
547      000044 $APTHDR ;;POINT TO APT HEADER BLOCK
548      000204 . =. $X ;;RESET LOCATION COUNTER
549      ;*****
550      ;SETUP APT PARAMETER BLOCK AS DEFINED IN THE APT-PDP11 DIAGNOSTIC
551      ;INTERFACE SPEC.
552
553      $APTHD:
554      000204 000000 $HIBTS: .WORD 0      ;;TWO HIGH BITS OF 18 BIT MAILBOX ADDR.
555      000206 001000 $MBADR: .WORD $MAIL  ;;ADDRESS OF APT MAILBOX (BITS 0-15)
556      000210 000001 $TSTM: .WORD 1      ;;RUN TIM OF LONGEST TEST
557      000212 000002 $PASTM: .WORD 2      ;;RUN TIME IN SECS. OF 1ST PASS ON 1 UNIT (QUICK VERIFY)
558      000214 000000 $UNITM: .WORD 0      ;;ADDITIONAL RUN TIME (SECS) OF A PASS FOR EACH ADDITIONAL UNIT
559      000216 000014 .WORD $ETEND-$MAIL/2 ;;LENGTH MAILBOX-ETABLE(WORDS)
560      000204 . =. $X      ;;SAVE CURRENT LOCATION COUNT
561      000002 . =2
562      000002 0
563      000004 6
564      000006 4      ;SET UP SOME VECTORS
565      000204 . =. $X      ;RESTORE LOCATION COUNT
566      001000 . =1000

```

```

567 .SBTTL GLOBAL DATA SECTION
568
569 ;**
570 ; THE GLOBAL DATA SECTION CONTAINS DATA THAT ARE USED
571 ; IN MORE THAN ONE TEST.
572 ;
573 .SBTTL APT MAILBOX-ETABLE
574
575 ;*****
576 .EVEN
577 $MAIL: .WORD 001000 ;:APT MAILBOX
578 $MSGTY: .WORD 000000 ;:MESSAGE TYPE CODE
579 $FATAL: .WORD 000000 ;:FATAL ERROR NUMBER
580 $TESTN: .WORD 000000 ;:TEST NUMBER
581 $PASS: .WORD 000000 ;:PASS COUNT
582 $DEVCT: .WORD 000000 ;:DEVICE COUNT
583 $UNIT: .WORD 000000 ;:I/O UNIT NUMBER
584 $MSGAD: .WORD 000000 ;:MESSAGE ADDRESS
585 $MSGLG: .WORD 000000 ;:MESSAGE LENGTH
586 $ETABLE: .WORD 001020 ;:APT ENVIRONMENT TABLE
587 $ENV: .BYTE 000 ;:ENVIRONMENT BYTE
588 $ENVM: .BYTE 000 ;:ENVIRONMENT MODE BITS
589 $SWREG: .WORD 002000 ;:APT SWITCH REGISTER
590 $USWR: .WORD 000000 ;:USER SWITCHES
591 $CPUOP: .WORD 001026 ;:CPU TYPE,OPTIONS
592 ;* ;BITS 15-11-CPU TYPE
593 ;* ;11/04=01,11/05=02,11/20=03,11/40=04,11/45=05
594 ;* ;11/70=06,PDQ=07,Q=10
595 ;* ;BIT 10=REAL TIME CLOCK
596 ;* ;BIT 9=FLOATING POINT PROCESSOR
597 ;* ;BIT 8=MEMORY MANAGEMENT
598 $ETEND: .WORD 001030
599 .MEXIT
600
601 ;THESE LOCATIONS ARE USED IN MORE THAN ONE TEST TO STORE VECTOR DATA
602 ;WHEN THE TEST NEEDS TO HAVE AN ERROR CONDITION RESPOND DIFFERENTLY
603 ;FROM THE DEFAULT RESPONCE.
604 SLOC00: .WORD 0
605 SLOC01: .WORD 0
606
607 ;THESE LOCATIONS ARE USED IN MORE THAN ONE TEST TO STORE WORKING DATA.
608 EXPDAT: .WORD 0 ;:STORES EXPECTED (GOOD) DATA FOR COMPARISONS
609 RECDAT: .WORD 0 ;:STORES RECIEVED DATA TO BE VERIFIED
610 COUNT: .WORD 0 ;:ERROR INDICATOR FOR FLOATING POINT TESTS
611 FLAG: .WORD 0 ;:USED TO STORE "FLAG" CONDITIONS
612 ERRCNT: .WORD 0 ;:STORAGE FOR ERROR COUNT
613 SWR: .WORD DSWR ;:STORAGE FOR SWITCH REGISTER ADDRESS
614 DISPLAY: .WORD DDISP ;:STORAGE FOR DISPLAY REGISTER ADDRESS
615 $ERFLG: .WORD 0 ;:ERROR FLAG
616 ;THESE LOCATIONS ARE USED BY MORE THAN ONE TEST AS LOOP COUNTERS
617 DCOUNT: .WORD 0
618 ALLCTR: .WORD 0
619 LOOPIN: .WORD 0
620 SAVSP1: .WORD 0 ;:STORAGE FOR UNEXPECTED TRAP DATA
621 SAVSP2: .WORD 0 ;
622

```

623
624 001066 000000 SAVSUP: .WORD 0 ;USED TO STORE SUPERVISOR STACK VALUE
625 001070 000000 SAVUSE: .WORD 0 ;USED TO STORE USER STACK VALUE
626 001072 000000 SAVMRO: .WORD 0 ;USED TO STORE MMU STATUS REGISTER 0 DATA
627 001074 000000 SAVMR1: .WORD 0 ;USED TO STORE MMU STATUS REGISTER 1 DATA
628 001076 000000 SAVMR2: .WORD 0 ;USED TO STORE MMU STATUS REGISTER 2 DATA
629 001100 000004 FLOAT: .BLKW 4 ;USED TO STORE VALUES FOR MMU TESTS
630 001110 000004 FLO: .BLKW 4 ;USED TO STORE VALUES FOR MMU TESTS

631
632
633
634
635
636
637
638
639 001120
640 001120 000002

;!!!!!!THIS IS IT. THE PROGRAM TEST LOCATION AND WRITE BUFFER!!!!!!!!!!!!!!!!!!!!!!
TSTLOC: .BLKW 2

```

641          .SBTTL GLOBAL TEXT SECTION
642
643          ;**
644          ; THE GLOBAL TEXT SECTION CONTAINS FORMAT STATEMENTS,
645          ; MESSAGES, AND ASCII INFORMATION THAT ARE USED IN
646          ; MORE THAN ONE TEST.
647          ;
648
649          ;
650          ; FORMAT STATEMENTS USED IN PRINT CALLS
651          ;
652
653          001124 005015 042523 020124 OPMSG2: .ASCIZ <CR><LF>/SET BIT 8 = 1 FOR 18 BIT SYSTEM/
654          001132 044502 020124 020070
655          001140 020075 020061 047506
656          001146 020122 034061 041040
657          001154 052111 051440 051531
658          001162 042524 000115
659          001166 005015 040503 044103 ERRMSG: .ASCIZ <CR><LF>/CACHE SYSTEM ERROR/
660          001174 020105 054523 052123
661          001202 046505 042440 051122
662          001210 051117 000
663          001213 015 042412 051122 MMUERR: .ASCIZ <CR><LF>/ERROR DURING MMU TESTING/
664          001220 051117 042040 051125
665          001226 047111 020107 046515
666          001234 020125 042524 052123
667          001242 047111 000107
668          001246 005015 051105 047522 ERR1: .ASCIZ <CR><LF>/ERROR # =/
669          001254 020122 020043 000075
670          001262 005015 051105 047522 ERR2: .ASCIZ <CR><LF>/ERROR PC =/
671          001270 020122 041520 036440
672          001276 000
673          001277 015 020012 020040 $CRLF: .ASCIZ <CR><LF>/ /
674          001304 000
675          001306          .EVEN

```


GLOBAL AREAS
KDJ11A.MAC

MACY11 30A(1052) 20 MAR 84 11:19

20 MAR-84 11:31 PAGE 17

GLOBAL ERROR REPORT SECTION

SEQ 0017

676
677
678
679
680
681
682

.SBTTL GLOBAL ERROR REPORT SECTION

; THE GLOBAL ERROR REPORT SECTION CONTAINS MESSAGE PRINTING AREAS
; USED BY MORE THAN TEST TO OUTPUT ADDITIONAL ERROR INFORMATION.

```

683 .SBTTL GLOBAL SUBROUTINES SECTION
684
685 ;**
686 ; THE GLOBAL SUBROUTINES SECTION CONTAINS THE SUBROUTINES
687 ; THAT ARE USED IN MORE THAN ONE TEST.
688 ; --
689 ;
690 ;MMU GLOBAL SUBROUTINES
691 ;
692 ;
693 ;ROUTINE TO INITIALIZE MEMORY MANAGEMENT
694 ;
695 001306 010046 MMU: MOV R0,-(SP) ;SAVE CONTENTS OF REGISTERS
696 001310 010146 MOV R1,-(SP) ;
697 001312 010246 MOV R2,-(SP) ;
698 001314 012700 177600 MOV #177600,R0 ;
699 001320 004767 000062 JSR PC,PDR ;INIT I AND D USER PDR'S
700 001324 004767 000100 JSR PC,PAR ;INIT I USER PAR'S
701 001330 004767 000074 JSR PC,PAR ;INIT D USER PAR'S
702 001334 012700 172200 MOV #172200,R0 ;
703 001340 004767 000042 JSR PC,PDR ;INIT I AND D SUP PDR S
704 001344 004767 000060 JSR PC,PAR ;INIT I SUP PAR'S
705 001350 004767 000054 JSR PC,PAR ;INIT D SUP PAR'S
706 001354 004767 000026 JSR PC,PDR ;INIT I AND D KER PDR'S
707 001360 004767 000044 JSR PC,PAR ;INIT I KER PAR'S
708 001364 004767 000040 JSR PC,PAR ;INIT D KER PAR'S
709 001370 012737 000027 172516 MOV #27,#172516 ;INIT MMR3
710 001376 012602 MOV (SP)+,R2 ;RESTORE REGISTERS
711 001400 012601 MOV (SP)+,R1 ;
712 001402 012600 MOV (SP)+,R0 ;
713 001404 000207 RTS PC ;RETURN
714
715 ;ROUTINE TO INITIALIZE PDR'S
716 ;
717 001406 005002 PDR: CLR R2 ;INIT CNTR
718 001410 012720 077406 PDR1: MOV #77406,(R0)+ ;INIT PDR
719 001414 062702 000001 ADD #1,R2 ;INCREMENT CNTR
720 001420 022702 000020 CMP #16.,R2 ;ARE WE DONE?
721 001424 001371 BNE PDR1 ;BRANCH IF NOT
722 001426 000207 RTS PC ;RETURN
723
724 ;ROUTINE TO INITIALIZE PAR'S
725 ;
726 001430 005001 PAR: CLR R1 ;SETUP TO INIT PAR
727 001432 010120 PAR1: MOV R1,(R0)+ ;INIT PAR
728 001434 062701 000200 ADD #200,R1 ;GET READY FOR NEXT PAR
729 001440 022701 001600 CMP #1600,R1 ;REACHED A PAR?
730 001444 001372 BNE PAR1 ;BRANCH IF NOT
731 001446 012720 177600 MOV #177600,(R0)+ ;INIT PAR?
732 001452 000207 RTS PC ;RETURN
733
734 ;TIME OUT ROUTINE
735 ;
736 001454 005205 ADDTRP: INC R5 ;INCREMENT TIME OUT FLAG
737 001456 000002 RTI ;RETURN
738 ;
    
```

```

739 ;MMU TRAP ROUTINE
740 ;
741 001460 026727 177356 000001 MMUTRP: CMP FLAG,#1 ;ARE WE EXPECTING AN ABORT
742 001466 001403 BEQ 1$ ;YES GO ON
743 001470 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
744 001472 000001 .WORD 1 ;UNIQUE ERROR NUMBER
745 001474 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
746 001476 010046 1$: MOV RO,(SP) ;SAVE CONTENTS OF REG 0
747 001500 013700 177776 MOV @#177776,RO ;SAVE A COPY OF PSW
748 001504 072027 177764 ASH #14,RO ;LOOK AT BITS<15:14>
749 001510 020027 000002 CMP RO,#2 ;WAS PS<15:14>=10
750 001514 001001 BNE OK ;NO GO ON
751 001516 000411 BR NOTOK ;YES CHANGE BITS TO 00
752 001520 013700 177776 OK: MOV @#177776,RO ;SAVE A COPY OF PSW
753 001524 072027 000002 ASH #2,RO ;LOOK AT BITS<13:12>
754 001530 072027 177764 ASH #-14,RO ;
755 001534 020027 000002 CMP RO,#2 ;WAS PS<13:12>=10
756 001540 001002 BNE OK1 ;NO GO ON
757 001542 005066 000004 NOTOK: CLR 4(SP) ;CLEAR ILLEGAL MODE FROM OLD PSW
758 001546 013767 177572 177316 OK1: MOV @#177572,SAVMRO ;SAVE A COPY OF MMRO
759 001554 013767 177574 177312 MOV @#177574,SAVMR1 ;SAVE A COPY OF MMR1
760 001562 013767 177576 177306 MOV @#177576,SAVMR2 ;SAVE A COPY OF MMR2
761 001570 005037 177572 CLR @#177572 ;CLEAR ABORT BITS AND TURN MMU OFF
762 001574 005067 177242 CLR FLAG ;CLEAR MMU ABORT FLAG
763 001600 012600 MOV (SP)+,RO ;RESTORE ORIGINAL CONTENTS OF REG 0
764 001602 000002 RTI ;RETURN

```

```

765 001604          START:
766 001604 012737 000014 177746      MOV    #14,@CCR          ;SET CACHE TO FORCE MISS
767                                     .SBTTL INITIALIZE THE COMMON TAGS
768 001612 012706 001000          MOV    @STACK,SP        ;;SETUP THE STACK POINTER
769                                     ;;INITIALIZE A FEW VECTORS
770 001616 012737 022304 000030      MOV    @ERROR,@EMTVEC  ;;EMT VECTOR FOR ERROR ROUTINE
771 001624 012737 000340 000032      MOV    #340,@EMTVEC+2 ;;LEVEL 7
772 001632 012737 021756 000034      MOV    @TRAP,@TRAPVEC ;;TRAP VECTOR FOR TRAP CALLS
773 001640 012737 000340 000036      MOV    #340,@TRAPVEC+2;LEVEL 7
774 001646 005067 177134          CLR    $PASS           ;;CLEAR THE PASS COUNT
775 001652 016767 016116 016106      MOV    $ENDCT,$EOPCT  ;;SETUP END OF-PROGRAM COUNTER
776 001660 105067 177166          CLR    $ERFLG        ;;CLEAR THE ERROR FLAG
777                                     ;;SIZE FOR A HARDWARE SWITCH REGISTER. IF NOT FOUND OR IT IS
778                                     ;;EQUAL TO A "-1", SETUP FOR A SOFTWARE SWITCH REGISTER.
779 001664 013746 000004          MOV    @ERRVEC,-(SP)  ;;SAVE ERROR VECTOR
780 001670 012737 001724 000004      MOV    #64,@ERRVEC   ;;SET UP ERROR VECTOR
781 001676 012767 177570 177142      MOV    @DSWR,SWR     ;;SETUP FOR A HARDWARE SWITCH REGISTER
782 001704 012767 177570 177136      MOV    @DISP,DISPLAY ;;AND A HARDWARE DISPLAY REGISTER
783 001712 022777 177777 177126      CMP    #-1,SWR       ;;TRY TO REFERENCE HARDWARE SWR
784 001720 001012          BNE    66$          ;;BRANCH IF NO TIMEOUT TRAP OCCURRED
785                                     ;;AND THE HARDWARE SWR IS NOT = 1
786 001722 000403          BR    65$          ;;BRANCH IF NO TIMEOUT
787 001724 012716 001732 64$:      MOV    #65,(SP)     ;;SET UP FOR TRAP RETURN
788 001730 000002          RTI
789 001732 012767 000176 177106 65$:  MOV    @SWREG,SWR    ;;POINT TO SOFTWARE SWR
790 001740 012767 000174 177102      MOV    @DISPREG,DISPLAY
791 001746 012637 000004 66$:      MOV    (SP)+,@ERRVEC ;;RESTORE ERROR VECTOR
792
793 .MACRO  $$SETMAIL      ?$ARG1
794         CLR    $PASS          ;;CLEAR PASS COUNT
795         BITB   @APTSIZE,$ENVM  ;;TEST USER SIZE UNDER APT
796         BEQ    $ARG1          ;;YES,USE NON-APT SWITCH
797         MOV    @SWREG,SWR     ;;NO,USE APT SWITCH REGISTER
798 $ARG1:
799 .ENDM   $$SETMAIL
800 001752 005067 177030          CLR    $PASS          ;;CLEAR PASS COUNT
801 001756 132767 000200 177035      BITB   @APTSIZE,$ENVM  ;;TEST USER SIZE UNDER APT
802 001764 001403          BEQ    67$          ;;YES,USE NON-APT SWITCH
803 001766 012767 001022 177052      MOV    @SWREG,SWR     ;;NO,USE APT SWITCH REGISTER
804 001774          67$:
805 001774 012737 022304 000020      MOV    @ERROR,@IOTVEC ;;SET UP IOT VECTORS
806 002002 012737 000340 000022      MOV    #340,@IOTVEC+2 ;;TO GO TO ERROR ROUTINE
807 002010 005037 177766          CLR    @177766       ;CLEAR CPU ERROR REGISTER
808 002014 012767 001460 176226      MOV    @MUTRP,MMVEC
809 002022 104401 001124          TYPE  ,OPMSG2      ;OPERATOR MESSAGE 2
810 .SBTTL GET VALUE FOR SOFTWARE SWITCH REGISTER
811 002026 005737 000042          TST    @42          ;;ARE WE RUNNING UNDER XXDP/ACT?
812 002032 001012          BNE    68$          ;;BRANCH IF YES
813 002034 026727 176760 000001      CMPB   $ENV,#1      ;;ARE WE RUNNING UNDER APT?
814 002042 001406          BEQ    68$          ;;BRANCH IF YES
815 002044 026727 176776 000176      CMP    SWR,@SWREG   ;;SOFTWARE SWITCH REG SELECTED?
816 002052 001005          BNE    69$          ;;BRANCH IF NO
817 002054 104406          GTSWR          ;;GET SOFT-SWR SETTINGS
818 002056 000403          BR    69$
819 002060 112767 000001 017666 68$:  MOV    #1,$AUTOB    ;;SET AUTO MODE INDICATOR
820 002066          69$:
    
```

```

821 002066 005067 176712 RESTART: CLR $TESTN ;RESET $TESTN TO ZERO
822 002072 012737 000014 177746 MOV #14,$CCR ;SET CACHE TO FORCE MISS
823
824 .SBTTL MEMORY MANAGEMENT TESTS
825 ;*****
826 ;*****
827 ; BEGIN MMU TESTING
828 ;*****
829 ;*****
830 002100 TSMU1:
831 ;*****
832 ;*TEST 1 STATUS REGISTER TEST
833 ;*****
834 002100 TST1:
835 002100 005267 176700 INC $TESTN ;INCREMENT TEST NUMBER
836 002104 005067 175656 CLR CPEREG ;CLEAR CPU ERROR REGISTER
837 002110 005037 177572 CLR #177572 ;TURN MMU OFF
838 002114 005037 001042 CLR #FLAG ;CLEAR MMU TRAP FLAG
839 002120 013746 000004 MOV #4,-(SP) ;SAVE OLD VECTOR
840 002124 012737 001454 000004 MOV #ADDRP,#4 ;SETUP NEW VECTOR
841 002132 005005 CLR R5 ;CLEAR FLAG
842 002134 013701 177572 MOV #177572,R1 ; TEST MMR0
843 002140 013701 177574 MOV #177574,R1 ; TEST MMR1
844 002144 013701 177576 MOV #177576,R1 ; TEST MMR2
845 002150 013701 172516 MOV #172516,R1 ; TEST MMR3
846 002154 012637 000004 MOV (SP)+,#4 ;RESTORE VECTOR
847 002160 020527 000000 CMP R5,#0 ;DID WE TRAP
848 002164 001403 BEQ 1$ ;NO, THEN BRANCH
849 002166 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
850 002170 000002 .WORD 2 ;UNIQUE ERROR NUMBER
851 002172 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
852 ;YES, GO TO ERROR
853 002174 1$:
854
855 002174 TSMU2:
856 ;*****
857 ;*TEST 2 ADDRESS TEST OF PARS,PDRS, AND FP REGS
858 ;*****
859 002174 TST2:
860 002174 005267 176604 INC $TESTN ;INCREMENT TEST NUMBER
861 002200 005067 175562 CLR CPEREG ;CLEAR CPU ERROR REGISTER
862 002204 005037 177572 CLR #177572 ;MMU OFF
863 002210 005037 001042 CLR #FLAG ;CLEAR MMU TRAP FLAG
864 002214 013746 000244 MOV #244,-(SP) ;SAVE FP VECTOR
865 002220 013746 000246 MOV #246,-(SP)
866 002224 013746 000004 MOV #4,-(SP) ;SAVE TIME OUT VECTOR
867 002230 012737 000246 000244 MOV #246,#244 ;SETUP NEW FP VECTOR
868 002236 012737 000002 000246 MOV #2,#246 ;
869 002244 012737 001454 000004 MOV #ADDRP,#4 ;SETUP NEW TIME OUT VECTOR
870 002252 005005 CLR R5 ;CLEAR TIMEOUT FLAG
871 002254 012700 172200 MOV #172200,R0 ;LOAD ALL PARS AND PDRS WITH ZERO
872 002260 005020 1$: CLR (R0)+ ;
873 002262 020027 172400 CMP R0,#172400 ;
874 002266 001374 BNE 1$ ;
875 002270 012700 177600 MOV #177600,R0 ;
876 002274 005020 2$: CLR (R0)+ ;

```

```

877 002276 020027 177700      CMP      R0,#177700      ;
878 002302 001374              BNE      2$             ;
879 002304 170127 000200      LDFPS   #200           ;
880 002310 012700 001100      MOV      #FLOAT,R0    ;LOAD ACO AC5 WITH 0
881 002314 005020              CLR      (R0)+         ;
882 002316 005020              CLR      (R0)+         ;
883 002320 005020              CLR      (R0)+         ;
884 002322 005020              CLR      (R0)+         ;
885 002324 012700 001100      MOV      #FLOAT,R0    ;
886 002330 172410              LDD      (R0),ACO     ;
887 002332 172510              LDD      (R0),AC1     ;
888 002334 172610              LDD      (R0),AC2     ;
889 002336 172710              LDD      (R0),AC3     ;
890 002340 174004              STD      ACO,AC4      ;
891 002342 174005              STD      ACO,AC5      ;
892 002344 174500              3$:     DIVD     ACO,AC1 ;LOAD FEC WITH 4 AND FEA WITH #3$
893 002346 170337 001110      STST    #FLO          ;CHECK FEC FOR 4 AND FEA FOR #3$
894 002352 012704 001110      MOV      #FLO,R4      ;
895 002356 022427 000004      CMP      (R4)+,#4     ;
896 002362 001403              BEQ      21$          ;
897 002364 104000              ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
898 002366 000003              .WORD   3             ;UNIQUE ERROR NUMBER
899 002370 001213              .WORD   MMUERR        ;ADDRESS OF ERROR MESSAGE
900
901 002372 021427 002344      21$:    CMP      (R4),#3$  ;
902 002376 001403              BEQ      22$          ;
903 002400 104000              ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
904 002402 000004              .WORD   4             ;UNIQUE ERROR NUMBER
905 002404 001213              .WORD   MMUERR        ;ADDRESS OF ERROR MESSAGE
906
907 002406 012704 172200      22$:    MOV      #172200,R4  ;CHECK EACH PAR, PDR FOR 0 THEN
908 002412 012701 000001      MOV      #1,R1        ;WRITE A UNIQUE NUMBER TO IT
909 002416 010102              4$:     MOV      R1,R2       ;
910 002420 072227 000010      ASH     #10,R2        ;
911 002424 021427 000000      CMP      (R4),#0     ;
912 002430 001403              BEQ      5$           ;
913 002432 104000              ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
914 002434 000005              .WORD   5             ;UNIQUE ERROR NUMBER
915 002436 001213              .WORD   MMUERR        ;ADDRESS OF ERROR MESSAGE
916
917 002440 010224              5$:     MOV      R2,(R4)+     ;
918 002442 005201              INC      R1           ;
919 002444 020427 172400      CMP      R4,#172400  ;
920 002450 001362              BNE      4$           ;
921 002452 012704 177600      MOV      #177600,R4  ;
922 002456 010102              6$:     MOV      R1,R2       ;
923 002460 072227 000010      ASH     #10,R2        ;
924 002464 021427 000000      CMP      (R4),#0     ;
925 002470 001403              BEQ      7$           ;
926 002472 104000              ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
927 002474 000006              .WORD   6             ;UNIQUE ERROR NUMBER
928 002476 001213              .WORD   MMUERR        ;ADDRESS OF ERROR MESSAGE
929
930 002500 010224              7$:     MOV      R2,(R4)+     ;
931 002502 005201              INC      R1           ;
932 002504 020427 177700      CMP      R4,#177700  ;

```

```

933 002510 001362          BNE      6$          ;
934 002512 012704 001110  MOV      #FLO,R4    ;CHECK AC5 FOR ALL ZEROES THEN LOAD A 6
935 002516 012703 001100  MOV      #FLOAT,R3  ;
936 002522 174014          STD      AC0,(R4)   ;
937 002524 172405          LDD      AC5,AC0    ;
938 002526 174013          STD      AC0,(R3)   ;
939 002530 012702 000004  MOV      #4,R2      ;
940 002534 022327 000000  8$:    CMP      (R3)+,#0   ;
941 002540 001403          BEQ      9$          ;
942 002542 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
943 002544 000007          .WORD     ;UNIQUE ERROR NUMBER
944 002546 001213          .WORD     MMUERR    ;ADDRESS OF ERROR MESSAGE
945
946 002550 005302          9$:    DEC      R2          ;
947 002552 001370          BNE      8$          ;
948 002554 012703 001100  MOV      #FLOAT,R3  ;
949 002560 012713 000006  MOV      #6,(R3)    ;
950 002564 172413          LDD      (R3),AC0   ;
951 002566 174005          STD      AC0,AC5    ;
952 002570 172404          LDD      AC4,AC0    ;CHECK AC4 FOR ALL ZEROES THEN LOAD A 5
953 002572 174013          STD      AC0,(R3)   ;
954 002574 012702 000004  MOV      #4,R2      ;
955 002600 022327 000000  10$:   CMP      (R3)+,#0   ;
956 002604 001403          BEQ      11$         ;
957 002606 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
958 002610 000010          .WORD     ;UNIQUE ERROR NUMBER
959 002612 001213          .WORD     MMUERR    ;ADDRESS OF ERROR MESSAGE
960
961 002614 005302          11$:   DEC      R2          ;
962 002616 001370          BNE      10$         ;
963 002620 012703 001100  MOV      #FLOAT,R3  ;
964 002624 012713 000005  MOV      #5,(R3)    ;
965 002630 172413          LDD      (R3),AC0   ;
966 002632 174004          STD      AC0,AC4    ;
967 002634 012702 000004  MOV      #4,R2      ;CHECK AC0 FOR ALL ZEROES THEN LOAD A 1
968 002640 022427 000000  12$:   CMP      (R4)+,#0   ;
969 002644 001403          BEQ      13$         ;
970 002646 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
971 002650 000011          .WORD     ;UNIQUE ERROR NUMBER
972 002652 001213          .WORD     MMUERR    ;ADDRESS OF ERROR MESSAGE
973
974 002654 005302          13$:   DEC      R2          ;
975 002656 001370          BNE      12$         ;
976 002660 012713 000001  MOV      #1,(R3)    ;
977 002664 172413          LDD      (R3),AC0   ;
978 002666 012704 001110  MOV      #FLO,R4    ;CHECK AC1 FOR ALL ZEROES THEN LOAD A 2
979 002672 012702 000004  MOV      #4,R2      ;
980 002676 174114          STD      AC1,(R4)   ;
981 002700 022427 000000  14$:   CMP      (R4)+,#0   ;
982 002704 001403          BEQ      15$         ;
983 002706 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
984 002710 000012          .WORD     ;UNIQUE ERROR NUMBER
985 002712 001213          .WORD     MMUERR    ;ADDRESS OF ERROR MESSAGE
986
987 002714 005302          15$:   DEC      R2          ;
988 002716 001370          BNE      14$         ;

```

989	002720	012713	000002		MOV	#2,(R3)	:
990	002724	172513			LDD	(R3),AC1	:
991	002726	012704	001110		MOV	#FLO,R4	;CHECK AC2 FOR ALL ZEROES THEN LOAD A 3
992	002732	012702	000004		MOV	#4,R2	:
993	002736	174214			STD	AC2,(R4)	:
994	002740	022427	000000	16\$:	CMP	(R4)+,#0	:
995	002744	001403			BEQ	17\$:
996	002746	104000			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
997	002750	000013			.WORD	13	;UNIQUE ERROR NUMBER
998	002752	001213			.WORD	MMUERR	;ADDRESS OF ERROR MESSAGE
999							:
1000	002754	005302		17\$:	DEC	R2	:
1001	002756	001370			BNE	16\$:
1002	002760	012713	000003		MOV	#3,(R3)	:
1003	002764	172613			LDD	(R3),AC2	:
1004	002766	012704	001110		MOV	#FLO,R4	;CHECK AC3 FOR ALL ZEROES THEN LOAD A 4
1005	002772	012702	000004		MOV	#4,R2	:
1006	002776	174314			STD	AC3,(R4)	:
1007	003000	022427	000000	18\$:	CMP	(R4)+,#0	:
1008	003004	001403			BEQ	19\$:
1009	003006	104000			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
1010	003010	000014			.WORD	14	;UNIQUE ERROR NUMBER
1011	003012	001213			.WORD	MMUERR	;ADDRESS OF ERROR MESSAGE
1012							:
1013	003014	005302		19\$:	DEC	R2	:
1014	003016	001370			BNE	18\$:
1015	003020	012713	000004		MOV	#4,(R3)	:
1016	003024	172713			LDD	(R3),AC3	:
1017	003026	012704	001110		MOV	#FLO,R4	;CHECK FPS FOR 100204 THEN LOAD IT WITH 200
1018	003032	170214			STFPS	(R4)	:
1019	003034	022714	100204		CMP	#100204,(R4)	:
1020	003040	001403			BEQ	20\$:
1021	003042	104000			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
1022	003044	000015			.WORD	15	;UNIQUE ERROR NUMBER
1023	003046	001213			.WORD	MMUERR	;ADDRESS OF ERROR MESSAGE
1024							:
1025	003050	170127	000200	20\$:	LDFPS	#200	:
1026	003054	012704	172200		MOV	#172200,R4	;CHECK PDR, PAR FOR UNIQUE NUMBERS
1027	003060	012701	000001		MOV	#1,R1	:
1028	003064	010102		23\$:	MOV	R1,R2	:
1029	003066	072227	000010		ASH	#10,R2	:
1030	003072	022402			CMP	(R4)+,R2	:
1031	003074	001403			BEQ	24\$:
1032	003076	104000			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
1033	003100	000016			.WORD	16	;UNIQUE ERROR NUMBER
1034	003102	001213			.WORD	MMUERR	;ADDRESS OF ERROR MESSAGE
1035							:
1036	003104	005201		24\$:	INC	R1	:
1037	003106	020427	172400		CMP	R4,#172400	:
1038	003112	001364			BNE	23\$:
1039	003114	012704	177600		MOV	#177600,R4	:
1040	003120	010102		25\$:	MOV	R1,R2	:
1041	003122	072227	000010		ASH	#10,R2	:
1042	003126	022402			CMP	(R4)+,R2	:
1043	003130	001403			BEQ	26\$:
1044	003132	104000			ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR


```

1045 003134 000017          .WORD 17          ;UNIQUE ERROR NUMBER
1046 003136 001213          .WORD MMUERR      ;ADDRESS OF ERROR MESSAGE
1047
1048 003140 005201          26$: INC R1          ;
1049 003142 020427 177700  CMP R4,#177700    ;
1050 003146 001364          BNE 25$          ;
1051 003150 012701 001100  MOV #FLOAT,R1    ;CHECK AC5 FOR #6
1052 003154 012704 001110  MOV #FLO,R4      ;
1053 003160 174014          STD ACO,(R4)     ;
1054 003162 172405          LDD AC5,ACO     ;
1055 003164 174011          STD ACO,(R1)    ;
1056 003166 022127 000006  CMP (R1)+,#6    ;
1057 003172 001403          BEQ 27$         ;
1058 003174 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1059 003176 000020          .WORD          ;UNIQUE ERROR NUMBER
1060 003200 001213          .WORD MMUERR      ;ADDRESS OF ERROR MESSAGE
1061
1062 003202 012703 000003  27$: MOV #3,R3      ;
1063 003206 022127 000000  28$: CMP (R1)+,#0  ;
1064 003212 001403          BEQ 29$         ;
1065 003214 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1066 003216 000021          .WORD 21        ;UNIQUE ERROR NUMBER
1067 003220 001213          .WORD MMUERR      ;ADDRESS OF ERROR MESSAGE
1068
1069 003222 005303          29$: DEC R3        ;
1070 003224 001370          BNE 28$         ;
1071 003226 012701 001100  MOV #FLOAT,R1    ;CHECK AC4 FOR #5
1072 003232 172404          LDD AC4,ACO     ;
1073 003234 174011          STD ACO,(R1)    ;
1074 003236 022127 000005  CMP (R1)+,#5    ;
1075 003242 001403          BEQ 30$         ;
1076 003244 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1077 003246 000022          .WORD 22        ;UNIQUE ERROR NUMBER
1078 003250 001213          .WORD MMUERR      ;ADDRESS OF ERROR MESSAGE
1079
1080 003252 012703 000003  30$: MOV #3,R3      ;
1081 003256 022127 000000  31$: CMP (R1)+,#0  ;
1082 003262 001403          BEQ 32$         ;
1083 003264 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1084 003266 000023          .WORD 23        ;UNIQUE ERROR NUMBER
1085 003270 001213          .WORD MMUERR      ;ADDRESS OF ERROR MESSAGE
1086
1087 003272 005303          32$: DEC R3        ;
1088 003274 001370          BNE 31$         ;
1089 003276 022427 000001  CMP (R4)+,#1    ;CHECK ACO FOR #1
1090 003302 001403          BEQ 33$         ;
1091 003304 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1092 003306 000024          .WORD 24        ;UNIQUE ERROR NUMBER
1093 003310 001213          .WORD MMUERR      ;ADDRESS OF ERROR MESSAGE
1094
1095 003312 012703 000003  33$: MOV #3,R3      ;
1096 003316 022427 000000  34$: CMP (R4)+,#0  ;
1097 003322 001403          BEQ 35$         ;
1098 003324 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1099 003326 000025          .WORD 25        ;UNIQUE ERROR NUMBER
1100 003330 001213          .WORD MMUERR      ;ADDRESS OF ERROR MESSAGE

```

```

1101
1102 003332 005303          35$: DEC      R3          ;
1103 003334 001370          BNE     34$          ;
1104 003336 012701 001100  MOV     #FLOAT,R1   ;CHECK AC1 FOR #2
1105 003342 174111          STD     AC1,(R1)    ;
1106 003344 022127 000002  CMP     (R1)+,#2    ;
1107 003350 001403          BEQ     36$          ;
1108 003352 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
1109 003354 000026          .WORD  26          ;UNIQUE ERROR NUMBER
1110 003356 001213          .WORD  MMUERR      ;ADDRESS OF ERROR MESSAGE
1111
1112 003360 012703 000003  36$: MOV     #3,R3   ;
1113 003364 022127 000000  37$: CMP     (R1)+,#0 ;
1114 003370 001403          BEQ     38$          ;
1115 003372 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
1116 003374 000027          .WORD  27          ;UNIQUE ERROR NUMBER
1117 003376 001213          .WORD  MMUERR      ;ADDRESS OF ERROR MESSAGE
1118
1119 003400 005303          38$: DEC      R3          ;
1120 003402 001370          BNE     37$          ;
1121 003404 012701 001100  MOV     #FLOAT,R1   ;CHECK AC2 FOR #3
1122 003410 174211          STD     AC2,(R1)    ;
1123 003412 022127 000003  CMP     (R1)+,#3    ;
1124 003416 001403          BEQ     39$          ;
1125 003420 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
1126 003422 000030          .WORD  30          ;UNIQUE ERROR NUMBER
1127 003424 001213          .WORD  MMUERR      ;ADDRESS OF ERROR MESSAGE
1128
1129 003426 012703 000003  39$: MOV     #3,R3   ;
1130 003432 022127 000000  40$: CMP     (R1)+,#0 ;
1131 003436 001403          BEQ     41$          ;
1132 003440 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
1133 003442 000031          .WORD  31          ;UNIQUE ERROR NUMBER
1134 003444 001213          .WORD  MMUERR      ;ADDRESS OF ERROR MESSAGE
1135
1136 003446 005303          41$: DEC      R3          ;
1137 003450 001370          BNE     40$          ;
1138 003452 012701 001100  MOV     #FLOAT,R1   ;CHECK AC3 FOR #4
1139 003456 174311          STD     AC3,(R1)    ;
1140 003460 022127 000004  CMP     (R1)+,#4    ;
1141 003464 001403          BEQ     42$          ;
1142 003466 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
1143 003470 000032          .WORD  32          ;UNIQUE ERROR NUMBER
1144 003472 001213          .WORD  MMUERR      ;ADDRESS OF ERROR MESSAGE
1145
1146 003474 012703 000003  42$: MOV     #3,R3   ;
1147 003500 022127 000000  43$: CMP     (R1)+,#0 ;
1148 003504 001403          BEQ     44$          ;
1149 003506 104000          ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
1150 003510 000033          .WORD  33          ;UNIQUE ERROR NUMBER
1151 003512 001213          .WORD  MMUERR      ;ADDRESS OF ERROR MESSAGE
1152
1153 003514 005303          44$: DEC      R3          ;
1154 003516 001370          BNE     43$          ;
1155 003520 020527 000000  CMP     R5,#0       ;IS TIME OUT FLAG 0
1156 003524 001403          BEQ     45$          ;YES GO ON

```

```

1157 003526 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1158 003530 000034          .WORD 34      ;UNIQUE ERROR NUMBER
1159 003532 001213          .WORD MMUERR  ;ADDRESS OF ERROR MESSAGE
1160                                     ;NO GO TO ERROR
1161 003534 012637 000004    45:  MOV      (SP)+,004    ;RESTORE TIME OUT VECTOR
1162 003540 012637 000246    MOV      (SP)+,00246    ;RESTORE FP VECTOR
1163 003544 012637 000244    MOV      (SP)+,00244    ;
1164
1165 003550          TSMU3:
1166          ;*****
1167          ;*TEST 3      WRITE ALL PARS/PDRS WITH ONES THEN ZEROS
1168          ;*****
1169          TST3:
1170 003550          INC      $TESTN          ;INCREMENT TEST NUMBER
1171 003554          CLR      00177572        ;MMU OFF
1172 003560          CLR      000FLAG        ;CLEAR MMU ABORT FLAG
1173 003564          MOV      0172200,R3      ;LOAD ALL PARS AND PDRS WITH ONES
1174 003570          1:  MOV      0177777,(R3)+
1175 003574          CMP      R3,0172400
1176 003600          BNE     1:
1177 003602          MOV      0177600,R3
1178 003606          2:  MOV      0177777,(R3)+
1179 003612          CMP      R3,0177700
1180 003616          BNE     2:
1181 003620          MOV      0172200,R3
1182 003624          3:  CMP      (R3)+,0177416
1183 003630          BEQ     4:
1184 003632          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1185 003634          .WORD 35      ;UNIQUE ERROR NUMBER
1186 003636          .WORD MMUERR  ;ADDRESS OF ERROR MESSAGE
1187
1188 003640          4:  CMP      R3,0172240
1189 003644          BNE     5:
1190 003646          5:  CMP      (R3)+,0177777
1191 003652          BEQ     6:
1192 003654          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1193 003656          .WORD 36      ;UNIQUE ERROR NUMBER
1194 003660          .WORD MMUERR  ;ADDRESS OF ERROR MESSAGE
1195
1196 003662          6:  CMP      R3,0172300
1197 003666          BNE     7:
1198 003670          7:  CMP      (R3)+,0177416
1199 003674          BEQ     8:
1200 003676          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1201 003700          .WORD 37      ;UNIQUE ERROR NUMBER
1202 003702          .WORD MMUERR  ;ADDRESS OF ERROR MESSAGE
1203
1204 003704          8:  CMP      R3,0172340
1205 003710          BNE     9:
1206 003712          9:  CMP      (R3)+,0177777
1207 003716          BEQ     10:
1208 003720          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
1209 003722          .WORD 40      ;UNIQUE ERROR NUMBER
1210 003724          .WORD MMUERR  ;ADDRESS OF ERROR MESSAGE
1211
1212 003726          10: CMP      R3,0172400

```

```

1213 003732 001367          BNE      9%          ;
1214 003734 012703 177600    MOV      @177600,R3    ;CHECK UPDRS FOR ONES
1215 003740 022327 177416    11%:    CMP      (R3),@177416 ;
1216 003744 001403          BEQ      12%          ;
1217 003746 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1218 003750 000041          .WORD    41          ;UNIQUE ERROR NUMBER
1219 003752 001213          .WORD    MMUERR      ;ADDRESS OF ERROR MESSAGE
1220
1221 003754 020327 177640    12%:    CMP      R3,@177640    ;
1222 003760 001367          BNE      11%          ;
1223 003762 022327 177777    13%:    CMP      (R3),@177777 ;CHECK UPARS FOR ONES
1224 003766 001403          BEQ      14%          ;
1225 003770 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1226 003772 000042          .WORD    42          ;UNIQUE ERROR NUMBER
1227 003774 001213          .WORD    MMUERR      ;ADDRESS OF ERROR MESSAGE
1228
1229 003776 020327 177700    14%:    CMP      R3,@177700    ;
1230 004002 001367          BNE      13%          ;
1231 004004 012703 172200    MOV      @172200,R3    ;LOAD ALL PARS AND PDRS WITH ZEROES
1232 004010 012723 000000    15%:    MOV      @0,(R3)      ;
1233 004014 020327 172400    CMP      R3,@172400    ;
1234 004020 001373          BNE      15%          ;
1235 004022 012703 177600    MOV      @177600,R3    ;
1236 004026 012723 000000    16%:    MOV      @0,(R3)      ;
1237 004032 020327 177700    CMP      R3,@177700    ;
1238 004036 001373          BNE      16%          ;
1239 004040 012703 172200    MOV      @172200,R3    ;CHECK ALL PARS AND PDRS FOR ZEROES
1240 004044 022327 000000    17%:    CMP      (R3),@0      ;
1241 004050 001403          BEQ      18%          ;
1242 004052 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1243 004054 000043          .WORD    43          ;UNIQUE ERROR NUMBER
1244 004056 001213          .WORD    MMUERR      ;ADDRESS OF ERROR MESSAGE
1245
1246 004060 020327 172400    18%:    CMP      R3,@172400    ;
1247 004064 001367          BNE      17%          ;
1248 004066 012703 177600    MOV      @177600,R3    ;
1249 004072 022327 000000    19%:    CMP      (R3),@0      ;
1250 004076 001403          BEQ      20%          ;
1251 004100 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1252 004102 000044          .WORD    44          ;UNIQUE ERROR NUMBER
1253 004104 001213          .WORD    MMUERR      ;ADDRESS OF ERROR MESSAGE
1254
1255 004106 020327 177700    20%:    CMP      R3,@177700    ;
1256 004112 001367          BNE      19%          ;
1257
1258 004114          TSMU4:
1259          ;*****
1260          ;*TEST 4      TEST FOR ADJACENT SHORTS IN PARS/PDRS
1261          ;*****
1262          TST4:
1263 004114 005267 174664          INC      $TESTN        ;INCREMENT TEST NUMBER
1264 004120 005037 177572          CLR      @177572      ;MMU OFF
1265 004124 005067 174712          CLR      FLAG          ;CLEAR MMU ABORT FLAG
1266 004130 012700 172200          MOV      @172200,R0    ;LOAD SPDRS WITH ALTERNATING PATTERN
1267 004134 012720 052404    1%:    MOV      @52404,(R0)   ;
1268 004140 012720 125012          MOV      @125012,(R0) ;

```

1269	004144	020027	172240		CMP	R0,#172240		
1270	004150	001371			BNE	1#		
1271	004152	012720	125252	2#:	MOV	#125252,(R0)		;LOAD SPARS WITH ALTERNATING PATTERN
1272	004156	012720	052525		MOV	#52525,(R0)		
1273	004162	020027	172300		CMP	R0,#172300		
1274	004166	001371			BNE	2#		
1275	004170	012720	052404	3#:	MOV	#52404,(R0)		;LOAD KPDRS WITH ALTERNATING PATTERN
1276	004174	012720	125012		MOV	#125012,(R0)		
1277	004200	020027	172340		CMP	R0,#172340		
1278	004204	001371			BNE	3#		
1279	004206	012720	125252	4#:	MOV	#125252,(R0)		;LOAD KPARS WITH ALTERNATING PATTERN
1280	004212	012720	052525		MOV	#52525,(R0)		
1281	004216	020027	172400		CMP	R0,#172400		
1282	004222	001371			BNE	4#		
1283	004224	012700	177600		MOV	#177600,R0		;LOAD JPDRS WITH ALTERNATING PATTERN
1284	004230	012720	052404	5#:	MOV	#52404,(R0)		
1285	004234	012720	125012		MOV	#125012,(R0)		
1286	004240	020027	177640		CMP	R0,#177640		
1287	004244	001371			BNE	5#		
1288	004246	012720	125252	6#:	MOV	#125252,(R0)		;LOAD UPARS WITH ALTERNATING PATTERN
1289	004252	012720	052525		MOV	#52525,(R0)		
1290	004256	020027	177700		CMP	R0,#177700		
1291	004262	001371			BNE	6#		
1292								
1293	004264	012703	172200		MOV	#172200,R3		;CHECK SPDRS
1294	004270	022327	052404	7#:	CMP	(R3),#52404		
1295	004274	001403			BEQ	8#		
1296	004276	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1297	004300	000045			.WORD	45		;UNIQUE ERROR NUMBER
1298	004302	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1299								
1300	004304	022327	125012	8#:	CMP	(R3),#125012		
1301	004310	001403			BEQ	9#		
1302	004312	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1303	004314	000046			.WORD	46		;UNIQUE ERROR NUMBER
1304	004316	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1305								
1306	004320	020327	172240	9#:	CMP	R3,#172240		
1307	004324	001361			BNE	7#		
1308	004326	022327	125252	10#:	CMP	(R3),#125252		;CHECK SPARS
1309	004332	001403			BEQ	11#		
1310	004334	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1311	004336	000047			.WORD	47		;UNIQUE ERROR NUMBER
1312	004340	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1313								
1314	004342	022327	052525	11#:	CMP	(R3),#52525		
1315	004346	001403			BEQ	12#		
1316	004350	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1317	004352	000050			.WORD	50		;UNIQUE ERROR NUMBER
1318	004354	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1319								
1320	004356	020327	172300	12#:	CMP	R3,#172300		
1321	004362	001361			BNE	10#		
1322	004364	022327	052404	13#:	CMP	(R3),#52404		;CHECK KPDRS
1323	004370	001403			BEQ	14#		
1324	004372	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR

1325	004374	000051			.WORD	51		;UNIQUE ERROR NUMBER
1326	004376	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1327								
1328	004400	022327	125012	14:	CMP	(R3)+,0125012		
1329	004404	001403			BEQ	15:		
1330	004406	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1331	004410	000052			.WORD	52		;UNIQUE ERROR NUMBER
1332	004412	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1333								
1334	004414	020327	172340	15:	CMP	R3,0172340		
1335	004420	001361			BNE	13:		
1336	004422	022327	125252	16:	CMP	(R3)+,0125252		;CHECK KPARS
1337	004426	001403			BEQ	17:		
1338	004430	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1339	004432	000053			.WORD	53		;UNIQUE ERROR NUMBER
1340	004434	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1341								
1342	004436	022327	052525	17:	CMP	(R3)+,052525		
1343	004442	001403			BEQ	18:		
1344	004444	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1345	004446	000054			.WORD	54		;UNIQUE ERROR NUMBER
1346	004450	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1347								
1348	004452	020327	172400	18:	CMP	R3,0172400		
1349	004456	001361			BNE	16:		
1350	004460	012703	177600		MOV	0177600,R3		;CHECK UPDRS
1351	004464	022327	052404	19:	CMP	(R3)+,052404		
1352	004470	001403			BEQ	20:		
1353	004472	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1354	004474	000055			.WORD	55		;UNIQUE ERROR NUMBER
1355	004476	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1356								
1357	004500	022327	125012	20:	CMP	(R3)+,0125012		
1358	004504	001403			BEQ	21:		
1359	004506	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1360	004510	000056			.WORD	56		;UNIQUE ERROR NUMBER
1361	004512	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1362								
1363	004514	020327	177640	21:	CMP	R3,0177640		
1364	004520	001361			BNE	19:		
1365	004522	022327	125252	22:	CMP	(R3)+,0125252		;CHECK UPARS
1366	004526	001403			BEQ	23:		
1367	004530	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1368	004532	000057			.WORD	57		;UNIQUE ERROR NUMBER
1369	004534	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1370								
1371	004536	022327	052525	23:	CMP	(R3)+,052525		
1372	004542	001403			BEQ	24:		
1373	004544	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
1374	004546	000060			.WORD	60		;UNIQUE ERROR NUMBER
1375	004550	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
1376								
1377	004552	020327	177700	24:	CMP	R3,0177700		
1378	004556	001361			BNE	22:		
1379								
1380								;REVERSE ALTERNATING PATTERN

```

1381 ;
1382 004560 012700 172200 ; MOV #172200,R0 ;LOAD SPDRS WITH REVERSE PATTERN
1383 004564 012720 125012 25$: MOV #125012,(R0);
1384 004570 012720 052404 MOV #52404,(R0);
1385 004574 020027 172240 CMP R0,#172240 ;
1386 004600 001371 BNE 25$ ;
1387 004602 012720 052525 26$: MOV #52525,(R0); ;LOAD SPARS WITH REVERSE PATTERN
1388 004606 012720 125252 MOV #125252,(R0);
1389 004612 020027 172300 CMP R0,#172300 ;
1390 004616 001371 BNE 26$ ;
1391 004620 012720 125012 27$: MOV #125012,(R0); ;LOAD KPDRS WITH REVERSE PATTERN
1392 004624 012720 052404 MOV #52404,(R0);
1393 004630 020027 172340 CMP R0,#172340 ;
1394 004634 001371 BNE 27$ ;
1395 004636 012720 052525 28$: MOV #52525,(R0); ;LOAD KPARS WITH REVERSE PATTERN
1396 004642 012720 125252 MOV #125252,(R0);
1397 004646 020027 172400 CMP R0,#172400 ;
1398 004652 001371 BNE 28$ ;
1399 004654 012700 177600 MOV #177600,R0 ;LOAD UPDRS WITH REVERSE PATTERN
1400 004660 012720 125012 29$: MOV #125012,(R0);
1401 004664 012720 052404 MOV #52404,(R0);
1402 004670 020027 177640 CMP R0,#177640 ;
1403 004674 001371 BNE 29$ ;
1404 004676 012720 052525 30$: MOV #52525,(R0); ;LOAD UPARS WITH REVERSE PATTERN
1405 004702 012720 125252 MOV #125252,(R0);
1406 004706 020027 177700 CMP R0,#177700 ;
1407 004712 001371 BNE 30$ ;
1408 ;
1409 004714 012703 172200 ; MOV #172200,R3 ;CHECK SPDRS
1410 004720 022327 125012 31$: CMP (R3),#125012 ;
1411 004724 001403 BEQ 32$ ;
1412 004726 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1413 004730 000061 .WORD 61 ;UNIQUE ERROR NUMBER
1414 004732 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1415 ;
1416 004734 022327 052404 32$: CMP (R3),#52404 ;
1417 004740 001403 BEQ 33$ ;
1418 004742 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1419 004744 000062 .WORD 62 ;UNIQUE ERROR NUMBER
1420 004746 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1421 ;
1422 004750 020327 172240 33$: CMP R3,#172240 ;
1423 004754 001361 BNE 31$ ;
1424 004756 022327 052525 34$: CMP (R3),#52525 ;CHECK SPARS
1425 004762 001403 BEQ 35$ ;
1426 004764 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1427 004766 000063 .WORD 63 ;UNIQUE ERROR NUMBER
1428 004770 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1429 ;
1430 004772 022327 125252 35$: CMP (R3),#125252 ;
1431 004776 001403 BEQ 36$ ;
1432 005000 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1433 005002 000064 .WORD 64 ;UNIQUE ERROR NUMBER
1434 005004 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1435 ;
1436 005006 020327 172300 36$: CMP R3,#172300 ;
    
```

```

1437 005012 001361          BNE      34$          ;
1438 005014 022327 125012 37$:  CMP      (R3)+, #125012 ;CHECK KPDRS
1439 005020 001403          BEQ      38$          ;
1440 005022 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1441 005024 000065          .WORD   65          ;UNIQUE ERROR NUMBER
1442 005026 001213          .WORD   MMUERR      ;ADDRESS OF ERROR MESSAGE
1443
1444 005030 022327 052404 38$:  CMP      (R3)+, #52404 ;
1445 005034 001403          BEQ      39$          ;
1446 005036 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1447 005040 000066          .WORD   66          ;UNIQUE ERROR NUMBER
1448 005042 001213          .WORD   MMUERR      ;ADDRESS OF ERROR MESSAGE
1449
1450 005044 020327 172340 39$:  CMP      R3, #172340 ;
1451 005050 001361          BNE      37$          ;
1452 005052 022327 052525 40$:  CMP      (R3)+, #52525 ;CHECK KPARS
1453 005056 001403          BEQ      41$          ;
1454 005060 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1455 005062 000067          .WORD   67          ;UNIQUE ERROR NUMBER
1456 005064 001213          .WORD   MMUERR      ;ADDRESS OF ERROR MESSAGE
1457
1458 005066 022327 125252 41$:  CMP      (R3)+, #125252 ;
1459 005072 001403          BEQ      42$          ;
1460 005074 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1461 005076 000070          .WORD   70          ;UNIQUE ERROR NUMBER
1462 005100 001213          .WORD   MMUERR      ;ADDRESS OF ERROR MESSAGE
1463
1464 005102 020327 172400 42$:  CMP      R3, #172400 ;
1465 005106 001361          BNE      40$          ;
1466 005110 012703 177600          MOV      #177600, R3 ;CHECK UPDRS
1467 005114 022327 125012 43$:  CMP      (R3)+, #125012 ;
1468 005120 001403          BEQ      44$          ;
1469 005122 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1470 005124 000071          .WORD   71          ;UNIQUE ERROR NUMBER
1471 005126 001213          .WORD   MMUERP      ;ADDRESS OF ERROR MESSAGE
1472
1473 005130 022327 052404 44$:  CMP      (R3)+, #52404 ;
1474 005134 001403          BEQ      45$          ;
1475 005136 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1476 005140 000072          .WORD   72          ;UNIQUE ERROR NUMBER
1477 005142 001213          .WORD   MMUERR      ;ADDRESS OF ERROR MESSAGE
1478
1479 005144 020327 177640 45$:  CMP      R3, #177640 ;
1480 005150 001361          BNE      43$          ;
1481 005152 022327 052525 46$:  CMP      (R3)+, #52525 ;CHECK UPARS
1482 005156 001403          BEQ      47$          ;
1483 005160 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1484 005162 000073          .WORD   73          ;UNIQUE ERROR NUMBER
1485 005164 001213          .WORD   MMUERR      ;ADDRESS OF ERROR MESSAGE
1486
1487 005166 022327 125252 47$:  CMP      (R3)+, #125252 ;
1488 005172 001403          BEQ      48$          ;
1489 005174 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1490 005176 000074          .WORD   74          ;UNIQUE ERROR NUMBER
1491 005200 001213          .WORD   MMUERR      ;ADDRESS OF ERROR MESSAGE
1492

```



```

1493 005202 020327 177700 48$: CMP R3,#177700 ;
1494 005206 001361 177700 46$: BNE 46$ ;
1495
1496 005210 TSMU5:
1497 ;*****
1498 ;*TEST 5 TEST MMRO ABORT BITS
1499 ;*****
1500 005210 TST5:
1501 005210 005267 173570 INC $TESTN ;INCREMENT TEST NUMBER
1502 005214 012737 160000 177572 MOV #160000,#177572 ;LOAD MMRO<15:13>=111
1503 005222 005067 173614 CLR FLAG ;CLEAR MMU ABORT FLAG
1504 005226 013700 177572 MOV @SRO,R0 ;SAVE SRO IN RO
1505 005232 042700 000176 BIC #176,R0 ;CLEAR UNDEFINED BITS FROM SRO
1506 005236 020027 160000 CMP R0,#160000 ;CHECK MMRO
1507 005242 001403 BEQ 1$ ;
1508 005244 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1509 005246 000075 .WORD 75 ;UNIQUE ERROR NUMBER
1510 005250 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1511
1512 005252 005037 177572 1$: CLR @#177572 ;LOAD MMRO=0
1513 005256 013700 177572 MOV @SRO,R0 ;SAVE SRO IN RO
1514 005262 042700 000176 BIC #176,R0 ;CLEAR UNDEFINED BITS FROM SRO
1515 005266 020027 000000 CMP R0,#0 ;CHECK MMRO
1516 005272 001403 BEQ 2$ ;
1517 005274 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1518 005276 000076 .WORD 76 ;UNIQUE ERROR NUMBER
1519 005300 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1520
1521 005302 012737 120000 177572 2$: MOV #120000,#177572 ;LOAD MMRO<15:13>=101
1522 005310 013700 177572 MOV @SRO,R0 ;SAVE SRO IN RO
1523 005314 042700 000176 BIC #176,R0 ;CLEAR UNDEFINED BITS FROM SRO.
1524 005320 020027 120000 CMP R0,#120000 ;CHECK MMRO
1525 005324 001403 BEQ 3$ ;
1526 005326 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1527 005330 000077 .WORD 77 ;UNIQUE ERROR NUMBER
1528 005332 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1529
1530 005334 012737 040000 177572 3$: MOV #40000,#177572 ;LOAD MMRO<15:13>=010
1531 005342 013700 177572 MOV @SRO,R0 ;SAVE SRO IN RO
1532 005346 042700 000176 BIC #176,R0 ;CLEAR UNDEFINED BITS FROM SRO.
1533 005352 020027 040000 CMP R0,#40000 ;CHECK MMRO
1534 005356 001403 BEQ 4$ ;
1535 005360 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1536 005362 000100 .WORD 100 ;UNIQUE ERROR NUMBER
1537 005364 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1538 005366 4$:
1539
1540 005366 TSMU6:
1541 ;*****
1542 ;*TEST 6 TEST MMR3 BITS 5-0
1543 ;*****
1544 005366 TST6:
1545 005366 005267 173412 INC $TESTN ;INCREMENT TEST NUMBER
1546 005372 005037 177572 CLR @#177572 ;MMU OFF
1547 005376 005067 173440 CLR FLAG ;CLEAR MMU ABORT FLAG
1548 005402 012737 000077 172516 MOV #77,#172516 ;LOAD MMR3<5:0>=7

```



```

1605 005670 012737 140000 177776 MOV #140000,#0177776 ;POINT TO USER SPACE
1606 005676 020637 001070 CMP R6,#0SAVUSE ;IS USER SP CORRECT
1607 005702 001403 BEQ 100$ ;YES GO ON
1608 005704 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1609 005706 000106 .WORD 106 ;UNIQUE ERROR NUMBER
1610 005710 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1611 ;NO GO TO ERROR
1612 005712 012737 040000 177776 100$: MOV #40000,#0177776 ;POINT TO SUPERVISOR SPACE
1613 005720 020637 001066 CMP R6,#0SAVSUP ;IS SUPERVISOR SP CORRECT
1614 005724 001403 BEQ 200$ ;YES GO ON
1615 005726 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1616 005730 000107 .WORD 107 ;UNIQUE ERROR NUMBER
1617 005732 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1618 ;NO GO TO ERROR
1619 005734 023727 000244 135072 200$: CMP #0244,#135072 ;IS TEST DATA OK
1620 005742 001403 BEQ 2$ ;YES GO ON
1621 005744 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1622 005746 000110 .WORD 110 ;UNIQUE ERROR NUMBER
1623 005750 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1624 ;NO GO TO ERROR
1625 005752 020327 000246 2$: CMP R3,#246 ;IS R3 CORRECT
1626 005756 001403 BEQ 3$ ;YES GO ON
1627 005760 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1628 005762 000111 .WORD 111 ;UNIQUE ERROR NUMBER
1629 005764 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1630 ;NO GO TO ERROR
1631 005766 005037 177776 3$: CLR #0177776 ;SET PSW TO KERNEL MODE
1632 005772 022627 135072 CMP (SP),#135072 ;IS KERNEL STACK CORRECT
1633 005776 001403 BEQ 4$ ;YES GO ON
1634 006000 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1635 006002 000112 .WORD 112 ;UNIQUE ERROR NUMBER
1636 006004 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1637 ;NO GO TO ERROR
1638 006006 021627 177777 4$: CMP (SP),#177777 ;IS STACK CORRECT
1639 006012 001403 BEQ 5$ ;YES GO ON
1640 006014 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1641 006016 000113 .WORD 113 ;UNIQUE ERROR NUMBER
1642 006020 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1643 ;NO GO TO ERROR
1644 006022 012737 030017 177776 5$: MOV #30017,#0177776 ;SETUP PSW
1645 006030 012737 173621 000244 MOV #173621,#0244 ;SETUP TEST LOCATION
1646 006036 012701 000244 MOV #244,R1 ;SETUP R1
1647 006042 005237 177572 INC #0177572 ;TURN MMU ON
1648 006046 006511 MFPI (R1) ;TEST INSTRUCTION
1649 006050 022737 030011 177776 CMP #30011,#0177776 ;IS PSW CORRECT
1650 006056 001403 BEQ 300$ ;YES GO ON
1651 006060 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1652 006062 000114 .WORD 114 ;UNIQUE ERROR NUMBER
1653 006064 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1654 ;NO GO TO ERROR
1655 006066 005037 177572 300$: CLR #0177572 ;TURN MMU OFF
1656 006072 023727 000244 173621 CMP #0244,#173621 ;IS TEST LOCATION CORRECT
1657 006100 001403 BEQ 301$ ;YES GO ON
1658 006102 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1659 006104 000115 .WORD 115 ;UNIQUE ERROR NUMBER
1660 006106 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE

```

```

1661
1662 006110 020127 000244      301$:  CMP      R1,#244      ;NO GO TO ERROR
1663 006114 001403              BEQ      302$          ;IS R1 CORRECT
1664 006116 104000              ERROR                    ;YES GO ON
1665 006120 000116              .WORD   116            ;ALL ERRORS TO TRAP TO EMT VECTOR
1666 006122 001213              .WORD   MMUERR        ;UNIQUE ERROR NUMBER
1667                                     ;ADDRESS OF ERROR MESSAGE
1668 006124 005037 177776      302$:  CLR      @#177776     ;NO GO TO ERROR
1669 006130 022627 173621      CMP      (SP)+,#173621 ;SET PSW TO KERNEL MODE
1670 006134 001403              BEQ      303$          ;IS STACK CORRECT
1671 006136 104000              ERROR                    ;YES GO ON
1672 006140 000117              .WORD   117            ;ALL ERRORS TO TRAP TO EMT VECTOR
1673 006142 001213              .WORD   MMUERR        ;UNIQUE ERROR NUMBER
1674                                     ;ADDRESS OF ERROR MESSAGE
1675 006144 021627 177777      303$:  CMP      (SP),#177777 ;NO GO TO ERROR
1676 006150 001403              BEQ      304$          ;IS STACK CORRECT
1677 006152 104000              ERROR                    ;YES GO ON
1678 006154 000120              .WORD   120            ;ALL ERRORS TO TRAP TO EMT VECTOR
1679 006156 001213              .WORD   MMUERR        ;UNIQUE ERROR NUMBER
1680                                     ;ADDRESS OF ERROR MESSAGE
1681 006160 005003              304$:  CLR      R3          ;NO GO TO ERROR
1682 006162 005237 177572      INC      @#177572     ;SETUP SOURCE FOR NEXT TEST
1683 006166 006503              MFPI    R3            ;TURN MMU ON
1684 006170 022737 000004 177776  CMP      @#177776     ; TEST INSTRUCTION
1685 006176 001403              BEQ      6$           ;IS PSW CORRECT
1686 006200 104000              ERROR                    ;YES GO ON
1687 006202 000121              .WORD   121            ;ALL ERRORS TO TRAP TO EMT VECTOR
1688 006204 001213              .WORD   MMUERR        ;UNIQUE ERROR NUMBER
1689                                     ;ADDRESS OF ERROR MESSAGE
1690 006206 005037 177572      6$:    CLR      @#177572 ;NO GO TO ERROR
1691 006212 020327 000000      CMP      R3,#0        ;TURN MMU OFF
1692 006216 001403              BEQ      7$           ;IS R3 CORRECT
1693 006220 104000              ERROR                    ;YES GO ON
1694 006222 000122              .WORD   122            ;ALL ERRORS TO TRAP TO EMT VECTOR
1695 006224 001213              .WORD   MMUERR        ;UNIQUE ERROR NUMBER
1696                                     ;ADDRESS OF ERROR MESSAGE
1697 006226 022627 000000      7$:    CMP      (SP)+,#0   ;NO GO TO ERROR
1698 006232 001403              BEQ      8$           ;IS STACK CORRECT
1699 006234 104000              ERROR                    ;YES GO ON
1700 006236 000123              .WORD   123            ;ALL ERRORS TO TRAP TO EMT VECTOR
1701 006240 001213              .WORD   MMUERR        ;UNIQUE ERROR NUMBER
1702                                     ;ADDRESS OF ERROR MESSAGE
1703 006242 022627 177777      8$:    CMP      (SP)+,#177777 ;NO GO TO ERROR
1704 006246 001403              BEQ      9$           ;IS STACK CORRECT
1705 006250 104000              ERROR                    ;YES GO ON
1706 006252 000124              .WORD   124            ;ALL ERRORS TO TRAP TO EMT VECTOR
1707 006254 001213              .WORD   MMUERR        ;UNIQUE ERROR NUMBER
1708                                     ;ADDRESS OF ERROR MESSAGE
1709 006256 012637 000244      9$:    MOV      (SP)+,@#244 ;NO GO TO ERROR
1710                                     ;RESTORE TEST LOCATION
1711                                     ;
1712 006262      ;TSM#6B:
1713      ;*****
1714      ;*TEST 10      TEST MFPI (MOVE FROM PREVIOUS DATA SPACE)
1715      ;*****
1716 006262      ;TST10:
    
```

```

1717 006262 005267 172516 INC $TESTN ;INCREMENT TEST NUMBER
1718 006266 005037 177572 CLR $@177572 ;MMU OFF
1719 006272 005037 001042 CLR $@FLAG ;CLEAR MMU ABORT FLAG
1720 006276 012737 140000 177776 MOV $140000,$@177776 ;POINT TO USER SPACE
1721 006304 010637 001070 MOV R6,$@SAVUSE ;SAVE USER SP
1722 006310 012737 040000 177776 MOV $40000,$@177776 ;POINT TO SUPERVISOR SPACE
1723 006316 010637 001066 MOV R6,$@SAVSUP ;SAVE SUPERVISOR SP
1724 006322 012737 030000 177776 MOV $30000,$@177776 ;SETUP PSW
1725 006330 004767 172752 JSR PC,MMU ;INIT MMU
1726 006334 012737 000027 172516 MOV $27,$@172516 ;SETUP MMR3
1727 006342 013746 000244 MOV $@244,(SP) ;SAVE DATA AT TEST LOCATION
1728 006346 012746 177777 MOV $177777,-(SP) ;PUT KNOWN DATA ON TOP OF STACK
1729 006352 012737 157002 000244 MOV $157002,$@244 ;SETUP DATA AT TEST LOCATION
1730 006360 012767 077400 171212 MOV $77400,UIPDRO ;SETUP UIPDRO TO ABORT
1731 006366 012703 000244 MOV $244,R3 ;SETUP POINTER TO TEST LOCATION
1732 006372 005237 177572 INC $@177572 ;TURN MMU ON
1733 006376 106523 MFPD (R3)+ ; TEST INSTRUCTION
1734 006400 022737 030010 177776 CMP $30010,$@177776 ;IS PSW CORRECT
1735 006406 001403 BEQ 1$ ;YES GO ON
1736 006410 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1737 006412 000125 .WORD 125 ;UNIQUE ERROR NUMBER
1738 006414 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1739 ;NO GO TO ERROR
1740 006416 005037 177572 1$: CLR $@177572 ;TURN MMU OFF
1741 006422 012737 140000 177776 MOV $140000,$@177776 ;POINT TO USER SPACE
1742 006430 020637 001070 CMP R6,$@SAVUSE ;IS USER SP CORRECT
1743 006434 001403 BEQ 100$ ;YES GO ON
1744 006436 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1745 006440 000126 .WORD 126 ;UNIQUE ERROR NUMBER
1746 006442 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1747 ;NO GO TO ERROR
1748 006444 012737 040000 177776 100$: MOV $40000,$@177776 ;POINT TO SUPERVISOR SPACE
1749 006452 020637 001066 CMP R6,$@SAVSUP ;IS SUPERVISOR SP CORRECT
1750 006456 001403 BEQ 200$ ;YES GO ON
1751 006460 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1752 006462 000127 .WORD 127 ;UNIQUE ERROR NUMBER
1753 006464 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1754 ;NO GO TO ERROR
1755 006466 023727 000244 157002 200$: CMP $@244,$157002 ;IS TEST DATA OK
1756 006474 001403 BEQ 2$ ;YES GO ON
1757 006476 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1758 006500 000130 .WORD 130 ;UNIQUE ERROR NUMBER
1759 006502 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1760 ;NO GO TO ERROR
1761 006504 020327 000246 2$: CMP R3,$246 ;IS R3 CORRECT
1762 006510 001403 BEQ 3$ ;YES GO ON
1763 006512 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1764 006514 000131 .WORD 131 ;UNIQUE ERROR NUMBER
1765 006515 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1766 ;NO GO TO ERROR
1767 006520 005037 177776 3$: CLR $@177776 ;SET PSW TO KERNEL MODE
1768 006524 022627 157002 CMP (SP)+,$157002 ;IS KERNEL STACK CORRECT
1769 006530 001403 BEQ 4$ ;YES GO ON
1770 006532 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1771 006534 000132 .WORD 132 ;UNIQUE ERROR NUMBER
1772 006536 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE

```

```

1773
1774 006540 021627 177777      4$:  CMP      (SP),#177777      ;NO GO TO ERROR
1775 006544 001403              BEQ      5$                ;IS STACK CORRECT
1776 006546 104000              ERROR                    ;YES GO ON
1777 006550 000133              .WORD    133              ;ALL ERRORS TO TRAP TO EMT VECTOR
1778 006552 001213              .WORD    MMUERR           ;UNIQUE ERROR NUMBER
1779                                     ;ADDRESS OF ERROR MESSAGE
1780 006554 012737 030017 177776 5$:  MOV      #30017,#177776   ;NO GO TO ERROR
1781 006562 012737 103456 000244  MOV      #103456,#244     ;SETUP PSW
1782 006570 012701 000244      MDV      #244,R1         ;SETUP TEST LOCATION
1783 006574 005237 177572      INC      #177572         ;SETUP R1
1784 006600 106511              MFPD     (R1)            ;TURN MMU ON
1785 006602 022737 030011 177776  CMP      #30011,#177776   ;TEST INSTRUCTION
1786 006610 001403              BEQ      300$            ;IS PSW CORRECT
1787 006612 104000              ERROR                    ;YES GO ON
1788 006614 000134              .WORD    134              ;ALL ERRORS TO TRAP TO EMT VECTOR
1789 006616 001213              .WORD    MMUERR           ;UNIQUE ERROR NUMBER
1790                                     ;ADDRESS OF ERROR MESSAGE
1791 006620 005037 177572      300$:  CLR      #177572         ;NO GO TO ERROR
1792 006624 023727 000244 103456  CMP      #244,#103456     ;TURN MMU OFF
1793 006632 001403              BEQ      301$            ;IS TEST LOCATION CORRECT
1794 006634 104000              ERROR                    ;YES GO ON
1795 006636 000135              .WORD    135              ;ALL ERRORS TO TRAP TO EMT VECTOR
1796 006640 001213              .WORD    MMUERR           ;UNIQUE ERROR NUMBER
1797                                     ;ADDRESS OF ERROR MESSAGE
1798 006642 020127 000244      301$:  CMP      R1,#244         ;NO GO TO ERROR
1799 006646 001403              BEQ      302$            ;IS R1 CORRECT
1800 006650 104000              ERROR                    ;YES GO ON
1801 006652 000136              .WORD    136              ;ALL ERRORS TO TRAP TO EMT VECTOR
1802 006654 001213              .WORD    MMUERR           ;UNIQUE ERROR NUMBER
1803                                     ;ADDRESS OF ERROR MESSAGE
1804 006656 005037 177776      302$:  CLR      #177776         ;NO GO TO ERROR
1805 006662 022627 103456      CMP      (SP),#103456     ;SET PSW TO KERNEL MODE
1806 006666 001403              BEQ      303$            ;IS STACK CORRECT
1807 006670 104000              ERROR                    ;YES GO ON
1808 006672 000137              .WORD    137              ;ALL ERRORS TO TRAP TO EMT VECTOR
1809 006674 001213              .WORD    MMUERR           ;UNIQUE ERROR NUMBER
1810                                     ;ADDRESS OF ERROR MESSAGE
1811 006676 021627 177777      303$:  CMP      (SP),#177777     ;NO GO TO ERROR
1812 006702 001403              BEQ      304$            ;IS STACK CORRECT
1813 006704 104000              ERROR                    ;YES GO ON
1814 006706 000140              .WORD    140              ;ALL ERRORS TO TRAP TO EMT VECTOR
1815 006710 001213              .WORD    MMUERR           ;UNIQUE ERROR NUMBER
1816                                     ;ADDRESS OF ERROR MESSAGE
1817 006712 012737 030017 177776 304$:  MOV      #30017,#177776   ;NO GO TO ERROR
1818 006720 012737 113672 000244  MOV      #113672,#244     ;SETUP PSW
1819 006726 012701 000246      MOV      #246,R1         ;SETUP TEST LOCATION
1820 006732 005237 177572      INC      #177572         ;SETUP R1
1821 006736 106541              MFPD     -(R1)           ;TURN MMU ON
1822 006740 022737 030011 177776  CMP      #30011,#177776   ;TEST INSTRUCTION
1823 006746 001403              BEQ      400$            ;IS PSW CORRECT
1824 006750 104000              ERROR                    ;YES GO ON
1825 006752 000141              .WORD    141              ;ALL ERRORS TO TRAP TO EMT VECTOR
1826 006754 001213              .WORD    MMUERR           ;UNIQUE ERROR NUMBER
1827                                     ;ADDRESS OF ERROR MESSAGE
1828 006756 005037 177572      400$:  CLR      #177572         ;NO GO TO ERROR
                                     ;TURN MMU OFF

```

```

1829 006762 023727 000244 113672      CMP      @#244,@#113672      ;IS TEST LOCATION CORRECT
1830 006770 001403                      BEQ      401$              ;YES GO ON
1831 006772 104000                      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1832 006774 000142                      .WORD   142              ;UNIQUE ERROR NUMBER
1833 006776 001213                      .WORD   MMUERR          ;ADDRESS OF ERROR MESSAGE
1834                                     ;NO GO TO ERROR
1835 007000 020127 000244 401$:    CMP      R1,@#244          ;IS R1 CORRECT
1836 007004 001403                      BEQ      402$              ;YES GO ON
1837 007006 104000                      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1838 007010 000143                      .WORD   143              ;UNIQUE ERROR NUMBER
1839 007012 001213                      .WORD   MMUERR          ;ADDRESS OF ERROR MESSAGE
1840                                     ;NO GO TO ERROR
1841 007014 005037 177776 402$:    CLR      @#177776          ;SET PSW TO KERNEL MODE
1842 007020 022627 113672      CMP      (SP)+,@#113672    ;IS STACK CORRECT
1843 007024 001403                      BEQ      403$              ;YES GO ON
1844 007026 104000                      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1845 007030 000144                      .WORD   144              ;UNIQUE ERROR NUMBER
1846 007032 001213                      .WORD   MMUERR          ;ADDRESS OF ERROR MESSAGE
1847                                     ;NO GO TO ERROR
1848 007034 021627 177777 403$:    CMP      (SP),@#177777     ;IS STACK CORRECT
1849 007040 001403                      BEQ      404$              ;YES GO ON
1850 007042 104000                      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1851 007044 000145                      .WORD   145              ;UNIQUE ERROR NUMBER
1852 007046 001213                      .WORD   MMUERR          ;ADDRESS OF ERROR MESSAGE
1853                                     ;NO GO TO ERROR
1854 007050 005003 404$:    CLR      R3                ;SETUP SOURCE FOR NEXT TEST
1855 007052 005237 177572      INC      @#177572          ;TURN MMU ON
1856 007056 106503                      MFPD    R3                ; TEST INSTRUCTION
1857 007060 022737 000004 177776      CMP      @#,@#177776      ;IS PSW CORRECT
1858 007066 001403                      BEQ      6$                ;YES GO ON
1859 007070 104000                      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1860 007072 000146                      .WORD   146              ;UNIQUE ERROR NUMBER
1861 007074 001213                      .WORD   MMUERR          ;ADDRESS OF ERROR MESSAGE
1862                                     ;NO GO TO ERROR
1863 007076 005037 177572 6$:    CLR      @#177572          ;TURN MMU OFF
1864 007102 020327 000000      CMP      R3,@#0            ;IS R3 CORRECT
1865 007106 001403                      BEQ      7$                ;YES GO ON
1866 007110 104000                      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1867 007112 000147                      .WORD   147              ;UNIQUE ERROR NUMBER
1868 007114 001213                      .WORD   MMUERR          ;ADDRESS OF ERROR MESSAGE
1869                                     ;NO GO TO ERROR
1870 007116 022627 000000 7$:    CMP      (SP)+,@#0         ;IS STACK CORRECT
1871 007122 001403                      BEQ      8$                ;YES GO ON
1872 007124 104000                      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1873 007126 000150                      .WORD   150              ;UNIQUE ERROR NUMBER
1874 007130 001213                      .WORD   MMUERR          ;ADDRESS OF ERROR MESSAGE
1875                                     ;NO GO TO ERROR
1876 007132 022627 177777 8$:    CMP      (SP)+,@#177777    ;IS STACK CORRECT
1877 007136 001403                      BEQ      9$                ;YES GO ON
1878 007140 104000                      ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
1879 007142 000151                      .WORD   151              ;UNIQUE ERROR NUMBER
1880 007144 001213                      .WORD   MMUERR          ;ADDRESS OF ERROR MESSAGE
1881                                     ;NO GO TO ERROR
1882 007146 012637 000244 9$:    MOV      (SP)+,@#244       ;RESTORE TEST LOCATION
1883                                     ;
1884

```

```

1885 007152          TSM16C:
1886                ;*****
1887                ;+TEST 11          TEST MTPI (MOVE TO PREVIOUS INSTRUCTION SPACE)
1888                ;*****
1889 007152          TST11:
1890 007152 005267 171626          INC      $TESTN          ;INCREMENT TEST NUMBER
1891 007156 005037 177572          CLR      @0177572      ;MMU OFF
1892 007162 005037 001042          CLR      @0FLAG       ;CLEAR MMU ABORT FLAG
1893 007166 012737 140000 177776  MOV      @140000,@0177776 ;POINT TO USER SPACE
1894 007174 010637 001070          MOV      R6,@0SAVUSE   ;SAVE USER SP
1895 007200 012737 040000 177776  MOV      @40000,@0177776 ;POINT TO SUPERVISOR SPACE
1896 007206 010637 001066          MOV      R6,@0SAVSUP   ;SAVE SUPERVISOR SP
1897 007212 012737 030000 177776  MOV      @30000,@0177776 ;SETUP PSW
1898 007220 004767 172062          JSR      PC,MMU        ;INIT MMU
1899 007224 012737 000027 172516  MOV      @27,@0172516   ;SETUP MMR3
1900 007232 013746 000244          MOV      @0244,(SP)    ;SAVE DATA AT TEST LOCATION
1901 007236 012746 177777          MOV      @177777,(SP)  ;PUT KNOWN DATA ON STACK
1902 007242 012746 120413          MOV      @120413,(SP)  ;PUT TEST DATA ON STACK
1903 007246 012737 177777 000244  MOV      @177777,@0244  ;PUT KNOWN DATA AT TEST LOCATION
1904 007254 012767 077400 170336  MOV      @77400,UDPDR0 ;SETUP UDPDR0 TO ABORT
1905 007262 012703 000244          MOV      @244,R3       ;SETUP POINTER TO TEST LOCATION
1906 007266 005237 177572          INC      @0177572      ;TURN MMU ON
1907 007272 006623          MTPI      (R3)         ; TEST INSTRUCTION
1908 007274 022737 030010 177776  CMP      @30010,@0177776 ;IS PSW CORRECT
1909 007302 001403          BEQ      11            ;YES GO ON
1910 007304 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1911 007306 000152          .WORD    152          ;UNIQUE ERROR NUMBER
1912 007310 001213          .WORD    MMUERR       ;ADDRESS OF ERROR MESSAGE
1913                ;NO GO TO ERROR
1914 007312 005037 177572 11:    CLR      @0177572      ;TURN MMU OFF
1915 007316 012737 140000 177776  MOV      @140000,@0177776 ;POINT TO USER SPACE
1916 007324 020637 001070          CMP      R6,@0SAVUSE   ;IS USER SP CORRECT
1917 007330 001403          BEQ      1001         ;YES GO ON
1918 007332 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1919 007334 000153          .WORD    153          ;UNIQUE ERROR NUMBER
1920 007336 001213          .WORD    MMUERR       ;ADDRESS OF ERROR MESSAGE
1921                ;NO GO TO ERROR
1922 007340 012737 040000 177776 1001: MOV      @40000,@0177776 ;POINT TO SUPERVISOR SPACE
1923 007346 020637 001066          CMP      R6,@0SAVSUP   ;IS SUPERVISOR SP CORRECT
1924 007352 001403          BEQ      2001         ;YES GO ON
1925 007354 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1926 007356 000154          .WORD    154          ;UNIQUE ERROR NUMBER
1927 007360 001213          .WORD    MMUERR       ;ADDRESS OF ERROR MESSAGE
1928                ;NO GO TO ERROR
1929 007362 023727 000244 120413 2001: CMP      @0244,@120413   ;IS TEST LOCATION CORRECT
1930 007370 001403          BEQ      21            ;YES GO ON
1931 007372 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1932 007374 000155          .WORD    155          ;UNIQUE ERROR NUMBER
1933 007376 001213          .WORD    MMUERR       ;ADDRESS OF ERROR MESSAGE
1934                ;NO GO TO ERROR
1935 007400 020327 000246 21:    CMP      R3,@246       ;IS R3 CORRECT
1936 007404 001403          BEQ      31            ;YES GO ON
1937 007406 104000          ERROR     ;ALL ERRORS TO TRAP TO EMT VECTOR
1938 007410 000156          .WORD    156          ;UNIQUE ERROR NUMBER
1939 007412 001213          .WORD    MMUERR       ;ADDRESS OF ERROR MESSAGE
1940                ;NO GO TO ERROR

```



```

1941 007414 005037 177776 3$: CLR @0177776 ;SET PSW TO KERNEL MODE
1942 007420 021627 177777 CMP (SP),@0177777 ;IS KERNEL STACK CORRECT
1943 007424 001403 BEQ 4$ ;YES GO ON
1944 007426 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1945 007430 000157 .WORD 157 ;UNIQUE ERROR NUMBER
1946 007432 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1947 ;NO GO TO ERROR
1948 007434 012737 030017 177776 4$: MOV @030017,@0177776 ;SETUP PSW
1949 007442 012746 145121 MOV @145121,-(SP) ;SETUP TEST DATA
1950 007446 012701 000244 MOV @244,R1 ;SETUP R1
1951 007452 005237 177572 INC @0177572 ;TURN MMU ON
1952 007456 006611 MTPI (R1) ;TEST INSTRUCTION
1953 007460 022737 030011 177776 CMP @030011,@0177776 ;IS PSW CORRECT
1954 007466 001403 BEQ 300$ ;YES GO ON
1955 007470 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1956 007472 000160 .WORD 160 ;UNIQUE ERROR NUMBER
1957 007474 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1958 ;NO GO TO ERROR
1959 007476 005037 177572 300$: CLR @0177572 ;TURN MMU OFF
1960 007502 023727 000244 145121 CMP @0244,@145121 ;IS TEST LOCATION CORRECT
1961 007510 001403 BEQ 301$ ;YES GO ON
1962 007512 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1963 007514 000161 .WORD 161 ;UNIQUE ERROR NUMBER
1964 007516 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1965 ;NO GO TO ERROR
1966 007520 020127 000244 301$: CMP R1,@244 ;IS R1 CORRECT
1967 007524 001403 BEQ 302$ ;YES GO ON
1968 007526 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1969 007530 000162 .WORD 162 ;UNIQUE ERROR NUMBER
1970 007532 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1971 ;NO GO TO ERROR
1972 007534 005037 177776 302$: CLR @0177776 ;SET PSW TO KERNEL MODE
1973 007540 021627 177777 CMP (SP),@0177777 ;IS STACK CORRECT
1974 007544 001403 BEQ 304$ ;YES GO ON
1975 007546 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1976 007550 000163 .WORD 163 ;UNIQUE ERROR NUMBER
1977 007552 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1978 ;NO GO TO ERROR
1979 007554 012737 030017 177776 304$: MOV @030017,@0177776 ;SETUP PSW
1980 007562 012746 122347 MOV @122347,(SP) ;SETUP TEST DATA
1981 007566 012701 000246 MOV @246,R1 ;SETUP R1
1982 007572 005237 177572 INC @0177572 ;TURN MMU ON
1983 007576 006641 MTPI -(R1) ;TEST INSTRUCTION
1984 007600 022737 030011 177776 CMP @030011,@0177776 ;IS PSW CORRECT
1985 007606 001403 BEQ 400$ ;YES GO ON
1986 007610 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1987 007612 000164 .WORD 164 ;UNIQUE ERROR NUMBER
1988 007614 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1989 ;NO GO TO ERROR
1990 007616 005037 177572 400$: CLR @0177572 ;TURN MMU OFF
1991 007622 023727 000244 122347 CMP @0244,@122347 ;IS TEST LOCATION CORRECT
1992 007630 001403 BEQ 401$ ;YES GO ON
1993 007632 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
1994 007634 000165 .WORD 165 ;UNIQUE ERROR NUMBER
1995 007636 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
1996 ;NO GO TO ERROR
    
```

D4

```

1997 007640 020127 000244      401$: CMP      R1,#244      ;IS R1 CORRECT
1998 007644 001403              BEQ      402$      ;YES GO ON
1999 007646 104000              ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
2000 007650 000166              .WORD   166          ;UNIQUE ERROR NUMBER
2001 007652 001213              .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
2002                                ;NO GO TO ERROR
2003 007654 005037 177776      402$: CLR      @017776    ;SET PSW TO KERNEL MODE
2004 007660 021627 177777      CMP      (SP),@17777 ;IS STACK CORRECT
2005 007664 001403              BEQ      404$      ;YES GO ON
2006 007666 104000              ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
2007 007670 000167              .WORD   167          ;UNIQUE ERROR NUMBER
2008 007672 001213              .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
2009                                ;NO GO TO ERROR
2010 007674 005046              404$: CLR      (SP)      ;SETUP STACK FOR NEXT TEST
2011 007676 005237 177572      INC      @0177572    ;TURN MMU ON
2012 007702 006603              MTP1     R3          ;TEST INSTRUCTION
2013 007704 022737 000004 177776  CMP      @4,@017776  ;IS PSW CORRECT
2014 007712 001403              BEQ      5$         ;YES GO ON
2015 007714 104000              ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
2016 007716 000170              .WORD   170          ;UNIQUE ERROR NUMBER
2017 007720 001213              .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
2018                                ;NO GO TO ERROR
2019 007722 005037 177572      5$:   CLR      @0177572 ;TURN MMU OFF
2020 007726 020327 000000      CMP      R3,#0      ;IS R3 CORRECT
2021 007732 001403              BEQ      6$         ;YES GO ON
2022 007734 104000              ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
2023 007736 000171              .WORD   171          ;UNIQUE ERROR NUMBER
2024 007740 001213              .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
2025                                ;NO GO TO ERROR
2026 007742 022627 177777      6$:   CMP      (SP),@17777 ;IS STACK CORRECT
2027 007746 001403              BEQ      7$         ;YES GO ON
2028 007750 104000              ERROR                    ;ALL ERRORS TO TRAP TO EMT VECTOR
2029 007752 000172              .WORD   172          ;UNIQUE ERROR NUMBER
2030 007754 001213              .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
2031                                ;NO GO TO ERROR
2032 007756 012637 000244      7$:   MOV      (SP),@0244 ;RESTORE TEST LOCATION
2033
2034                                ;
2035 007762                                ;TSM16D:
2036                                ;*****
2037                                ;*TEST 12      TEST MTPD (MOVE TO PREVIOUS DATA SPACE)
2038                                ;*****
2039                                ;TST12:
2040 007762 005267 171016      INC      $TESTN      ;INCREMENT TEST NUMBER
2041 007766 005037 177572      CLR      @0177572    ;MMU OFF
2042 007772 005037 001042      CLR      @0FLAG      ;CLEAR MMU ABORT FLAG
2043 007776 012737 140000 177776  MOV      @140000,@017776 ;POINT TO USER SPACE
2044 010004 010637 001070      MOV      R6,@0SAVUSE ;SAVE USER SP
2045 010010 012737 040000 177776  MOV      @40000,@017776 ;POINT TO SUPERVISOR SPACE
2046 010016 010637 001066      MOV      R6,@0SAVSUP ;SAVE SUPERVISOR SP
2047 010022 012737 030000 177776  MOV      @30000,@017776 ;SETUP PSW
2048 010030 004767 171252      JSR     PC,MMU       ;INIT MMU
2049 010034 012737 000027 172516  MOV      @27,@0172516 ;SETUP MMR3
2050 010042 013746 000244      MOV      @0244,-(SP) ;SAVE DATA AT TEST LOCATION
2051 010046 012746 177777      MOV      @17777,-(SP) ;PUT KNOWN DATA ON STACK
2052 010052 012746 100004      MOV      @100004,-(SP) ;PUT TEST DATA ON STACK
    
```


2109	010306	005037	177572		300\$:	CLR	@177572		;TURN MMU OFF
2110	010312	023727	000244	100737		CMP	@244,@100737		;IS TEST LOCATION CORRECT
2111	010320	001403				BEQ	301\$;YES GO ON
2112	010322	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
2113	010324	000202				.WORD	202		;UNIQUE ERROR NUMBER
2114	010326	001213				.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2115									;NO GO TO ERROR
2116	010330	020127	000244		301\$:	CMP	R1,@244		;IS R1 CORRECT
2117	010334	001403				BEQ	302\$;YES GO ON
2118	010336	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
2119	010340	000203				.WORD	203		;UNIQUE ERROR NUMBER
2120	010342	001213				.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2121									;NO GO TO ERROR
2122	010344	005037	177776		302\$:	CLR	@177776		;SET PSW TO KERNEL MODE
2123	010350	021627	177777			CMP	(SP),@177777		;IS STACK CORRECT
2124	010354	001403				BEQ	304\$;YES GO ON
2125	010356	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
2126	010360	000204				.WORD	204		;UNIQUE ERROR NUMBER
2127	010362	001213				.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2128									;NO GO TO ERROR
2129	010364	012737	030017	177776	304\$:	MOV	@30017,@177776		;SETUP PSW
2130	010372	012746	156711			MOV	@156711,-(SP)		;SETUP TEST DATA
2131	010376	012701	000246			MOV	@246,R1		;SETUP R1
2132	010402	005237	177572			INC	@177572		;TURN MMU ON
2133	010406	106641				MTPD	-(R1)		;TEST INSTRUCTION
2134	010410	022737	030011	177776		CMP	@30011,@177776		;IS PSW CORRECT
2135	010416	001403				BEQ	400\$;YES GO ON
2136	010420	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
2137	010422	000205				.WORD	205		;UNIQUE ERROR NUMBER
2138	010424	001213				.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2139									;NO GO TO ERROR
2140	010426	005037	177572		400\$:	CLR	@177572		;TURN MMU OFF
2141	010432	023727	000244	156711		CMP	@244,@156711		;IS TEST LOCATION CORRECT
2142	010440	001403				BEQ	401\$;YES GO ON
2143	010442	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
2144	010444	000206				.WORD	206		;UNIQUE ERROR NUMBER
2145	010446	001213				.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2146									;NO GO TO ERROR
2147	010450	020127	000244		401\$:	CMP	R1,@244		;IS R1 CORRECT
2148	010454	001403				BEQ	402\$;YES GO ON
2149	010456	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
2150	010460	000207				.WORD	207		;UNIQUE ERROR NUMBER
2151	010462	001213				.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2152									;NO GO TO ERROR
2153	010464	005037	177776		402\$:	CLR	@177776		;SET PSW TO KERNEL MODE
2154	010470	021627	177777			CMP	(SP),@177777		;IS STACK CORRECT
2155	010474	001403				BEQ	404\$;YES GO ON
2156	010476	104000				ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
2157	010500	000210				.WORD	210		;UNIQUE ERROR NUMBER
2158	010502	001213				.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2159									;NO GO TO ERROR
2160	010504	005046			404\$:	CLR	-(SP)		;SETUP STACK FOR NEXT TEST
2161	010506	005237	177572			INC	@177572		;TURN MMU ON
2162	010512	106603				MTPD	R3		;TEST INSTRUCTION
2163	010514	022737	000004	177776		CMP	@4,@177776		;IS PSW CORRECT
2164	010522	001403				BEQ	5\$;YES GO ON

TEST MTPD (MOVE TO PREVIOUS DATA SPACE)

```

2165 010524 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2166 010526 000211        .WORD 211      ;UNIQUE ERROR NUMBER
2167 010530 001213        .WORD MMUERR   ;ADDRESS OF ERROR MESSAGE
2168                                     ;NO GO TO ERROR
2169 010532 005037 177572  5$: CLR @0177572 ;TURN MMU OFF
2170 010536 020327 000000  CMP R3,00      ;IS R3 CORRECT
2171 010542 001403        BEQ 6$         ;YES GO ON
2172 010544 104000        ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2173 010546 000212        .WORD 212      ;UNIQUE ERROR NUMBER
2174 010550 001213        .WORD MMUERR   ;ADDRESS OF ERROR MESSAGE
2175                                     ;NO GO TO ERROR
2176 010552 022627 177777  6$: CMP (SP)+,0177777 ;IS STACK CORRECT
2177 010556 001403        BEQ 7$         ;YES GO ON
2178 010560 104000        ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2179 010562 000213        .WORD 213      ;UNIQUE ERROR NUMBER
2180 010564 001213        .WORD MMUERR   ;ADDRESS OF ERROR MESSAGE
2181                                     ;NO GO TO ERROR
2182 010566 012637 000244  7$: MOV (SP)+,00244 ;RESTORE TEST LOCATION
2183
2184 ;
2185 010572          ;TSMU7:
2186 ;*****
2187 ;*TEST 13      TEST NON-RESIDENT ABORT
2188 ;*****
2189 ;TST13:
2190 010572 005267 170206  INC $TESTN      ;INCREMENT TEST NUMBER
2191 010576 005037 177572  CLR @0177572   ;MMU OFF
2192 010602 005067 170234  CLR FLAG       ;CLEAR MMU ABORT FLAG
2193 010606 013746 000214  MOV @0214,-(SP) ;SAVE DATA AT TEST LOCATIONS
2194 010612 013746 000216  MOV @0216,-(SP) ;
2195 010616 005067 170250  CLR SAVMR0     ;CLEAR STATUS REGS SAVE AREAS
2196 010622 005067 170246  CLR SAVMR1     ;
2197 010626 005067 170244  CLR SAVMR2     ;
2198 010632 004767 170450  JSR PC,MMU     ;INIT MMU
2199 010636 012737 030000 177776 MOV @30000,@0177776 ;SETUP PSW
2200 010644 012702 000200  MOV @200,R2    ;
2201 010650 012737 077400 177600 MOV @77400,@0177600 ;SETUP FOR AN ABORT
2202 010656 004767 000164  JSR PC,TS7    ;CAUSE AN ABORT TO OCCUR AND
2203                                     ;THEN CHECK IF ABORT FLAG REGISTERED
2204                                     ;THIS EVENT AND CHECK IF STATUS REGS
2205                                     ;CONTAINED EXPECTED VALUES.
2206                                     ;IF NO ABORT OCCURRED THEN GO TO ERROR
2207                                     ;OTHERWISE CONTINUE.
2208 010662 012737 077404 177600 MOV @77404,@0177600 ;SETUP FOR AN ABORT
2209 010670 004767 000152  JSR PC,TS7    ;CAUSE AN ABORT TO OCCUR AND
2210                                     ;THEN CHECK IF ABORT FLAG REGISTERED
2211                                     ;THIS EVENT AND CHECK IF STATUS REGS
2212                                     ;CONTAINED EXPECTED VALUES.
2213                                     ;IF NO ABORT OCCURRED THEN GO TO ERROR
2214                                     ;OTHERWISE CONTINUE.
2215 010674 012701 000220  MOV @220,R1    ;
2216 010700 004767 170402  JSR PC,MMU     ;INIT MMU
2217 010704 005003  CLR R3         ;SETUP MMR1 EXPECTED DATA
2218 010706 012767 000001 170126 MOV @1,FLAG    ;SETUP FLAG FOR AN ABORT
2219 010714 012737 000001 177572 MOV @1,@0177572 ;TURN MMU ON
2220 010722 012737 100000 177776 MOV @100000,@0177776 ;SETUP PSW FOR AN ABORT (ILLEGAL MODE)

```



```

2277 011156 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
2278 ;NOT OK THEN GO TO ERROR
2279 011160 005067 167706 OKAY7A: CLR SAVMRO ;CLEAR STATUS REGS SAVE AREAS
2280 011164 005067 167704 CLR SAVMR1 ;
2281 011170 005067 167702 CLR SAVMR2 ;
2282 011174 000207 RTS PC ;RETURN
2283 ;
2284 ;ROUTINE TO CHECK IF A NONRESIDENT ABORT OCCURRED
2285 ;
2286 011176 022767 000000 167636 TSM7: CMP #0,FLAG ;DID AN ABORT OCCUR
2287 011204 001403 BEQ TSMA ;IF YES GO ON
2288 011206 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2289 011210 000220 .WORD 220 ;UNIQUE ERROR NUMBER
2290 011212 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
2291 ;IF NO THEN GO TO ERROR
2292 011214 042737 040377 001072 TSMA: BIC #40377,#SAVMRO ;SETUP EXPECTED DATA
2293 011222 022767 100000 167642 CMP #100000,SAVMRO ;TEST MMRO FOR EXPECTED VALUE
2294 011230 001403 BEQ TSMB ;IF OK THEN CONTINUE
2295 011232 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2296 011234 000221 .WORD 221 ;UNIQUE ERROR NUMBER
2297 011236 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
2298 ;IF NO THEN GO TO ERROR
2299 011240 020367 167630 TSMB: CMP R3,SAVMR1 ;TEST MMRI FOR EXPECTED VALUE
2300 011244 001403 BEQ TSMC ;IF OK THEN CONTINUE
2301 011246 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2302 011250 000222 .WORD 222 ;UNIQUE ERROR NUMBER
2303 011252 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
2304 ;IF NOT OK THEN GO TO ERROR
2305 011254 000207 TSMC: RTS PC ;RETURN
2306 ;
2307 011256 TS7FIN:
2308 011256 TSMU8:
2309 ;*****
2310 ;*TEST 14 TEST READ ONLY ABORTS
2311 ;*****
2312 011256 TST14:
2313 011256 005267 167522 INC #TESTN ;INCREMENT TEST NUMBER
2314 011262 005037 177572 CLR #177572 ;MMU OFF
2315 011266 005067 167550 CLR FLAG ;CLEAR MMU ABORT FLAG
2316 011272 013746 000244 MOV #244,-(SP) ;SAVE DATA AT TEST LOCATIONS
2317 011276 013746 000246 MOV #246,-(SP) ;
2318 011302 005067 167564 CLR SAVMRO ;CLEAR STATUS REGS SAVE AREAS
2319 011306 005067 167562 CLR SAVMR1 ;
2320 011312 005067 167560 CLR SAVMR2 ;
2321 011316 004767 167764 JSR PC,MMU ;INIT MMU
2322 011322 012737 030000 177776 MOV #30000,#177776 ;SETUP PSW
2323 011330 012702 000244 MOV #244,R2 ;
2324 011334 012737 077402 177600 MOV #77402,#177600 ;SETUP FOR AN ABORT
2325 011342 012746 000246 MOV #246,(SP) ;PUSH DATA ONTO THE STACK
2326 011346 012767 000001 167466 MOV #1,FLAG ;SETUP FLAG FOR AN ABORT
2327 011354 012737 000001 177572 MOV #1,#177572 ;TURN MMU ON
2328 011362 010701 MOV R7,R1 ;SAVE PC
2329 011364 006622 MTPI (R2) ;CAUSE ABORT
2330 011366 022767 000000 167446 CMP #0,FLAG ;DID ABORT OCCUR
2331 011374 001403 BEQ 1# ;IF YES THEN GO ON
2332 ;IF NO THEN GO TO ERROR
    
```

```

2333 011376 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
2334 011400 000223 .WORD 223 ; UNIQUE ERROR NUMBER
2335 011402 001213 .WORD MMUERR ; ADDRESS OF ERROR MESSAGE
2336 011404 105067 167462 1$: CLR SAVMRO ; SETUP EXPECTED DATA
2337 011410 022767 020000 167454 CMP #20000,SAVMRO ; TEST MMRO FOR EXPECTED VALUE
2338 011416 001403 BEQ 2$ ; IF OK THEN CONTINUE
2339 ; OTHERWISE GO TO ERROR
2340 011420 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
2341 011422 000224 .WORD 224 ; UNIQUE ERROR NUMBER
2342 011424 001213 .WORD MMUERR ; ADDRESS OF ERROR MESSAGE
2343 011426 022767 011026 167440 2$: CMP #11026,SAVMR1 ; TEST MMR1 FOR EXPECTED VALUE
2344 011434 001403 BEQ 3$ ; IF OK THEN CONTINUE
2345 ; OTHERWISE GO TO ERROR
2346 011436 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
2347 011440 000225 .WORD 225 ; UNIQUE ERROR NUMBER
2348 011442 001213 .WORD MMUERR ; ADDRESS OF ERROR MESSAGE
2349 011444 020167 167426 3$: CMP R1,SAVMR2 ; TEST MMR2 FOR EXPECTED VALUE
2350 011450 001403 BEQ 4$ ; IF OK THEN CONTINUE
2351 ; OTHERWISE GO TO ERROR
2352 011452 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
2353 011454 000226 .WORD 226 ; UNIQUE ERROR NUMBER
2354 011456 001213 .WORD MMUERR ; ADDRESS OF ERROR MESSAGE
2355 011460 023766 000244 000002 4$: CMP #0244,2(SP) ; CHECK THAT ABORT BLOCKED WRITE
2356 011466 001403 BEQ 5$ ; BRANCH IF CURRENT CONTENTS= SAVED
2357 ; ELSE
2358 ; ERROR! ABORT DIDN'T BLOCK ACCESS
2359 011470 104000 ERROR ; ALL ERRORS TO TRAP TO EMT VECTOR
2360 011472 000227 .WORD 227 ; UNIQUE ERROR NUMBER
2361 011474 001213 .WORD MMUERR ; ADDRESS OF ERROR MESSAGE
2362 011476 012737 030000 177776 5$: MOV #30000,@#177776 ; SETUP PSW
2363 011504 012746 000002 MOV #2,-(SP) ; PUSH DATA ONTO STACK
2364 011510 006622 MTPI (R2)+ ; TRY TO CAUSE ABORT
2365 011512 012637 000246 MOV (SP)+,@#246 ; RESTORE DATA AT TEST LOCATIONS
2366 011516 012637 000244 MOV (SP)+,@#244 ;
2367 ;
2368 011522 TSM9:
2369 ; *****
2370 ; *TEST 15 TEST PAGE LENGTH ERROR ABORTS
2371 ; *****
2372 011522 TST15:
2373 011522 005267 167256 INC $TESTN ; INCREMENT TEST NUMBER
2374 011526 005037 177572 CLR #0177572 ; MMU OFF
2375 011532 005067 167304 CLR FLAG ; CLEAR MMU ABORT FLAG
2376 011536 005067 167330 CLR SAVMRO ; CLEAR STATUS REGS SAVE AREAS
2377 011542 005067 167326 CLR SAVMR1 ;
2378 011546 005067 167324 CLR SAVMR2 ;
2379 011552 012737 030000 177776 MOV #30000,@#177776 ; SETUP PSW
2380 011560 004767 167522 JSR PC,MMU ; INIT MMU
2381 011564 012703 012072 MOV #PLF0,R3 ; LET R3, R1, AND R2 POINT TO THE
2382 011570 012701 012144 MOV #BNO,R1 ; UPWARD EXPANSION TABLES
2383 011574 012702 012214 MOV #ABORT0,R2 ;
2384 011600 012737 000026 172516 MOV #26,@#172516 ; DISABLE USER DATA SPACE
2385 011606 004767 000050 JSR PC,TSM9 ; TURN MMU ON
2386 ; DO RELOCATIONS FOR THE DIFFERENT
2387 ; VALUES OF THE PAGE LENGTH FIELD AND
2388 ; BLOCK NUMBER. IF AN ABORT OCCURS

```



```

2389
2390
2391
2392 011612 012703 012264      MOV    #PLF1,R3
2393 011616 012701 012334      MOV    #BN1,R1
2394 011622 012702 012402      MOV    #ABORT1,R2
2395 011626 004767 000030      JSR    PC,TSM9
2396
2397
2398
2399
2400
2401
2402 011632 005037 177572      CLR    @#177572
2403 011636 012703 012274      MOV    #PLF1+10,R3
2404 011642 012701 012344      MOV    #BN1+10,R1
2405 011646 011337 177600      MOV    (R3),@#177600
2406 011652 006521             MFPI   (R1)+
2407 011654 012605             MOV    (SP)+,R5
2408
2409 011656 000167 000566      JMP    TS9FIN
2410
2411      ; ROUTINE TO CAUSE AND CHECK PAGE LENGTH ERROR ABORTS
2412
2413 011662 012337 177600      TSM9: MOV    (R3)+,@#177600      ; SETUP UIPDRO
2414 011666 010100             MOV    R1,R0                  ; SAVE A COPY OF R1
2415 011670 012767 000001 167144  MOV    #1,FLAG                ; SETUP FOR AN ABORT
2416 011676 012737 000001 177572  MOV    #1,@#177572            ; TURN MMU ON
2417 011704 010704             MOV    R7,R4                  ; SAVE PC
2418 011706 006530             MFPI   @ (R0)+                ; DO A RELOCATION OPERATION
2419 011710 021227 000000             CMP    (R2),#0                ; WAS AN ABORT SUPPOSED TO OCCUR
2420 011714 001011             BNE   2$                      ; IF YES GO TO 2$
2421 011716 012605             MOV    (SP)+,R5                ; POP THE STACK
2422 011720 022767 000001 167114  CMP    #1,FLAG                ; DID AN ABORT OCCUR
2423 011726 001403             BEQ   1$                      ; NO GO ON
2424 011730 104000             ERROR                               ; ALL ERRORS TO TRAP TO EMT VECTOR
2425 011732 000230             .WORD 230                     ; UNIQUE ERROR NUMBER
2426 011734 001213             .WORD MMUERR                   ; ADDRESS OF ERROR MESSAGE
2427                                     ; YES GO TO ERROR
2428 011736 000435             BR    6$                      ;
2429 011740 022767 000000 167074 2$: CMP    #0,FLAG                ; DID AN ABORT OCCUR
2430 011746 001403             BEQ   3$                      ; YES GO ON
2431 011750 104000             ERROR                               ; ALL ERRORS TO TRAP TO EMT VECTOR
2432 011752 000231             .WORD 231                     ; UNIQUE ERROR NUMBER
2433 011754 001213             .WORD MMUERR                   ; ADDRESS OF ERROR MESSAGE
2434                                     ; NO GO TO ERROR
2435 011756 105067 167110 3$: CLRB   SAVMRO                  ; SETUP EXPECTED DATA
2436 011762 022767 040000 167102  CMP    #40000,SAVMRO           ; TEST MMRO FOR EXPECTED VALUE
2437 011770 001403             BEQ   4$                      ; IF OK THEN CONTINUE
2438 011772 104000             ERROR                               ; ALL ERRORS TO TRAP TO EMT VECTOR
2439 011774 000232             .WORD 232                     ; UNIQUE ERROR NUMBER
2440 011776 001213             .WORD MMUERR                   ; ADDRESS OF ERROR MESSAGE
2441                                     ; NOT OK THEN GO TO ERROR
2442 012000 022767 000020 167066 4$: CMP    #20,SAVMR1              ; TEST MMR1 FOR EXPECTED VALUE
2443 012006 001403             BEQ   5$                      ; IF OK THEN CONTINUE
2444 012010 104000             ERROR                               ; ALL ERRORS TO TRAP TO EMT VECTOR
    
```

2445	012012	000233			.WORD	233		;UNIQUE ERROR NUMBER
2446	012014	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2447								THEN GO TO ERROR
2448	012016	020467	167054	5#:	CMP	R4,SAVMR2	;NOT OK	; TEST MMR2 FOR EXPECTED VALUE
2449	012022	001403			BEQ	6#		; IF OK THEN CONTINUE
2450	012024	104000			ERROR			; ALL ERRORS TO TRAP TO EMT VECTOR
2451	012026	000234			.WORD	234		;UNIQUE ERROR NUMBER
2452	012030	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
2453							;NOT OK	THEN GO TO ERROR
2454	012032	005067	167004	6#:	CLR	FLAG		;CLEAR MMU ABORT FLAG
2455	012036	005067	167030		CLR	SAVMR0		;CLEAR STATUS REGS SAVE AREAS
2456	012042	005067	167026		CLR	SAVMR1		:
2457	012046	005067	167024		CLR	SAVMR2		:
2458	012052	005201			INC	R1		;POINT TO NEXT ENTRY
2459	012054	005201			INC	R1		:
2460	012056	005202			INC	R2		:
2461	012060	005202			INC	R2		:
2462	012062	021327	000777		CMP	(R3),#777		;HAVE ALL ENTRIES BEEN TRIED
2463	012066	001275			BNE	TSM9		;NO REPEAT
2464	012070	000207			RTS	PC		;YES RETURN
2465								
2466								;UPWARD EXPANSION TABLES
2467								
2468	012072	070006			PLFO:	.WORD	70006	
2469	012074	070006				.WORD	70006	
2470	012076	070006				.WORD	70006	
2471	012100	013406				.WORD	13406	
2472	012102	020006				.WORD	20006	
2473	012104	004006				.WORD	04006	
2474	012106	040006				.WORD	40006	
2475	012110	070006				.WORD	70006	
2476	012112	024006				.WORD	24006	
2477	012114	004006				.WORD	04006	
2478	012116	014006				.WORD	14006	
2479	012120	012006				.WORD	12006	
2480	012122	002006				.WORD	02006	
2481	012124	001406				.WORD	01406	
2482	012126	004006				.WORD	04006	
2483	012130	002006				.WORD	02006	
2484	012132	000406				.WORD	00406	
2485	012134	007406				.WORD	07406	
2486	012136	001006				.WORD	01006	
2487	012140	003406				.WORD	03406	
2488	012142	000777				.WORD	777	
2489	012144	013000		BNO:		.WORD	013000	
2490	012146	016000				.WORD	016000	
2491	012150	017000				.WORD	017000	
2492	012152	002700				.WORD	002700	
2493	012154	014000				.WORD	014000	
2494	012156	002000				.WORD	002000	
2495	012160	004000				.WORD	004000	
2496	012162	007000				.WORD	007000	
2497	012164	002000				.WORD	002000	
2498	012166	000700				.WORD	000700	
2499	012170	004000				.WORD	004000	
2500	012172	001000				.WORD	001000	

2501	012174	000300	.WORD	000300
2502	012176	000400	.WORD	000400
2503	012200	001400	.WORD	001400
2504	012202	000600	.WORD	000600
2505	012204	000200	.WORD	000200
2506	012206	001700	.WORD	001700
2507	012210	000300	.WORD	000300
2508	012212	000700	.WORD	000700
2509	012214	000000	ABORTO: .WORD	0
2510	012216	000000	.WORD	0
2511	012220	000001	.WORD	1
2512	012222	000000	.WORD	0
2513	012224	000001	.WORD	1
2514	012226	000001	.WORD	1
2515	012230	000000	.WORD	0
2516	012232	000000	.WORD	0
2517	012234	000000	.WORD	0
2518	012236	000000	.WORD	0
2519	012240	000001	.WORD	1
2520	012242	000000	.WORD	0
2521	012244	000000	.WORD	0
2522	012246	000001	.WORD	1
2523	012250	000001	.WORD	1
2524	012252	000001	.WORD	1
2525	012254	000001	.WORD	1
2526	012256	000000	.WORD	0
2527	012260	000001	.WORD	1
2528	012262	000000	.WORD	0

; DOWNWARD EXPANSION TABLES

2531				
2532	012264	000416	PLF1: .WORD	00416
2533	012266	020016	.WORD	20016
2534	012270	024016	.WORD	24016
2535	012272	034016	.WORD	34016
2536	012274	074016	.WORD	74016
2537	012276	040016	.WORD	40016
2538	012300	020016	.WORD	20016
2539	012302	000016	.WORD	00016
2540	012304	030016	.WORD	30016
2541	012306	010016	.WORD	10016
2542	012310	014016	.WORD	14016
2543	012312	004016	.WORD	04016
2544	012314	002016	.WORD	02016
2545	012316	000416	.WORD	00416
2546	012320	000016	.WORD	00016
2547	012322	003416	.WORD	03416
2548	012324	001016	.WORD	01016
2549	012326	001416	.WORD	01416
2550	012330	000416	.WORD	00416
2551	012332	000777	.WORD	777
2552	012334	000100	BN1: .WORD	000100
2553	012336	010000	.WORD	010000
2554	012340	006000	.WORD	006000
2555	012342	016000	.WORD	016000
2556	012344	016000	.WORD	016000

2557	012346	004000	.WORD	004000
2558	012350	000000	.WORD	000000
2559	012352	000000	.WORD	000000
2560	012354	004000	.WORD	004000
2561	012356	004000	.WORD	004000
2562	012360	004000	.WORD	004000
2563	012362	000000	.WORD	000000
2564	012364	000300	.WORD	000300
2565	012366	000000	.WORD	000000
2566	012370	000400	.WORD	000400
2567	012372	001000	.WORD	001000
2568	012374	000100	.WORD	000100
2569	012376	000400	.WORD	000400
2570	012400	000200	.WORD	000200
2571	012402	000000	.WORD	0
2572	012404	000000	.WORD	0
2573	012406	000000	.WORD	0
2574	012410	000000	.WORD	0
2575	012412	000001	.WORD	1
2576	012414	000001	.WORD	1
2577	012416	000001	.WORD	1
2578	012420	000000	.WORD	0
2579	012422	000001	.WORD	1
2580	012424	000000	.WORD	0
2581	012426	000000	.WORD	0
2582	012430	000001	.WORD	1
2583	012432	000001	.WORD	1
2584	012434	000001	.WORD	1
2585	012436	000000	.WORD	0
2586	012440	000000	.WORD	0
2587	012442	000001	.WORD	1
2588	012444	000000	.WORD	0
2589	012446	000000	.WORD	0

ABORT1:

2590
2591 012450
2592 012450

```

;
TS9FIN:
TSM10:
;*****
; *TEST 16      FUNCTIONAL TEST OF BITS <6:1> OF MMRO
;*****
TST16:

```

2596	012450			
2597	012450	005267	166330	
2598	012454	005037	177572	
2599	012460	005067	166356	
2600	012464	005067	166402	
2601	012470	005067	166400	
2602	012474	005067	166376	
2603	012500	004767	166602	
2604	012504	005037	177776	
2605	012510	012702	020200	
2606	012514	012737	077400	172302
2607	012522	012767	000001	166312
2608	012530	012737	000001	177572
2609	012536	010701		
2610	012540	006522		
2611	012542	012704	100003	
2612	012546	004767	000210	

```

INC      $TESTN      ; INCREMENT TEST NUMBER
CLR      @177572     ; MMU OFF
CLR      FLAG        ; CLEAR MMU ABORT FLAG
CLR      SAVMR0      ; CLEAR STATUS REGS SAVE AREAS
CLR      SAVMR1
CLR      SAVMR2
;
;
; INIT MMU
; INIT PSW: PREVIOUS MODE = KERNAL
;
;
; SETUP KIPDR1 TO ABORT
; SETUP FLAG FOR AN ABORT
MOV      @1,FLAG     ; TURN MMU ON
MOV      R7,R1       ; SAVE PC
MFPI     (R2)+       ; DO A RELOCATION VIA KIPAR1
MOV      @100003,R4  ; SETUP EXPECTED DATA
JSR      PC,TS10     ; CHECK IF AN ABORT OCCURRED AND

```

```

2613
2614 012552 012737 030000 177776      MOV      @30000,@0177776      ;IF YES CHECK BITS <6:1> OF MMRO.
2615 012560 004767 166522              JSR      PC,MMU              ;INIT PSW: PREVIOUS MODE = USER
2616 012564 012737 077400 177636      MOV      @77400,@0177636    ;INIT MMU
2617 012572 012737 001600 177676      MOV      @1600,@0177676     ;SETUP UDPR7 TO ABORT
2618                                ;SET UDPAR7 TO RELOCATE TO PHYSICAL
2619 012600 012702 160000              MOV      @160000,R2         ;ADDRESSES 160000-177776
2620 012604 012767 000001 166230      MOV      @1,FLAG           ;
2621 012612 012737 000001 177572      MOV      @1,@0177572       ;SETUP FLAG FOR AN ABORT
2622 012620 010701                    MOV      R7,R1             ;TURN MMU ON
2623 012622 106522                    MFPD     (R2),             ;SAVE PC
2624 012624 012704 100177            MOV      @100177,R4        ;DO A RELOCATION VIA UDPAR7
2625 012630 004767 000126            JSR      PC,TS10           ;SETUP EXPECTED DATA
2626                                ;CHECK IF AN ABORT OCCURRED AND
2627 012634 012737 010000 177776      MOV      @10000,@0177776   ;IF YES CHECK BITS <6:1> OF MMRO.
2628 012642 004767 166440              JSR      PC,MMU            ;INIT PSW: PREVIOUS MODE= SUPERVISOR
2629 012646 012737 077400 172212      MOV      @77400,@0172212   ;INIT MMU
2630 012654 012702 120000              MOV      @120000,R2        ;SETUP SIPDR5 TO ABORT
2631 012660 012767 000001 166154      MOV      @1,FLAG           ;ACCESS PAGE 05
2632 012666 012737 000001 177572      MOV      @1,@0177572       ;SETUP FLAG FOR AN ABORT
2633 012674 010701                    MOV      R7,R1             ;TURN MMU ON
2634 012676 006522                    MFPD     (R2),             ;SAVE PC
2635 012700 012704 100053            MOV      @100053,R4        ;DO A RELOCATION VIA SIPARS
2636 012704 004767 000052            JSR      PC,TS10           ;SETUP EXPECTED DATA:ABORT, PAGE 05
2637                                ;CHECK IF AN ABORT OCCURRED AND
2638                                ;IF YES CHECK BITS <6:1> OF MMRO.
2639                                ;
2640                                ;TEST THAT ILLEGAL MODE CAUSES MMU ABORT
2641                                ;
2641 012710 012737 020000 177776      MOV      @20000,@0177776   ;INIT PSW:SET ILLEGAL PREVIOUS MODE
2642 012716 004767 166364              JSR      PC,MMU            ;INIT MMU
2643 012722 012702 040000              MOV      @40000,R2         ;SET UP ACCESS TO PAGE 2
2644 012726 012767 000001 166106      MOV      @1,FLAG           ;SETUP FLAG FOR AN ABORT
2645 012734 012737 000001 177572      MOV      @1,@0177572       ;TURN MMU ON
2646 012742 010701                    MOV      R7,R1             ;SAVE PC
2647 012744 106522                    MFPD     (R2),             ;DO A RELOCATION
2648 012746 012704 100105            MOV      @100105,R4        ;SETUP EXPECTED DATA:ABOR', ILLEGAL
2649                                ; PROCESSOR MODE, PAGE 02
2650 012752 004767 000004              JSR      PC,TS10           ;CHECK IF AN ABORT OCCURRED AND
2651                                ;IF YES CHECK BITS <6:1> OF MMRO.
2652                                ;
2653 012756 000167 000102              JMP      T10FIN
2654                                ;
2655                                ;ROUTINE TO CHECK IF A MMU ABORT OCCURRED AND IF STATUS REG MMRO
2656                                ;CONTAINS EXPECTED DATA
2657                                ;
2658 012762 022767 000000 166052      TS10:  CMP      @0,FLAG       ;DID AN ABORT OCCUR
2659 012770 001403                    BEQ      1$                ;YES GO ON
2660 012772 104000                    ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
2661 012774 000235                    .WORD   235                ;UNIQUE ERROR NUMBER
2662 012776 001213                    .WORD   MMUERR            ;ADDRESS OF ERROR MESSAGE
2663                                ;NO GO TO ERROR
2664 013000 020467 166066      1$:   CMP      R4,SAVMRO       ;TEST MMRO FOR EXPECTED DATA
2665 013004 001403                    BEQ      2$                ;OK GO ON
2666 013006 104000                    ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
2667 013010 000236                    .WORD   236                ;UNIQUE ERROR NUMBER
2668 013012 001213                    .WORD   MMUERR            ;ADDRESS OF ERROR MESSAGE
    
```

```

2669
2670 013014 022767 000022 166052 2#: CMP #22,SAVMR1 ;NO GO TO ERROR
2671 013022 001403 BEQ 3# ; TEST MMR1 FOR EXPECTED DATA
2672 013024 104000 ERROR ;OK GO ON
2673 013026 000237 .WORD 237 ;ALL ERRORS TO TRAP TO EMT VECTOR
2674 013030 001213 .WORD MMUERR ;UNIQUE ERROR NUMBER
2675 ;ADDRESS OF ERROR MESSAGE
2676 013032 020167 166040 3#: CMP R1,SAVMR2 ;NO GO TO ERROR
2677 013036 001403 BEQ 4# ; TEST MMR2 FOR EXPECTED DATA
2678 013040 104000 ERROR ;OK GO ON
2679 013042 000240 .WORD 240 ;ALL ERRORS TO TRAP TO EMT VECTOR
2680 013044 001213 .WORD MMUERR ;UNIQUE ERROR NUMBER
2681 ;ADDRESS OF ERROR MESSAGE
2682 013046 005067 166020 4#: CLR SAVMRO ;NO GO TO ERROR
2683 013052 005067 166016 CLR SAVMR1 ;CLEAR MMU STATUS REGS SAVE AREAS
2684 013056 005067 166014 CLR SAVMR2 ;
2685 013062 000207 RTS PC ;RETURN
2686 ;
2687 013064 ;T10FIN:
2688 013064 ;TSM11:
2689 ;*****
2690 ;*TEST 17 TEST DATA SPACE BITS MMR3
2691 ;*****
2692 ;TST17:
2693 013064 005267 165714 INC #TESTN ;INCREMENT TEST NUMBER
2694 013070 005037 177572 CLR #177572 ;MMU OFF
2695 013074 005067 165742 CLR FLAG ;CLEAR MMU ABORT FLAG
2696 013100 012737 030000 177776 MOV #30000,#177776 ;SETUP PSW
2697 013106 012701 000026 MOV #26,R1 ;SETUP FIRST MMR3 VALUE
2698 013112 012703 177610 MOV #177610,R3 ;POINT TO UIPDR4
2699 013116 012704 000021 MOV #21,R4 ;SETUP SECOND MMR3 VALUE
2700 013122 004767 000060 JSR PC,TS11 ; TEST ENABLE USER DATA SPACE BIT
2701 013126 012737 000000 177776 MOV #0,#177776 ;SETUP PSW
2702 013134 012701 000023 MOV #23,R1 ;SETUP FIRST MMR3 VALUE
2703 013140 012703 172310 MOV #172310,R3 ;POINT TO KIPDR4
2704 013144 012704 000024 MOV #24,R4 ;SETUP SECOND MMR3 VALUE
2705 013150 004767 000032 JSR PC,TS11 ; TEST ENABLE KERNEL DATA SPACE BIT
2706 013154 012737 010000 177776 MOV #10000,#177776 ;SETUP PSW
2707 013162 012701 000025 MOV #25,R1 ;SETUP FIRST MMR3 VALUE
2708 013166 012703 172210 MOV #172210,R3 ;POINT TO SIPDR4
2709 013172 012704 000022 MOV #22,R4 ;SETUP SECOND MMR3 VALUE
2710 013176 004767 000004 JSR PC,TS11 ; TEST ENABLE SUPERVISOR DATA SPACE BIT
2711 ;
2712 013202 000167 000130 JMP T11FIN
2713 ;
2714 ;ROUTINE TO TEST ENABLE DATA SPACE BITS OF MMR3
2715 ;
2716 013206 004767 166074 ;TS11: JSR PC,MMU ;INIT MMU
2717 013212 010137 172516 MOV R1,#172516 ;DISABLE DATA SPACE OF MODE UNDER TEST
2718 013216 012713 077400 MOV #77400,(R3) ;SETUP IPDR TO ABORT
2719 013222 012702 100000 MOV #100000,R2 ;
2720 013226 012767 000001 165606 MOV #1,FLAG ;SETUP FLAG FOR AN ABORT
2721 013234 012737 000001 177572 MOV #1,#177572 ;MMU ON
2722 013242 106522 MFPD (R2) ;DO A RELOCATION
2723 013244 022767 000000 165570 CMP #0,FLAG ;DID AN ABORT OCCUR
2724 013252 001403 BEQ 1# ;YES GO ON

```

```

2725 013254 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2726 013256 000241          .WORD        241          ;UNIQUE ERROR NUMBER
2727 013260 001213          .WORD        MMRUERR      ;ADDRESS OF ERROR MESSAGE
2728                                     ;NO GO TO ERROR
2729 013262 010437 172516 1#: MOV R4,@#172516          ;ENABLE DATA SPACE OF MODE UNDER TEST
2730 013266 012702 100000          MOV @#100000,R2          ;
2731 013272 012767 000001 165542          MOV @#1,FLAG          ;SETUP FLAG FOR AN ABORT
2732 013300 012737 000001 177572          MOV @#1,@#177572          ;MMU ON
2733 013306 106522          MFPD (R2),          ;DO A RELOCATION
2734 013310 005726          TST (SP),          ;POP THE STACK
2735 013312 022767 000001 165522          CMP @#1,FLAG          ;DID AN ABORT OCCUR
2736 013320 001403          BEQ 2#          ;NO GO ON
2737 013322 104000          ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
2738 013324 000242          .WORD        242          ;UNIQUE ERROR NUMBER
2739 013326 001213          .WORD        MMRUERR      ;ADDRESS OF ERROR MESSAGE
2740                                     ;YES GO TO ERROR
2741 013330 005067 165506 2#: CLR FLAG          ;CLEAR MMU ABORT FLAG
2742 013334 000207          RTS PC          ;RETURN
2743                                     ;
2744 013336          ;11FIN:
2745 013336          ;TSM12:
2746                                     ;*****
2747                                     ;*TEST 20 MMR1 FUNCTIONAL TEST
2748                                     ;*****
2749 013336          ;TST20:
2750 013336 005267 165442          INC @#TESTN          ;INCREMENT TEST NUMBER
2751 013342 005037 177572          CLR @#177572          ;MMU OFF
2752 013346 005067 165470          CLR FLAG          ;CLEAR MMU ABORT FLAG
2753 013352 005067 165516          CLR SAVMR1          ;CLEAR STATUS REG SAVE AREA
2754 013356 004767 165724          JSR PC,MMU          ;INIT MMU
2755 013362 012737 030000 177776          MOV @#30000,@#177776          ;INIT PSW
2756 013370 012704 100200          MOV @#100200,R4          ;SETUP TEST LOCATIONS
2757 013374 010401          MOV R4,R1          ;
2758 013376 012705 100101          MOV @#100101,R5          ;
2759 013402 010502          MOV R5,R2          ;
2760 013404 012737 000020 172516          MOV @#20,@#172516          ;INIT MMR3
2761 013412 012737 077402 172310          MOV @#77402,@#172310          ;SETUP KIPDR4 TO ABORT
2762 013420 012703 006414          MOV @#6414,R3          ;SETUP EXPECTED DATA FOR MMR1
2763 013424 012767 000001 165410          MOV @#1,FLAG          ;SETUP FLAG FOR AN ABORT
2764 013432 012737 000001 177572          MOV @#1,@#177572          ;TURN MMU ON
2765 013440 010767 165364          MOV R7,SLOC00          ;SAVE PC
2766 013444 112425          MOVVB (R4),-(R5),          ;DO A RELOCATION
2767 013446 004767 000206          JSR PC,TS12          ;CHECK IF AN ABORT OCCURRED AND IF
2768                                     ;YES IF MMR1 EQUALS EXPECTED DATA
2769 013452 012703 175011          MOV @#175011,R3          ;SETUP EXPECTED DATA FOR MMR1
2770 013456 012767 000001 165356          MOV @#1,FLAG          ;SETUP FLAG FOR AN ABORT
2771 013464 012737 000001 177572          MOV @#1,@#177572          ;TURN MMU ON
2772 013472 010767 165332          MOV R7,SLOC00          ;SAVE PC
2773 013476 112142          MOVVB (R1),-(R2),          ;DO A RELOCATION
2774 013500 004767 000154          JSR PC,TS12          ;CHECK IF AN ABORT OCCURRED AND IF
2775                                     ;YES IF MMR1 EQUALS EXPECTED DATA
2776 013504 012703 006771          MOV @#6771,R3          ;SETUP EXPECTED DATA FOR MMR1
2777 013510 012767 000001 165324          MOV @#1,FLAG          ;SETUP FLAG FOR AN ABORT
2778 013516 012737 000001 177572          MOV @#1,@#177572          ;TURN MMU ON
2779 013524 010767 165300          MOV R7,SLOC00          ;SAVE PC
2780 013530 114125          MOVVB (R1),-(R5),          ;DO A RELOCATION

```

```

2781 013532 004767 000122 JSR PC,TS12 ;CHECK IF AN ABORT OCCURRED AND IF
2782 ;YES IF MMR1 EQUALS EXPECTED DATA
2783 013536 012703 006411 MOV #06411,R3 ;SETUP EXPECTED DATA FOR MMR1
2784 013542 012767 000001 165272 MOV #1,FLAG ;SETUP FLAG FOR AN ABORT
2785 013550 012737 000001 177572 MOV #1,0#177572 ;TURN MMU ON
2786 013556 010767 165246 MOV R7,SLOC00 ;SAVE PC
2787 013562 112125 MOVVB (R1),-(R5)+ ;DO A RELOCATION
2788 013564 004767 000070 JSR PC,TS12 ;CHECK IF AN ABORT OCCURRED AND IF
2789 ;YES IF MMR1 EQUALS EXPECTED DATA
2790 013570 012703 171025 MOV #171025,R3 ;SETUP EXPECTED DATA FOR MMR1
2791 013574 012767 000001 165240 MOV #1,FLAG ;SETUP FLAG FOR AN ABORT
2792 013602 012737 000001 177572 MOV #1,0#177572 ;TURN MMU ON
2793 013610 010767 165214 MOV R7,SLOC00 ;SAVE PC
2794 013614 012542 MOV (R5),-(R2) ;DO A RELOCATION
2795 013616 004767 000036 JSR PC,TS12 ;CHECK IF AN ABORT OCCURRED AND IF
2796 ;YES IF MMR1 EQUALS EXPECTED DATA
2797 013622 012703 012762 MOV #12762,R3 ;SETUP EXPECTED DATA FOR MMR1
2798 013626 012767 000001 165206 MOV #1,FLAG ;SETUP FLAG FOR AN ABORT
2799 013634 012737 000001 177572 MOV #1,0#177572 ;TURN MMU ON
2800 013642 010767 165162 MOV R7,SLOC00 ;SAVE PC
2801 013646 014225 MOV -(R2),(R5)+ ;DO A RELOCATION
2802 013650 004767 000004 JSR PC,TS12 ;CHECK IF AN ABORT OCCURRED AND IF
2803 ;YES IF MMR1 EQUALS EXPECTED DATA
2804
2805 013654 000167 000062 JMP T12FIN
2806 ;
2807 ;ROUTINE TO CHECK IF AN ABORT OCCURRED AND IF MMR1 EQUALS EXPECTED DATA
2808 ;
2809 013660 022767 000000 165154 TS12: CMP #0,FLAG ;DID AN ABORT OCCUR
2810 013666 001403 BEQ 1$ ;YES GO ON
2811 013670 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2812 013672 000243 .WORD 243 ;UNIQUE ERROR NUMBER
2813 013674 001213 .WORD MMRUERR ;ADDRESS OF ERROR MESSAGE
2814 ;NO GO TO ERROR
2815 013676 020367 165172 1$: CMP R3,SAVMR1 ;TEST MMR1 FOR EXPECTED DATA
2816 013702 001403 BEQ 2$ ;OK GO ON
2817 013704 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2818 013706 000244 .WORD 244 ;UNIQUE ERROR NUMBER
2819 013710 001213 .WORD MMRUERR ;ADDRESS OF ERROR MESSAGE
2820 ;NO GO TO ERROR
2821 013712 026767 165112 165156 2$: CMP SLOC00,SAVMR2 ;TEST MMR2 FOR EXPECTED DATA
2822 013720 001403 BEQ 3$ ;OK GO ON
2823 013722 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
2824 013724 000245 .WORD 245 ;UNIQUE ERROR NUMBER
2825 013726 001213 .WORD MMRUERR ;ADDRESS OF ERROR MESSAGE
2826 ;NO GO TO ERROR
2827 013730 005067 165140 3$: CLR SAVMR1 ;CLEAR STATUS REG SAVE AREA
2828 013734 005067 165136 CLR SAVMR2 ;
2829 013740 000207 RTS PC ;RETURN
2830 ;
2831 T12FIN:
2832 TSM13:
2833 ;*****
2834 ;*TEST 21 ADDER RELOCATION TEST PART A
2835 ;*****
2836 ;(NEED 16 BITS OF MEMORY ADDRESSING)

```



```

2837
2838 013742          ;*****
TST21:
2839 013742 005267 165036      INC      $TESTN          ;INCREMENT TEST NUMBER
2840 013746 005037 177572      CLR      @0177572       ;MMU OFF
2841 013752 005067 165064      CLR      FLAG          ;CLEAR MMU ABORT FLAG
2842 013756 005037 177776      CLR      @0177776       ;INIT PSW
2843 013762 004767 165320      JSR      PC,MMU        ;INIT MMU
2844 013766 012737 000020 172516  MOV      @20,@0172516   ;INIT MMR3
2845 013774 012703 014164      MOV      @PARAD1,R3    ;SETUP PARS WITH TEST VALUES
2846 014000 012701 014216      MOV      @PARVA1,R1    ;
2847 014004 012133 1$:      MOV      (R1)+,@(R3)+  ;
2848 014006 021127 000333      CMP      (R1),@333    ;
2849 014012 001374 1$:      BNE     1$            ;
2850 014014 012703 014302      MOV      @PHY1,R3     ;SET POINTERS TO ADDER PART A
2851 014020 012701 014250      MOV      @VIR1,R1     ;TEST TABLES.
2852 014024 012702 014334      MOV      @MODE1,R2    ;
2853 014030 012237 177776      2$:      MOV      (R2)+,@0177776 ;INIT PSW
2854 014034 013305 177572      MOV      @R3)+,R5     ;SAVE DATA AT PHYSICAL ADDRESS
2855 014036 012737 000001 177572  MOV      @1,@0177572   ;TURN MMU ON
2856 014044 006531 177572      MFPI    @R1)+        ;SAVE DATA AT RELOCATED VIRTUAL ADDRESS
2857 014046 012604 177572      MOV      (SP)+,R4     ;
2858 014050 005037 177572      CLR      @0177572     ;TURN MMU OFF
2859 014054 020504 177572      CMP      R5,R4        ;IS DATA EQUAL TO EXPECTED
2860 014056 001403 177572      BEQ     3$            ;YES GO ON
2861 014060 104000 177572      ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
2862 014062 000246 177572      .WORD  246           ;UNIQUE ERROR NUMBER
2863 014064 001213 177572      .WORD  MMUERR        ;ADDRESS OF ERROR MESSAGE
2864
2865 014066 021327 000111 3$:      CMP      (R3),@111    ;NO IT IS AN ADDER ERROR
2866 014072 001356 177572      BNE     2$            ;ARE WE READY TO TEST DATA SPACE
2867 014074 005203 177572      INC     R3            ;NO GO TO 2$
2868 014076 005203 177572      INC     R3            ;POINT TO DATA SPACE VALUES
2869 014100 005201 177572      INC     R1            ;
2870 014102 005201 177572      INC     R1            ;
2871 014104 005202 177572      INC     R2            ;
2872 014106 005202 177572      INC     R2            ;
2873 014110 012237 177776      MOV      (R2)+,@0177776 ;INIT PSW
2874 014114 013305 177572      MOV      @R3)+,R5     ;SAVE DATA AT PHYSICAL ADDRESS
2875 014116 012737 000027 172516  MOV      @27,@0172516   ;INIT MMR3
2876 014124 012737 000001 177572  MOV      @1,@0177572   ;TURN MMU ON
2877 014132 106531 177572      MFPI    @R1)+        ;SAVE DATA AT RELOCATED VIRTUAL ADDRESS
2878 014134 012604 177572      MOV      (SP)+,R4     ;POP THE STACK
2879 014136 005037 177572      CLR      @0177572     ;TURN MMU OFF
2880 014142 005037 172516      CLR      @0172516     ;CLEAR MMR3
2881 014146 020504 177572      CMP      R5,R4        ;IS DATA EQUAL TO EXPECTED
2882 014150 001403 177572      BEQ     4$            ;YES GO ON
2883 014152 104000 177572      ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
2884 014154 000247 177572      .WORD  247           ;UNIQUE ERROR NUMBER
2885 014156 001213 177572      .WORD  MMUERR        ;ADDRESS OF ERROR MESSAGE
2886
2887 014160 4$:
2888
2889 014160 000167 000202      JMP     T13FIN
2890
;ADDER TEST PART A TABLES
2891
;
2892

```

2893	014164	172240	PARAD1:	.WORD	172240
2894	014166	177642		.WORD	177642
2895	014170	172252		.WORD	172252
2896	014172	177640		.WORD	177640
2897	014174	172242		.WORD	172242
2898	014176	172254		.WORD	172254
2899	014200	177652		.WORD	177652
2900	014202	177644		.WORD	177644
2901	014204	172246		.WORD	172246
2902	014206	177654		.WORD	177654
2903	014210	172250		.WORD	172250
2904	014212	177660		.WORD	177660
2905	014214	000333		.WORD	333
2906	014216	000000	PARVA1:	.WORD	000000
2907	014220	000010		.WORD	000010
2908	014222	177777		.WORD	177777
2909	014224	177601		.WORD	177601
2910	014226	000010		.WORD	000010
2911	014230	000052		.WORD	000052
2912	014232	000070		.WORD	000070
2913	014234	000010		.WORD	000010
2914	014236	000010		.WORD	000010
2915	014240	000060		.WORD	000060
2916	014242	000000		.WORD	000000
2917	014244	000010		.WORD	000010
2918	014246	000333		.WORD	333
2919	014250	000000	VIR1:	.WORD	000000
2920	014252	025000		.WORD	025000
2921	014254	135224		.WORD	135224
2922	014256	017700		.WORD	017700
2923	014260	033000		.WORD	033000
2924	014262	145252		.WORD	145252
2925	014264	121000		.WORD	121000
2926	014266	043000		.WORD	043000
2927	014270	075000		.WORD	075000
2928	014272	142000		.WORD	142000
2929	014274	117700		.WORD	117700
2930	014276	000111		.WORD	111
2931	014300	007000		.WORD	007000
2932	014302	000000	PHY1:	.WORD	000000
2933	014304	006000		.WORD	006000
2934	014306	015124		.WORD	015124
2935	014310	000000		.WORD	000000
2936	014312	014000		.WORD	014000
2937	014314	012452		.WORD	012452
2938	014316	010000		.WORD	010000
2939	014320	004000		.WORD	004000
2940	014322	016000		.WORD	016000
2941	014324	010000		.WORD	010000
2942	014326	017700		.WORD	017700
2943	014330	000111		.WORD	111
2944	014332	010000		.WORD	010000
2945	014334	010000	MODE1:	.WORD	010000
2946	014336	030000		.WORD	030000
2947	014340	010000		.WORD	010000
2948	014342	030000		.WORD	030000

```
2949 014344 010000 .WORD 010000
2950 014346 010000 .WORD 010000
2951 014350 030000 .WORD 030000
2952 014352 030000 .WORD 030000
2953 014354 010000 .WORD 010000
2954 014356 030000 .WORD 030000
2955 014360 010000 .WORD 010000
2956 014362 000111 .WORD 111
2957 014364 030000 .WORD 030000
2958
2959 014366 ;
2960 014366 T13FIN:
2961 ;TS1022:
2962 ;*****
2963 ;*TEST 22 TEST 22/18 BIT ADDRESS OPTION
2964 ;*****
2965 ;CHECK THE SOFTWARE SWITCH REGISTER TO DETERMINE IF THIS IS A 22 BIT OR AN
2966 ;18 BIT ADDRESS SYSTEM. BIT 08 IN THE SWR=1 INDICATES AN 18 BIT SYSTEM.
2967 ;IF WE'RE IN A 22 BIT SYSTEM WE CAN PERFORM SOME EXTRA TESTS.
2968 ;*****
2968 014366 TST22:
2969 014366 005267 164412 INC $TESTN ;INCREMENT TEST NUMBER
2970 014372 032777 000400 164446 BIT @BIT08,@SWR ;IS BIT 08 SET?
2971 014400 001405 BEQ 100$ ;BRANCH IF ITS NOT
2972 014402 062737 000001 001004 ADD @1,@$TESTN ;KEEP TEST NUMBERS IN ORDER
2973 ;ADD 1 FOR THE TESTS WE'RE SKIPPING
2974 014410 000167 001472 JMP T14FIN ;SKIP OVER THESE TESTS IF IT IS
2975 ;
2976 ;IF THIS IS A 22 BIT SYSTEM CHECK THE 22/18 BIT ADDRESS OPTION
2977 ;
2978 ;TO TEST 22 BIT ADDRESSING WE DO THE FOLLOWING:
2979 ; A. ENABLE 22 BIT ADDRESSING MODE
2980 ; B. CLEAR ADDRESS 0
2981 ; C. WRITE PHYSICAL ADDRESS 17000000 WITH ALL ONES
2982 ; D. CHECK ADDRESS 0
2983 ;IF ADDRESS 0 IS UNCHANGED (=0) OR A TIME OUT OCCURRED, IT INDICATES
2984 ;22 BIT MODE IS FUNCTIONING.
2985 ;IF ADDRESS 0 =17777 IT INDICATES THAT 22 BIT MODE IS NOT FUNCTIONING.
2986
2987 014414 013767 000004 164406 100$: MOV @4,SLOC00 ;SAVE VECTOR
2988 014422 013767 000006 164402 MOV @6,SLOC01 ;SAVE VECTOR
2989 014430 012737 014514 000004 MOV @1,@@4 ;SET VECTOR FOR NXM TRAP
2990 014436 012737 000340 000006 MOV @340,@@6 ;
2991 014444 012767 000020 156044 MOV @20,SR3 ;ENABLE 22 BIT MODE ADDRESSING
2992 014452 012767 170000 155674 MOV @170000,KIPAR6 ;SET KIPAR6 FOR 1920-1924KW ADDR RANGE
2993 014460 012767 000001 163104 MOV @1,SRO ;ENABLE MMU
2994 014466 005067 163306 CLR 0 ;CLEAR ADDR 0
2995 014472 012737 177777 140000 MOV @177777,@140000 ;MOVE ALL ONES TO ADDR 17000000 VIA KIPAR6
2996 ;A TIME OUT ERROR OR
2997 014500 005767 163274 TST 0 ;ADDR 0 REMAINING CLEAR INDICATES
2998 ;THAT 22 BIT ADDRESS MODE IS WORKING AND
2999 ;THAT SOME FURTHER TESTS SHOULD BE PERFORMED
3000 014504 001407 BEQ 2$ ;IF ADDR 0 =17777
3001 ;ERROR! 22 BIT ADDRESS MODE BAD
3002 014506 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3003 014510 000250 .WORD 250 ;UNIQUE ERROR NUMBER
3004 014512 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
```

```

3005 014514 012706 001000      1$:  MOV      #STBOT,SP      ;GOT HERE AS A RESULT OF NXM TRAP
3006                                ;CLEAN UP THE STACK
3007 014520 005037 177766      CLR      @#177766      ;CLEAR CPU ERROR REGISTER
3008 014524 012737 014564 000004 2$:  MOV      #3$,@#4      ;SET UP VECTOR FOR NXM TRAP
3009 014532 042767 000020 155756  BIC      @BIT04,SR3    ;SET 18 BIT ADDRESSING MODE IN SR3
3010 014540 012767 170000 155606  MOV      @#170000,KIPAR6 ;SET KIPAR6 SO THAT BITS 18 21 SHOULD
3011                                ;BE ASSERTED IF 22 BIT ADR WAS ENABLED
3012 014546 012737 177777 140000  MOV      @#177777,@#140000 ;TRY TO WRITE ADDR 17000000 VIA KIPAR6
3013                                ;ADDR 0 SHOULD = 177777. A TIME OUT
3014 014554 022737 177777 000000  CMP      @#177777,@#0   ;OR ADDR 0 = ZERO INDICATES AN ERROR
3015 014562 001405                                BEQ      4$            ;GO TO NEXT TEST IF ADDR 0=177777
3016 014564 005067 163002      3$:  CLR      SRO          ;DISABLE MMU BEFORE ERROR.
3017                                ;ERROR! 18 BIT ADDR OPTION IS N.G.
3018 014570 104000                                ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
3019 014572 000251                                .WORD   251          ;UNIQUE ERROR NUMBER
3020 014574 001213                                .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
3021                                ;
3022                                ;TEST ADDRESS BITS 18 THRU 21
3023                                ;
3024                                ;
3025 014576 052767 000020 155712 4$:  BIS      @BIT04,SR3    ;ENABLE 22 BIT ADDRESSING MODE
3026 014604 012767 014652 163172  MOV      @5$,4        ;SET UP FOR NXM TRAP
3027 014612 005067 163162      CLR      0            ;CLEAR ADDRESS 0
3028 014616 012767 010000 155530  MOV      @#10000,KIPAR6 ;TEST ADDRESS BIT 18
3029 014624 012737 177777 140000  MOV      @#177777,@#140000 ;WRITE ALL ONES TO ADDR 1000000
3030 014632 005767 163142      TST      0            ;TEST ADDRESS 0. SHOULD = ZERO
3031 014636 001405                                BEQ      5$            ;BRANCH IF ADDRESS 0=0
3032 014640 005067 162726      CLR      SRO          ;DISABLE MMU BEFORE ERROR
3033 014644 104000                                ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
3034 014646 000252                                .WORD   252          ;UNIQUE ERROR NUMBER
3035 014650 001213                                .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
3036                                ;
3037 014652 012737 014720 000004 5$:  MOV      @6$,@#4      ;ERROR! BIT 18 DID NOT ASSERT
3038 014660 005067 163114      CLR      0            ;SET UP FOR NXM TRAP
3039 014664 012767 020000 155462  MOV      @#20000,KIPAR6 ;CLEAR ADDR 0
3040 014672 012737 177777 140000  MOV      @#177777,@#140000 ;TEST ADDRESS BIT 19
3041 014700 005767 163074      TST      0            ;WRITE ALL ONES TO ADDR 2000000
3042 014704 001405                                BEQ      6$            ;TEST ADDR 0. SHOULD= ZERO
3043 014706 005067 162660      CLR      SRO          ;BRANCH IF ADDRESS 0=0
3044 014712 104000                                ERROR    ;DISABLE MMU BEFORE ERROR
3045 014714 000253                                .WORD   253          ;ALL ERRORS TO TRAP TO EMT VECTOR
3046 014716 001213                                .WORD   MMUERR       ;UNIQUE ERROR NUMBER
3047                                ;ADDRESS OF ERROR MESSAGE
3048 014720 012737 014766 000004 6$:  MOV      @7$,@#4      ;ERROR! BIT 19 DID NOT ASSERT
3049 014726 005067 163046      CLR      0            ;SET UP FOR NXM TRAP
3050 014732 012767 040000 155414  MOV      @#40000,KIPAR6 ;CLEAR ADDR 0
3051 014740 012737 177777 140000  MOV      @#177777,@#140000 ;TEST ADDRESS BIT 20
3052 014746 005767 163026      TST      0            ;WRITE ALL ONES TO ADDR 4000000
3053 014752 001405                                BEQ      7$            ;TEST ADDR 0. SHOULD =0
3054 014754 005067 162612      CLR      SRO          ;BRANCH IF ADDRESS 0 =0
3055 014760 104000                                ERROR    ;DISABLE MMU BEFORE ERROR
3056 014762 000254                                .WORD   254          ;ALL ERRORS TO TRAP TO EMT VECTOR
3057 014764 001213                                .WORD   MMUERR       ;UNIQUE ERROR NUMBER
3058                                ;ADDRESS OF ERROR MESSAGE
3059 014766 012737 015034 000004 7$:  MOV      @8$,@#4      ;ERROR! BIT 20 DID NOT ASSERT
3060 014774 005067 163000      CLR      0            ;SET UP FOR NXM
                                ;CLEAR ADDRESS 0
    
```

```

3061 015000 012767 100000 155346      MOV      #100000,KIPAR6      ;TEST ADDRESS BIT 21
3062 015006 012737 177777 140000      MOV      #177777,#@140000    ;WRITE ALL ONES AT ADDR 10000000
3063 015014 005767 162760                TST      0                    ;CHECK ADDRESS 0. SHOULD = 0
3064 015020 001405                        BEQ      8#                    ;BRANCH IF ADDR 0 = 0
3065 015022 005067 162544                CLR      SRO                    ;DISABLE MMU BEFORE ERROR
3066 015026 104000                        ERROR                     ;ALL ERRORS TO TRAP TO EMT VECTOR
3067 015030 000255                        .WORD   255                    ;UNIQUE ERROR NUMBER
3068 015032 001213                        .WORD   MMUERR                 ;ADDRESS OF ERROR MESSAGE
3069                                     ;ERROR! ADDR BIT 21 DID NOT ASSERT
3070 015034 005067 162532                8#:   CLR      SRO                    ;DISABLE MMU
3071 015040 005037 177766                CLR      #177766                ;CLEAR CPU ERROR REGISTER
3072 015044 012706 001000                MOV      #STBOT,R6              ;RESET STACK POINTER
3073 015050 013737 001030 000004        MOV      #@SLOC00,#@4           ;RESTORE VECTORS
3074 015056 013737 001032 000006        MOV      #@SLOC01,#@6           ;
3075
3076 015064                                TSM114:
3077                                     ;:*****
3078                                     ;*TEST 23 ADDER RELOCATION TEST PART B
3079                                     ;:*****
3080                                     ;(NEED 22 BITS OF MEMORY ADDRESSING)
3081                                     ;:*****
3082 015064                                TST23:
3083 015064 005267 163714                INC      #TESTN                 ;INCREMENT TEST NUMBER
3084 015070 005037 177572                CLR      @SRO                    ;TURN OFF MMU.
3085 015074 005067 162666                CLR      CPREG                  ;CLEAR THE CPU ERROR REGISTER
3086 015100 013737 000004 001030        MOV      @4,#@SLOC00            ;SAVE LOC 4 IN SLOC00.
3087 015106 013737 000006 001032        MOV      @6,#@SLOC01            ;SAVE LOC 6 IN SLOC01.
3088 015114 012737 015620 000004        MOV      #NXMTRP,#@4           ;SET UP FOR TIMEOUT TRAP
3089 015122 012737 000340 000006        MOV      #340,#@6              ;SET UP FOR TIMEOUT TRAP
3090 015130 005037 172340                CLR      @KIPAR0                ;SET KER PAR0 FOR 1ST 4KW OF MEMORY.
3091 015134 012767 077406 155136        MOV      #77406,KIPDR0          ;SET KER PDR FOR 4KW R/W ACCESS.
3092 015142 012737 177500 172354        MOV      #177500,@KIPAR6       ;SET UP KERNEL PAGE ADDR REG 6
3093                                     ;FOR HIGHEST 4K WORDS OF NON-I/O
3094                                     ;FOR 2 MEG WORDS OF MEMORY.
3095 015150 012767 077406 155136        MOV      #77406,KIPDR6          ;SET KER PDR6 FOR 4KW R/W ACCESS.
3096 015156 012737 000020 172516        MOV      #20,@SR3              ;ENABLE 22 BIT ADDRESSING.
3097 015164 012737 000001 177572        MOV      #1,@SRO                ;TURN ON THE MMU.
3098 015172 005737 157776                TST      @157776                ;ATTEMPT TO ADDRESS LAST MEMORY ADDR.
3099                                     ;*****WILL TRAP TO 4 IF 2 MEG WORDS OF MEMORY NOT AVAILABLE*****
3100 015176 013737 001030 000004        MOV      @SLOC00,#@4           ;RESTORE LOC 4
3101 015204 013737 001032 000006        MOV      @SLOC01,#@6           ;RESTORE LOC 6
3102 015212 005037 177572                CLR      @177572                ;MMU OFF
3103 015216 005037 001042                CLR      @FLAG                  ;CLEAR MMU ABORT FLAG
3104 015222 004767 164060                JSR      PC,MMU                 ;INIT MMU
3105 015226 012737 010000 177776        MOV      #10000,@#177776       ;INIT PSW
3106 015234 012737 000020 172516        MOV      #20,@#172516          ;INIT MMR3
3107 015242 052737 001000 177746        BIS      #1000,@#177746        ;TURN CACHE TEST FEATURE ON
3108 015250 012704 016022                MOV      #PARVA3,R4            ;SET POINTERS TO INIT TABLES
3109 015254 012701 016054                MOV      #VIR3,R1              ;
3110 015260 012437 172246                1#:   MOV      (R4),#@#172246     ;INIT SIPAR3
3111 015264 012737 000001 177572        MOV      #1,@#177572          ;TURN MMU ON
3112 015272 012746 125252                MOV      #125252,-(SP)         ;PUSH BACKGROUND DATA ON TO THE STACK
3113 015276 006671 000000                MTP1      @R1)                ;WRITE DATA TO PHYSICAL ADDRESS
3114 015302 006531                        MFPI      @R1)                ;WRITE DATA AT PHYSICAL ADDRESS TO STACK
3115 015304 022726 125252                CMP      #125252,(SP)         ;IS DATA EQUAL TO EXPECTED
3116 015310 001405                        BEQ      2#                    ;YES GO ON

```

3117	015312	005037	177572		CLR	@#177572		;TURN MMU OFF
3118	015316	104000			ERROR			;ALL ERRORS TO TRAP TO EMT VECTOR
3119	015320	000256			.WORD	256		;UNIQUE ERROR NUMBER
3120	015322	001213			.WORD	MMUERR		;ADDRESS OF ERROR MESSAGE
3121								;NOT EQUAL GO TO ERROR
3122	015324	005037	177572	2\$:	CLR	@#177572		;TURN MMU OFF
3123	015330	021427	000333		CMP	(R4),#333		;ARE WE DONE
3124	015334	001351			BNE	1\$;NO GO TO 1\$
3125	015336	012704	015704		MOV	@PARVA2,R4		;SET POINTERS TO PAR INIT TABLES
3126	015342	012701	015652		MOV	@PARAD2,R1		
3127	015346	012431		3\$:	MOV	(R4)+,@(R1)+		;INIT PARS
3128	015350	021127	000333		CMP	(R1),#333		;ARE WE DONE
3129	015354	001374			BNE	3\$;NO, GO TO 3\$
3130	015356	012704	015770		MOV	@MODE2,R4		;SET POINTERS TO ADDER PART 8 TABLES
3131	015362	012701	015736		MOV	@VIR2,R1		
3132	015366	012702	016022		MOV	@PARVA3,R2		
3133	015372	012703	016054		MOV	@VIR3,R3		
3134	015376	004767	000076	4\$:	JSR	PC,T\$14		;WRITE DATA TO PHYSICAL ADDRESS AND THEN
3135								;CHECK IF DATA AT PHYSICAL ADDRESS IS
3136								;EQUAL TO EXPECTED AND IF NOT DETERMINE
3137								;IF IT IS AN ADDER ERROR OR A MEMORY ERROR
3138	015402	021127	000111		CMP	(R1),#111		;HAVE WE DONE ALL THE 22 BIT MODE I SPACE
3139								;CASES
3140	015406	001373			BNE	4\$;NO GO TO 4\$
3141	015410	005201			INC	R1		;POINT TO 22 BIT MODE D SPACE CASE
3142	015412	005201			INC	R1		
3143	015414	005204			INC	R4		
3144	015416	005204			INC	R4		
3145	015420	012737	000027	172516	MOV	#27,@#172516		;INIT MMR3
3146	015426	012437	177776		MOV	(R4)+,@#177776		;INIT PSW
3147	015432	012746	052525		MOV	#52525,-(SP)		;PUSH DATA ONTO STACK
3148	015436	012737	000001	177572	MOV	#1,@#177572		;TURN MMU ON
3149	015444	106631			MTPD	@(R1)+		;WRITE DATA TO PHYSICAL ADDRESS
3150	015446	005037	177572		CLR	@#177572		;TURN MMU OFF
3151	015452	012737	000020	172516	MOV	#20,@#172516		;INIT MMR3
3152	015460	004767	000040		JSR	PC,T\$14		;CHECK IF DATA AT PHYSICAL ADDRESS IS EQUAL
3153								;TO EXPECTED AND IF NOT DETERMINE IF IT
3154								;IS AN ADDER ERROR OR A MEMORY ERROR
3155	015464	005037	172516		CLR	@#172516		;INIT MMR3 FOR 18 BIT MODE
3156	015470	004767	000004		JSR	PC,T\$14		;WRITE DATA TO PHYSICAL ADDRESS AND THEN
3157								;CHECK IF DATA AT PHYSICAL ADDRESS IS
3158								;EQUAL TO EXPECTED AND IF NOT DETERMINE IF
3159								;IT IS AN ADDER ERROR OR A MEMORY ERROR
3160								
3161	015474	000167	000406		JMP	T14FIN		
3162								
3163								;ROUTINE TO WRITE DATA TO PHYSICAL ADDRESS AND TO CHECK IF DATA AT
3164								;PHYSICAL ADDRESS IS EQUAL TO EXPECTED AND IF NOT DETERMINE IF IT IS
3165								;AN ADDER ERROR OR A MEMORY ERROR
3166								
3167	015500	012437	177776		T\$14:	MOV	(R4)+,@#177776	;INIT PSW
3168	015504	012737	000001	177572	MOV	#1,@#177572		;TURN MMU ON
3169	015512	012746	052525		MOV	#52525,-(SP)		;WRITE DATA ONTO STACK
3170	015516	006631			MTPD	@(R1)+		;WRITE DATA TO PHYSICAL ADDRESS VIA STACK
3171	015520	005037	177572		CLR	@#177572		;TURN MMU OFF
3172	015524	012737	010000	177776	T14:	MOV	#10000,@#177776	;INIT PSW

```

3173 015532 012237 172246          MOV      (R2)+, @172246      ; INIT SIPAR3
3174 015536 012737 000001 177572    MOV      @1, @177572        ; TURN MMU ON
3175 015544 006573 000000          MFPI     @0(R3)             ; DO RELOCATION
3176 015550 022726 052525          CMP      @52525.(SP)+      ; IS DATA EQUAL TO EXPECTED
3177 015554 001414                    BEQ      2$                 ; YES GO ON
3178 015556 006573 000000          MFPI     @0(R3)             ; WHAT TYPE OF ERROR IS IT
3179 015562 022726 125252          CMP      @125252.(SP)+     ;
3180 015566 001404                    BEQ      1$                 ;
3181 015570 104000                    ERROR                                         ; ALL ERRORS TO TRAP TO EMT VECTOR
3182 015572 000257                    .WORD   257                 ; UNIQUE ERROR NUMBER
3183 015574 001213                    .WORD   MMUERR              ; ADDRESS OF ERROR MESSAGE
3184                                     ; IT IS A MEMORY ERROR
3185 015576 000403                    BR       2$                 ;
3186 015600                                     1$:
3187 015600 104000                    ERROR                                         ; ALL ERRORS TO TRAP TO EMT VECTOR
3188 015602 000260                    .WORD   260                 ; UNIQUE ERROR NUMBER
3189 015604 001213                    .WORD   MMUERR              ; ADDRESS OF ERROR MESSAGE
3190                                     ; IT IS AN ADDER ERROR
3191 015606 005037 177572          2$: CLR      @177572        ; TURN MMU OFF
3192 015612 005203                    INC      R3                  ;
3193 015614 005203                    INC      R3                  ;
3194 015616 000207                    RTS     PC                   ; RETURN
3195                                     ;
3196                                     ; NON-EXISTANT MEMORY TRAP ROUTINE
3197                                     ;
3198 015620 005037 177572          NXMTRP: CLR      @SRO        ; TURN OFF MMU.
3199 015624 012716 016106          MOV      @T14FIN.(SP)      ; SET UP STACK WITH RETURN ADDR.
3200 015630 013737 001030 000004    MOV      @SLOC00, @4        ; RESTORE LOC 4
3201 015636 013737 001032 000006    MOV      @SLOC01, @6        ; RESTORE LOC 6
3202 015644 005037 177766          CLR      @177766           ; CLEAR TIME OUT INDICATION FROM
3203                                     ; CPU ERROR REGISTER.
3204 015650 000006                    RTT                          ; RETURN FROM TRAP; GO TO NEXT TEST.
3205                                     ;
3206                                     ; ADDER TEST PART B TABLES
3207                                     ;
3208 015652 177646          PARAD2: .WORD   177646
3209 015654 177650          .WORD   177650
3210 015656 177652          .WORD   177652
3211 015660 172240          .WORD   172240
3212 015662 177640          .WORD   177640
3213 015664 177642          .WORD   177642
3214 015666 172244          .WORD   172244
3215 015670 177644          .WORD   177644
3216 015672 172252          .WORD   172252
3217 015674 172352          .WORD   172352
3218 015676 177662          .WORD   177662
3219 015700 172242          .WORD   172242
3220 015702 000333          .WORD   333
3221 015704 157700          PARVA2: .WORD   157700
3222 015706 137700          .WORD   137700
3223 015710 077700          .WORD   077700
3224 015712 176777          .WORD   176777
3225 015714 007600          .WORD   007600
3226 015716 167700          .WORD   167700
3227 015720 175700          .WORD   175700
3228 015722 177425          .WORD   177425
    
```

3229	015724	177220	.WORD	177220
3230	015726	173700	.WORD	173700
3231	015730	176700	.WORD	176700
3232	015732	077400	.WORD	077400
3233	015734	000333	.WORD	333
3234	015736	070000	VIR2: .WORD	070000
3235	015740	110000	.WORD	110000
3236	015742	130000	.WORD	130000
3237	015744	000000	.WORD	000000
3238	015746	000000	.WORD	000000
3239	015750	030000	.WORD	030000
3240	015752	050000	.WORD	050000
3241	015754	052524	.WORD	052524
3242	015756	136000	.WORD	136000
3243	015760	130000	.WORD	130000
3244	015762	000111	.WORD	111
3245	015764	030000	.WORD	030000
3246	015766	030000	.WORD	030000
3247	015770	030000	MODE2: .WORD	030000
3248	015772	030000	.WORD	030000
3249	015774	030000	.WORD	030000
3250	015776	010000	.WORD	010000
3251	016000	030000	.WORD	030000
3252	016002	030000	.WORD	030000
3253	016004	010000	.WORD	010000
3254	016006	030000	.WORD	030000
3255	016010	010000	.WORD	010000
3256	016012	000000	.WORD	000000
3257	016014	000111	.WORD	111
3258	016016	030000	.WORD	030000
3259	016020	010000	.WORD	010000
3260	016022	160000	PARVA3: .WORD	160000
3261	016024	140000	.WORD	140000
3262	016026	100000	.WORD	100000
3263	016030	176770	.WORD	176770
3264	016032	007600	.WORD	007600
3265	016034	170000	.WORD	170000
3266	016036	176000	.WORD	176000
3267	016040	177552	.WORD	177552
3268	016042	177400	.WORD	177400
3269	016044	174000	.WORD	174000
3270	016046	177000	.WORD	177000
3271	016050	007500	.WORD	007500
3272	016052	000333	.WORD	333
3273	016054	060000	VIR3: .WORD	060000
3274	016056	060000	.WORD	060000
3275	016060	060000	.WORD	060000
3276	016062	060700	.WORD	060700
3277	016064	060000	.WORD	060000
3278	016066	060000	.WORD	060000
3279	016070	060000	.WORD	060000
3280	016072	060024	.WORD	060024
3281	016074	060000	.WORD	060000
3282	016076	060000	.WORD	060000
3283	016100	060000	.WORD	060000
3284	016102	060000	.WORD	060000


```

3285 016104 000333          .WORD 333
3286
3287
3288
3289 016106
3290
3291
3292
3293
3294
3295
3296
3297
3298 016106
3299 016106 005267 162672          INC      $TESTN          ;INCREMENT TEST NUMBER
3300 016112 004767 163170          JSR      PC,MMU          ;INIT THE MMU
3301 016116 012737 177400 172354  MOV      @177400,@#KIPAR6 ;SET KIPAR6 TO RELOCATE TO HIGHEST MEMORY
3302 016124 016767 161654 162676  MOV      4,SLOC00        ;SAVE VECTOR
3303 016132 016767 000026 161644  MOV      2$,4            ;LOAD VEC WITH ADDR OF TRAP HANDLER
3304 016140 052767 000001 161424  BIS      @BIT00,SRO      ;TURN ON THE MMU
3305 016146 005067 161614          CLR      CPREG           ;CLEAR THE CPU ERROR REGISTER
3306 016152 005067 161620          CLR      PS              ;CLEAR THE PSW
3307 016156 005737 157776          TST      @#157776        ;ACCESS PHYSICAL ADDR 17757776
3308 016162 000423          1$: BR      NXMFIN        ;IF IT DOESN'T TRAP WE'LL ASSUME
3309
3310
3311 016164 022767 000040 161574  2$: CMP      @BIT05,CPREG   ;IS CPU ERROR REGISTER CORRECT?
3312 016172 001403          BEQ      3$              ;
3313 016174 104000          ERROR    3$              ;ALL ERRORS TO TRAP TO EMT VECTOR
3314 016176 000261          .WORD    261             ;UNIQUE ERROR NUMBER
3315 016200 001213          .WORD    MMUERR          ;ADDRESS OF ERROR MESSAGE
3316 016202 022726 016162 3$: CMP      @1$, (SP)+      ;IS CONTENTS OF STACK CORRECT?
3317 016206 001403          BEQ      4$              ;
3318 016210 104000          ERROR    4$              ;ALL ERRORS TO TRAP TO EMT VECTOR
3319 016212 000262          .WORD    262             ;UNIQUE ERROR NUMBER
3320 016214 001213          .WORD    MMUERR          ;ADDRESS OF ERROR MESSAGE
3321 016216 022726 000000 4$: CMP      @0, (SP)+      ;IS CONTENTS OF STACK CORRECT?
3322 016222 001403          BEQ      NXMFIN          ;
3323 016224 104000          ERROR    4$              ;ALL ERRORS TO TRAP TO EMT VECTOR
3324 016226 000263          .WORD    263             ;UNIQUE ERROR NUMBER
3325 016230 001213          .WORD    MMUERR          ;ADDRESS OF ERROR MESSAGE
3326 016232 005067 161334  NXMFIN: CLR      SRO        ;TURN OFF THE MMU
3327 016236 005067 161524          CLR      CPREG           ;CLEAR THE CPU ERROR REGISTER
3328 016242 016767 162562 161534  MOV      SLOC00,4        ;RESTORE THE VECTOR
3329
3330
3331 016250
3332
3333
3334
3335 016250
3336 016250 005267 162530          INC      $TESTN          ;INCREMENT TEST NUMBER
3337 016254 005037 177572          CLR      @#177572        ;MMU OFF
3338 016260 005067 162556          CLR      FLAG            ;CLEAR MMU ABORT FLAG
3339 016264 004767 163016          JSR      PC,MMU          ;INIT MMU
3340 016270 005037 177776          CLR      @#177776        ;INIT PSW

```

3341	016274	012704	172300		MOV	#172300,R4		;SET POINTER TO KPDRS
3342	016300	004767	000114		JSR	PC,T515		;DO RELOCATIONS AND TEST KIPDRS FOR
3343								;PAGE WRITTEN BIT BEING SET AND IF
3344								;NOT SET GO TO ERROR
3345	016304	004767	000164		JSR	PC,T15		;DO RELOCATIONS AND TEST KPDRS FOR
3346								;PAGE WRITTEN BIT BEING SET AND IF NOT
3347								;SET GO TO ERROR
3348	016310	012737	050000	177776	MOV	#50000,#177776		;INIT PSW
3349	016316	012704	172200		MOV	#172200,R4		;SET POINTER TO SPDRS
3350	016322	004767	000072		JSR	PC,T515		;DO RELOCATIONS AND TEST SIPDRS FOR
3351								;PAGE WRITTEN BIT BEING SET AND IF NOT
3352								;SET GO TO ERROR
3353	016326	004767	000142		JSR	PC,T15		;DO RELOCATIONS AND TEST SDPDRS FOR
3354								;PAGE WRITTEN BIT BEING SET AND IF NOT
3355								;SET GO TO ERROR
3356	016332	005037	177776		CLR	#177776		;INIT PSW TO A KNOWN STATE
3357	016336	012737	170000	177776	MOV	#170000,#177776		;INIT PSW
3358	016344	012704	177600		MOV	#177600,R4		;SET POINTER TO UPDRS
3359	016350	004767	000044		JSR	PC,T515		;DO RELOCATIONS AND TEST UIPDRS FOR
3360								;PAGE WRITTEN BIT BEING SET AND IF
3361								;NOT SET GO TO ERROR
3362	016354	004767	000114		JSR	PC,T15		;DO RELOCATIONS AND TEST UDPDRS FOR
3363								;PAGE WRITTEN BIT BEING SET AND IF NOT
3364								;SET GO TO ERROR
3365	016360	005037	177776		CLR	#177776		;INIT PSW TO A KNOWN STATE
3366	016364	012704	172300		MOV	#172300,R4		;SET POINTER TO KPDRS
3367	016370	004767	000162		JSR	PC,T15A		;EXPLICITLY WRITE TO KPDRS AND TEST
3368								;FOR PAGE WRITTEN BIT BEING CLEARED
3369								;AND IF NOT CLEARED GO TO ERROR
3370	016374	012704	172200		MOV	#172200,R4		;SET POINTER TO SPDRS
3371	016400	004767	000152		JSR	PC,T15A		;EXPLICITLY WRITE TO SPDRS AND TEST
3372								;FOR PAGE WRITTEN BIT BEING CLEARED
3373								;AND IF NOT CLEARED GO TO ERROR
3374	016404	012704	177600		MOV	#177600,R4		;SET POINTER TO UPDRS
3375	016410	004767	000142		JSR	PC,T15A		;EXPLICITLY WRITE TO UPDRS AND TEST
3376								;FOR PAGE WRITTEN BIT BEING CLEARED
3377								;AND IF NOT CLEARED GO TO ERROR
3378								
3379	016414	000167	000170		JMP	T15FIN		
3380								
3381								;ROUTINE TO DO RELOCATIONS AND TEST IPDRS FOR PAGE WRITTEN BIT BEING
3382								;SET AND IF NOT SET REPORT AN ERROR
3383								
3384	016420	005001			T515:	CLR	R1	;SET POINTER TO VIRTUAL ADDRESS
3385	016422	012737	000020	172516	MOV	#20,#172516		;INIT MMR3
3386	016430	012737	000001	177572	18:	MOV	#1,#177572	;TURN MMU ON
3387	016436	011111				MOV	(R1),(R1)	;DO A RELOCATION
3388	016440	005037	177572			CLR	#177572	;TURN MMU OFF
3389	016444	022427	077506			CMP	(R4),#77506	;IS DATA EQUAL TO EXPECTED
3390	016450	001403				BEG	28	;OK GO ON
3391	016452	104000				ERROR		;ALL ERRORS TO TRAP TO EMT VECTOR
3392	016454	000264				.WORD	264	;UNIQUE ERROR NUMBER
3393	016456	001213				.WORD	MMUERR	;ADDRESS OF ERROR MESSAGE
3394								;NO GO TO ERROR
3395	016460	062701	020000	28:	ADD	#20000,R1		;POINT TO NEXT VIRTUAL ADDRESS
3396	016464	020127	160000		CMP	R1,#160000		;ARE WE DONE

```

339: 016470 001357      BNE 18      ;NO GO TO 18
3398 016472 000207      RTS  PC     ;RETURN
3399
3400 ;ROUTINE TO DO RELOCATIONS AND TEST DPDRS FOR PAGE WRITTEN BIT BEING SET
3401 ;AND IF NOT SET REPORT AN ERROR
3402 ;
3403 016474 005001      T15:  CLR  R1      ;SET POINTER TO VIRTUAL ADDRESS
3404 016476 062704 000002  ADD  #2,R4      ;POINT TO FIRST DPDR
3405 016502 012737 000027 172516  MOV  #27,#0172516 ;INIT MMR3
3406 016510 012737 000001 177572 18:  MOV  #1,#0177572 ;TURN MMU ON
3407 016516 011146      MOV  (R1),-(SP) ;PUSH DATA ONTO THE STACK
3408 016520 106611      MTPD (R1)      ;DO A RELOCATION
3409 016522 005037 177572  CLR  #0177572   ;TURN MMU OFF
3410 016526 022427 077506  CMP  (R4),#077506 ;IS DATA EQUAL TO EXPECTED
3411 016532 001403      BEQ  28        ;OK GO ON
3412 016534 104000      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3413 016536 000265      .WORD 265     ;UNIQUE ERROR NUMBER
3414 016540 001213      .WORD MMUERR  ;ADDRESS OF ERROR MESSAGE
3415 ;NO GO TO ERROR
3416 016542 062701 020000 28:  ADD  #20000,R1 ;POINT TO NEXT VIRTUAL ADDRESS
3417 016546 020127 160000  CMP  R1,#160000 ;ARE WE DONE
3418 016552 001356      BNE  18        ;NO GO TO 18
3419 016554 000207      RTS  PC     ;RETURN
3420
3421 ;ROUTINE TO EXPLICITLY WRITE TO PDRS AND TEST PAGE WRITTEN BIT FOR BEING
3422 ;CLEARED AND IF NOT CLEARED REPORT AN ERROR
3423 ;
3424 016556 005002      T15A: CLR  R2      ;CLEAR COUNTER
3425 016560 011414 18:  MOV  (R4),(R4) ;DO AN EXPLICIT WRITE TO PDR
3426 016562 022427 077406  CMP  (R4),#077406 ;IS DATA EQUAL TO EXPECTED
3427 016566 001403      BEQ  28        ;OK GO ON
3428 016570 104000      ERROR          ;ALL ERRORS TO TRAP TO EMT VECTOR
3429 016572 000266      .WORD 266     ;UNIQUE ERROR NUMBER
3430 016574 001213      .WORD MMUERR  ;ADDRESS OF ERROR MESSAGE
3431 ;NO GO TO ERROR
3432 016576 005202 28:  INC  R2      ;INCREMENT POINTER
3433 016600 020227 000020  CMP  R2,#20    ;ARE WE DONE
3434 016604 001365      BNE  18        ;NO GO TO 18
3435 016606 000207      RTS  PC     ;RETURN
3436 016610
3437 T15FIN:
3438 ;TSM16:
3439 ;*****
3440 ;TEST 26 TEST CSM (CALL SUPERVISOR MODE)
3441 ;*****
3442 TST26:
3443 016610 005267 162170  INC  #TESTN   ;INCREMENT TEST NUMBER
3444 016614 005037 177572  CLR  #0177572 ;MMU OFF
3445 016620 005037 001042  CLR  #0FLAG   ;CLEAR MMU ABORT FLAG
3446 016624 012704 017200  MOV  #TMM16E,R4 ;INIT R4
3447 016630 004767 162452  JSR  PC,MMU   ;INIT MMU
3448 016634 012737 000037 172516  MOV  #37,#0172516 ;ENABLE CSM INSTRUCTION
3449 016642 005037 177776  CLR  #0177776 ;SET PS TO KER MODE
3450 016646 013746 000010  MOV  #010, (SP) ;SAVE VECTORS
3451 016652 013746 000014  MOV  #014, -(SP)
3452 016656 013746 000016  MOV  #016, (SP)

```

```

3453 016662 012737 017054 000010      MOV      @TMM16B,@#10      ;SETUP NEW VECTORS
3454 016670 012737 000137 000014      MOV      @137,@#14        ;
3455 016676 012737 017214 000016      MOV      @TMM16A,@#16    ;
3456 016704 007014                .WORD   7014              ; TEST INSTRUCTION
3457 016706 104000                ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3458 016710 000267                .WORD   267              ;UNIQUE ERROR NUMBER
3459 016712 001213                .WORD   MMUERR           ;ADDRESS OF ERROR MESSAGE
3460                                ;GO TO ERROR IF NOT TRAPPED
3461 016714 012737 017110 000010 TSM16A: MOV      @TMM16C,@#10    ;SETUP NEW VECTOR
3462 016722 012737 000027 172516      MOV      @27,@#172516    ;DISABLE CSM INSTRUCTION
3463 016730 012737 140000 177776      MOV      @140000,@#177776 ;SET PS TO USER MODE
3464 016736 007014                .WORD   7014              ; TEST INSTRUCTION
3465 016740 104000                ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3466 016742 000270                .WORD   270              ;UNIQUE ERROR NUMBER
3467 016744 001213                .WORD   MMUERR           ;ADDRESS OF ERROR MESSAGE
3468                                ;GO TO ERROR IF NOT TRAPPED
3469 016746 012737 017144 000010 TSM16B: MOV      @TMM16D,@#10 ;SETUP NEW VECTOR
3470 016754 012737 000027 172516      MOV      @27,@#172516    ;DISABLE CSM INSTRUCTION
3471 016762 005037 177776          CLR      @#177776        ;SET PS TO KER MODE
3472 016766 007014                .WORD   7014              ; TEST INSTRUCTION
3473 016770 104000                ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3474 016772 000271                .WORD   271              ;UNIQUE ERROR NUMBER
3475 016774 001213                .WORD   MMUERR           ;ADDRESS OF ERROR MESSAGE
3476                                ;GO TO ERROR IF NOT TRAPPED
3477 016776 012737 000037 172516 TSM16C: MOV      @37,@#172516 ;ENABLE CSM INSTRUCTION
3478 017004 012737 040000 177776      MOV      @40000,@#177776 ;SET PS TO SUP MODE
3479 017012 012706 000700          MOV      @700,R6         ;INIT SUP SP
3480 017016 012737 140000 177776      MOV      @140000,@#177776 ;SET PS TO USER MODE
3481 017024 012706 000600          MOV      @600,R6        ;INIT USER SP
3482 017030 012737 000014 000010      MOV      @14,@#10       ;SETUP NEW VECTOR
3483 017036 000277                SCC
3484 017040 007024                .WORD   7024              ; TEST INSTRUCTION
3485 017042                                TSM16D:
3486 017042 104000                ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3487 017044 000272                .WORD   272              ;UNIQUE ERROR NUMBER
3488 017046 001213                .WORD   MMUERR           ;ADDRESS OF ERROR MESSAGE
3489                                ;GO TO ERROR IF NOT TRAPPED
3490 017050 000167 000634          JMP      TM16A
3491                                ;
3492                                ;
3493 017054 042737 007777 177776 TMM16B: BIC      @7777,@#177776 ;CLEAR UNWANTED BITS
3494 017062 022737 000000 177776      CMP      @0,@#177776    ;IS PS CORRECT
3495 017070 001403                BEQ
3496 017072 104000                ERROR   ;YES GO ON
3497 017074 000273                .WORD   273              ;ALL ERRORS TO TRAP TO EMT VECTOR
3498 017076 001213                .WORD   MMUERR           ;UNIQUE ERROR NUMBER
3499                                .WORD   ;ADDRESS OF ERROR MESSAGE
3500                                ;NO GO TO ERROR
3500 017100 005726                1$: TST      (SP)+         ;CLEAN UP STACK
3501 017102 005726                TST      (SP)+         ;
3502 017104 000167 177604          JMP      TSM16A         ;CONTINUE TESTING
3503 017110 042737 007777 177776 TMM16C: BIC      @7777,@#177776 ;CLEAR UNWANTED BITS
3504 017116 022737 030000 177776      CMP      @30000,@#177776 ;IS PS CORRECT
3505 017124 001403                BEQ      1$            ;YES GO ON
3506 017126 104000                ERROR   ;ALL ERRORS TO TRAP TO EMT VECTOR
3507 017130 000274                .WORD   274              ;UNIQUE ERROR NUMBER
3508 017132 001213                .WORD   MMUERR           ;ADDRESS OF ERROR MESSAGE

```

```

3509
3510 017134 005726 1$: TST (SP)+ ;NO GO TO ERROR
3511 017136 005726 TST (SP)+ ;CLEAN UP STACK
3512 017140 000167 177602 JMP TSM16B ;
3513 017144 042737 007777 177776 TMM16D: BIC #7777,#0177776 ;CONTINUE TESTING
3514 017152 022737 000000 177776 CMP #0,#0177776 ;CLEAR UNWANTED BITS
3515 017160 001403 BEQ 1$ ;IS PS CORRECT
3516 017162 104000 ERROR ;YES GO ON
3517 017164 000275 .WORD 275 ;ALL ERRORS TO TRAP TO EMT VECTOR
3518 017166 001213 .WORD MMUERR ;UNIQUE ERROR NUMBER
3519 ;ADDRESS OF ERROR MESSAGE
3520 017170 005726 1$: TST (SP)+ ;NO GO TO ERROR
3521 017172 005726 TST (SP)+ ;CLEAN UP STACK
3522 017174 000167 177576 JMP TSM16C ;
3523 017200 156430 TMM16E: .WORD 156430 ;CONTINUE TESTING
3524 017202 TMM16F: ; TEST LOCATION
3525 017202 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3526 017204 000276 .WORD 276 ;UNIQUE ERROR NUMBER
3527 017206 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3528 ;GO TO ERROR IF DIDN'T ABORT
3529 017210 000167 000474 JMP TM16A
3530 017214 022737 070017 177776 TMM16A: CMP #70017,#0177776 ;IS PS CORRECT
3531 017222 001403 BEQ 1$ ;YES GO ON
3532 017224 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3533 017226 000277 .WORD 277 ;UNIQUE ERROR NUMBER
3534 017230 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3535 ;NO GO TO ERROR
3536 017232 020627 000572 1$: CMP R6,#572 ;IS SP CORRECT
3537 017236 001403 BEQ 2$ ;YES GO ON
3538 017240 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3539 017242 000300 .WORD 300 ;UNIQUE ERROR NUMBER
3540 017244 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3541 ;NO GO TO ERROR
3542 017246 020427 017202 2$: CMP R4,#TMM16E*2 ;IS R4 CORRECT
3543 017252 001403 BEQ 3$ ;YES GO ON
3544 017254 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3545 017256 000301 .WORD 301 ;UNIQUE ERROR NUMBER
3546 017260 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3547 ;NO GO TO ERROR
3548 017262 023727 017200 156430 3$: CMP #TMM16E,#156430 ;IS TEST LOCATION OK
3549 017270 001403 BEQ 4$ ;YES GO ON
3550 017272 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3551 017274 000302 .WORD 302 ;UNIQUE ERROR NUMBER
3552 017276 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3553 ;NO GO TO ERROR
3554 017300 022627 156430 4$: CMP (SP)+,#156430 ;IS STACK CORRECT
3555 017304 001403 BEQ 5$ ;YES GO ON
3556 017306 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3557 017310 000303 .WORD 303 ;UNIQUE ERROR NUMBER
3558 017312 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3559 ;NO GO TO ERROR
3560 017314 022627 017042 5$: CMP (SP)+,#TSM16D ;IS STACK CORRECT
3561 017320 001403 BEQ 6$ ;YES GO ON
3562 017322 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3563 017324 000304 .WORD 304 ;UNIQUE ERROR NUMBER
3564 017326 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE

```

```

3565
3566 017330 022627 140000 6: CMP (SP),#140000 ;NO GO TO ERROR
3567 017334 001403 BEQ 7: ;IS STACK CORRECT
3568 017336 104000 ERROR ;YES GO ON
3569 017340 000305 .WORD 305 ;ALL ERRORS TO TRAP TO EMT VECTOR
3570 017342 001213 .WORD MMUERR ;UNIQUE ERROR NUMBER
3571 ;NO GO TO ERROR ;ADDRESS OF ERROR MESSAGE
3572 017344 012706 000700 7: MOV #700,R6 ;RESTORE SUP SP
3573 017350 012737 140000 177776 MOV #140000,#177776 ;SET PS TO USER MODE
3574 017356 020627 000600 CMP R6,#600 ;IS USER SP CORRECT
3575 017362 001403 BEQ 8: ;YES GO ON
3576 017364 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3577 017366 000306 .WORD 306 ;UNIQUE ERROR NUMBER
3578 017370 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3579 ;NO GO TO ERROR
3580 017372 012767 077400 152600 8: MOV #77400,SIPDRO ;SETUP SIPDRO TO ABORT
3581 017400 012737 017202 000016 MOV #TMM16F,#16 ;SETUP VECTOR
3582 017406 012737 000001 001042 MOV #1,#FLAG ;SETUP FLAG FOR AN ABORT
3583 017414 012737 000001 177572 MOV #1,#177572 ;TURN MMU ON
3584 017422 010701 MOV R7,R1 ;SAVE OLD PC
3585 017424 007014 .WORD 7014 ; TEST INSTRUCTION
3586 017426 022737 000000 001042 CMP #0,#FLAG ;DID AN ABORT OCCUR
3587 017434 001403 BEQ 9: ;YES GO ON
3588 017436 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3589 017440 000307 .WORD 307 ;UNIQUE ERROR NUMBER
3590 017442 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3591 ;NO GO TO ERROR
3592 017444 023701 001076 9: CMP #SAVMR2,R1 ;IS MMR2 CORRECT
3593 017450 001403 BEQ 10: ;YES GO ON
3594 017452 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3595 017454 000310 .WORD 310 ;UNIQUE ERROR NUMBER
3596 017456 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3597 ;NO GO TO ERROR
3598 017460 023727 001072 100041 10: CMP #SAVMR0,#100041 ;IS MMR0 CORRECT
3599 017466 001403 BEQ 11: ;YES GO ON
3600 017470 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3601 017472 000311 .WORD 311 ;UNIQUE ERROR NUMBER
3602 017474 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3603 ;NO GO TO ERROR
3604 017476 012737 000037 172516 11: MOV #37,#172516 ;ENABLE CSM
3605 017504 012737 040000 177776 MOV #40000,#177776 ;SET PSW TO SUP
3606 017512 012706 000700 MOV #700,R6 ;SETUP SUP SP
3607 017516 012737 140000 177776 MOV #140000,#177776 ;SET PSW TO USE
3608 017524 012706 000600 MOV #600,R6 ;SETUP USE SP
3609 017530 012737 000014 000010 MOV #14,#10 ;SETUP NEW VECTOR
3610 017536 012737 017564 000016 MOV #TS16,#16 ;SETUP NEW VECTOR
3611 017544 000277 SCC ;SET ALL CC BITS
3612 017546 007027 .WORD 7027 ;TEST INSTRUCTION
3613 017550 045712 .WORD 45712
3614 017552 TS16A:
3615 017552 104000 ERROR ;ALL ERRORS TO TRAP TO EMT VECTOR
3616 017554 000312 .WORD 312 ;UNIQUE ERROR NUMBER
3617 017556 001213 .WORD MMUERR ;ADDRESS OF ERROR MESSAGE
3618 ;GO TO ERROR IF DIDN'T TRAP
3619 017560 000167 000124 JMP TM16A
3620 017564 022737 070017 177776 TS16: CMP #70017,#177776 ;IS PSW CORRECT

```

```

3621 017572 001403          BEQ      200$          ;YES GO ON
3622 017574 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
3623 017576 000313          .WORD   313          ;UNIQUE ERROR NUMBER
3624 017600 001213          .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
3625                                ;NO GO TO ERROR
3626 017602 020627 000572    200$:  CMP      R6,#572    ;IS SP CORRECT
3627 017606 001403          BEQ      201$          ;YES GO ON
3628 017610 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
3629 017612 000314          .WORD   314          ;UNIQUE ERROR NUMBER
3630 017614 001213          .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
3631                                ;NO GO TO ERROR
3632 017616 022627 045712    201$:  CMP      (SP)+,#45712 ;IS STACK CORRECT
3633 017622 001403          BEQ      202$          ;YES GO ON
3634 017624 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
3635 017626 000315          .WORD   315          ;UNIQUE ERROR NUMBER
3636 017630 001213          .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
3637                                ;NO GO TO ERROR
3638 017632 022627 017552    202$:  CMP      (SP)+,#TS16A ;IS STACK CORRECT
3639 017636 001403          BEQ      203$          ;YES GO ON
3640 017640 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
3641 017642 000316          .WORD   316          ;UNIQUE ERROR NUMBER
3642 017644 001213          .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
3643                                ;NO GO TO ERROR
3644 017646 022627 140000    203$:  CMP      (SP)+,#140000 ;IS STACK CORRECT
3645 017652 001403          BEQ      204$          ;YES GO ON
3646 017654 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
3647 017656 000317          .WORD   317          ;UNIQUE ERROR NUMBER
3648 017660 001213          .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
3649                                ;NO GO TO ERROR
3650 017662 012706 000700    204$:  MOV      #700,R6      ;RESTORE SUP SP
3651 017666 012737 140000 177776 MOV      #140000,#177776 ;SET PSW TO USER MODE
3652 017674 020627 000600    CMP      R6,#600      ;IS USER SP CORRECT
3653 017700 001403          BEQ      TM16A        ;YES GO ON
3654 017702 104000          ERROR    ;ALL ERRORS TO TRAP TO EMT VECTOR
3655 017704 000320          .WORD   320          ;UNIQUE ERROR NUMBER
3656 017706 001213          .WORD   MMUERR       ;ADDRESS OF ERROR MESSAGE
3657                                ;NO GO TO ERROR
3658 017710 005037 177776    TM16A: CLR      #177776      ;SET PS TO KER MODE
3659 017714 005067 157652    CLR      SR0          ;TURN OFF MMU
3660 017720 005067 152572    CLR      SR3          ;TURN OFF 22 BIT ADDRESSING, I & D SPACE
3661 017724 012637 000016    MOV      (SP)+,#16    ;RESTORE VECTORS
3662 017730 012637 000014    MOV      (SP)+,#14    ;
3663 017734 012637 000010    MOV      (SP)+,#10    ;
3664
3665
3666
3667

```

```

3668 .MCALL IDMSG,ENDPAS
3669 .SBTTL END OF PASS ROUTINE
3670
3671 ;*****
3672 ;*INCREMENT THE PASS NUMBER ($PASS)
3673 ;*INDICATE END OF PROGRAM AFTER 1 PASSES THRU THE PROGRAM
3674 ;*IF THERES A MONITOR GO TO IT
3675 ;*IF THERE ISN'T JUMP TO RESTART
3676
3677 $EOP:
3678 017740 TST $PASS ;ONLY TYPE MESSAGE AT END OF FIRST PASS
3679 017744 BNE SKIPID ;IF >0 THEN SKIP THE ID MESSAGE
3680 017746 104401 020046 TYPE ,MSG1 ;ELSE TYPE THE ID MESSAGE
3681 017752
3682 017752 005267 161030 SKIPID: INC $PASS ;;INCREMENT THE PASS NUMBER
3683 017756 042767 100000 161022 BIC #100000,$PASS ;;DON'T ALLOW A NEG. NUMBER
3684 017764 005327 DEC (PC). ;;LOOP?
3685 017766 000001 $EOPCT: .WORD 1
3686 017770 003022 BGT $DOAGN ;;YES
3687 017772 012737 MOV (PC)+,$(PC)+ ;;RESTORE COUNTER
3688 017774 000001 $ENDCT: .WORD 1
3689 017776 017766 $EOPCT
3690 020000 104401 020125 TYPE ,MSG2
3691 020004 016746 160776 MOV $PASS,(SP) ;;SAVE $PASS FOR TYPEOUT
3692 020010 104405 TYPDS ;;GO TYPE- DECIMAL ASCII WITH SIGN
3693 020012 104401 020042 TYPE , $ENULL
3694 020016 013700 000042 $GET42: MOV #42,RO ;;GET MONITOR ADDRESS
3695 020022 001405 BEQ $DOAGN ;;BRANCH IF NO MONITOR
3696 020024 000005 RESET ;;CLEAR THE WORLD
3697 020026 004710 $ENDAD: JSR PC,(RO) ;;GO TO MONITOR
3698 020030 000240 NOP ;;SAVE ROOM
3699 020032 000240 NOP ;;FOR
3700 020034 000240 NOP ;;ACT11
3701 020036
3702 020036 000137 $DOAGN: JMP @(PC)+ ;;RETURN
3703 020040 002066 $RTNAD: .WORD RESTART
3704 020042 377 000 $ENULL: .BYTE -1,-1,0 ;;NULL CHARACTER STRING
3705 .EVEN
3706 020046 005015 055103 042113 MSG1: .ASCIZ <CR><LF>/CZKDK B O KDJ11 MEMORY MANAGEMENT DIAGNOSTIC/
3707 020054 026513 026502 020060
3708 020062 042113 030512 020061
3709 020070 042515 047515 054522
3710 020076 046440 047101 043501
3711 020104 046505 047105 020124
3712 020112 044504 043501 047516
3713 020120 052123 041511 000
3714 020125 015 041412 045532 MSG2: .ASCIZ <CR><LF>/CZKDKB END PASS #/
3715 020132 045504 020102 047105
3716 020140 020104 040520 051523
3717 020146 021440 000
3718 020152 .EVEN
3719 .SBTTL TYPE ROUTINE
3720
3721 ;*****
3722 ;*ROUTINE TO TYPE ASCIZ MESSAGE. MESSAGE MUST TERMINATE WITH A 0 BYTE.
3723 ;*THE ROUTINE WILL INSERT A NUMBER OF NULL CHARACTERS AFTER A LINE FEED.

```



```

3724      ;*NOTE1:          $NULL CONTAINS THE CHARACTER TO BE USED AS THE FILLER CHARACTER.
3725      ;*NOTE2:          $FILLS CONTAINS THE NUMBER OF FILLER CHARACTERS REQUIRED.
3726      ;*NOTE3:          $FILLC CONTAINS THE CHARACTER TO FILL AFTER.
3727      ;*
3728      ;*CALL:
3729      ;*1) USING A TRAP INSTRUCTION
3730      ;*      TYPE      ,MESADR          ;;MESADR IS FIRST ADDRESS OF AN ASCIZ STRING
3731      ;*OR
3732      ;*      TYPE
3733      ;*      MESADR
3734      ;*
3735
3736      020152 105767 000343      $TYPE:  TSTB      $TPFLG          ;; IS THERE A TERMINAL?
3737      020156 100002              BPL        1$              ;; BR IF YES
3738      020160 000000              HALT              ;; HALT HERE IF NO TERMINAL
3739      020162 000430              BR          3$              ;; LEAVE
3740      020164 010046      1$:    MOV        RO,-(SP)          ;; SAVE RO
3741      020166 017600 000002      MOV        @2(SP),RO      ;; GET ADDRESS OF ASCIZ STRING
3742      020172 122767 000001 160620  CMPB      @APTENV,$ENV    ;; RUNNING IN APT MODE
3743      020200 001011              BNE        62$           ;; NO,GO CHECK FOR APT CONSOLE
3744      020202 132767 000100 160611  BITB      @APTSPOOL,$ENVM ;; SPOOL MESSAGE TO APT
3745      020210 001405              BEQ        62$           ;; NO,GO CHECK FOR CONSOLE
3746      020212 100067 000004      MOV        RO,61$        ;; SETUP MESSAGE ADDRESS FOR APT
3747      020216 004767 001622      JSR       PC,$ATY3      ;; SPOOL MESSAGE TO APT
3748      020222 000000      61$:    .WORD      0          ;; MESSAGE ADDRESS
3749      020224 132767 000040 160567  62$:    BITB      @APTCSUP,$ENVM ;; APT CONSOLE SUPPRESSED
3750      020232 001003              BNE        60$           ;; YES,SKIP TYPE OUT
3751      020234 112046      2$:    MOVB      (RO)+,-(SP)  ;; PUSH CHARACTER TO BE TYPED ONTO STACK
3752      020236 001005              BNE        4$            ;; BR IF IT ISN'T THE TERMINATOR
3753      020240 005726              TST        (SP)+        ;; IF TERMINATOR POP IT OFF THE STACK
3754      020242 012600      60$:    MOV        (SP)+,RO      ;; RESTORE RO
3755      020244 062716 000002      3$:    ADD        @2,(SP)      ;; ADJUST RETURN PC
3756      020250 000002              RTI              ;; RETURN
3757      020252 122716 000011      4$:    CMPB      @HT,(SP)      ;; BRANCH IF <HT>
3758      020256 001430              BEQ        8$            ;;
3759      020260 122716 000200      CMPB      @CRLF,(SP)    ;; BRANCH IF NOT <CRLF>
3760      020264 001006              BNE        5$            ;;
3761      020266 005726              TST        (SP)+        ;; POP <CR><LF> EQUIV
3762      020270 104401              TYPE              ;; TYPE A CR AND LF
3763      020272 001277      $CRLF
3764      020274 105067 000202      CLRB      $CHARCNT      ;; CLEAR CHARACTER COUNT
3765      020300 000755              BR          2$            ;; GET NEXT CHARACTER
3766      020302 004767 000056      5$:    JSR        PC,$TYPEC      ;; GO TYPE THIS CHARACTER
3767      020306 126726 000206      6$:    CMPB      $FILLC,(SP)+  ;; IS IT TIME FOR FILLER CHARS.?
3768      020312 001350              BNE        2$            ;; IF NO GO GET NEXT CHAR.
3769      020314 016746 000176      MOV        $NULL,(SP)   ;; GET # OF FILLER CHARS. NEEDED
3770      ;*AND THE NULL CHAR.
3771      020320 105366 000001      7$:    DECB      1(SP)        ;; DOES A NULL NEED TO BE TYPED?
3772      020324 002770              BLT        6$            ;; BR IF NO--GO POP THE NULL OFF OF STACK
3773      020326 004767 000032      JSR       PC,$TYPEC      ;; GO TYPE A NULL
3774      020332 105367 000144      DECB      $CHARCNT      ;; DO NOT COUNT AS A COUNT
3775      020336 000770              BR          7$            ;; LOOP
3776
3777      ;HORIZONTAL TAB PROCESSOR
3778
3779      020340 112716 000040      8$:    MOVB      @' ,(SP)      ;; REPLACE TAB WITH SPACE
    
```

```

3780 020344 004767 000014 9$: JSR PC,$TYPEC ;;TYPE F SPACE
3781 020350 132767 000007 000124 BITB @7,$CHARCNT ;;BRANCH IF NOT AT
3782 020356 001372 BNE 9$ ;;TAB STOP
3783 020360 005726 TST (SP), ;;POP SPACE OFF STACK
3784 020362 000724 BR 2$ ;;GET NEXT CHARACTER
3785 020364 $TYPEC:
3786 020364 105777 000116 TSTB @TKS ;;CHAR IN KYBD BUFFER? ;MJD001
3787 020370 100022 BPL 10$ ;;BR IF NOT ;MJD001
3788 020372 017746 000112 MOV @TKB,-(SP) ;;GET CHAR ;MJD001
3789 020376 042716 177600 BIC @177600,(SP) ;;STRIP EXTRANEIOUS BITS ;MJD001
3790 020402 122716 000023 CMPB @XOFF,(SP) ;;WAS CHAR XOFF ;MJD001
3791 020406 001012 BNE 102$ ;;BR IF NOT ;MJD001
3792 020410 101$:
3793 020410 105777 000072 TSTB @TKS ;;WAIT FOR CHAR ;MJD001
3794 020414 100375 BPL 101$ ;MJD001
3795 020416 117716 000066 MOV @TKB,(SP) ;;GET CHAR ;MJD001
3796 020422 042716 177600 BIC @177600,(SP) ;;STRIP IT ;MJD001
3797 020426 122716 000021 CMPB @XON,(SP) ;;WAS IT XON? ;MJD001
3798 020432 001366 BNE 101$ ;;BR IF NOT ;MJD001
3799 020434 102$:
3800 020434 005726 TST (SP), ;;FIX STACK ;MJD001
3801 020436 10$:
3802 020436 105777 000050 TSTB @TPS ;;WAIT UNTIL PRINTER IS READY ;MJD001
3803 020442 100375 BPL 10$ ;MJD001
3804 020444 116677 000002 000042 MOV @2(SP),@TPB ;;LOAD CHAR TO BE TYPED INTO DATA REG. ;MJD001
3805 020452 122766 000015 000002 CMPB @CR,2(SP) ;;IS CHARACTER A CARRIAGE RETURN?
3806 020460 001003 BNE 1$ ;;BRANCH IF NO
3807 020462 105067 000014 CLRB $CHARCNT ;;YES CLEAR CHARACTER COUNT
3808 020466 000406 BR $TYPEX ;;EXIT
3809 020470 122766 000012 000002 1$: CMPB @LF,2(SP) ;;IS CHARACTER A LINE FEED?
3810 020476 001402 BEQ $TYPEX ;;BRANCH IF YES
3811 020500 105227 INCB (PC), ;;COUNT THE CHARACTER
3812 020502 000000 $CHARCNT: .WORD 0 ;;CHARACTER COUNT STORAGE
3813 020504 000207 $TYPEX: RTS PC
3814
3815 020506 177560 $TKS: .WORD 177560 ;;TTY KDB STATUS ;MJD001
3816 020510 177562 $TKB: .WORD 177562 ;;TTY KDB BUFFER ;MJD001
3817 020512 177564 $TPS: .WORD 177564 ;;TTY PRINTER STATUS REG. ADDRESS
3818 020514 177566 $TPB: .WORD 177566 ;;TTY PRINTER BUFFER REG. ADDRESS
3819 020516 000 $NULL: .BYTE 0 ;;CONTAINS NULL CHARACTER FOR FILLS
3820 020517 002 $FILLS: .BYTE 2 ;;CONTAINS # OF FILLER CHARACTERS REQUIRED
3821 020520 012 $FILLC: .BYTE 12 ;;INSERT FILL CHARS. AFTER A "LINE FEED"
3822 020521 000 $TPFLG: .BYTE 0 ;; "TERMINAL AVAILABLE" FLAG (BIT<07>=0=YES)
3823 020522 077 $QUES: .ASCII "?" ;;QUESTION MARK
3824 020523 012 000 $LF: .ASCIZ <12> ;;LINEFEED
3825 020526 .EVEN
3826 .SBTTL CONVERT BINARY TO DECIMAL AND TYPE ROUTINE
3827
3828 ;*****
3829 ;*THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 5-DIGIT
3830 ;*SIGNED DECIMAL (ASCII) NUMBER AND TYPE IT. DEPENDING ON WHETHER THE
3831 ;*NUMBER IS POSITIVE OR NEGATIVE A SPACE OR A MINUS SIGN WILL BE TYPED
3832 ;*BEFORE THE FIRST DIGIT OF THE NUMBER. LEADING ZEROS WILL ALWAYS BE
3833 ;*REPLACED WITH SPACES.
3834 ;*CALL:
3835 ;* MOV NUM,-(SP) ;;PUT THE BINARY NUMBER ON THE STACK

```

```

3836          ;*      TYPDS          ;;GO TO THE ROUTINE
3837
3838          $TYPDS:
3839 020526 010046      MOV      R0,-(SP)      ;;PUSH R0 ON STACK
3840 020530 010146      MOV      R1,-(SP)      ;;PUSH R1 ON STACK
3841 020532 010246      MOV      R2,-(SP)      ;;PUSH R2 ON STACK
3842 020534 010346      MOV      R3,(SP)      ;;PUSH R3 ON STACK
3843 020536 010546      MOV      R5,(SP)      ;;PUSH R5 ON STACK
3844 020540 012746 020200  MOV      @20200,-(SP)      ;;SET BLANK SWITCH AND SIGN
3845 020544 016605 000020  MOV      20(SP),R5      ;;GET THE INPUT NUMBER
3846 020550 100004      BPL      1$          ;;BR IF INPUT IS POS.
3847 020552 005405      NEG      R5          ;;MAKE THE BINARY NUMBER POS.
3848 020554 112766 000055 000001  MOVB     #'-,1(SP)      ;;MAKE THE ASCII NUMBER NEG.
3849 020562 005000      CLR      R0          ;;ZERO THE CONSTANTS INDEX
3850 020564 012703 020742      MOV      @#DBLK,R3      ;;SETUP THE OUTPUT POINTER
3851 020570 112723 000040      MOVB     #' ,(R3)+      ;;SET THE FIRST CHARACTER TO A BLANK
3852 020574 005002      CLR      R2          ;;CLEAR THE BCD NUMBER
3853 020576 016001 020732      MOV      $DTBL(R0),R1      ;;GET THE CONSTANT
3854 020602 160105      SUB      R1,R5      ;;FORM THIS BCD DIGIT
3855 020604 002402      BLT      4$          ;;BR IF DONE
3856 020606 005202      INC      R2          ;;INCREASE THE BCD DIGIT BY 1
3857 020610 000774      BR       3$
3858 020612 060105      ADD      R1,R5      ;;ADD BACK THE CONSTANT
3859 020614 005702      TST      R2          ;;CHECK IF BCD DIGIT=0
3860 020616 001002      BNE      5$          ;;FALL THROUGH IF 0
3861 020620 105716      TSTB     (SP)          ;;STILL DOING LEADING 0'S?
3862 020622 100407      BMI      7$          ;;BR IF YES
3863 020624 106316      ASLB     (SP)          ;;MSD?
3864 020626 103003      BCC      6$          ;;BR IF NO
3865 020630 116663 000001 177777  MOVB     1(SP),-1(R3)      ;;YES -SET THE SIGN
3866 020636 052702 000060 6$      BIS      #'0,R2      ;;MAKE THE BCD DIGIT ASCII
3867 020642 052702 000040 7$      BIS      #' ,R2      ;;MAKE IT A SPACE IF NOT ALREADY A DIGIT
3868 020646 110223      MOVB     R2,(R3)+      ;;PUT THIS CHARACTER IN THE OUTPUT BUFFER
3869 020650 005720      TST      (R0)+      ;;JUST INCREMENTING
3870 020652 020027 000010      CMP      R0,#10      ;;CHECK THE TABLE INDEX
3871 020656 002746      BLT      2$          ;;GO DO THE NEXT DIGIT
3872 020660 003002      BGT      8$          ;;GO TO EXIT
3873 020662 010502      MOV      R5,R2      ;;GET THE LSD
3874 020664 000764      BR       6$          ;;GO CHANGE TO ASCII
3875 020666 105726      TSTB     (SP)+      ;;WAS THE LSD THE FIRST NON ZERO?
3876 020670 100003      BPL      9$          ;;BR IF NO
3877 020672 116663 177777 177776  MOVB     -1(SP),-2(R3)      ;;YES--SET THE SIGN FOR TYPING
3878 020700 105013      CLRB     (R3)      ;;SET THE TERMINATOR
3879 020702 012605      MOV      (SP)+,R5      ;;POP STACK INTO R5
3880 020704 012603      MOV      (SP)+,R3      ;;POP STACK INTO R3
3881 020706 012602      MOV      (SP)+,R2      ;;POP STACK INTO R2
3882 020710 012601      MOV      (SP)+,R1      ;;POP STACK INTO R1
3883 020712 012600      MOV      (SP)+,R0      ;;POP STACK INTO R0
3884 020714 104401 020742      TYPE     ,#DBLK      ;;NOW TYPE THE NUMBER
3885 020720 016666 000002 000004  MOV      2(SP),4(SP)      ;;ADJUST THE STACK
3886 020726 012616      MOV      (SP)+,(SP)
3887 020730 000002      RTI
3888 020732 023420      $DTBL: 10000.
3889 020734 001750      1000.
3890 020736 000144      100.
3891 020740 000012      10.
    
```

```

3892 020742 000004      $DBLK: .BLKW 4
3893                    .SBTTL BINARY TO OCTAL (ASCII) AND TYPE
3894
3895                    ;;*****
3896                    ;*THIS ROUTINE IS USED TO CHANGE A 16-BIT BINARY NUMBER TO A 6-DIGIT
3897                    ;*OCTAL (ASCII) NUMBER AND TYPE IT.
3898                    ;*$TYPOS-- ENTER HERE TO SETUP SUPPRESS ZEROS AND NUMBER OF DIGITS TO TYPE
3899                    ;*CALL:
3900                    ;*      MOV      NUM,-(SP)          ;;NUMBER TO BE TYPED
3901                    ;*      TYPOS          ;;CALL FOR TYPEOUT
3902                    ;*      .BYTE  N          ;;N=1 TO 6 FOR NUMBER OF DIGITS TO TYPE
3903                    ;*      .BYTE  M          ;;M=1 OR 0
3904                    ;*
3905                    ;*                          ;;1=TYPE LEADING ZEROS
3906                    ;*                          ;;0=SUPPRESS LEADING ZEROS
3907                    ;*$TYPON ---ENTER HERE TO TYPE OUT WITH THE SAME PARAMETERS AS THE LAST
3908                    ;*$TYPOS OR $TYPOC
3909                    ;*CALL:
3910                    ;*      MOV      NUM,-(SP)          ;;NUMBER TO BE TYPED
3911                    ;*      TYPON          ;;CALL FOR TYPEOUT
3912                    ;*
3913                    ;*$TYPOC --ENTER HERE FOR TYPEOUT OF A 16 BIT NUMBER
3914                    ;*CALL:
3915                    ;*      MOV      NUM,-(SP)          ;;NUMBER TO BE TYPED
3916                    ;*      TYPOC          ;;CALL FOR TYPEOUT
3917
3918 020752 017646 000000      $TYPOS: MOV      @2(SP),-(SP)          ;;PICKUP THE MODE
3919 020756 116667 000001 000211  MOVB      1(SP),%OFILL          ;;LOAD ZERO FILL SWITCH
3920 020764 112667 000207      MOVB      (SP)+,%OMODE+1      ;;NUMBER OF DIGITS TO TYPE
3921 020770 062716 000002      ADD      @2,(SP)            ;;ADJUST RETURN ADDRESS
3922 020774 000406            BR          $TYPON
3923 020776 112767 000001 000171 $TYPOC: MOVB      @1,%OFILL          ;;SET THE ZERO FILL SWITCH
3924 021004 112767 000006 000165  MOVB      @6,%OMODE+1      ;;SET FOR SIX(6) DIGITS
3925 021012 112767 000005 000154 $TYPON: MOVB      @5,%OCNT          ;;SET THE ITERATION COUNT
3926 021020 010346            MOV      R3,-(SP)          ;;SAVE R3
3927 021022 010446            MOV      R4,-(SP)          ;;SAVE R4
3928 021024 010546            MOV      R5,-(SP)          ;;SAVE R5
3929 021026 116704 000145      MOVB      %OMODE+1,R4      ;;GET THE NUMBER OF DIGITS TO TYPE
3930 021032 005404            NEG      R4
3931 021034 062704 000006      ADD      @6,R4            ;;SUBTRACT IT FOR MAX. ALLOWED
3932 021040 110467 000132      MOVB      R4,%OMODE        ;;SAVE IT FOR USE
3933 021044 116704 000125      MOVB      %OFILL,R4        ;;GET THE ZERO FILL SWITCH
3934 021050 016605 000012      MOV      12(SP),R5        ;;PICKUP THE INPUT NUMBER
3935 021054 005003            CLR      R3                ;;CLEAR THE OUTPUT WORD
3936 021056 006105            1$: ROL      R5            ;;ROTATE MSB INTO "C"
3937 021060 000404            BR      3$                ;;GO DO MSB
3938 021062 006105            2$: ROL      R5            ;;FORM THIS DIGIT
3939 021064 006105            ROL      R5
3940 021066 006105            ROL      R5
3941 021070 010503            MOV      R5,R3
3942 021072 006103            3$: ROL      R3            ;;GET LSB OF THIS DIGIT
3943 021074 105367 000076      DECB      %OMODE          ;;TYPE THIS DIGIT?
3944 021100 100016            BPL      7$                ;;BR IF NO
3945 021102 042703 177770      BIC      @177770,R3        ;;GET RID OF JUNK
3946 021106 001002            BNE      4$                ;;TEST FOR 0
3947 021110 005704            TST      R4                ;;SUPPRESS THIS 0?

```

```

3948 021112 001403          BEQ      5$          ;;BR IF YES
3949 021114 005204          4$: INC      R4          ;;DON'T SUPPRESS ANYMORE 0'S
3950 021116 052703 000060   BIS      @'0,R3       ;;MAKE THIS DIGIT ASCII
3951 021122 052703 000040   5$: BIS      @' ,R3       ;;MAKE ASCII IF NOT ALREADY
3952 021126 110367 000040   MOVB    R3,8$        ;;SAVE FOR TYPING
3953 021132 104401 021172   TYPE    ,8$          ;;GO TYPE THIS DIGIT
3954 021136 105367 000032   7$: DECB    %CNT      ;;COUNT BY 1
3955 021142 003347          BGT     2$          ;;BR IF MORE TO DO
3956 021144 002402          BLT     6$          ;;BR IF DONE
3957 021146 005204          INC     R4          ;;INSURE LAST DIGIT ISN'T A BLANK
3958 021150 000744          BR      2$          ;;GO DO THE LAST DIGIT
3959 021152 012605          6$: MOV     (SP)+,R5    ;;RESTORE R5
3960 021154 012604          MOV     (SP)+,R4    ;;RESTORE R4
3961 021156 012603          MOV     (SP)+,R3    ;;RESTORE R3
3962 021160 016666 000002 000004  MOV     2(SP),4(SP)  ;;SET THE STACK FOR RETURNING
3963 021166 012616          MOV     (SP)+,(SP)
3964 021170 000002          RTI                    ;;RETURN
3965 021172 000          8$: .BYTE   0          ;;STORAGE FOR ASCII DIGIT
3966 021173 000          .BYTE   0          ;;TERMINATOR FOR TYPE ROUTINE
3967 021174 000          %CNT: .BYTE   0          ;;OCTAL DIGIT COUNTER
3968 021175 000          %FILL: .BYTE   0          ;;ZERO FILL SWITCH
3969 021176 000000          %MODE: .WORD   0          ;;NUMBER OF DIGITS TO TYPE
3970          .SBTTL  TTY INPUT ROUTINE
3971
3972          ;;*****
3973          .ENABL  LSB
3974
3975          ;;*****
3976          ;*SOFTWARE SWITCH REGISTER CHANGE ROUTINE.
3977          ;*ROUTINE IS ENTERED FROM THE TRAP HANDLER, AND WILL
3978          ;*SERVICE THE TEST FOR CHANGE IN SOFTWARE SWITCH REGISTER TRAP CALL
3979          ;*WHEN OPERATING IN TTY FLAG MODE.
3980 021200 022767 000176 157640 %CKSWR: CMP     @SWREG,SWR  ;;IS THE SOFT-SWR SELECTED?
3981 021206 001074          BNE     15$          ;;BRANCH IF NO
3982 021210 105777 177272          TSTB   @TKS          ;;CHAR THERE?
3983 021214 100071          BPL     15$          ;;IF NO, DON'T WAIT AROUND
3984 021216 117746 177266          MOVB   @TKB,-(SP)    ;;SAVE THE CHAR
3985 021222 042716 177600          BIC   @C177,(SP)    ;;STRIP-OFF THE ASCII
3986 021226 022726 000007          CMP    @7,(SP)+     ;;IS IT A CONTROL G?
3987 021232 001062          BNE     15$          ;;NO, RETURN TO USER
3988 021234 126727 000514 000001  CMPB   %AUTOB,@1    ;;ARE WE RUNNING IN AUTO MODE?
3989 021242 001456          BEQ     15$          ;;BRANCH IF YES
3990
3991 021244 104401 021725          TYPE   ,%CNTLG      ;;ECHO THE CONTROL G (%G)
3992 021250 104401 021732          %GTSWR: TYPE   ,%MSWR  ;;TYPE CURRENT CONTENTS
3993 021254 016746 156716          MOV   SWREG,-(SP)  ;;SAVE SWREG FOR TYPEOUT
3994 021260 104402          TYPOC  ;;GO TYPE--OCTAL ASCII(ALL DIGITS)
3995 021262 104401 021743          TYPE   ,%MNEW      ;;PROMPT FOR NEW SWR
3996 021266 005046          19$: CLR   -(SP)    ;;CLEAR COUNTER
3997 021270 005046          CLR   -(SP)        ;;THE NEW SWR
3998 021272 105777 177210          7$: TSTB   @TKS          ;;CHAR THERE?
3999 021276 100375          BPL     7$          ;;IF NOT TRY AGAIN
4000
4001 021300 117746 177204          MOVB   @TKB,-(SP)  ;;PICK UP CHAR
4002 021304 042716 177600          BIC   @C177,(SP)  ;;MAKE IT 7-BIT ASCII
4003

```

```

4004
4005
4006 021310 021627 000025      9$:   CMP      (SP),#25      ;;IS IT A CONTROL-U?
4007 021314 001005              BNE      10$              ;;BRANCH IF NOT
4008 021316 104401 021720      TYPE     ,#CNTLU         ;;YES, ECHO CONTROL U (+U)
4009 021322 062706 000006      20$:   ADD      #6,SP         ;;IGNORE PREVIOUS INPUT
4010 021326 000757              BR       19$              ;;LET'S TRY IT AGAIN
4011
4012
4013 021330 021627 000015      10$:   CMP      (SP),#15     ;;IS IT A <CR>?
4014 021334 001022              BNE      16$              ;;BRANCH IF NO
4015 021336 005766 000004      TST     4(SP)            ;;YES, IS IT THE FIRST CHAR?
4016 021342 001403              BEQ     11$              ;;BRANCH IF YES
4017 021344 016677 000002 157474  MOV     2(SP),@SWR        ;;SAVE NEW SWR
4018 021352 062706 000006      11$:   ADD      #6,SP         ;;CLEAR UP STACK
4019 021356 104401 001277      14$:   TYPE     ,#CRLF        ;;ECHO <CR> AND <LF>
4020 021362 126727 000367 000001  CMPB   $INTAG,#1         ;;RE-ENABLE TTY KBD INTERRUPTS?
4021 021370 001003              BNE     15$              ;;BRANCH IF NOT
4022 021372 012777 000100 177106  MOV     #100,@TKS        ;;RE-ENABLE TTY KBD INTERRUPTS
4023 021400 000002              RTI     ;                ;;RETURN
4024 021402 004767 176756      16$:   JSR     PC,$TYPEC      ;;ECHO CHAR
4025 021406 021627 000060      CMP     (SP),#60         ;;CHAR < 0?
4026 021412 002420              BLT     18$              ;;BRANCH IF YES
4027 021414 021627 000067      CMP     (SP),#67         ;;CHAR > 7?
4028 021420 003015              BGT     18$              ;;BRANCH IF YES
4029 021422 042726 000060      BIC     #60,(SP)+        ;;STRIP-OFF ASCII
4030 021426 005766 000002      TST     2(SP)            ;;IS THIS THE FIRST CHAR
4031 021432 001403              BEQ     17$              ;;BRANCH IF YES
4032 021434 004316              ASL     (SP)              ;;NO, SHIFT PRESENT
4033 021436 004316              ASL     (SP)              ;; CHAR OVER TO MAKE
4034 021440 006316              ASL     (SP)              ;; ROOM FOR NEW ONE.
4035 021442 005266 000002      17$:   INC     2(SP)            ;;KEEP COUNT OF CHAR
4036 021446 056616 177776      BIS     -2(SP),(SP)      ;;SET IN NEW CHAR
4037 021452 000707              BR      7$                ;;GET THE NEXT ONE
4038 021454 104401 020522      18$:   TYPE     ,#QUES        ;;TYPE ?<CR><LF>
4039 021460 000720              BR     20$                ;;SIMULATE CONTROL-U
4040      .DSABL  LSB
4041
4042
4043      ;;*****
4044      ;;THIS ROUTINE WILL INPUT A SINGLE CHARACTER FROM THE TTY
4045      ;;*CALL:
4046      ;;*      RDCHR              ;;INPUT A SINGLE CHARACTER FROM THE TTY
4047      ;;*      RETURN HERE         ;;CHARACTER IS ON THE STACK
4048      ;;*                          ;;WITH PARITY BIT STRIPPED OFF
4049      ;;
4050
4051 021462 011646      $RDCHR: MOV     (SP),-(SP)      ;;PUSH DOWN THE PC
4052 021464 016666 000004 000002  MOV     4(SP),2(SP)      ;;SAVE THE PS
4053 021472 105777 177010      1$:   TSTB   @TKS            ;;WAIT FOR
4054 021476 100375              BPL     1$                ;;A CHARACTER
4055 021500 117766 177004 000004  MOVB   @TKB,4(SP)        ;;READ THE TTY
4056 021506 042766 177600 000004  BIC     #C<177>,4(SP)    ;;GET RID OF JUNK IF ANY
4057 021514 026627 000004 000023  CMP     4(SP),#23        ;;IS IT A CONTROL S?
4058 021522 001013              BNE     3$                ;;BRANCH IF NO
4059 021524 105777 176756      2$:   TSTB   @TKS            ;;WAIT FOR A CHARACTER

```

```

4060 021530 100375          BPL      2#           ;;LOOP UNTIL ITS THERE
4061 021532 117746 176752  MOVB     @TKB,(SP)    ;;GET CHARACTER
4062 021536 042716 177600  BIC     @C177,(SP)   ;;MAKE IT 7 BIT ASCII
4063 021542 022627 000021  CMP     (SP),@21     ;;IS IT A CONTROL-Q?
4064 021546 001366          BNE     2#           ;;IF NOT DISCARD IT
4065 021550 000750          BR      1#           ;;YES, RESUME
4066 021552 026627 000004 000140 3#:  CMP     4(SP),@140   ;;IS IT UPPER CASE?
4067 021560 002407          BLT     4#           ;;BRANCH IF YES
4068 021562 026627 000004 000175  CMP     4(SP),@175   ;;IS IT A SPECIAL CHAR?
4069 021570 003003          BGT     4#           ;;BRANCH IF YES
4070 021572 042766 000040 000004  BIC     @40,4(SP)    ;;MAKE IT UPPER CASE
4071 021600 000002          RTI                    ;;GO BACK TO USER
4072                                     ;;*****
4073                                     ;*THIS ROUTINE WILL INPUT A STRING FROM THE TTY
4074                                     ;*CALL:
4075                                     ;*      RDLIN                    ;;INPUT A STRING FROM THE TTY
4076                                     ;*      RETURN HERE                ;;ADDRESS OF FIRST CHARACTER WILL BE ON THE STACK
4077                                     ;*                                     ;;TERMINATOR WILL BE A BYTE OF ALL 0'S
4078
4079 021602 010346          $RDLIN: MOV     R3,-(SP)    ;;SAVE R3
4080 021604 012703 021710  1#:  MOV     @TTYIN,R3    ;;GET ADDRESS
4081 021610 022703 021720  2#:  CMP     @TTYIN@8,R3   ;;BUFFER FULL?
4082 021614 101405          BLOS    4#           ;;BR IF YES
4083 021616 104410          RDCMR                    ;;GO READ ONE CHARACTER FROM THE TTY
4084 021620 112613          MOVB     (SP),R3     ;;GET CHARACTER
4085 021622 122713 000177  10#:  CMPB    @177,R3     ;;IS IT A RUBOUT
4086 021626 001003          BNE     3#           ;;SKIP IF NOT
4087 021630 104401 020522  4#:  TYPE    ,@QUES     ;;TYPE A '?'
4088 021634 000763          BR      1#           ;;CLEAR THE BUFFER AND LOOP
4089 021636 111367 000044  3#:  MOVB     (R3),@9#    ;;ECHO THE CHARACTER
4090 021642 104401 021706          TYPE    ,@9#
4091 021646 122723 000015          CMPB    @15,R3     ;;CHECK FOR RETURN
4092 021652 001356          BNE     2#           ;;LOOP IF NOT RETURN
4093 021654 105063 177777          CLRB    -1(R3)     ;;CLEAR RETURN (THE 15)
4094 021660 104401 020523          TYPE    ,@LF      ;;TYPE A LINE FEED
4095 021664 012603          MOV     (SP),R3    ;;RESTORE R3
4096 021666 011646          MOV     (SP),-(SP)  ;;ADJUST THE STACK AND PUT ADDRESS OF THE
4097 021670 016666 000004 000002  MOV     4(SP),2(SP)  ;;FIRST ASCII CHARACTER ON IT
4098 021676 012766 021710 000004  MOV     @TTYIN,4(SP)
4099 021704 000002          RTI                    ;;RETURN
4100 021706 000          9#:  .BYTE    0           ;;STORAGE FOR ASCII CHAR. TO TYPE
4101 021707 000          .BYTE    0           ;;TERMINATOR
4102 021710 000010          $TTYIN: .BLKB    8.    ;;RESERVE 8 BYTES FOR TTY INPUT
4103 021720 052536 005015 000          $CNTLU: .ASCIZ  /?U/<15><12>  ;;CONTROL "U"
4104 021725 136 006507 000012  $CNTLG: .ASCIZ  /?G/<15><12>  ;;CONTROL "G"
4105 021732 005015 053523 020122  $MSWR:  .ASCIZ  <15><12>/SWR * /
4106 021740 020075 000          $MNEW:  .ASCIZ  / NEW * /
4107 021743 040 047040 053505
4108 021750 036440 000040
4109 021754 000          $AUTOB: .BYTE    0           ;;AUTO MODE FLAG
4110 021755 000          $INTAG: .BYTE    0           ;;INTERRUPT MODE FLAG
4111          .SBTTL TRAP DECODER
4112
4113                                     ;;*****
4114                                     ;*THIS ROUTINE WILL PICKUP THE LOWER BYTE OF THE "TRAP" INSTRUCTION
4115                                     ;*AND USE IT TO INDEX THROUGH THE TRAP TABLE FOR THE STARTING ADDRESS

```

```

4116 ;*OF THE DESIRED ROUTINE. THEN USING THE ADDRESS OBTAINED I* WILL
4117 ;*GO TO THAT ROUTINE.
4118
4119 021756 010046 $TRAP: MOV RO, (SP) ;:SAVE RO
4120 021760 016600 000002 MOV 2(SP),RO ;:GET TRAP ADDRESS
4121 021764 005740 TST (RO) ;:BACKUP BY 2
4122 021766 111000 MOVB (RO),RO ;:GET RIGHT BYTE OF TRAP
4123 021770 006300 ASL RO ;:POSITION FOR INDEXING
4124 021772 016000 022012 MOV $TRPAD(RO),RO ;:INDEX TO TABLE
4125 021776 000200 RTS RO ;:GO TO ROUTINE
4126
4127
4128 ;:THIS IS USE TO HANDLE THE "GETPRI" MACRO
4129
4130 022000 011646 $TRAP2: MOV (SP),-(SP) ;:MOVE THE PC DOWN
4131 022002 016666 000004 000002 MOV 4(SP),2(SP) ;:MOVE THE PSW DOWN
4132 022010 000002 RTI ;:RESTORE THE PSW
4133
4134 .MACRO SETTRAP A,B,MSG
4135 $$SET A,B,\<TRAP.&TRP>,\&TRP,<MSG>
4136
4137 .NLIST
4138 $TRP=$TRP+1
4139 .LIST
4140 .ENDM SETTRAP
4141 .MACRO $$SET A,B,C,D,COMNT
4142 .IF EQ $TRP-1
4143 .SBTTL TRAP TABLE
4144
4145 ;*THIS TABLE CONTAINS THE STARTING ADDRESSES OF THE ROUTINES CALLED
4146 ;*BY THE "TRAP" INSTRUCTION.
4147
4148 ; ROUTINE
4149 ; -----
4150 $TRPAD: .WORD $TRAP2
4151 .ENDC
4152 .IIF NDF GNS,.NLIST
4153 A= C
4154 .IIF NDF GNS,.LIST
4155 B ;:CALL=A TRAP.D(C) COMNT
4156 .ENDM $$SET
4157 .MACRO TRMTRP
4158 $TERM= $TRPAD
4159 .ENDM TRMTRP
4160 .SBTTL TRAP TABLE
4161
4162 ;*THIS TABLE CONTAINS THE STARTING ADDRESSES OF THE ROUTINES CALLED
4163 ;*BY THE "TRAP" INSTRUCTION.
4164
4165 ; ROUTINE
4166 ; -----
4167 022012 022000 $TRPAD: .WORD $TRAP2
4168 022014 020152 $TYPE ;:CALL=TYPE TRAP.1(104401) TTY TYPEOUT ROUTINE
4169 022016 020776 $TYPOC ;:CALL=TYPOC TRAP.2(104402) TYPE OCTAL NUMBER (WITH LEADING ZEROS)
4170 022020 020752 $TYPOS ;:CALL=TYPOS TRAP.3(104403) TYPE OCTAL NUMBER (NO LEADING ZEROS)
4171 022022 021012 $TYPON ;:CALL=TYPON TRAP.4(104404) TYPE OCTAL NUMBER (AS PER LAST CALL)
4172 022024 020526 $TYPDS ;:CALL=TYPDS TRAP.5(104405) TYPE DECIMAL NUMBER (WITH SIGN)

```



```

4172
4173 022026 021250          $GTSWR  ;;CALL=GTSWR      TRAP.6(104406) GET SOFT SWR SETTING
4174
4175 022030 021200          $CKSWR  ;;CALL=CKSWR      TRAP.7(104407) TEST FOR CHANGE IN SOFT SWR
4176 022032 021462          $RDCHR  ;;CALL=RDCHR      TRAP.10(104410) TTY TYPEIN CHARACTER ROUTINE
4177 022034 021602          $RDLIN  ;;CALL=RDLIN      TRAP.11(104411) TTY TYPEIN STRING ROUTINE
4178
4179                          .SBTTL  APT COMMUNICATIONS ROUTINE
4180
4181 022036 112767 000001 000236 $ATY1:  MOVB   #1,$FFLG          ;;TO REPORT FATAL ERROR
4182 022044 112767 000001 000226 $ATY3:  MOVB   #1,$MFLG          ;;TO TYPE A MESSAGE
4183 022052 000403          $ATYC   BR
4184 022054 112767 000001 000220 $ATY4:  MOVB   #1,$FFLG          ;;TO ONLY REPORT FATAL ERROR
4185 022062          $ATYC:
4186 022062          MOV    R0,-(SP)           ;;PUSH R0 ON STACK
4187 022064 010146          MOV    R1,-(SP)           ;;PUSH R1 ON STACK
4188 022066 105767 000206          TSTB   $MFLG             ;;SHOULD TYPE A MESSAGE?
4189 022072 001450          BEQ    5#                ;;IF NOT: BR
4190 022074 122767 000001 156716 $APENV, $ENV           ;;OPERATING UNDER APT?
4191 022102 001031          BNE    3#                ;;IF NOT: BR
4192 022104 132767 000100 156707 $APTSPOOL, $ENVM       ;;SHOULD SPOOL MESSAGES?
4193 022112 001425          BEQ    3#                ;;IF NOT: BR
4194 022114 017600 000004          MOV    #4(SP),R0         ;;GET MESSAGE ADDR.
4195 022120 062766 000002 000004 ADD     #2,4(SP)          ;;BUMP RETURN ADDR.
4196 022126 005767 156646          1#:   TST    $MSGTYPE       ;;SEE IF DONE W/ LAST XMISSION?
4197 022132 001375          BNE    1#                ;;IF NOT: WAIT
4198 022134 010067 156654          MOV    R0,$MSGAD         ;;PUT ADDR IN MAILBOX
4199 022140 105720          2#:   TSTB   (R0)+         ;;FIND END OF MESSAGE
4200 022142 001376          BNE    2#                ;;SUB START OF MESSAGE
4201 022144 166700 156644          SUB    $MSGAD,R0         ;;GET MESSAGE LGTH IN WORDS
4202 022150 006200          ASR    R0                ;;PUT LENGTH IN MAILBOX
4203 022152 010067 156640          MOV    R0,$MSGLGT        ;;TELL APT TO TAKE MSG.
4204 022156 012767 000004 156614 $MSGTYPE
4205 022164 000413          BR     5#                ;;PUT MSG ACDR IN JSR LINKAGE
4206 022166 017667 000004 000016 3#:   MOV    #4(SP),4#         ;;BUMP RETURN ADDRESS
4207 022174 062766 000002 000004 ADD     #2,4(SP)
4208 022202 016746 155570          MOV    177776,-(SP)      ;;PUSH 177776 ON STACK
4209 022206 004767 175740          JSR    PC,$TYPE         ;;CALL TYPE MACRO
4210 022212 000000          4#:   .WORD   0
4211 022214          5#:
4212 022214 105767 000062          10#:  TSTB   $FFLG           ;;SHOULD REPORT FATAL ERROR?
4213 022220 001416          BEQ    12#              ;;IF NOT: BR
4214 022222 005767 156572          TST    $ENV             ;;RUNNING UNDER APT?
4215 022226 001413          BEQ    12#              ;;IF NOT: BR
4216 022230 005767 156544          11#:  TST    $MSGTYPE        ;;FINISHED LAST MESSAGE?
4217 022234 001375          BNE    11#              ;;IF NOT: WAIT
4218 022236 017667 000004 156536 $FATAL
4219 022244 062766 000002 000004 ADD     #2,4(SP)          ;;GET ERROR #
4220 022252 005267 156522          INC    $MSGTYPE         ;;BUMP RETURN ADDR.
4221 022256 105067 000020          12#:  CLRB   $FFLG           ;;TELL APT TO TAKE ERROR
4222 022262 105067 000013          CLRB   $LFLG           ;;CLEAR FATAL FLAG
4223 022266 105067 000006          CLRB   $MFLG           ;;CLEAR LOG FLAG
4224 022272 012601          MOV    (SP)+,R1         ;;CLEAR MESSAGE FLAG
4225 022274 012600          MOV    (SP)+,R0         ;;POP STACK INTO R1
4226 022276 000207          RTS    PC               ;;POP STACK INTO R0
4227 022300          000          $MFLG: .BYTE   0      ;;RETURN
4227 022300          000          $MFLG: .BYTE   0      ;;MESSG. FLAG
    
```

```

4228 022301 000 $LFLG: .BYTE 0 ;LOG FLAG
4229 022302 000 $FFLG: .BYTE 0 ;FATAL FLAG
4230 022304 .EVEN
4231 000200 APTSIZE=200
4232 000001 APTENV=001
4233 000100 APTSPool=100
4234 000040 APTCSUP=040
4235 ;*****
4236 ;THIS ROUTINE WILL INCREMENT THE ERROR COUNT AND THEN PASS THE UNIQUE
4237 ;ERROR NUMBER TO THE APT ERROR ROUTINE TO BE REPORTED TO THE APT SYSTEM.
4238
4239 022304 005267 156542 $ERROR: INC $ERFLG ;INCREMENT ERROR FLAG
4240 022310 001775 BEQ $ERROR ;DON'T LET IT GO TO ZERO
4241 022312 005267 156526 INC ERRCNT ;INCREMENT THE ERROR COUNT
4242 022316 021627 001002 CMP (SP), #1002 ;IS ERROR FROM VECTOR AREA
4243 022322 101010 BHI 1# ;IF YES THEN
4244 022324 012767 007777 000106 MOV #7777, 3# ;REPORT AN UNEXPECTED TRAP
4245 022332 012637 001062 MOV (SP), @SAVSP1 ;SAVE UNEXPECTED TRAP DATA
4246 022336 012637 001064 MOV (SP), @SAVSP2 ;AND RESTORE SP
4247 022342 000430 BR 2# ;ELSE
4248 022344 017667 000000 000066 1#: MOV @SP, 3# ;REPORT UNIQUE ERROR NUMBER TO APT
4249 022352 011667 000072 MOV (SP), 101# ;SAVE ERROR PC
4250 022356 062716 000002 ADD #2, (SP) ;GET OVER UNIQUE ERROR NUMBER FOR RETURN
4251 022362 017637 000000 022372 100#: MOV @SP, @102#
4252 022370 104401 TYPE ;TYPE ERROR MESSAGE
4253 022372 000000 102#: .WORD 0
4254 022374 062716 000002 ADD #2, (SP) ;GET OVER ERROR MESSAGE
4255 022400 104401 001246 TYPE .ERR1 ;
4256 022404 016746 000030 MOV 3#, -(SP) ;PUSH UNIQUE ERROR NUMBER ON THE STACK
4257 022410 104402 TYPOC ;TYPE OCTAL ERROR NUMBER
4258 022412 104401 001262 TYPE .ERR2 ;
4259 022416 016746 000026 MOV 101#, -(SP) ;PUSH ERROR PC ON THE STACK
4260 022422 104402 TYPOC ;TYPE THE ERROR PC
4261 022424 122767 000001 156366 2#: CMPB @APTENV, $ENV ;CHECK TO MAKE SURE WE'RE IN APT MODE
4262 022432 001004 BNE 5# ;IF YES THEN
4263 022434 004767 177414 JSR PC, $ATY4 ;GO REPORT ERROR TO APT
4264 022440 000000 3#: .WORD 0 ;STORAGE FOR ERROR NUMBER
4265 022442 000777 4#: BR 4# ;LOOP HERE AFTER REPORTING ERROR TO APT
4266 022444 000000 5#: HALT ;IF NOT APT THEN HALT
4267 022446 000002 RTI ;ALLOW RECOVERY FROM HALT
4268 022450 000000 101#: .WORD 0
4269 022452 $PATCH::
4270 022452 000010 .BLKW 10
4271 000001 .END

```

ABASE = 000000	576			
ABORT0 012214	2383	2509#		
ABORT1 012402	2394	2571#		
ACDW1 = 000000	576			
ACDW2 = 000000	576			
ACPUOP = 000000	576	591		
ADDTRP 001454	736#	840	869	
ADDW0 = 000000	576			
ADDW1 = 000000	576			
ADDW10 = 000000	576			
ADDW11 = 000000	576			
ADDW12 = 000000	576			
ADDW13 = 000000	576			
ADDW14 = 000000	576			
ADDW15 = 000000	576			
ADDW2 = 000000	576			
ADDW3 = 000000	576			
ADDW4 = 000000	576			
ADDW5 = 000000	576			
ADDW6 = 000000	576			
ADDW7 = 000000	576			
ADDW8 = 000000	576			
ADDW9 = 000000	576			
ADEVCT = 000000	576	582		
ADEVN = 000000	576			
AENV = 000000	576	587		
AENVN = 000000	576	588		
AFATAL = 000000	576	579		
ALLCTR 001056	618#			
AMADR1 = 000000	576			
AMADR2 = 000000	576			
AMADR3 = 000000	576			
AMADR4 = 000000	576			
AMAMS1 = 000000	576			
AMAMS2 = 000000	576			
AMAMS3 = 000000	576			
AMAMS4 = 000000	576			
AMSGAD = 000000	576	584		
AMSGLG = 000000	576	585		
AMSGTY = 000000	576	578		
AMTYP1 = 000000	576			
AMTYP2 = 000000	576			
AMTYP3 = 000000	576			
AMTYP4 = 000000	576			
APASS = 000000	576	581		
APRIOR = 000000	576			
APTCSU = 000040	3749	4234#		
APTENV = 000001	3742	4190	4232#	4261
APTSIZ = 000200	801	4231#		
APTSPO = 000100	3744	4192	4233#	
ASWREG = 002000	495#	576	589	
ATESTN = 000000	576	580		
AUNIT = 000000	576	583		
AUSWR = 000000	576	590		
AVECT1 = 000000	576			
AVECT2 = 000000	576			

KDPDR2=	172324	4390												
KDPDR3=	172326	4400												
KDPDR4=	172330	4410												
KDPDR5=	172332	4420												
KDPDR6=	172334	4430												
KDPDR7=	172336	4440												
KIPAR0=	172340	4480	3090*											
KIPAR1=	172342	4490												
KIPAR2=	172344	4500												
KIPAR3=	172346	4510												
KIPAR4=	172350	4520												
KIPAR5=	172352	4530												
KIPAR6=	172354	4540	2992*	3010*	3028*	3039*	3050*	3061*	3092*	3301*				
KIPAR7=	172356	4550												
KIPDR0=	172300	4260	3091*											
KIPDR1=	172302	4270												
KIPDR2=	172304	4280												
KIPDR3=	172306	4290												
KIPDR4=	172310	4300												
KIPDR5=	172312	4310												
KIPDR6=	172314	4320	3095*											
KIPDR7=	172316	4330												
LF	= 000012	2220	653	659	663	668	670	673	3706	3714	3809	3817		
LOOPIN	001060	6190												
MMTS10=	***** U	2592												
MMTS11=	***** U	2688												
MMTS12=	***** U	2745												
MMTS13=	***** U	2832												
MMTS14=	***** U	3076												
MMTS15=	***** U	3331												
MMTS16=	***** U	3438												
MMTS6A=	***** U	1574												
MMTS6B=	***** U	1712												
MMTS6C=	***** U	1885												
MMTS6D=	***** U	2035												
MMU	001306	6950	1589	1725	1898	2048	2178	2216	2321	2380	2603	2615	2628	2642
		2716	2754	2843	3104	3300	3339	3447						
MMUERR	001213	6630	745	851	899	905	915	928	944	959	972	985	998	1011
		1023	1034	1046	1060	1067	1078	1085	1093	1100	1110	1117	1127	1134
		1144	1151	1159	1186	1194	1202	1210	1219	1227	1244	1253	1298	1304
		1312	1318	1326	1332	1340	1346	1355	1361	1369	1375	1414	1420	1428
		1434	1442	1448	1456	1462	1471	1477	1485	1491	1510	1519	1528	1537
		1553	1559	1565	1571	1602	1610	1617	1623	1629	1636	1642	1653	1660
		1666	1673	1679	1688	1695	1701	1707	1738	1746	1753	1759	1765	1772
		1778	1789	1796	1802	1809	1815	1826	1833	1839	1846	1852	1861	1868
		1874	1880	1912	1920	1927	1933	1939	1946	1957	1964	1970	1977	1988
		1995	2001	2008	2017	2024	2030	2062	2070	2077	2083	2089	2096	2107
		2114	2120	2127	2138	2145	2151	2158	2167	2174	2180	2258	2265	2271
		2277	2290	2297	2303	2335	2342	2348	2354	2361	2426	2433	2440	2446
		2452	2662	2668	2674	2680	2727	2739	2813	2819	2825	2863	2885	3004
		3020	3035	3046	3057	3068	3120	3183	3189	3315	3320	3325	3393	3414
		3430	3459	3467	3475	3488	3498	3508	3518	3527	3534	3540	3546	3552
		3558	3564	3570	3578	3590	3596	3602	3617	3624	3630	3636	3642	3648
		3656												
MMUTRP	001460	7410	808											
MMUTST=	***** U	1	195	538	624	653	663	668	689	808	809	810	824	8700

		3970							
MPUTS1	=	***** U	830						
MPUTS2	=	***** U	855						
MPUTS3	=	***** U	1165						
MPUTS4	=	***** U	1258						
MPUTS5	=	***** U	1496						
MPUTS6	=	***** U	1540						
MPUTS7	=	***** U	2185						
MPUTS8	=	***** U	2308						
MPUTS9	=	***** U	2368						
MPVEC	=	000250	327#	808#					
MODE1		014334	2852	2945#					
MODE2		015770	3130	3247#					
MSER	=	177744	482#						
MSG1		020046	3680	3706#					
MSG2		020125	3690	3714#					
MXVDEL	=	000001	1#						
NOTOK		001542	751	757#					
NXMF IN		016232	3308	3322	3326#				
NXMTRP		015620	3088	3198#					
NXMTST	=	***** U	3290						
OK		001520	750	752#					
OKAY7		011144	2268	2273#					
OKAY7A		011160	2274	2279#					
OKA7		011126	2262	2267#					
OK1		001546	756	758#					
OK7		011104	2255	2260#					
OPMSG2		001124	653#	809					
PAR		001430	700	701	704	705	707	708	726#
PARAD1		014164	2845	2893#					
PARAD2		015652	3126	3208#					
PARRAM	=	000001	1#						
PARVA1		014216	2846	2906#					
PARVA2		015704	3125	3221#					
PARVA3		016022	3108	3132	3260#				
PAR1		001432	727#	730					
PDR		001406	699	703	706	717#			
PDR1		001410	718#	721					
PHY1		014302	2850	2932#					
PIRQ	=	177772	228#						
PIRQVE	=	000240	322#						
PLFO		012072	2381	2468#					
PLF1		012264	2392	2403	2532#				
PRO	=	000000	245#						
PR1	=	000040	246#						
PR2	=	000100	247#						
PR3	=	000140	248#						
PR4	=	000200	249#						
PR5	=	000240	250#						
PR6	=	000300	251#						
PR7	=	000340	252#						
PS	=	177776	225#	226	3306#				
PSW	=	177776	226#						
PWRVEC	=	000024	317#						
QBUSEX	=	000001	1#	633	3667				
RBUF	=	177562	489#						

TSMU7	010572	2185#																			
TSMU8	011256	2308#																			
TSMU9	011522	2368#																			
TSM10	012450	2592#																			
TSM11	013064	2688#																			
TSM12	013336	2745#																			
TSM13	013742	2832#																			
TSM14	015064	3076#																			
TSM15	016250	3331#																			
TSM16	016610	3438#																			
TSM16A	005520	1574#																			
TSM16B	006262	1712#																			
TSM16C	007152	1885#																			
TSM16D	007762	2035#																			
TSM16A	016714	3461#	3502																		
TSM16B	016746	3469#	3512																		
TSM16C	016776	3477#	3522																		
TSM16D	017042	3485#	3560																		
TSM7	011176	2222	2234	2286#																	
TSM9	011662	2385	2395	2413#	2463																
TSTLOC	001120	639#																			
TST1	002100	834#																			
TST10	006262	1716#																			
TST11	007152	1889#																			
TST12	007762	2039#																			
TST13	010572	2189#																			
TST14	011256	2312#																			
TST15	011522	2372#																			
TST16	012450	2596#																			
TST17	013064	2692#																			
TST2	002174	859#																			
TST20	013336	2749#																			
TST21	013742	2838#																			
TST22	014366	2968#																			
TST23	015064	3082#																			
TST24	016106	3298#																			
TST25	016250	3335#																			
TST26	016610	3442#																			
TST3	003550	1169#																			
TST4	004114	1262#																			
TST5	005210	1500#																			
TST6	005366	1544#																			
TST7	005520	1578#																			
TS10	012762	2612	2625	2636	2650	2658#															
TS11	013206	2700	2705	2710	2716#																
TS12	013660	2767	2774	2781	2788	2795	2802	2809#													
TS14	015500	3134	3156	3167#																	
TS15	016420	3342	3350	3359	3384#																
TS16	017564	3610	3620#																		
TS16A	017552	3614#	3638																		
TS1822	014366	2960#																			
TS7	011046	2202	2209	2250#																	
TS7FIN	011256	2246	2307#																		
TS9FIN	012450	2409	2591#																		
TYPDS =	104405	3692	4171#																		
TYPE =	104401	809	3680	3690	3693	3762	3884	3953	3991	3992	3995	4008	4019	4038							

	4087	4090	4094	4167#	4252	4255	4258
TYPOC = 104402	3994	4168#	4257	4260			
TYPON = 104404	4170#						
TYPOS = 104403	4169#						
T10FIN 013064	2653	2687#					
T11FIN 013336	2712	2744#					
T12FIN 013742	2805	2831#					
T13FIN 014366	2889	2959#					
T14 015524	3152	3172#					
T14FIN 016106	2974	3161	3199	3289#			
T15 016474	3345	3353	3362	3403#			
T15A 016556	3367	3371	3375	3424#			
T15FIN 016610	3379	3436#					
UDPAR0= 177660	371#						
UDPAR1= 177662	372#						
UDPAR2= 177664	373#						
UDPAR3= 177666	374#						
UDPAR4= 177670	375#						
UDPAR5= 177672	376#						
UDPAR6= 177674	377#						
UDPAR7= 177676	378#						
UDPDR0= 177620	349#	1594*	1904*				
UDPDR1= 177622	350#						
UDPDR2= 177624	351#						
UDPDR3= 177626	352#						
UDPDR4= 177630	353#						
UDPDR5= 177632	354#						
UDPDR6= 177634	355#						
UDPDR7= 177636	356#						
UIPAR0= 177640	360#						
UIPAR1= 177642	361#						
UIPAR2= 177644	362#						
UIPAR3= 177646	363#						
UIPAR4= 177650	364#						
UIPAR5= 177652	365#						
UIPAR6= 177654	366#						
UIPAR7= 177656	367#						
UIPDR0= 177600	338#	1730*	2054*				
UIPDR1= 177602	339#						
UIPDR2= 177604	340#						
UIPDR3= 177606	341#						
UIPDR4= 177610	342#						
UIPDR5= 177612	343#						
UIPDR6= 177614	344#						
UIPDR7= 177616	345#						
VIR1 014250	2851	2919#					
VIR2 015736	3131	3234#					
VIR3 016054	3109	3133	3273#				
XBUF = 177566	491#						
XCSR = 177564	490#						
\$APTHD 000204	547	553#					
\$ASTAT= ***** U	4212	4227					
\$ATYC 022062	4183	4185#					
\$ATY1 022036	4181#						
\$ATY3 022044	3747	4182#					
\$ATY4 022054	4184#	4263					

GLOBAL AREAS MAC111 30A(1052) 20 MAR 84 11:31 PAGE 98
KDJ11A.MAC 20-MAR 84 11:19 CROSS REFERENCE TABLE - MACRO NAMES

CORE USED: 52K (103 PAGES)

DOCUMENT PAGES: 96