

HP-UX System Administrator Manual

HP 9000 Series 500 Computers

HP Part Number 97089-90059



**HEWLETT
PACKARD**

Hewlett-Packard Company

3404 East Harmony Road, Fort Collins, Colorado 80525

NOTICE

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MANUAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or direct, indirect, special, incidental or consequential damages in connection with the furnishing, performance, or use of this material.

WARRANTY

A copy of the specific warranty terms applicable to your Hewlett-Packard product and replacement parts can be obtained from your local Sales and Service Office.

Copyright 1986, 1987 Hewlett-Packard Company

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Hewlett-Packard Company. The information contained in this document is subject to change without notice.

Restricted Rights Legend

Use, duplication or disclosure by the Government is subject to restrictions as set forth in paragraph (b)(3)(B) of the Rights in Technical Data and Software clause in DAR 7-104.9(a).

Use of this manual and flexible disc(s) or tape cartridge(s) supplied for this pack is restricted to this product only. Additional copies of the programs can be made for security and back-up purposes only. Resale of the programs in their present form or with alterations, is expressly prohibited.

Copyright 1980, 1984, AT&T, Inc.

Copyright 1979, 1980, 1983, The Regents of the University of California

This software and documentation is based in part on the Fourth Berkeley Software Distribution under license from the Regents of the University of California.



Customer Note

Hewlett-Packard is in the process of changing the color of our documentation binders. In order to accomplish this changeover we are placing two spine inserts with this manual. Please use the insert that matches the binders you receive.

Printing History

New editions of this manual will incorporate all material updated since the previous edition. Update packages may be issued between editions and contain replacement and additional pages to be merged into the manual by the user. Each updated page will be indicated by a revision date at the bottom of the page. A vertical bar in the margin indicates the changes on each page. Note that pages which are rearranged due to changes on a previous page are not considered revised.

The manual printing date and part number indicate its current edition. The printing date changes when a new edition is printed. (Minor corrections and updates which are incorporated at reprint do not cause the date to change.) The manual part number changes when extensive technical changes are incorporated.

July 1986...Edition 1

April 1987...Edition 2

Updated to reflect HP-UX 5.2 software changes.

Table of Contents

Chapter 1: Getting Started

Welcome	1
What's In This Manual?	1
Conventions Used in this Manual	3
Naming Conventions	3
Keyboard Conventions	4
Using Other HP-UX Manuals	4
Single-user vs. Multi-user Systems	4
The Administrator's Responsibilities	5
Installing and Testing the Hardware	5
Installing the HP-UX Operating System	5
Evaluating Users' Needs	5
Configuring HP-UX	6
Allowing Users Access to the System	6
Adding and Moving Peripheral Devices	6
Monitoring File System Use and Growth	6
Updating the HP-UX System	7
Backing Up and Restoring the System	7
Detecting/Correcting File System Errors	8
Assisting Other Users	8
Providing a "Back-up" Administrator	8
User Survey	9

Chapter 2: Installing HP-UX

Installation Overview/Checklist	11
Before Installing HP-UX	12
System Distribution Media	12
Check the Read Me First Document	12
System Console	13
Verify the Hardware	14
Installation	17
Load the First "Installation" Tape	17
Begin the Installation	18

Using Your System	30
Setting Minimum Protections	30
Setting the System Clock	31
System Administrator Tasks	33
Moving On	35
Installation Troubleshooting Hints	36
Problems Initializing the Destination Device	36
Problems While Loading From the Installation Tapes	37

Chapter 3: Concepts

Processes	41
Process Creation	41
(Parent and Child Processes)	41
Process Termination	43
Process Groups	43
Terminal Affiliation	44
Open Files in a Process	44
IDs	45
The Super-User	46
File System Implementation	47
The Volume Header	53
File Format and Compatibility	53
File Protection	54
File Sharing and Locking	58
Magnetic Tape	61
Magtape Definitions	61
Preventive Maintenance	65
Tape Streaming	65
Memory Management	69
Memory Allocation	69
Virtual Memory	73
Shared Code	76
Demand Load	78
Paged External Data Segments	79
Combining Memory Management Tools	82
The Buffer Cache	83
Peripheral Device I/O	85
Device Classes	85
Drivers	86
The HP-UX Hierarchy	87

Chapter 4: System Startup and Shutdown

System Startup Functions	92
Booting the System	92
Overview of Internal Functions of System Startup	94
The Boot ROM	95
HP-UX Takes Control	96
HP-UX Starts the Init Process	97
Init Brings the System to Run-Level 2	98
Init Spawns gettys to Cause a Login Prompt	99
A User Logs In	101
System Administration Mode	105
Booting Problems	105
Shutting Down the System	106
Power Fail or Disk Crash Recovery	109

Chapter 5: The System Administrator's Toolbox

Adding/Moving Peripheral Devices	113
Overview of the Task	114
Determining the Peripheral's Location	115
Connecting the Peripheral	116
Block versus Character Device Files	116
Creating Device Files	117
Using the mkdev Script	118
Using mknod with the Supplied Tables	120
Miscellaneous Devices	124
Memory Volumes	125
Terminals and Modems	126
Consoles	132
Pseudo Terminals	133
Hard Disks, Flexible Disks, and Cartridge Tapes	134
Nine-Track Magnetic Tape	138
Printers	141
Plotters and Digitizers	145
Adding/Removing Users	147
Creating the /etc/passwd Entry	147
The "Makeuser" Script	149
The Step-by-Step Method	150
Setting the New User's Password	152
Removing a User from the System	153
Suspending a User from the System	153
Adding to /etc/checklist	154

Backing up and Restoring the File System	156
Backup Strategies and Trade-offs	156
Things to Consider about File System Backups	158
Performing a System Backup	160
Backing Up Selected Files onto Flexible Disk or Magnetic Tape	163
Backing up Selected Files onto Cartridge Tape	164
Restoring the System	164
Diagnostics	168
Performing Backups Automatically	168
Changing a Password	170
Changing and Creating System Run-Levels	171
Changing the System's Run-Level	172
Re-reading /etc/inittab	173
Creating New System Run-Levels	173
Example /etc/inittab	175
Changing the HP-UX Environment Files	176
/etc/inittab	176
/etc/rc	176
/etc/passwd	177
/etc/group	177
/etc/motd	177
/usr/news	177
/etc/profile or /etc/csh.login	178
/etc/utmp	178
/etc/wtmp	178
/etc/btmp	178
/etc/securetty	179
\$HOME/.profile, \$HOME/.cshrc, \$HOME/.login	179
\$HOME/.exrc	180
/usr/lib/terminfo	180
/etc/checklist	180
/etc/catman	181
/etc/issue	182
/etc/csh.login, /etc/rc, and /etc/profile	182
/usr/lib/tztab	183
/etc/ttytype	183
/usr/adm/errfile	183
Communicating with System Users	184

Configuring the HP-UX Operating System	185
Configurable Attributes	185
How to Configure Your Operating System	188
Setting the Default Configuration Parameters	189
Controlling Disk Use	190
Creating File Systems	191
Creating Groups/Changing Group Membership	193
Creating and Using a Recovery System	194
When to Create/Recreate the Recovery System	194
Creating a Recovery System	195
Using the mkrs Script	197
Booting the Recovery System	198
Shutting Down the Recovery System	199
Using the Recovery System	199
Notes on the System Console Device	203
Media Utilities	205
Initializing Media	205
Initializing Disks to SDF Format	206
Initializing Media to LIF Format	209
Commands and Utilities to Transfer Files	211
Commands to Monitor Your File System	216
Commands to Verify the Integrity of your Media	216
Modifying the Boot Area	217
How to Add Segments	217
Removing Segments	218
Replacing Segments	219
Checking the Boot Area	219
Optional System Segments	219
Mounting and Unmounting File Systems	221
To Mount a File System	222
To Unmount a File System	225
Errors	226
Mounting/Unmounting File Systems Using /etc/checklist	227
New Naming Conventions for Device Files	228
Removing Optional Products and File sets	231
Setting the System Clock	232

Setting Up the LP Spooler	235
What is in this Section	235
LP Spooler Terminology and Overview	236
Installing the LP Spooler	237
Example	240
General-Purpose LP Spooler Commands	241
System Administrator LP Spooler Commands	241
Other LP Spooler Administrator Duties	242
How Models Work	246
Updating HP-UX and Installing Optional Products	247
Preparing to Update	247
Locate and Write-protect the Product	249
Load the Update Tools	249
Perform the Update	250
Using Optinstall to Install Optional Products.....	258

Chapter 6: System Accounting

What Is in This Chapter?.....	264
Installation and Daily Usage	265
How to Install System Accounting	265
Summary of Daily Operation	268
Overview of System Accounting.....	269
Definitions	270
Introduction to Commands.....	272
System Data Flow	276
Login and Directory Structure	278
Disk Space Usage Accounting.....	281
Reporting Disk Space Usage.....	281
Creating Total Accounting Records	284
Connect Session Accounting	286
Writing Records to wttmp — acctwttmp.....	286
Displaying Connect Session Records — fwttmp	287
Fixing wttmp Errors wttmpfix	289
Creating Total Accounting Records	289

Process Accounting	293
Turning Process Accounting On	293
Turning Process Accounting Off	295
Checking the Size of pacct	296
Displaying Process Accounting Records acctcom	298
Command Summary Report — acctcms	307
Creating Total Accounting Records	311
Charging Fees to Users — chargefee	313
Summarizing and Reporting Accounting Information	314
Displaying Total Accounting Records prtacct	314
Merging Total Accounting Files — acctmerg	317
Creating Daily Accounting Information — runacct	319
Displaying runacct Reports — prdaily	325
Creating Monthly Accounting Reports — monacct	327
Updating the Holidays File	329
Fixing Corrupted Files	330
Fixing wtmp Errors	330
Fixing tacct Errors	331
Sample Accounting Shell Scripts	332
grpdusg	332
acct_bill	334
System Accounting Files	337
Files in the /usr/adm directory	337
Files in the /usr/adm/acct/nite directory	337
Files in the /usr/adm/acct/sum directory	338
Files in the /usr/adm/acct/fiscal directory	339

Appendix A: Using the FSCK Command

Introduction	341
Updating the HP-UX File System	342
Super-Block	342
I-nodes	343
File Attributes File	343
Data Blocks	344
Free Map Blocks	344
Corruption of the File System	345
Improper System Shutdown and Startup	345
Hardware Failure	345

Detection and Correction of Corruption	346
File-System Size and I-node-List Size	346
Free Map	347
Executing the FSCK Command	348
A Walk Through	351
FSCK and Virtual Memory	358
Appendix B: System Loader Messages	
Introduction	359
Messages	360
Glossary	363
Subject Index	371

Getting Started

Welcome

This manual is written for you, the Series 500 HP-UX system administrator. Although some familiarity with computers is assumed, this manual will serve people with varying levels of expertise. If you are already a UNIX¹ expert, you will find much here that is familiar but may well encounter something new. The HP-UX Operating System is composed primarily of Bell Laboratories' System V.2 UNIX. However, Hewlett-Packard has incorporated its own extensions as well as features from the University of California at Berkeley Unix 4.1 and 4.2 BSD (Berkeley Systems Distribution) systems and from Bell's System V UNIX.

Who is the system administrator? The system administrator is the person responsible for installing the HP-UX Operating System software, updating the software, tuning the system for optimum performance, maintaining the system, and repairing the system when something goes wrong. Additionally, the system administrator should become an HP-UX "guru", the local expert to whom other HP-UX users go for help.

What's In This Manual?

This manual is a guide designed to help you fulfill your duties as system administrator. The following is an overview of the chapters in this manual.

Chapter 1: Getting Started

This chapter provides an overview of the *System Administrator Manual*, explains the conventions the manual uses, mentions other manuals which will aid you in administrative tasks, points out differences between single-user and multi-user systems, and discusses the system administrator's responsibilities.

¹ UNIX is a trademark of AT&T Bell Laboratories.

Chapter 2: Installing HP-UX

This chapter defines terminology used throughout the manual, provides step-by-step instructions for installing the HP-UX Operating System software and explains what to do after the system has been successfully installed.

Chapter 3: Concepts

Certain concepts used and implemented in HP-UX must be understood by the system administrator. This chapter discusses such concepts as processes, IDs, the super-user, block and character input/output, the file system and its use of mass storage devices, compatibility issues, file protection, and memory management.

Chapter 4: System Startup and Shutdown

Many things happen between the time you power up the computer running HP-UX and the time a user has logged in (gained access) to the system. This chapter examines what happens in the HP-UX system. It also describes the proper method of shutting down the system.

Chapter 5: The System Administrator's Toolbox

Arranged alphabetically by task, this chapter contains instructions for accomplishing tasks the system administrator generally performs. It also includes a list of environment files you may wish to customize.

Chapter 6: System Accounting

As system administrator you may want to periodically evaluate how well your Series 500 HP-UX system is operating, as well as how many resources those logging onto your system are using. This chapter discusses the various accounting features available on HP-UX, how to install them and how to produce various useful reports.

Conventions Used in this Manual

Naming Conventions

The following naming conventions are used throughout this manual.

- Italics indicate titles of manuals. The parenthetical number shown for commands, system calls and other items found in the *HP-UX Reference* is a convention used in that manual.
- The first time a file is mentioned, the complete pathname is given; subsequent references to that file contain only the final file name unless there is some chance of ambiguity. For example, `/etc/profile` is used instead of `profile` to avoid possible confusion with a user's personal `.profile` file.
- Boldface is used when a word is first defined (as **filebnee**) and for general emphasis (**do not touch**).
- Computer font indicates a literal either typed by the user or displayed by the system. This includes all command names, system calls, and path names. Keys are shown capitalized and enclosed in an oval. A typical example is:

```
fck /dev/7912 Return
```

Note that when a file name is part of a literal, it is shown in computer font and not italics. However, if the file name is symbolic (but not literal), it is shown in italics as the following example illustrates.

```
fck device_file_name Return
```

In this case you would type in your own *device_file_name*.

- Environment variables such as `PATH` or `MAIL` are represented in uppercase characters.
- Unless otherwise stated, all references such as “see the *login(1)* entry for more details” refer to entries in the *HP-UX Reference* manual. Some of these entries will be under an associated heading. For example, the *chgrp(1)* entry is under the *chown(1)* heading. If you cannot find an entry where you expect it to be, use the *HP-UX Reference* manual's permuted index.

Keyboard Conventions

While installing the HP-UX system, you need to know about two keys: `Back space` and `Return`. The `Back space` key will let you fix typing mistakes made when entering information. Press `Back space` to “back up” over a mistyped letter.

Most information typed at the system console must be followed by the `Return` key. All Hewlett-Packard terminals supported by HP-UX have a `Return` key.

Using Other HP-UX Manuals

Besides this manual, three other manuals will aid you in your system administrator tasks:

- The *Installation Guide* for your specific Series 500 computer contains instructions for installing the computer hardware, interface cards, and peripherals. The guide supplies all the hardware-specific information needed to set up the HP-UX system.
- The *HP-UX Reference* contains the syntactic and semantic details of all commands and application programs, system calls, subroutines, special files, file formats, miscellaneous facilities, and system maintenance procedures available on the Series 500 HP-UX Operating System. Use this manual when looking for complete specifications of a given command, special file, etc.
- The set of *HP-UX Concepts and Tutorials* contains information on a broad range of HP-UX topics and tools. Several sections may be of particular interest to you: *Serial Network Communications*, *The Bourne Shell*, *The Model 520 Console*, and *vi*.

Single-user vs. Multi-user Systems

The Series 500 HP-UX Operating System is supplied as either a single-user or multi-user system (with a 16, 32 or 64 user license). The difference between the two types of systems is implied by their names — a single-user system can only be used by one person at a time; a multi-user system, by many at a time.

If you have a single-user system, many of the multi-user topics covered in this manual will still benefit you. Consider a discussion on how to set up and configure the LP Spooler (used to control line printer spooling). While this topic may be more critical in multi-user systems (where the demand on system resources is generally higher), using the LP Spooler on a single-user system can increase the performance and flexibility of that system.

If you have a single-user system and a procedure or task seems irrelevant, you probably can ignore it. Don't reject multi-user topics too quickly though — they often contain information useful for single-user systems.

The Administrator's Responsibilities

This section contains a brief discussion of the system administrator's responsibilities and tells you where to find related information.

Installing and Testing the Hardware

As system administrator, you should make sure that your computer is installed and operating properly by using the instructions and tests in the installation guide supplied with your computer. The computer hardware must function properly before HP-UX is installed.

Installing the HP-UX Operating System

The HP-UX Operating System is supplied on a 1/4-inch cartridge tape and installed using a Command Set '80 (CS/80) hard disk drive. As system administrator, you are responsible for installing HP-UX. Instructions for accomplishing this task are provided in chapter 2, "Installing HP-UX".

Evaluating Users' Needs

Once HP-UX is installed, you should analyze the intended uses of the system. Knowledge of the number of users, the characteristics of each user, the system resources and peripherals required by each user, and the data/programs that must be shared by various user groups, will help you set up HP-UX for optimum performance. This also applies to single-user systems.

To aid you in this analysis, a sample user-survey form is provided at the end of this chapter. You may want to modify this survey to fit your particular needs. Most users think in terms of "I need to do this job" not "I need FORTRAN, Graphics, a plotter, and 500 000 bytes of data storage." The survey should help you identify the needs of the system users and translate those needs into data relevant to system configuration.

Configuring HP-UX

How the operating system uses computer resources depends on certain values and configurations that you control. Configuring the system influences its efficiency and response time. Once familiar with the system, you can use the instructions in chapter 5, “The System Administrator’s Toolbox”, to alter the system configuration.

Allowing Users Access to the System

Once HP-UX is installed, you are responsible for modifying the operating system to allow access by other users. This involves providing each user a user name, a password, and a portion of the file system for his use. Instructions for adding users and assigning passwords are contained in chapter 5, “The System Administrator’s Toolbox”.

Adding and Moving Peripheral Devices

Another of your responsibilities is to add/move peripherals (printers, terminals, mass storage devices, etc.) to the HP-UX system as they are required. A list of peripherals supported by the Series 500 HP-UX system can be found in the *HP 9000 Series 500 Configuration Information and Order Guide* supplied with your system. Directions for installing the peripherals can be found in chapter 5, “The System Administrator’s Toolbox”.

Monitoring File System Use and Growth

As HP-UX is used, more and more files are added to the file system. If unused files are not removed, the amount of space required to store the files eventually exceeds available space. One of your responsibilities is to monitor the size of the file system and identify unused files. Unused files should be archived (if needed in the future) and then removed from the file system. Also, you should watch for files that continually increase in size. Consult the file’s owner to ensure that the file is needed and to see if its size can be reduced. Instructions for monitoring the use and growth of the file system are supplied in chapter 5, “The System Administrator’s Toolbox”.

Updating the HP-UX System

You will receive software updates by purchasing HP support services that provide periodic updates. These updates modify existing capabilities and add new capabilities, ensuring that your system contains the latest version of the software.

As system administrator, you are responsible for installing each software update. You should update the manuals to include the documentation changes provided with each update and keep a log showing when the update was installed. Notify all system users of the changes caused by the update. Because each update depends on changes made by the previous update, it is imperative that each update be installed when it arrives. Instructions for installing updates are in chapter 5, “The System Administrator’s Toolbox”.

Backing Up and Restoring the System

The HP-UX Operating System, programming languages and applications software represent a large investment of time and money. Files can be unintentionally removed and each access to the system provides an opportunity for error. A critical error can cause additional errors in the file system and, when the system becomes sufficiently corrupt, file system errors increase rapidly.

Loss of the system can also occur through unwelcome circumstances (such as spilled coffee, smoke contamination, dust or fire) by damaging a mass storage device, its media, and/or the data it contains.

As system administrator, you should make a **backup** - a copy of the HP-UX Operating System, file system and programming languages. Depending on your system usage, consider backing up the system on a daily basis. Generally, base the frequency of your system backups on the answer to the question “How much data can I afford to lose?”.

If your system is destroyed, you can recover by restoring the latest version of your system backup. If a user accidentally removes a needed file, the file (or a previous version of it) can be recovered by copying it back into the file system from the backup. Note that a system backup is the **only** way to recover a deleted or destroyed file. Instructions for using the supplied **backup** command and the CS/80 Tape Backup utility are given in chapter 5, “The System Administrator’s Toolbox”.

Detecting/Correcting File System Errors

Every day the system is used, numerous files are created, modified, and removed; each action requires an update to the file system. With each update to the file system, it is possible that one or more of the updates could fail (for example, because of abnormal system shutdown or abnormal program termination). When an update fails, the file system can become corrupt.

HP-UX provides the `fsck` command — a program that checks the integrity of a file system and (optionally) repairs that system. You should check the file system's integrity on a daily basis as well as each time HP-UX is booted. Continuing to use a corrupt file system only further corrupts the system. Instructions for verifying and repairing the file system are located in the “Using the FSCK Command” appendix. Also, see the *fsck(1M)* entry in the *HP-UX Reference* manual.

Assisting Other Users

Since you carry the title “System Administrator”, users may come to you for help with the system. You should plan on allocating a portion of your time for consulting and problem solving.

If you have purchased certain support services, you have access to direct technical support from Hewlett-Packard. As the system administrator, you are the only person authorized to use this service. If other system users have difficulty with the system, they should direct their questions to you. If you cannot solve the problem, then call your support person at HP.

Providing a “Back-up” Administrator

At least one other person should be trained as the system administrator to handle your responsibilities in the event of your absence.

To ease your job as system administrator and the job of the “back-up” system administrator, you should automate as many of your tasks as possible. Chapter 4 (“System Startup and Shutdown”) and chapter 5 (“The System Administrator’s Toolbox”) show you how to create programs that automatically perform tasks at specific times. By scheduling programs using system routines, you can automatically back up the system or initiate communications between your system and another HP-UX system (using the *uucp* utilities).

User Survey

Name ----- Location-----

Phone -----

Location where you will be using the system. -----

User Category

- Technical Data Entry Operator (run existing application programs; enter data or automatically read data from instrumentation)
- Secretary - Word Processing Operator (run existing application programs; enter data/text)
- General Programmer (develop application programs)
- System Programmer Support Personnel (develop programs for improving computer system performance or for use by other programmers)

Describe your application -----

What programming language(s) will you use? -----

What applications software (such as graphics) will you use ? -----

What computer hardware or peripherals will you need to access?

- Thermal printer -- Plotter
- Impact printer -- Removable mass storage device
- Graphics terminal -- Other -----
- Laser printer -----

Are there other users with whom you want to share programs or data? ---

If so, list them. -----

Will you be generating or using large amounts of data? -----

If so, how much must be "on-line" (accessible at all times)?

What long term data storage does your application require? -----

How many programs/processes will you be running at one time? -----

Installing HP-UX

This chapter provides a step-by-step procedure for installing the HP-UX Operating System on HP 9000 Series 500 computers, Models 520, 530, 540, 550, and 560. All references to HP-UX in this manual apply equally to the Series 500 HP-UX Operating System on all the products listed above unless specific variations are noted.

Installation Overview/Checklist

For your convenience, here is a checklist of the major steps involved in the installation of the HP-UX Operating System. Use this list (or a copy of it) as you follow the instructions in this chapter and check off each item as you complete it.

- Install and test the hardware
- Confirm the part numbers on the HP-UX distribution media
- Check the CS/80 switch settings
- Confirm proper operation of the computer's boot ROM
- Verify the installation tape is not write-protected
- Load the first of the "Series 500 HP-UX Installation" tapes
- Follow and respond to the installation utility menus
- Remove the second installation tape, storing both tapes in a safe place
- Follow the guidelines in the "Using Your System" section

Before Installing HP-UX

Before installing the HP-UX software, the hardware must be installed and tested. This includes the computer, the CS/80 disk drive (and its switch settings), and all interface and memory cards. The installation manuals that come with each system component explain how to install that component; a few critical items are reviewed here.

This section also contains information about the installation tapes.

System Distribution Media

The system is supplied on two HP 88140SC (DC-150) 1/4-inch cartridge tapes for installation from the cartridge tape drive. Check the product numbers on the cartridge tape labels. One **must** be labeled “Series 500 HP-UX Installation, Tape 1” (contains the HP-UX Operating System). The other tape **must** be labeled “Series 500 HP-UX Installation, Tape 2”. No other versions of HP-UX are available at this time for the Series 500 computers listed at the beginning of this chapter.

Note

Opening the media envelope indicates your acceptance of the product (see the “Limited Warranty” section of the License Agreement pamphlet) and your acceptance of the terms of the license agreement. Check the product number BEFORE you open the package.

Check the Read Me First Document

If there are known bugs when your system was shipped, they will be described in an attachment to the *Read Me First* document. Follow the instructions in the “Bugs” section of the document. The “Bugs” section is provided to give you information on problems you may encounter during installation or potentially serious bugs encountered after installation. It will also give you a workaround.

System Console

The system console consists of a keyboard and display (or terminal) given a unique status by HP-UX. It is associated with the special device file `/dev/console`. All boot ROM error messages (messages sent prior to loading HP-UX), HP-UX system error messages, and certain system status messages are sent to the system console. Under certain conditions (for example, the system administration mode), the system console provides the only mechanism for communicating with HP-UX.

Note

The conventions for the system console as described here are **significantly different** than in versions earlier than 5.0.

HP-UX assigns the system console function according to a prioritized search sequence when the HP-UX kernel gains control during the boot-up process. On the Series 500, the search priority is:

1. On the Model 520, the keyboard and display associated with the ITE.
2. The lowest numbered HP 98700 display device with a monitor and keyboard on a Model 550 that is currently powered up.
3. A keyboard and display (terminal) associated with an HP 27140A 6-channel modem MUX, HP 27130B 8-channel MUX card, or an HP 27128A ASI card at minor number `0x000000` (the first port on the first slot).

If none of the above conditions is met, no system console exists. HP-UX does not tolerate this, and you cannot use HP-UX without a system console.

Following the installation or update of your HP-UX system you will have a special device file called `/dev/systty`. This is the device which is usually used for booting HP-UX and will usually be linked to `/dev/console`.

Another special device file, `/dev/syscon`, is normally linked with `/dev/systty`. If the super-user issues the `init` command from a device other than `/dev/systty`, `init` will link `/dev/syscon` to the originating device. Whenever the system is rebooted, the original location of `/dev/syscon` will be restored.

Note

To install the HP-UX system it is necessary to communicate with the boot ROM and the Series 500 HP-UX Installation Utilities. Hence, you must have a **supported** console as described in order to install HP-UX on your Series 500 computer.

For further information on the system console, see the *HP-UX Concepts and Tutorials* document “HP-UX and the HP 9000 Model 520 As System Console”. For a complete list of Hewlett-Packard terminals supported by HP-UX, see the *HP 9000 Series 500 Configuration Information and Order Guide* supplied with your system.

Verify the Hardware

Note

If you already have the hardware unpacked and connected, you can skip this section. If you do not have the hardware connected, or if you wish to recheck your hardware setup, this section offers some guidelines.

With the computer, the CS/80 disk and any other devices attached to the system turned off, check the CS/80 switch settings and connections (a description and list of CS/80 devices follows this section). Switch settings are explained in the Installation guide supplied with your computer. Your CS/80 device must be connected via either a high speed HP-IB interface card (HP 27110A), or the internal medium speed HP-IB interface card of the Model 550. The CS/80 device should be connected to the HP-IB interface card with an HP-IB cable. The cable connects from the end of the HP-IB card on the rear of the Series 500 computer to the port on the rear of the CS/80 device. The HP 7908 has only a single HP-IB port; use the lower port on the HP 7911, HP 7912, and HP 7914.

If you are using an internal cartridge tape drive in your CS/80 disk, and you have purchased the dual controller option for that device (two HP-IB connections), the upper port connects to the tape drive. In this case you will either need a second HP-IB interface card to connect to the tape drive, or you will need a short HP-IB cable to connect the lower port to the upper port. If you connect the lower port to the upper port, the bus address switch settings for the two ports on the rear of the CS/80 device must be different. If the bus address switch settings are the same, your Series 500 computer will be unable to determine which device it is talking to, and you won't be able to continue installing HP-UX.

CAUTION

Do not attempt to unpack and connect a CS/80 disk drive (other than the HP 7908P) yourself. The CS/80 disk drives are packed to prevent damage during shipment. To prevent damage to the device, an HP Customer Engineer must unpack, install and test the device.

Next, confirm that the bus address switch(es) on the rear of the CS/80 root device (the device on which HP-UX is to be installed) is set to zero (0). Instructions for setting the switch(es) are in the CS/80 Installation Manual. (The CS/80 Installation Manual refers to the bus address as “HP-IB device address”.)

Note

Models 530, 540, 550, and 560 must have an HP **supported** terminal installed to function as a system console before continuing with the installation procedure.

The system console must also be connected. If you are connecting the system console via an HP 27128A ASI Card (Asynchronous Serial Interface Card), the card **must** be installed such that its select code is zero (0). Refer to the computer’s installation manual to learn how to install the interface card and determine its select code. Before installing the card, locate the set of eight switches on the ASI Card. **Set the eight switches on the ASI Card as shown in Table 2-1.**

Table 2-1. ASI Card Settings

Switch	Value	Meaning
1	open	Not used
2	open	Indicates a direct connection
3	closed	parity
4	closed	Character length is 7 bits
5	open	
6	open	Switches 5-8 set baud rate to 9600
7	open	
8	closed	

Alternately, an HP 27130A Asynchronous 8-channel MUX card or an HP 27140A 6-channel modem MUX card may be used when connecting to the system console. It must be installed such that its select code is zero (0). The terminal's interface cable must be connected to channel zero (0) of the Multiplex Interface.

Next the terminal must be configured so that it can "talk" to HP-UX. The manual supplied with the terminal describes how to use the function keys to configure the terminal. First, press the appropriate keys or switches for terminal configuration; select the hard-wired default values. If necessary, alter the appropriate fields such that the terminal's configuration parameters have the indicated values:

LocalEcho:	OFF	Bits/Character:	7
CapsLock:	OFF	Parity:	none
InhHndShk(G):	YES	RecvPace:	Xon/Xoff
Inh DC2(H):	YES	Full Duplex	
Baud:	9600	EnqAck:	YES

After the system is installed and running, you may change the configuration parameters to suit your own needs. Refer to Chapter 5, the section "Adding/Moving Peripheral Devices", the subsection "Terminals and Modems", for a discussion of terminal and datacomm parameters. The above shows what HP-UX expects while installing, but you may need different datacomm settings.

Now, verify that the computer, the CS/80 disk drive, the HP-IB interface card and console are installed and operating properly by following the instructions supplied in the computer's Installation Guide.

Installation

Load the First “Installation” Tape

Now power up the CS/80 disk drive and remove the tape labeled “Series 500 HP-UX Installation, Tape 1” from its case. Locate the write-protect mechanism (labeled “SAFE”) on the top, rear, left-hand corner of the cartridge tape as shown in Figure 2-1. **The arrow on the protect screw should point away from the word SAFE.** If it does not, use a coin or screwdriver to turn the protect screw such that the arrow points away from the word SAFE. Your system **must** be able to write to the tape during installation.

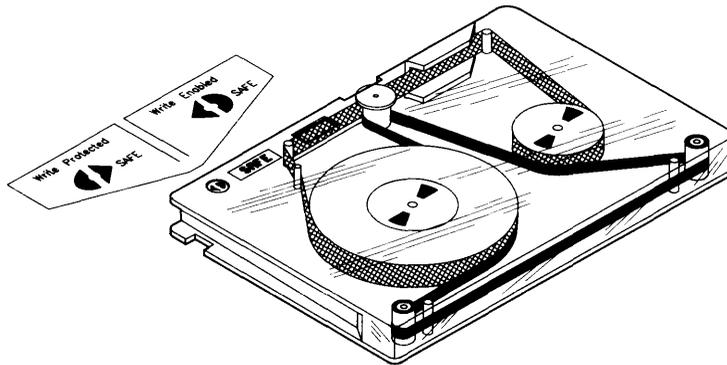


Figure 2-1. The CS/80 Cartridge Tape SAFE Mechanism

Holding the tape with the SAFE label in the rear left hand corner, insert the utilities tape into the tape drive door and push until it clicks into place. Only the BUSY indicator should now be lit. The tape drive will begin a cartridge tape conditioning sequence that takes approximately two minutes.

Begin the Installation

Turn the power to your Series 500 computer on. When the boot ROM assumes control of your system, it will attempt to boot an operating system. Since the loader finds removable media first, the installation program on the first installation tape will be loaded into memory if your machine is properly configured. You will see a series of messages **similar** to the following on your console:

```
Loader Rev B
Testing Memory...
Searching for System...
Series 500 HP-UX Installation Utility
```

```
Load done.
```

Note

If any other message is displayed, refer to the appendix entitled “System Loader Messages” in the computer’s installation manual. If no message is displayed, verify the operation of the computer and its peripherals by performing the tests described in the computer’s installation manual.

It will take a couple of minutes for the installation program to load. Note that the menus from other versions of the installation utility may be somewhat different from those shown in Figure 2-2. The procedure will be the same.

```

*****
                HP-UX INSTALLATION UTILITY -- DEVICE MENU
*****
Source Device                                Destination Device

Major Number          1          Major Number          1
Select Code           5          Select Code           5
Bus Address           0          Bus Address           0
Unit Number           1          Unit Number           0
Volume Number         0          Volume Number         0
Device File  /dev/update.src      Device File           /dev/hd

Choice          Description

[Return]:      CONTINUE Installation Process
"e":           EXIT Installation Process
"s":           Change the SOURCE Device
"d":           Change the DESTINATION Device

Please enter choice >>

```

Figure 2-2. Device Menu

Once you have begun the installation process, the above screen menu will appear, showing you the default source (tape drive) and destination (disk drive) addresses. You may do any one of four things at this point.

- You may decide to continue with the installation process, using the device parameters as shown. However it is possible that the parameters shown will not exactly match your current machine configuration, so double check once more. If you are sure, type `[Return]` to continue (be careful not to type in several returns).
- You may exit the installation process by typing `[e]` and hitting `[Return]`. This will end the program and rewind the first installation tape.

Installing Series 500 HP-UX will result in the complete initialization of the specified disk root volume. If you have anything you wish to keep stored on the destination CS/80 device, or if you wish to change your hardware configuration, type in `[e]` followed by a `[Return]`.

- You may change the address for the source device by typing `s` and hitting `Return`. If you wish to change a value, type in the new value followed by a `Return`; otherwise the old value will be retained. Once you decide to change the address for the source device, you will be prompted for each of the following values:
 - a. The source major number. This will usually be 1.
 - b. The source select code. The range for the select code is 0 through 23, inclusive. These are the address switches set on your interface card.
 - c. The source bus address. The range for the bus address is 0 through 7, inclusive. The switch settings on the device determine the bus address.
 - d. The source unit number. The range for the source unit number is 0 or 1.
 - e. The source volume number. This will always be 0 unless you have configured your disk to contain multi-volumes.
- You may change the address for the destination device by typing `d` and hitting `Return`. If you wish to change a value, type in the new value followed by a `Return`; otherwise the old value will be retained. Once you decide to change the address for the destination device, you will be prompted for each of the values discussed in the above option.

When the addresses for the source and destination devices are correct on the device menu, hit `Return` to continue installing HP-UX on your Series 500.

```
*****
HP-UX INSTALLATION UTILITY -- BOOT AREA MENU
*****
```

```
DISC INTERLEAVE FACTOR:      1
DISC BOOT AREA SIZE:        1100000
DISC BLOCK SIZE:            1024
```

Choice	Description
[Return]:	CONTINUE Installation Process
"e":	EXIT Installation Process
"i":	Change Disk INTERLEAVE Factor
"a":	Change Disk Boot AREA Size
"b":	Change Disk BLOCK Size

Please enter choice >>

Figure 2-3. Boot Area Menu

Now that you have determined the source and destination device addresses, you will see the boot area menu as shown in Figure 2-3. This menu displays the optimal interleaving factor, boot area size and optimal block factor for the root disk (destination device). At this point you have five options:

- You may decide that the values shown are correct, and continue the installation process by hitting `[Return]`.
- You may exit the installation process by typing `[e]` and hitting `[Return]`. This will end the program and rewind the first installation tape.
- You may want to use a different interleaving factor than the one shown — type `[i]` and hit `[Return]` to change the value. When prompted type in the new value followed by a `[Return]`; if you do not type in a value the default will remain unchanged.

- You may decide to use a different boot area size for your system. The boot area is that part of the disk which contains the kernel, device drivers and optional products such as LAN code. The kernel requires about about 600 Kbytes, with LAN requiring an additional 300 Kbytes. To install certain drivers, software updates and optional products you will want to leave additional space in your boot area. The only way to make your boot area larger is to re-initialize your disk and re-install HP-UX, so the recommended boot area size is 1 100 000 bytes (1.1 Mbytes).

To change the boot area size, type and hit . You will be prompted for a new value — if you wish to change the size, type in the new value followed by a . Otherwise just hit .

- You may want to change the block size for the destination from that shown. This is the smallest unit in bytes by which you can segment your disk. Type and hit to change the value shown. Enter the new value followed by a to enter the new value.

```
*****
HP-UX INSTALLATION UTILITY -- INSTALL MENU
*****
```

DESTINATION DEVICE

```
Major Number      1
Select Code       5
Bus Address       0
Unit Number       0
Volume Number     0
```

Choice	Description
"b":	BEGIN Initialization and Installation
"e":	EXIT Installation Process

Please enter choice >>

Figure 2-4. Installation Menu

By successfully completing all of the preceding steps, you should be at the menu shown in Figure 2-4. The destination device for the installation procedure should be shown along with the proper address. At this point you may decide to abort the installation process by typing **[e]** and hitting **[Return]**, or to begin the initialization of the root disk and the installation of HP-UX by typing **[b]** and hitting **[Return]**.

If you decided to begin the initialization/installation process, the following prompt will appear at the bottom of your screen:

```
WARNING !!!!! Completion of Install will RE-INITIALIZE Destination Device!
Do you want to proceed? >>
```

The **only** way to install HP-UX is to type and hit . Any other response will cause the installation process to go back to the above menu, where you may either begin or exit the installation. **Do not cycle power during initialization.** If you think that any of the parameters you entered on previous menus are wrong, or if you do not wish to erase any information on the destination disk, type and hit to get to the above menu, then type and hit to exit the installation process.

CAUTION

Do not switch off power to either the computer or CS/80 device during disk initialization. Terminating the initialization process by turning power off may seriously corrupt the disk medium.

Table 2-2 shows the typical initialization times (it varies with different interleave factors) for the CS/80 disks supported by Series 500 HP-UX:

Table 2-2. Initialization Time for CS/80 Disks

CS/80 Disk	Size	Initialization Time
HP 7908P	16.6 Mb	9 minutes
HP 7911P	28.1 Mb	4 minutes
HP 7912P	65.6 Mb	10 minutes
HP 7914P/TD	132.1 Mb	14 minutes
HP 7933/7935	404 Mb	49 minutes
HP 7945	55 Mb	20 minutes

Following disk initialization, the HP-UX installation process will install a full kernel without optional segments (e.g., unused device drivers will not be installed) and a subset of commands onto the destination disk. A sequence of screens **similar** to the following will be generated. It takes the installation process about 45 minutes to load the information onto the hard disk (in addition to the time it takes to initialize the disk):

```
*****
HP-UX INSTALLATION UTILITY (Rev x.x) -- EXECUTION TRACE
*****
Sdfiniting destination: OK.
Rootmarking destination: OK.
Mounting destination: OK.
Making directory: /bin
Making directory: /usr
Making directory: /usr/bin
Making directory: /etc
Making directory: /etc/ssllibs
Making directory: /dev
Making directory: /tmp
Making directory: /etc/file sets
Building boot area: OK.
Copying /bin/cpio: OK.
Copying /bin/mkdir: OK.
Copying /bin/sh: OK.
```

Figure 2-5. Execution Trace Screen

The screen now clears and a screen similar to Figure 2-6 appears:

```
*****
HP-UX INSTALLATION UTILITY (Rev x.x) -- EXECUTION TRACE
*****
Copying /bin/pwd: OK.
Copying /usr/bin/lifcp: OK.
Copying /usr/bin/tcio: OK.
Copying /etc/init2: OK.
Copying /etc/update: OK.
Copying /etc/sysrm: OK.
Copying /system.type: OK.
Copying /etc/sslib: OK.
Copying /etc/rootmark: OK.
Copying /etc/oscp: OK.
Copying device file: /dev/console.
Linking console to syscon and systty.
Copying device file: /dev/null.
Copying device file: /dev/tty.
Copying device file: /dev/xxx.
```

Figure 2-6. Execution Trace Screen

The screen now clears and the information in Figure 2-7 appears.

```
*****
HP-UX INSTALLATION UTILITY (Rev x.x) -- EXECUTION TRACE
*****
Marking tape as not loadable and not rootable
so that can reboot from destination.

Rebooting the system, the tape will be unloaded after the reboot.
```

Figure 2-7. Execution Trace Screen

Now the system reboots. **Do not try to unload the tape and do not turn off power to the cpu, tape drive, or destination disk drive!** Once the system has rebooted, you will get a screen similar to that shown in Figure 2-8.

```
*****
HP-UX INSTALLATION UTILITY (Rev x.x) -- EXECUTION TRACE
*****
Unloading tape #1, when busy light remains off remove the tape.
```

Figure 2-8. Unload Tape Screen

After an approximately two-minute pause, you will see the following:

```
Please insert tape #2 in source device.
When BUSY light remains off, press [Return].
```

When you see the message to insert tape #2, put the tape labelled “Series 500 HP-UX Installation Tape 2” in the tape drive. **Wait for the conditioning sequence to finish before continuing with the installation process.** On some cartridge tape drives, the busy light will go on when the tape is inserted, stay on for a minute or so, go OFF for several seconds, and then come on again while the conditioning sequence is completed. Wait for the busy light to remain off for 5 or 6 seconds before hitting `[Return]`.

When you hit `[Return]` the process takes about one minute to read information from the tape. It then displays a menu similar to that shown in Figure 2-9.

```
*****
HP-UX INSTALLATION UTILITY (Rev x.x) -- EXECUTION TRACE
*****
```

Choice	Description
"a":	Process ALL File Sets
"c":	Process CORE File Sets

Please enter choice >>

Figure 2-9. Process File Set Screen

HP-UX installation tapes come in two forms depending upon the product ordered.

- If the tapes contain only HP-U,X these two choices are equivalent; they both cause everything on the tape to be loaded onto the destination disk.
- If the tapes contain a bundled product (one that contains HP-UX and several optional products as shown on the tape label), choosing the “a” option loads everything, choosing the “c” option loads only HP-UX. If you choose the “c” option any of the other products can be loaded later using the update utility (see “Updating HP-UX and Installing Optional Products” in the “Toolbox” chapter of this manual).

Once you have chosen one of these options, the installation process will load the file sets (collections of related files) for the selected products. As each file set is loaded onto the root disk, messages of the form:

Loading files from "*fileset name*"

will be printed, followed by the name of each file in that file set. Bundled products may consist of more than two tapes. If your system has more than two tapes, the installation process will indicate when to insert the third tape. Once all file sets have been loaded the tape will unload and the system will reboot. (This will take approximately an hour for only HP-UX and about an hour and a half for bundled products.)

Remove the tape from the tape drive and save the installation tapes in a safe place away from harsh environments. By leaving a data cartridge near a large motor or other EMF emitting device, you will risk losing the integrity of your data.

The system now reboots and you will see a login prompt. There are several logins shipped with your system. You should login now as the root user, assign a password to root, and perform the system administrative tasks described on the following pages.

If you wish to shut down your system now (or any time), login as the root user and execute the **shutdown -h** command. When you see the "halted" message, you can turn your computer off. **Never simply turn your computer off without first executing the shutdown or reboot command.**

Note

Now that your system is installed, you have the ability to modify and customize the system. However, if you have purchased software support services from Hewlett-Packard, only limited changes can be made without voiding your agreement. Consult your support plan or an HP System Engineer regarding intended changes.

You may make certain modifications suggested in this manual without concern for voiding your agreement. Specifically, all the files listed in the "Changing the HP-UX Environment Files" and the "Controlling Disk Use" sections of Chapter 5 may be modified within reason.

Using Your System

HP-UX is now installed. You still have many tasks to complete before you can use the system (particularly a multi-user system). These tasks include protecting your system, setting the system clock, and many other system administration tasks.

Setting Minimum Protections

Some of the system's protections are not set up when you first install your HP-UX system. The most important of these is that the user `root` has no password. This means that anyone with access to a system terminal can login as `root` (also called the "super-user"). The super-user can execute critical system commands not accessible by regular users. By definition, the super-user is potentially dangerous to the system.

Note

Do not execute any commands — except those specified in this section — while logged in as the super-user (the user with the user name, `root`) until you are very familiar with the system. Otherwise, you may inadvertently damage the operating system. While getting familiar with the system, log in with some other user name you have created.

Setting the Password for Root

To protect your system, log in as the user `root` and assign a password to the root user by typing:

```
passwd
```

The system will prompt you for a password. Enter at least 7 characters and/or digits and hit `Return`. Note that control characters like those generated by the `Back space` key are accepted but sometimes difficult to remember. The password you enter is not displayed on the console. The system then prompts you to re-enter the password to confirm the password. Do so and, if the two entries match, the program accepts the new password. If the two entries do not match, you will be prompted to enter a password twice again. The user `root` will now have to enter that password to login to the system.

Write down the password you assigned (in a secure place); if it is lost or forgotten, no one can log in as the super-user. If the super-user password is lost, the system will have to be re-installed (which will destroy any existing files on the system). If this happens, call your local HP sales office or the Response Center for assistance.

An Unattended System Console

One other protection item deserves mention: depending on the perceived need for security at your installation, use discretion about leaving a system console unattended while logged in as the **root** user as this defeats the password protection. Remember, any user logged in with the name **root** can execute **any** HP-UX command — a situation possibly hazardous to the integrity of your system.

Setting the System Clock

Check to see if the system clock is set correctly. Enter:

```
date
```

The time displayed is in the format of a twenty-four hour clock (for example, 2:00 pm is 14:00). If the time displayed is not correct, you need to first set the correct time zone and then set the system clock.

As shipped to you, the system is set up to run in the Mountain Time Zone. To temporarily change the time zone to your time zone, type two entries of the following form:

```
TZ=XXXHYYY  
export TZ
```

where **XXX** and **YYY** are three letter representations of the standard and daylight time zones for your area and **H** represents the difference between current local time and Greenwich Mean Time, in hours. The **export TZ** line will remain the same regardless of the time zone. For example, in Denver, Colorado you would enter the following:

```
TZ=MST7MDT  
export TZ
```

where **MST** stands for Mountain Standard Time and **MDT** stands for Mountain Daylight Time. Here are some other examples:

- In the Eastern time zone, use: **TZ=EST5EDT**
- In the Central time zone, use: **TZ=CST6CDT**
- In the Pacific time zone, use: **TZ=PST8PDT**

Until you change the TZ variable in the file `/etc/profile` (described in the section “Setting the System Clock” in the “System Administrator’s Toolbox” chapter), you will need to set the time zone as described here each time the computer is powered up.

Now that the time zone is set, you can set the correct time and date (using the `date` command) by typing an entry of the form:

```
date MMddhhmm{yy}
```

- `MM` a two-digit integer representing the month. For example, 03 represents March.
- `dd` a two-digit integer representing the day of the month. For example, 02 represents the second day of the month.
- `hh` a two-digit integer specifying the current hour in terms of a twenty-four hour clock. For example, 03 specifies 3:00 am and 14 specifies 2:00 pm.
- `mm` a two-digit integer specifying the number of minutes past the stated hour. For example, 04 specifies four minutes past the hour.
- `{yy}` an optional two-digit integer specifying the last two digits of the current year. For example, 84 specifies 1984 as the current year. This parameter may be omitted if the year is already correct.

When `date` is executed it echoes the time and date on your screen. If the time and date are not correct, repeat the above procedure. Note that you must be the super-user to change the date.

Log out by holding the `CTRL` key depressed as you press the `D` key. Alternatively, typing

```
exit
```

will also log you off the system. A few seconds after you log off, the `login:` prompt will reappear.

System Administrator Tasks

As the system administrator you must perform many tasks to maintain your system. Here are a few tasks you may wish to do now:

Check for Bugs

If you haven't already done so, check the *Read Me First* document for known bugs. Follow the instructions in the "Bugs" section of the document.

Read the Files in the `/etc/newconfig/Update_info` Directory

The files in `/etc/newconfig/Update_info` contain important information about your system.

Change Device File Naming Conventions

Previous versions of HP-UX have a different device file naming convention than the current standard. This version supports both the old naming convention and the new. Hewlett-Packard has supplied you with a script file to convert your device files from the old convention to the new convention. Refer to Chapter 5, the section "New Device File Naming Conventions" for a description of the script and a discussion of naming conventions.

Add Peripheral Devices

You will want to install a printer (and probably configure the LP spooler if you have several users), install terminals for your users, and possibly install other hardware such as plotters and additional disk drives.

In addition to connecting the hardware to your computer, you must configure your system to talk to the hardware. The procedure to do this is in the "Toolbox" chapter, the section "Adding/Moving Peripheral Devices".

Modify System Files

You probably need to change the `/etc/motd`, `/etc/profile`, and `/etc/rc` files to fit your installation's requirements. Refer to the "Toolbox" chapter for guidelines.

Add Users

Each user on your system should have a unique login name. In addition, you will want to have your own login other than the `root` login.

As shipped to you, the HP-UX system is set up to allow any of several users to log in. (This is true even for single-user systems where only one user can be on the system at time.) Two of the user names are of particular interest: `root` and `guest`.

The `root` login is very powerful and is potentially dangerous to your system. Until you are familiar with HP-UX and understand its operation, you should avoid logging in as `root` for the reasons previously discussed.

The `guest` login is restricted and can be used for people who need temporary access to the system.

The procedure to add new users is in the “Toolbox” chapter.

Backup Your System

Once your system is installed and you have completed the above configuration tasks, you should make a full (archive) backup of the system. The backup procedure and concepts are described in the “Toolbox” chapter.

Create a Recovery System

A recovery system is a small working version of HP-UX. If your system becomes so corrupt that it won't boot, you can use a combination of your recovery system and your backups to re-create your system. If you do not have a recovery system you may need to re-install HP-UX.

The procedure to create a recovery system is described in the “Toolbox” chapter.

Moving On

Now that your system is successfully installed and a few preliminary tasks are done, here are a few guidelines for learning more about HP-UX.

HP-UX is a large and somewhat complex operating system, so time invested in learning the system can be substantial. This time, however, is well spent; the more you know about the system's features, the less work you will do in the long run as the system administrator. The following manuals will get you started:

- *HP-UX Documentation Roadmap*

This pamphlet lists the manuals in your documentation set, and shows some key points from each manual. You can also use this pamphlet to get an introduction to major tasks, and to head in the right direction if you have a general topic.

- The off-the-shelf UNIX tutorial supplied with your HP-UX system.

Try the examples on your system as you read. **While gaining familiarity with the system, do not log in as the user root.**

- *HP-UX Reference*

Read the introduction to the *HP-UX Reference* manual and to familiarize yourself with using the “permuted index” section of that manual. As mentioned in the “Conventions Used in this Manual” section of chapter 1, the permuted index is useful for finding entries that are listed under similar related entries.

- *HP-UX System Administrator Manual*

It is assumed that you have already read chapter 1 (“Getting Started”) of this manual and the terminology at the beginning of this chapter.

Read chapter 3 (“Concepts”) and chapter 4 (“System Startup and Shutdown”) in this manual. These chapters will give you a good understanding of how the system operates.

Installation Troubleshooting Hints

The following should help to troubleshoot problems that occasionally occur during the installation process.

Problems Initializing the Destination Device

If the destination device (hard disk) initialization fails, you will see a menu similar to that shown in Figure 2-10.

```
*****
HP-UX INSTALLATION UTILITY (Rev x.x) -- EXECUTION TRACE
*****
Sdfinit'ing destination: FAILURE: errinfo = 236.

                DESTINATION DEVICE

Major Number          1
Select Code           5
Bus Address           0
Unit Number           0
Volume Number         0

Choice                Description

"d":                  Change the DESTINATION device.
"e":                  EXIT Installation Process

INITIALIZATION OF DESTINATION DEVICE FAILED
Please enter choice >>
```

Figure 2-10. Initialization Error Screen

This could be caused by incorrectly specifying the address of the destination device, forgetting to power on the destination device, or incorrectly installing the destination device. Choosing the “d” option allows you to change the destination device address. After changing the destination device address, the installation process will start the initialization process again.

If you are not sure that the hardware was installed correctly then choose the “e” option, turn off the power to your computer, check the hardware installation, and then restart the installation process. If this condition persists and you are sure that you are using the correct device address, contact your local HP sales office or Response Center.

Problems While Loading From the Installation Tapes

The following errors (and their common causes) can occur during the installation process; they will appear in either the menu shown in Figure 2-11 or the menu shown in Figure 2-12.

ERROR: CANNOT FIND CONTENTS ON xxxx

Tape number 1 was loaded when tape number 2 or 3 was expected, or was pressed before the tape conditioning sequence was complete.

ERROR: CANNOT FIND CORE PRODUCT ON xxxx

Tape number 2 was not loaded when requested.

ERROR: CANNOT PROCESS DEPENDENCY xxxx

An error occurred while trying to read from the tape, the most likely cause is a dirty tape head.

ERROR: CANNOT PROCESS FILESET xxxx

An error occurred while trying to read from the tape, the most likely cause is a dirty tape head.

```
*****
HP-UX INSTALLATION UTILITY (Rev x.x) -- EXECUTION TRACE
*****
```

Choice	Description
"e":	EXIT Installation Process
"s":	SWITCH tapes

```
ERROR MESSAGE
Please enter choice >>
```

Figure 2-11. Error Screen

In almost all cases the screen shown in Figure 2-11 results from loading the wrong tape or not waiting for the tape conditioning sequence to complete. You should choose the “s” option which results in the following:

```
Unloading tape #2, when busy light remains off remove it.
```

(about a 2-minute pause)

```
Please insert tape #2 in source device
When BUSY light remains off, press [Return].
```

Remove the tape and **wait for the message asking you to insert it**. Then insert the correct tape, wait for the conditioning process to complete (to be sure the process is complete – wait at least five or six seconds once the busy light remains off), and hit **[Return]**. If the condition occurs again, be sure that you are indeed loading the correct tape. If the condition persists, try cleaning the tape head before loading the tape. In the rare case that this doesn’t help, contact your local HP sales office or Response Center.

Choosing the “e” option causes the install process to terminate. If enough of HP-UX has loaded, the system will reboot and come up in init run-level s. If this occurs, you can try using update, possibly with a new tape drive or new tapes, to reload HP-UX (to ensure that everything gets on your system) or to load missing optional products. You will select the same product numbers in update that you selected in installation. If the system is unable to reboot, you will need to restart the install process, possibly with a different tape drive or tapes.

```
*****
HP-UX INSTALLATION UTILITY (Rev x.x) -- EXECUTION TRACE
*****
```

Choice	Description
"e":	EXIT Installation Process
"r":	RETRY last operation
"c":	CONTINUE with Next Fileset

```
ERROR MESSAGE
Please enter choice >>
```

Figure 2-12. Error Screen

The screen shown in Figure 2-12 is normally associated with a read failure from the tape drive, which could be temporary, the result of dirty tape heads, a problem with the tape, or a problem with the tape drive.

If the failure occurred while loading one of the file sets that makes up HP-UX (versus an optional product), you will **not** get the “CONTINUE” option. In this case, choose the “RETRY” option (hit r). If the retry is not successful, it could be due to a problem with the tape drive. One possibility is a dirty tape head. Unload the tape, clean the head, reload the tape, wait for the conditioning process to complete, and select the “r” option. If this condition persists (and you are loading a file set in HP-UX, indicated by the lack of a continue option), contact your local HP sales office or Response Center.

If the failure occurred while loading one of the file sets in an optional product, try the above steps. If the condition persists, choose the “c” option to go on. The particular optional product may not be usable, but the installation process should be able to complete and you should have a usable system. If loading file sets for optional products continues to fail, choose the “e” option; the installation process should be able to reboot your system and come up in init run-level s as it normally does. You can then try using update (see “Updating HP-UX and Optional Products” in the “Toolbox” chapter of this manual) to load the optional products, possibly after having your tape drive serviced or using another tape drive. If update is unable to load the optional products from the tape, contact your local HP sales office or Response Center.

Notes

Concepts

This section discusses several essential concepts needed to manage an HP-UX system. It is not necessary to initially understand all of these concepts in depth; however, you should at least be familiar with the terms.

Processes

A process is an environment in which a program executes. It includes the program's code and data, the status of open files, the value of all variables, and the current directory. Each process is associated with a unique integer value (called the process ID) which is used to identify the process.

Process Creation

(Parent and Child Processes)

A process consists of a single executing program at any given time. However, a process can create another process to:

- concurrently execute another program.
- execute another program and wait for its completion.

A new process is created when a program executes either the **fork** or the **vfork** system call. The terms **parent process** and **child process** refer to the original process and the process which it created, respectively.

Using fork

When a child is created with a **fork** system call, nearly all code and data (including virtual code and data) is copied from the parent to the child. Only shared code is not copied (the child process uses the same shared code as the parent process instead of creating a separate copy for itself). Thus, the child process is nearly identical to the parent process (with the exception of its process ID); it has exact copies of the parent's code, data and current variable values.

When the `fork` system call is executed, the system must have enough free memory to duplicate the parent process or the call to `fork` fails. Once the child process is created, both processes begin execution from the completion of the call to `fork` (at the program statement immediately following the call to `fork`).

The `fork` system call returns the actual process ID of the child (a non-zero value) to the parent process, while the identical call in the child's copy of the code always returns zero. Since the process IDs returned by the `fork` system calls are distinguishable, each process can determine whether it is the parent process or the child process.

For example, suppose that a process consists of a program that tests the life of car batteries. The program has read 1000 data values from a voltmeter and is ready to print and plot the data. The program could have been written to do one task completely (such as printing the data) and then perform the other task. However, the programmer has included a `fork` system call in his program at a location after the data has been read.

When the program completes the statement containing the `fork` system call, two nearly identical processes exist. Each process examines the value returned by its `fork` system call to determine whether it is the child process or the parent process. Following the `fork` statement is a conditional branch statement that states: "If the process is the child process, it should print the data. If the process is the parent process, it should plot the data". Because of the inclusion of the `fork` statements and the conditional branch statement, both printing and plotting are done simultaneously. And because each process has its own copy of the test data, each can modify the data without affecting the other process.

Using `exec`

One modification which often follows the `fork` system call, is to `exec` another program. `exec` is a system call which overlays a separate code segment on top of already existing process code. In this manner a parent process is able to create a new process using `fork`, and subsequently execute an entirely different program via `exec`.

As an example, let's suppose we are writing a text editor. We would like to let the user of our editor pause and list directories on the system — say before choosing a file to edit. One way of doing this would be to `fork` a different process, and then immediately `exec` the program `ls`. Let's look next at the `vfork` system call for a more efficient way of doing this.

Using `vfork`

Copying a parent process's code and data to a child process can be time consuming when a large program or a large amount of data is involved. The `vfork` system call provides an alternate way to create a new process in situations where generating a separate copy of the parent process's code and data is not necessary. `vfork` differs from `fork` in that the child process borrows the parent process's memory and thread of control until the child executes either an `exec` or `exit` system call, or it terminates abnormally. The parent process is suspended while the child uses its resources.

In situations where the child process is simply going to call `exec`, the parent's code and data is not required by the child. If `fork` is used to create the child process, time is wasted copying the unneeded code and data. Depending on the size of the parent's code and data space, using `vfork` instead of `fork` can result in a significant performance improvement.

Like `fork`, `vfork` returns the actual process ID of the child process to the parent process and returns a zero to the child.

Process Termination

A process terminates when:

- the program that is executing in the process successfully completes.
- the process intentionally terminates itself by calling the `exit` or `_exit` system call.
- the process receives from any process a signal for which the default action is taken.

When a process “dies” (terminates), all open files associated with the process are closed. System resources associated with the process are deallocated.

Process Groups

A process group is a set of related processes, such as a parent process, its child processes and its children's child processes.

A process group is established when a process calls the `setpggrp` system call. The calling process becomes the **process group leader**; it and all of its descendants (such as its child processes and grandchild processes) are members of only that process group. Process group membership is inherited by a child process. Each active member of the process group is identified by the process ID of the process group leader. The `init` process is the parent process of all processes. It initially sets up process groups as it executes commands from the command field of `/etc/inittab`.

A signal sent to a process may also be sent to all other members of its process group. Typically, process groups are used to ensure that when an affiliated process group leader terminates, all members of its process group also terminate.

Terminal Affiliation

Process groups and process group leaders have significance in that a process group leader can become “affiliated” with a terminal. All standard input, standard output and standard error generated by process group members is, by default, directed to the affiliated terminal (unless redirected). Affiliation is caused by an unaffiliated process group leader opening an unaffiliated terminal. Only a process group leader can become affiliated. At the time of affiliation, the process group leader cannot be affiliated with any other terminal and the terminal cannot be affiliated with any other process group. The terminal sends signals to the members of its affiliated process group in response to the interrupt character (DEL), QUIT (CTRL /), the Break key or a modem hangup signal.

A child process inherits terminal affiliation when it is created. Thus, if an unaffiliated process group leader creates a child process, the child process is unaffiliated, even if the parent process becomes affiliated later.

Open Files in a Process

For a process to access files, it must first open them. HP-UX limits the number of files that one process can have open to 60. Three of these are usually opened automatically when a process is created: **standard input** (`stdin`), **standard output** (`stdout`), and **standard error** (`stderr`). When a process terminates, the system closes any files that this process has open.

IDs

As previously mentioned, each process is assigned a process ID (a unique integer value) which identifies that process. The process also has associated with it a **real user ID**, a **real group ID**, an **effective user ID**, and an **effective group ID**.

A **real user ID** is an integer value which identifies the owner of the process. Similarly, a **real group ID** is an integer value which identifies the group to which the user belongs. The real group ID is a unique integer identifier that is shared by all members of a group. It is used to enable members of the same group to share files without allowing access to these files by non-group members. The real user ID and real group ID are specified by the file `/etc/passwd` and are assigned to the user at login.

Effective user and group IDs allow the process executing a program to appear to be the program's owner for the duration of its execution. The effective user ID and group ID are separate entities and can be set individually. The effective IDs are usually identical to the user's corresponding real IDs. However, a program can be protected such that when executed, the process's effective IDs are set equal to the real IDs of the program's owner. The new effective ID values remain in effect until:

- the process terminates
- the effective IDs are reset by an “overlying” process (a process is “overlaid” via the `exec` system call)
- the effective IDs are reset by a call to the `setuid` system call or the `setgid` system call

The primary use of effective IDs is to allow a user to access/modify a data file and/or execute a program in a limited manner. When the effective user ID is zero, the user is allowed to execute system calls as the super-user (described in the following section).

For example, suppose that the dean of a university keeps all of his student's records in a file on the system. He wishes to enable a professor to modify a student's record only for that professor's class (an English professor shouldn't be allowed to modify a student's grade in physics). The dean first protects the file containing the student's records such that only he may read or write to it. He then writes a program which receives the modifications requested by a user, checks to see that the user is allowed to make such changes, and then modifies the record if allowed. Finally, the dean protects the program such that the effective IDs of the user are set equal to the dean's real IDs when the program is executed. Then when the program accesses the student record file, the system allows the program to read from or write to the file because it believes that the dean is accessing the file (the effective user and group IDs are that of the dean).

The Super-User

The term super-user describes the system user whose effective user ID equals 0. Users with effective user ID equal to 0 are provided with special capabilities by HP-UX (hence the name “super-user”). Many commands and system calls can only be accessed by a super-user. Some commands and system calls can be accessed by other users, but have some features accessible only by the super-user. A super-user is granted the ability to:

- execute any command in the system, as long as any execute permission permission bit is set in the command file’s mode
- override any protections placed on user files (except those created and protected by other systems, such as the BASIC Language System)
- modify any system configuration files, add (and remove) users to the system
- other system functions

Super-user status should only be granted to those users who have a thorough understanding of the system and have a need for super-user capability. As system administrator, you must have super-user capability.


Some super-user commands and some system calls (those used heavily by the system administrator) require the user’s name to be “root” and his real user ID to be zero. As shipped, your system has a user name of root with a real user ID of 0. This user is often referred to as “the root user”. Log in as this user when acting as system administrator. To prevent other users from accessing super-user capabilities, assign a password to “root”. Only you and the “back up” system administrator(s) should know this password.

File System Implementation

The Series 500 HP-UX system uses a file system called the Structured Directory Format (SDF) file system. This chapter describes the SDF file system. This information should aid you when verifying, maintaining and repairing the HP-UX file system(s).

The files of the SDF file system are stored on a formatted mass storage medium, usually a disk. A file is specified by a path name—a series of directory names separated by / characters and terminated with the file name. The actual method in which files are stored is explained by the text and diagrams that follow.

The file system implementation is a concept best explained by example. Suppose that you have a file named **FILE** which contains a list of mailing addresses. When **FILE** is created, the system places its name in a directory. A directory is a special form of an HP-UX file. It then associates a unique integer value (in this case, 23) with the file name. This integer value (called an i-node value or number) points to a structure called an **i-node**. In turn, the i-node contains a pointer to one or more groups of contiguous disk blocks, called **extents**, in which **FILE**'s data is actually stored. A pointer in the i-node consists of the starting address of the file's extent(s) and the size of the extent(s). This is shown in Figure 3-1. All i-nodes for a file system are kept in a file called the **File Attributes File**. Each disk has a single File Attributes File which describes the contents of the disk.

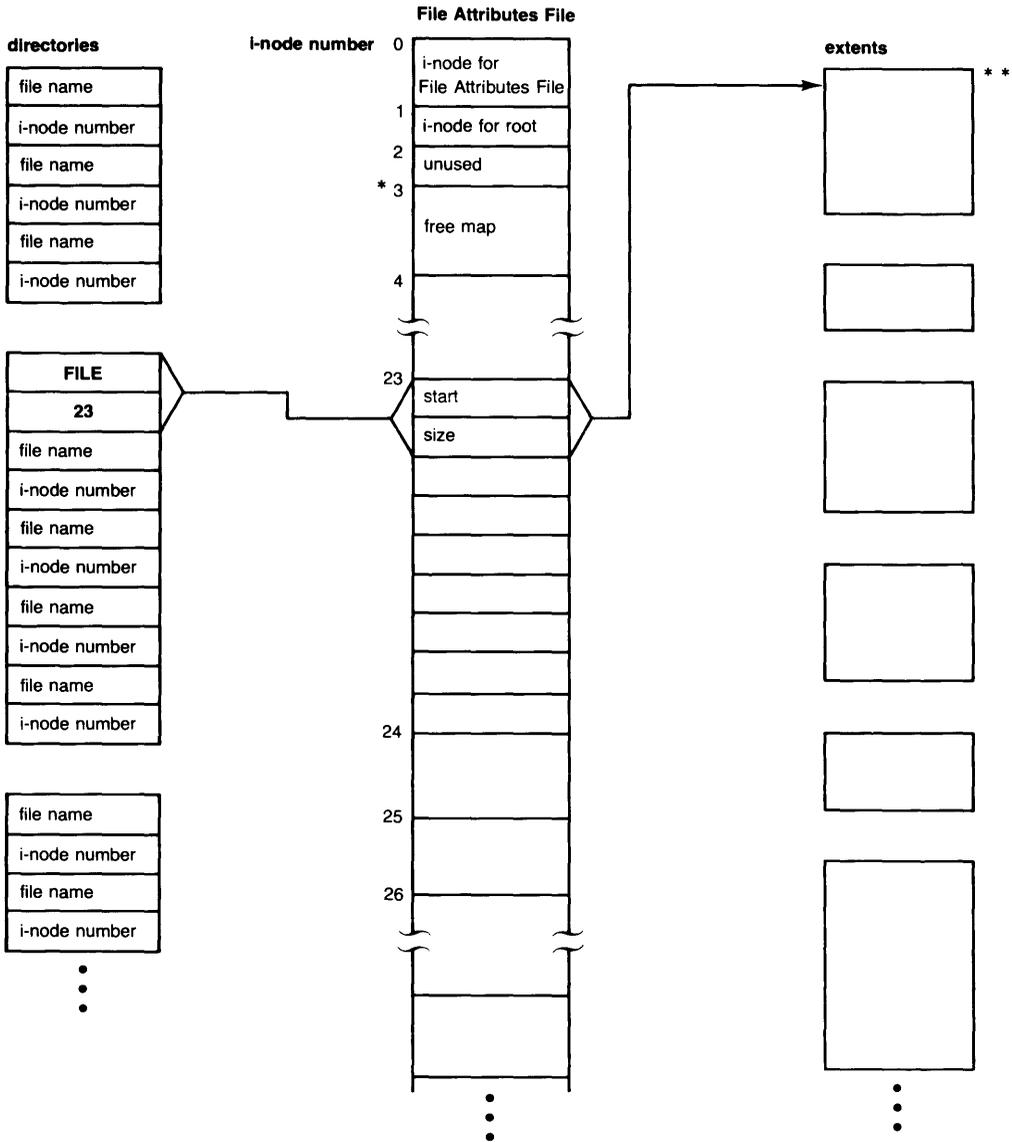


- * The free map may actually occupy more than one i-node.
- ** Actual contents of FILE.

Figure 3-1. File with a Single Extent

From Figure 3-1, you can see that besides an i-node for each file stored on the disk, the File Attributes File contains an area called the **free map**. The free map is an array of binary values, one for each block on the disk. If a bit value is 0, the corresponding disk block is currently being used for storage. If a bit value is 1, then the corresponding disk block is available for storage.

When a file is created, its contents are placed in one large extent, if possible. If the file is later modified and enlarged, the system attempts to place the added information in blocks that are contiguous with the existing extent. If there are not enough free blocks that are contiguous to the existing extent, the system places the added information in a single new extent (if possible); it then adds to the file's i-node, a pointer to the additional extent. The i-node is capable of holding four pointers to the extents which comprise the file. If the system finds it necessary to create more than four extents for a file, an extent map is automatically added (chained) to the file's i-node. An extent map is capable of holding an additional 13 pointers; there is no limit to the number of extent maps which may be added to an i-node. You should note, however, that as the number of extents claimed by a file increases, the amount of time required to access the information also increases.

Figure 3-2 shows the structure of the file, FILE (from the previous example) after it has been modified several times. When FILE was modified, there were not enough free blocks contiguous with the existing extent in which to place the added information. Thus, additional extents were created to hold the new information. When the number of extents claimed by FILE surpassed four, the system added an extent map to FILE's i-node.

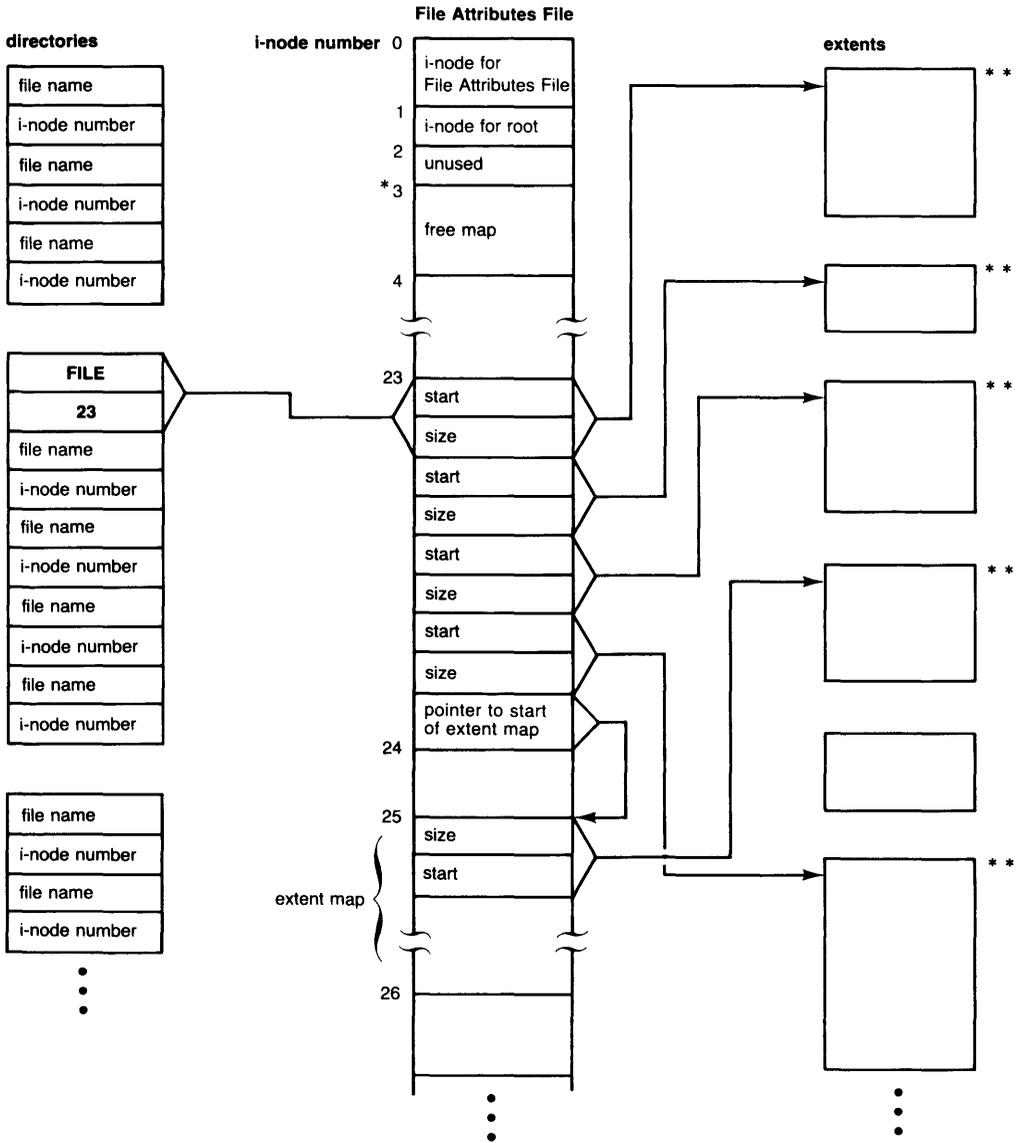


* The free map may actually occupy more than one i-node.
 ** Actual contents of FILE.

Figure 3-2. File with Multiple Extents

In HP-UX, it is not unusual to have a single file on a disk which has several file names; the file is said to have multiple links. A file has multiple links when the file's i-node is pointed to by two or more directory entries. Each directory entry has its own name for the file but all share the same i-node value and thus, the same extents containing the file's data.

For example, suppose that three users all wish to have the file `FILE` (from the previous examples) in their login directory. Each user creates a link to `FILE` (via the `link` or `ln` command) from his login directory. From the viewpoint of each of these users, the file resides in their login directory.

A link is removed when a user removes the file from his directory (for example, with the `rm` command). When all links to an i-node have been removed, the disk blocks forming the file's extents are marked "free" in the free map. The file's i-node and extent maps (if it has extent maps) are marked as unused. Note that you cannot link a file across different file systems (i.e., different disks).

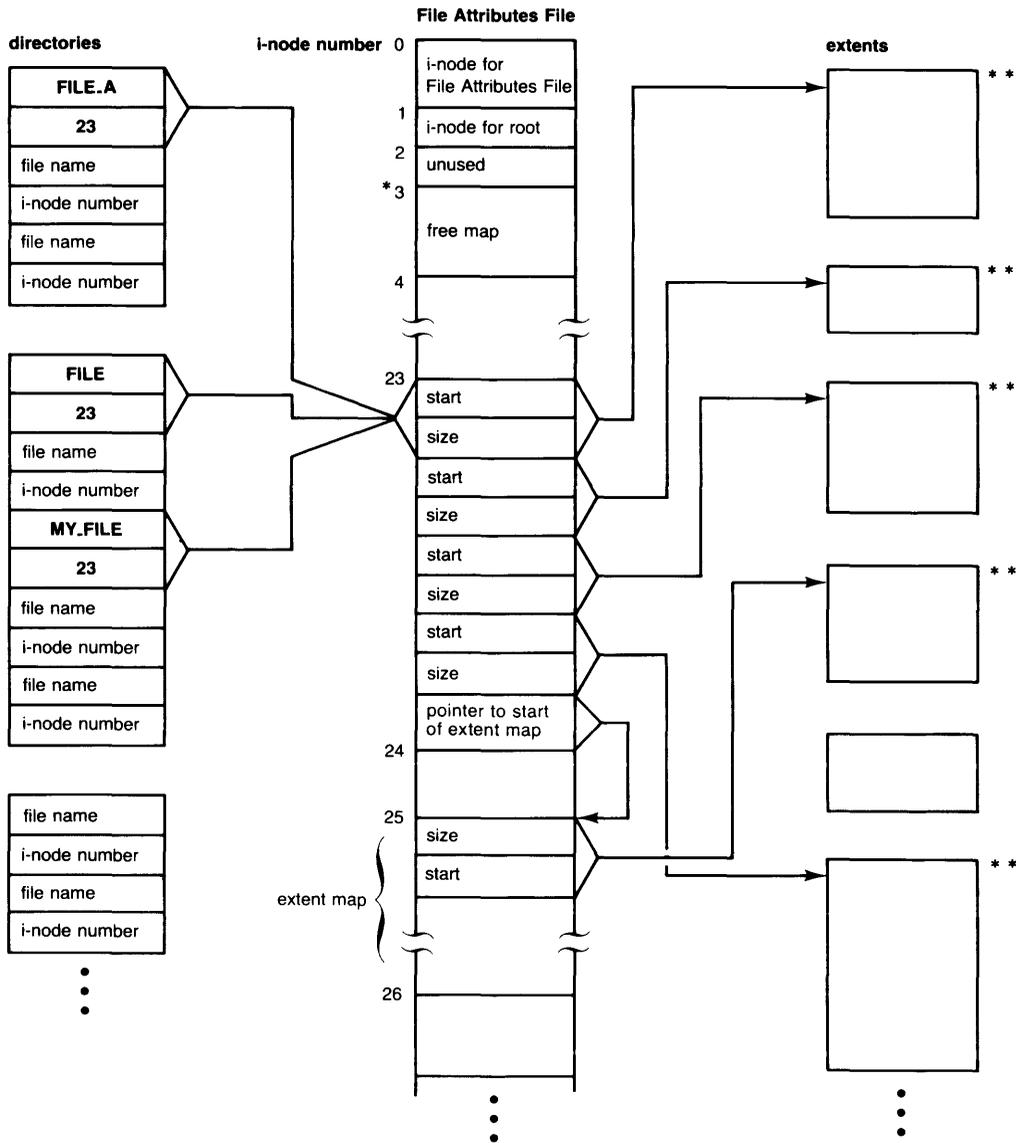

* The free map may actually occupy more than one i-node.

** Actual contents of FILE.

Figure 3-3. File with Multiple Links

The Volume Header

Each disk or tape medium available to your HP-UX system is called a volume. Each volume has a **volume header** located at block 0 of the volume. The volume header:

- identifies the volume format (always Structured Directory Format [SDF] for HP-UX files on the Series 500).
- specifies the size in bytes of each disk block.
- lists the maximum number of disk blocks available on the disk.
- lists the starting block number of the File Attributes File.
- lists the size and the starting location of the boot area.
- contains other system information (as described in *fs(4)* in the HP-UX Reference manual).

File Format and Compatibility

The format of the mass storage media on which HP-UX files are stored is Structured Directory Format (SDF). This is not necessarily the format for other operating systems patterned after the UNIX operating systems.

If you are using both HP-UX and the BASIC Language System on your computer (supported on the Model 520 only), you should consider the following compatibility issues:

- BASIC recognizes many different file types (BDAT, BIN, ASCII, DATA and BCD).
- To BASIC, all HP-UX files are BDAT files.
- When BASIC files are copied with HP-UX commands, the file type of the copy is always BDAT (regardless of the file's original type).
- If a file or directory is used by both BASIC and HP-UX, be careful in assigning protections. A file protected in BASIC may not be accessible from HP-UX. Files with protection (access restrictions) in HP-UX may not be accessible from BASIC.

This last issue needs to be examined in more detail. When an HP-UX file is accessed from BASIC, the file's HP-UX mode corresponds to the file protection of a BASIC file. The HP-UX file's read and write permissions for the class of users "other system users" (not the file's owner nor the file's group) are interpreted as the read and write protections of a BASIC file. The file's execute permission (as specified by its mode in HP-UX) is ignored when the file is accessed from BASIC.

The read, write and execute permissions of an HP-UX directory affect the manner in which the directory (and the files it contains) can be accessed from BASIC. The interpretations of the different protections for directories are shown in Table 3-1.

Table 3-1. File Protection

HP-UX Directory Protection	BASIC Directory Protection
r — (read permission) allows the user to list the contents of the directory.	R — (read permission) allows the user to list the contents of the directory with the BASIC CAT statement.
w — (write permission) allows the user to add and remove files from the directory.	W — (write permission) allows the user to create or delete entries from the directory
x — (execute permission) allows the user to search the directory. This permission must be set in order to access a file below the directory in the file system hierarchy.	No equivalent BASIC protection.

For an HP-UX file to be accessed from BASIC, all directories in the file's path must have both the read and execute permissions enabled for "others". When an HP-UX file or directory is examined with the BASIC CAT statement, it is not possible to determine whether or not its HP-UX execute permission is enabled.

Compatibility Tips

When creating files for use by both the BASIC Language System and HP-UX, assign no file protection to the file or to the directories containing the file. This ensures that both systems can access the file.

Use BASIC to back up volumes containing both BASIC Language System files and HP-UX files. This preserves the file types of all of the files.

File Protection

When each file in the file system is created, it is assigned a set of file protection bits, called the mode of the file. The mode determines which users may read from the file, write to the file, or execute the program stored in the file. Read, write, and execute permissions for a file can be set for the file's owner, all members of the file's group (other than the file's owner) and all other system users. The three permissions are mutually exclusive—no member of one permission group is included in any other permission group. When a file is created, it is associated with an owner and a group ID. These values specify which user owns the file and which group has special access capability.

The default mode of a file is initially determined by the `umask` command when the file is created. The mode may be changed with the `chmod` command. The mode of the file is represented as the binary form of four octal digits as shown in Figure 3-4. The initial discussion deals with only the three least significant digits. When the most significant digit is not specified, its value is assumed to be zero (0).

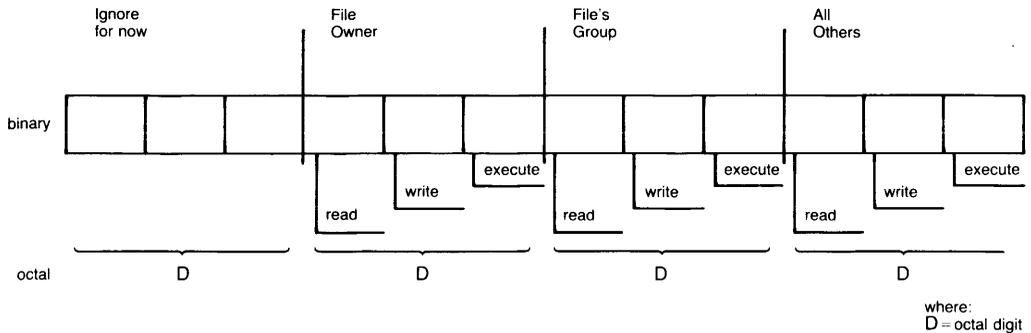


Figure 3-4. File Protection Mode Format

Each octal digit represents a three-bit binary value: one bit specifies read permission, one bit specifies write permission, and one bit specifies execute permission. If the bit value is one, then permission is granted for the associated operation. Similarly, if the bit value is zero, permission is denied for the associated operation.

For example, assume a file has a mode, 754 (octal). Octal 754 is equivalent to 111 101 100 binary. From Figure 3-5, you can see that this grants the owner of the file read, write, and execute permission. It grants read and execute permission to all users who are members of the file's group (except the file owner). That is, any user (except the file's owner) whose effective group ID is equal to the ID of the file's group may read and execute the file. It grants read permission to all other system users. The `ls` command represents this mode as `rw-r-xr--`.

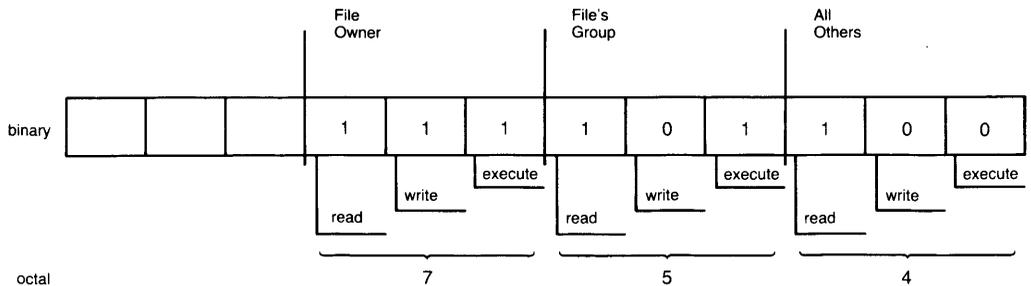


Figure 3-5. File Protection Mode Example 1

Protecting Directories

Directories, like all files in the HP-UX file system, have a mode. The directory's mode is identical to the mode of an ordinary file. The read, write, and execute permissions have a slightly different meaning when applied to a directory.

- Read permission provides the ability to list the contents of a directory.
- Write permission provides the ability to add a file to the directory and remove a file from the directory. It does not allow a user to modify the contents of the directory itself. This capability is given to the HP-UX system only.
- Execute permission provides the ability to search a directory for a file. If execute permission is not set for a directory, the files below that directory in the file system hierarchy cannot be accessed even if you supply the correct path name for the file.

Setting Effective User and Group IDs

In the section discussing effective user and group IDs, you found that a file can be protected such that when executed, the process's effective IDs are set equal to the file owner's IDs. This capability is specified through the most significant digit of the four octal file protection mode digits of an executable file (previously discussed). This digit is represented by a three-bit binary value. When its most significant bit is 1, the effective user ID of the process executing the file is set equal to the user ID of the file's owner. This bit is called the **set user ID bit** (suid). Similarly, if the middle bit of the most significant octal digit is 1, then the effective group ID of the process executing the file is set equal to the group ID of the file's group. This bit is called the **set group ID bit** (sgid).

If the sgid bit is on for an ordinary file, and the file does not have group execute permission, then the file is in enforcement locking mode. See the section which follows on file locking, or *lock(2)* in the *HP-UX Reference*.

For example, suppose that the file mode is 6754. Octal 6754 is equivalent to 110 111 101 100 binary. The meaning of the mode is shown in Table 3-2 and Figure 3-6.

Table 3-2. File Protection Example 2

Octal Digit	Binary form	Permission	Meaning
6	1	set user ID	Effective user ID of the process executing this file is set equal to the real user ID of the file's owner.
	1	set group ID	Effective group ID of the process executing this file is set equal to the group ID of the file's group.
	0	sticky bit	The sticky bit is discussed in the section that follows.
7	1	read	File owner may read the file.
	1	write	File owner may write to the file.
	1	execute	File owner may execute the file.
5	1	read	Members of the file's group (other than the file's owner) may read the file.
	0	write	Members of the file's group (other than the file's owner) cannot write to the file.
	1	execute	Members of the file's group (other than the file's owner) may execute the file.
4	1	read	Any other user may read the contents of the file.
	0	write	Other users cannot write to the file.
	0	execute	Other users cannot execute the program contained in the file.

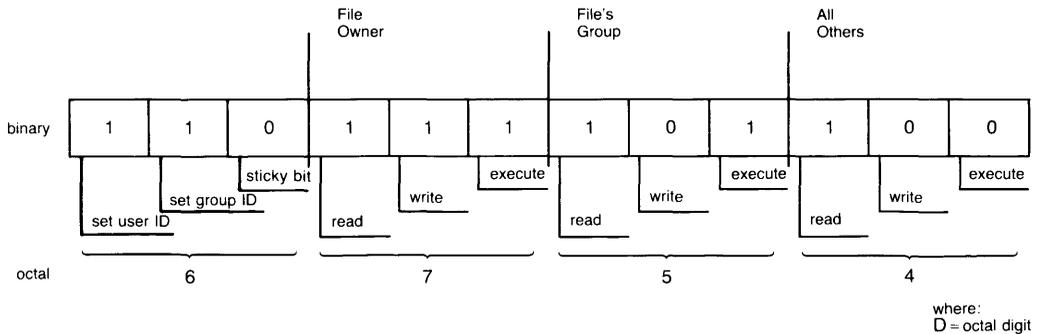


Figure 3-6. File Protection Mode Example 2

The Sticky Bit

Although the sticky bit can be set for all programs, **setting the sticky bit affects a program only if it is shared** (refer to Memory Management Concepts discussed later in this chapter). The following discussion assumes that all files marked sticky are also shared.

The least significant bit of the upper octal digit is called the **sticky bit**. When the sticky bit of a program file is set and the program is executed, the code segments of the file are loaded into the system partition (discussed with the memory management concepts later in this chapter), where they remain until you specify that they are to be removed. All users executing the file actually use the copy of the program that resides in the system partition. Setting the sticky bit reduces the amount of time needed for a number of users to access a program (since the code is transferred from disk only once). However, since the contents of the file remains in memory, the amount of memory available for other users decreases.

Once a program is in the system partition (via the sticky bit), it can only be removed by changing the file's mode such that the sticky bit is no longer set. When the file is executed again, the system recognizes the new mode and deletes the memory-resident copy of the file.

Only the super-user can set the sticky bit.

File Sharing and Locking

In a multi-user, multi-tasking environment such as HP-UX it is often desirable to control interaction with files. Many applications share disk files, and the status of information contained in them could have serious implications to the user (such as lost or inaccurate information).

For example, imagine we are responsible for maintaining on-line technical reports for a myriad of projects, and we have many different people who must have simultaneous access to these reports. The content of a given report at a given time could significantly affect a company decision, and so we want a way to control how records are accessed.

One potential problem could arise if one person (let's call him George) adds to or modifies information in a report while someone else (Sarah) is working on it. Sarah is unaware of changes that George has just made in the report. And once she is done, Sarah overwrites the information George added. The result is that we have lost **all** of George's information, and when Sarah added data she was unaware of information which could have been pertinent.

Advisory Locks

A solution to this common problem of file sharing is called **file locking**. On your Series 500, file locking is done with the `lockf` system call, and it handles two modes of file integrity. **Advisory locks** are placed on disk resources to inform (warn) other processes desiring to access these same resources that they are currently being accessed or potentially being modified. Advisory locks are only valuable for cooperating processes which are both aware of and use file locking.

In our example, the programs used to access the on-line technical reports could use advisory locks. When George begins to work on the FubNibWitz project his program could call `lockf` and set an advisory lock. A few minutes later when Sarah tries to access records in the FubNibWitz report, she would get an error message informing her that the report is busy. Her program could wait until George is done and then access the report, by virtue of doing a call to `lockf`.

Locking Activities

As stated earlier, all file locking is controlled with the `lockf` system call. There are essentially four activities which `lockf` controls:

- Testing file accessibility by checking to see if another process is present on a specific file record.
- Attempting to lock a file. If the record is already locked by another process, `lockf` will put the requesting process into a sleep run-level until the record is free again.
- Testing file accessibility and locking the record if it is free, and returning immediately if it is not.
- Unlocking a record previously locked by the requesting process.

When the locking process either closes the locked file, or terminates, all locks placed by that process are removed. For more details on how specific locking activities work on HP-UX, see the *lockf(2)* section of the *HP-UX Reference* manual.

Enforcement Mode

Even if we use advisory locks in our example, Sarah would still be able to overwrite the FubNibWitz. She needs some way to insure that no records are written until George is done with the report. HP-UX does this with **enforcement mode**. When a process attempts to read or write to a locked record in a file opened in enforcement mode, the process will sleep until the record is unlocked.

Enforcement mode is enabled by turning the set-group-id bit on (ORing the file mode with octal 2000) and clearing the group-execute bit (ANDing the file mode with octal 7767). For example if we opened a file which normally has its file access mode set to 755, an `ll` of the file would look something like:

```
-rwxr-xr-x  1 George  LubHood      0 May  7 16:11 FubNibWitz
```

To turn enforcement mode on, we would turn the set-group-id bit on (resulting in 2755) and then clear the group-execute bit (resulting in 2745). This could be done from the shell with the `chmod` command, or from a program with the `chmod` system call. A long listing would show:

```
-rwxr-sr-x  1 George  LubHood      0 May  7 16:11 FubNibWitz
```

By now using enforcement mode, George could prevent Sarah from overwriting his changes, and Sarah would have the data which George went to all the trouble of adding to begin with.

Warning

It is possible to cause a system deadlock in enforcement mode. By calling the `wait` or `pause` system calls immediately after locking a record, the locking process could hang one or more processes which attempt to access the locked record.

When attempting to access a command which is locked under enforcement mode, the shell will go into a sleep run-level until the command is released. This provides a means for one script to control execution of another separate script. Care should be exercised when doing this, because as just noted, a system deadlock is possible.

Magnetic Tape

Since computers are sometimes used to process massive amounts of data, there must be a way to store large files on-line. Applications such as atmospheric studies, which minute by minute record megabytes of information and then sort it out, require cheap media to store data on. Even with the advent of larger capacity hard disk drives, they are still too small and far too expensive for such purposes.

Perhaps the closest to an industry standard for mass media, 9-track ($\frac{1}{2}$ inch) magnetic tape serves as a low-cost, high-volume media to store information. And beyond this, mag-tape is also the most interchangeable media between different hardware and operating systems.

Hewlett-Packard also manufactures a series of $\frac{1}{4}$ -inch data cartridge tapes which are used for the installation and updates of HP-UX on the Series 500. The cartridge tapes can also be used for inexpensive backups. These data cartridges, Model HP 88140, have most of the benefits of 9-track magtape but are cheaper and easier to handle.

With the 5.x release of HP-UX on the Series 500, there are new drivers intended to optimize I/O throughput to the HP 7974 and HP 7978 magtape drives. This discussion will help you effectively and efficiently use the HP 797x series of magnetic tape drive.

Magtape Definitions

Here are some common terms and concepts used in the discussion of magnetic tape. Consider them required reading if you use magnetic tape.

coding

Tape is recorded in several ways. Older systems use **Non Return to Zero Immediate (NRZI)** coding, and record with a tape density of either 200, 556 or 800 bpi. Newer tapes use **Phase Encoding (PE)** and record at 1600 bpi, or they use **Group Coded Recording (GCR)** and record at 6250 bpi. There may be other forms of coding as well, but these are the most common. The HP 7970 supports a density of 1600 bpi, the HP 7974 supports both 1600 bpi and (optionally) 800 bpi, and HP 7978 magtape drive supports a density of 1600 and 6250 bpi.

The higher the density, the more information can be stored on a tape. On a 2400 foot tape, an HP 7974 at 800 bpi can only store 22 Mbytes of data, at 1600 bpi the HP 7974 can store 43 Mbytes, while an HP 7978 storing at 6250 bpi can write up to 140 Mbytes of data to a tape at a rate of up to 16 Mbytes per minute.

bpi

The most common measure of tape density, bpi is an abbreviation for bits per inch.

cyclic redundancy check

When writing a tape, a number of frames are written by the drive in a single transaction. This collection of frames is called a **record**. Part of the record, but invisible to the user, is a **cyclic redundancy check** (CRC) recorded as some additional frames on the tape. There is a very short blank section between the true record and the CRC. Following the CRC is a nominal 1/2-inch gap of unrecorded tape, known as the **inter-record gap** or IRG. The next record follows the gap. When the tape drive reads the tape if either the frame parity or the CRC is incorrect, an error is generated by the drive. Newer formats (1600 bpi and above) generate a preamble and postamble to help synchronize the read logic.

end of tape

There is both a logical end of tape (EOT) and a physical EOT (see Figure 3-7). Logical EOT is two consecutive file marks. Physical EOT is a foil mark about 25 feet from the end of the reel. 2.x and 5.x drivers handle physical EOT differently. See the discussion on 2.x and 5.x drivers.

Note that the distance between the EOT detector and the read/write head may vary between different model tape drives. So, one drive may return an EOT indication associated with the 1000th record on the tape, while another drive may return an EOT indication with the 999th or the 1001st record. For small records this variation is large; for large records this variation is small.

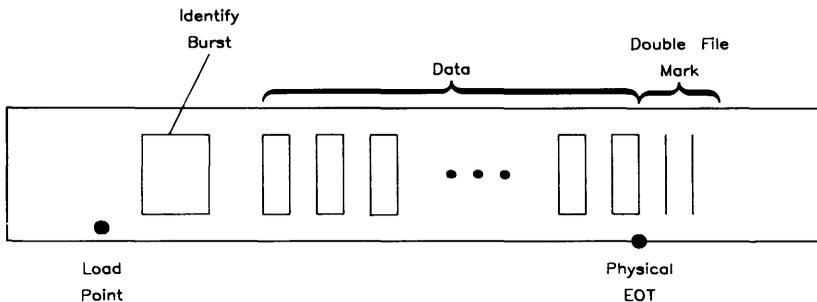


Figure 3-7. Magtape Format

file marks

A **file mark** is a special type of record that can be written to the tape. A file mark is recognized by the drive and reported as a boolean condition during reading. It is not possible to write a file mark as ordinary data; it requires a special command to the drive.

Single file marks are used to separate logical files on tape. Two consecutive file marks are used to signify the logical EOT. Data is undefined past the logical EOT.

foil mark

A foil mark is a short piece of silver tape that is placed on one edge of the tape on the non-recorded side. Both the load point and the physical end of tape are marked by a foil mark. Both marks are placed by the manufacturer.

load point

The load point, or beginning of tape, is a foil mark placed about 10 feet from the beginning of a tape. When you load a tape (put the tape in the drive, and press “load”), the drive searches forward until the load point is found and placed under the sensor. The first write is then treated specially: several inches of tape are skipped and then, when using PE or GCR formats, a special burst of data is written to the tape (which is invisible to the user). This is the **identify burst**. Data is recorded after the identify burst in the usual way. The first read expects the identify burst, and quietly skips over it. Some smart drives, such as the HP 7974 and the HP 7978, can determine the tape density from the identify burst (1600 and up).

magnetic tape (magtape)

Magnetic tape is a media similar to an everyday home cassette tape, used to store digital information. All standard magtape is 1/2-inch wide, and comes in three sizes: 600, 1200 and 2400 foot reels (for a rule of thumb, a 2400 foot reel is about 1 foot in diameter). The size of the the reels, hubs, tape width and other mechanical properties are all specified by ANSI standard.

operations

Several operations that a tape drive can be expected to perform are to read and write to the media, rewind to the load point, forward or back space one record, and forward or back space to the next file mark. A variation on the theme of rewind is to **unload** where the tape is rewound and taken off line. Some tape drives actually rewind the tape out of the threading path; others simply set an interlock that requires manual intervention to release.

records

A series of frames written to the media is known as a **record**. The physical record size is variable. The maximum limits on record size range from 16 Kbytes to 60 Kbytes, depending upon the tape drive. Beyond these limit, the drive rejects the request and there are *no* write/read retries. The maximum record sizes are:

Table 3-3. Record Sizes

Tape Drive	Density	Record Size
HP 7970	1600 bpi	32 Kbytes
HP 7974	1600 bpi	16 Kbytes
	800 bpi	16 Kbytes
HP 7978A	1600 bpi	16 Kbytes
	6250 bpi	16 Kbytes
HP 7978B	1600 bpi	32 Kbytes
	6250 bpi	60 Kbytes

tape density

The measure of the amount of information which can be stored in a given area of tape is known as **tape density**. **Bits per inch** (bpi), a common measure of tape density, is the number of bits per track, recorded per inch on the tape. For 9-track tape 8 data bits and one parity bit are written across the width of the tape simultaneously. Thus for 9-track tape, bpi is synonymous with **characters per inch** (cpi). One of these characters is sometimes called a **frame**.

tracks

When digital information is written to a tape, it is written in a series of tracks (a lot like an 8-track car stereo). Most magtape today is written in a 9-track format. Older systems often wrote only 6 tracks plus a parity bit, resulting in 7 tracks.

write/read re-tries

Tape, in its usage for long-term archive and data interchange, is somewhat more prone to error than disks. When your tape drive is reading from, or writing to, a tape and it detects an error, the normal procedure is to position the write head at the beginning of the record and retry the tape operation. An error message is reported to the user only after some number of retries (the number depends on the driver). Many more tape errors are caused by dirty tape heads than by real recording errors, so you should periodically clean your tape drive as outlined in its service manual.

Tape drives do a form of reading-while-writing, and if the data is not properly recorded an error will be detected. The normal procedure is to backspace and re-try writing the record once, and if that fails, to backspace, write a **long gap** and try again on a section of tape farther down. A **long gap** is several inches of erased tape. That's why we said an IRG is "nominally" 1/2 inch long.

write ring

On the back of the reel there is a removable soft plastic **write ring**. Every magtape drive has a sensor mechanism to detect the presence of this ring. When a ring is present the tape can be written to by the host, and cannot be written when absent (it is **write protected**). Normally once a tape is written the ring is removed and left out indefinitely except when being rewritten.

Preventive Maintenance

There are several maintenance procedures for tape. A tape can be completely erased (degaussed), or the beginning of the tape can be discarded and a new load point put on (stripped). There is also a tape cleaning and certifying machine that will knock off any loose oxide and check that the tape will record properly over its full length (certified). This always makes any data on the tape unusable. Commercial shops certify their tapes fairly often, and discard them if they get too short or fail to certify. It is also an excellent idea to clean the tape head and guides of your drive periodically as they tend to accumulate loose oxide.

Tape Streaming

The HP 7970 transfers data to and from your Series 500 with very little buffering between your computer and your drive's read/write head; the drive must stop the tape between records, and wait for the next record. HP 7970 is called a *start/stop* tape drive, and is designed to stop and restart the tape fairly quickly.

The HP 7974 and HP 7978 are **streaming** magnetic tape drives. A streaming magnetic tape drive is designed to move continuously, reading data from a buffer or writing data to a buffer, not stopping between records like start/stop tape drives do. Streaming increases the rate at which a tape drive can write data onto tape. Before a tape drive can write data onto a tape, the drive read/write head must be positioned at the proper place on the tape, and the tape must move across the head at the proper speed. After writing a record on the tape, if a streaming drive has already received the data for the next record from the computer, it can continue to move the tape across the head without slowing down to write the next record.

If the drive has not received the data for the next record after writing a record on the tape, then the drive must reposition the tape. This involves stopping the forward motion of the tape, backspacing the tape to some point preceding the beginning of the next record to be written, stopping the tape, and waiting for your computer to send the data for the next record. **The average data transfer rate is much higher when the drive streams than when it repositions**, especially for the HP 7978. The HP 7974 supports both a start-stop and a streaming mode. The HP 7978 supports only a streaming mode. Both drives are much faster than the HP 7970 when they stream. When they do not receive data fast enough to stream, the HP 7974's performance is similar to the HP 7970; the HP 7978 is much slower.

Immediate Response

To help your computer send data fast enough to permit the drive to stream, the HP 7974 and HP 7978 support **immediate response** mode. Ordinarily the actions of your computer and the drive are serialized. Your computer sends data to the drive. Then the drive writes the data to the tape. After the data is written, the drive returns status information to the host indicating whether the write succeeded or failed. When immediate response is enabled the drive returns status before it writes the data to the tape.

This is accomplished by the drive buffering the data it receives from your computer in high-speed memory which is built into the drive. The transfer rate between the host and this buffer memory is much faster than the transfer rate would be if the drive transferred the data directly to the tape. Because the drive returns status to your computer very quickly the host's and the drive's activities overlap, so the average transfer rate to the drive has a much better chance of being fast enough to permit the drive to stream. Even when the drive has to go through a reposition cycle, it can still be buffering additional records from the host.

Even with immediate response enabled the HP 7974 and HP 7978 tape drives typically don't stream continuously because the programs running on your Series 500 don't collect their data from the disk fast enough to supply it to the tape drive. However, they still perform faster than the HP 7970 stop/start tape drive.

An identical concept applied to CS/80 cartridge tape is referred to as immediate report.

Version 4.2 Drivers

The version 4.2 and 5.x drivers treat records written across or beyond the physical end of tape mark differently. The Series 500 4.2 HP 7970 device driver reports an error on read or write if a record crosses physical EOT. When writing on multiple reels, the 4.2 driver will finish writing the record, but since writing that record generated an error the application (e.g. `cpio`) will re-write the record on the next tape. The record that crosses physical EOT is called a “phantom” record; though the record is written at the end of one tape, it is written again at the beginning of the next tape. Reading the phantom record also generates an error; applications using the 4.2 drivers will receive a read error, and will not use the phantom record.

Version 5.x Drivers

For the 5.x revision of the Series 500 HP-UX kernel, the HP 7974 and HP 7978 drivers support immediate response mode by default. For single-reel magtape archives, the only consequence of this change is that the drive streams more when it writes, and so it writes faster; you can still interchange tapes between 4.2 and 5.x drivers. For multiple-reel magtape archives, the consequence of this change is that you can no longer interchange tapes between 4.2 and 5.x drivers without setting a compatibility mode bit (see “Backward Compatibility” below). Without compatibility mode, the “phantom” record of the 4.2 multiple-reel archive will be read from both tapes on drives using immediate response. In particular, `cpio` from one version will not correctly read multiple tapes created from the other version.

Backward Compatibility

The 5.x version HP 7974 and HP 7978 drivers support a non-default 4.2 compatibility mode which the user may select by setting the third least significant bit in the device file minor unit number (i.e., `0x000008`). In this mode these drivers can read and write tapes with 4.2 end-of-tape semantics. The only time you need to set the compatibility mode bit is when you are reading 4.2-written tapes with a 5.x driver, or when you are writing a tape with a 5.x driver to be read by a 4.2 driver. When the compatibility mode bit is set, the HP 7974 and HP 7978 will have a slower writing rate.

If you are **sure** you have a tape written by a Series 500, 4.2 driver, then you have the “phantom” record. The **only** way you could have a phantom record is if you wrote the tape using an HP 7970 driver, version 4.2. If you delete this phantom record, you will no longer need to run your 5.x driver in compatibility mode.

Note

Before you try to delete the phantom record, **make sure you have the phantom record.**

To delete the phantom record (assuming you have only one file that crosses over more than one tape), load the tape and type in the following:

Type in:	Description
<code>mt rew</code>	rewind the tape
<code>mt fsf</code>	skip past the first file marker
<code>mt bsr 2</code>	backspace over the first file marker and the phantom record
<code>mt eof 2</code>	write a new logical EOT (new double file mark)
<code>mt rew</code>	rewind the tape

Memory Management

Your computer is equipped with a large but finite amount of Random Access Memory (RAM). It is important that you understand the manner in which this valuable system resource is used since you, in part, control its allocation through system configuration.

Memory Allocation

Before you consider the manner in which memory is allocated, you must understand some fundamental memory concepts. The basic concepts of memory allocation are determined by the computer's hardware architecture, not by the operating system. Thus, some terms and concepts that explain the computer's memory management are presented first. Then HP-UX's methods of memory allocation and management are presented.

Your Series 500 computer is a 32-bit computer. With 32 bits, an absolute pointer can address 4 294 967 296 different bytes of memory. Three of the 32 bits are used by the system for purposes other than addressing. This leaves the system with 29 bits with which to address absolute physical memory. Thus, the system can address 536 870 912 bytes or 2^{29} bytes (the range of addresses is called the **absolute address space**).

This limit of 2^{29} bytes on the absolute physical address space is inconsequential since it is not possible to physically fit 500 MBytes of real memory in the machine! Each user, however, can address 31 bits of logical address space through pointers translated by segment tables. Each user in a multi-user system has her own private 30-bit virtual address space plus simultaneous access to the system's 30-bit virtual address space shared by all users on the system.

Mapping RAM to Absolute Address Space

Although the computer can address the entire absolute address space, it is equipped with a much smaller amount of Random Access Memory (RAM) hardware. This amount depends on the number and type of RAM boards that are installed. There are four types of RAM boards available for the Series 500:

- 256 Kbyte RAM (HP 97040A)
- 512 Kbyte RAM (HP 97047A)
- 1 Mbyte RAM (HP 97046A)
- 2 Mbyte RAM (HP 97048A) (see section "2 Mbyte RAM Notes")

The 2 Mbyte RAM board contains two memory controllers, the other three each contain one memory controller. A **memory controller** provides the means to **map** (assign) the physical memory into the absolute address space. The memory is mapped contiguously from absolute memory address zero. In nearly all instances, the 1 Mbyte RAM is mapped first, starting at absolute memory address zero, and then the 256 Kbyte RAM and 512 Kbyte RAM are mapped. The 2 Mbyte RAM functions as though it were two 1 Mbyte RAM boards on one board.

The 1 Mbyte RAM is somewhat slower than the 256 Kbyte RAM and the 512 Kbyte RAM; therefore, it is **interleaved** to improve its performance. The interleave can be one-way, two-way, four-way, or eight-way; the higher the interleave, the better the performance.

The interleave of the memory supplied by 1 Mbyte RAM boards is determined by grouping the memory into one, two, four, and eight Mbytes, where each group has the associated interleave. For example:

- If you have four 1 Mbyte RAM boards, the four Mbytes of memory have a four-way interleave.
- If you have three 1 Mbyte RAM boards, two Mbytes of memory have a two-way interleave, while the third has a one-way interleave.
- If you only have one 1 Mbyte board, the one Mbyte of memory has a one-way interleave.

In some configurations, adding an extra 1 Mbyte RAM to a system can result in a performance degradation. It is important that the memory have the highest interleave possible in order to maximize performance. A Series 500 with four 1 Mbyte RAM boards has four-way interleaved memory throughout the absolute address space. If another 1 Mbyte RAM is added, four Mbytes of memory have a four-way interleave and one Mbyte has a one-way interleave. That one Mbyte of memory having a one-way interleave may cause a net loss in system performance.

Note that since the memory supplied by 256 Kbyte RAM and 512 Kbyte RAM boards is not interleaved, it has a set performance level that is not changed by how the boards are combined in a system.

2 Mbyte RAM Notes


The 2 Mbyte RAM board can be thought of as two 1 Mbyte RAM boards in one package. There are two cases where the 2 Mbyte RAM does not work as expected:

1. If you have 1 CPU board, 1 IOP, AND either 12 or 13 Mbytes of memory (HP 97046A or HP 97048A), then the system won't boot.
2. **This second situation is for the Model 550 only.**

If you have a kernel earlier than 5.11 AND you have your 2 Mbyte RAM installed below a display station buffer in the stack, then the system will terminate abnormally (with a dump to the console).


Dividing the Absolute Address Space

The absolute address space is divided into two regions: the **fixed region** and the **dynamic region**.

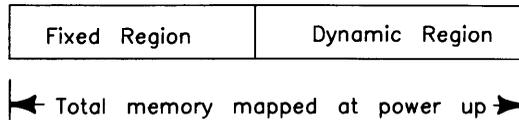

The fixed region contains space for the hardware-defined locations, the system segment table, system data structures, and system code. The size of this region is determined at power-up and it is accessible only to the operating system.

The dynamic region is split into three areas: the **paging area**, the **segment area**, and the **buffer area**.

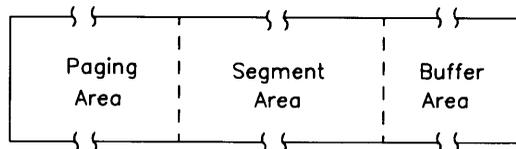

The paging area is used for paged segments (see "Paged External Data Segments" later in this chapter) and is managed by the virtual memory system. The segment area contains all other segments and is the principle source for free space. The buffer area contains buffers used by the system for objects that cannot move. The boundaries between these three areas are dynamic and change as the system load shifts between activities associated with each area.

Partitions

The system provides 512 **partitions**, one of which is reserved for the system. A partition is a logical section of memory composed of:

- a **process**
- an address space consisting of a collection of memory segments managed by a **segment table**.

Each partition has one segment table that points to segments in the segment area that are used by the associated process. A user process accesses memory segments through its segment table. The segment table is managed by HP-UX; it is not directly accessible to the user process. Although one user process cannot directly access another user process' memory, it is possible for one process to force the suspension of another process, in which case the system reassigns the partition's memory.

The partition reserved by the system is called the **system partition**. It is used for code and data segments which may be shared between different user processes. This is possible since the system segment table is accessible to all other partitions.

Each user process uses:

- one or more **code segments** (CS) - segments containing the code that the process is executing.
- a **stack segment** (SS) - a segment that contains procedural parameters, the return addresses for procedures calls, and local variables for procedures.

The stack segment is used for variables which are allocated when a procedure is called and are de-allocated when the procedure returns. The size of this segment grows as needed by the executing program. The stack segment only shrinks during an exec, though the logical stack size grows and shrinks dynamically. The stack is limited to a maximum size which is determined by the system configuration.

- a **global data segment** (GDS) - a segment that holds the program's global data (for example, statically allocated data).

The global data statement is used for variables which are allocated when a program is loaded. These variables remain in memory for the duration of the program and are de-allocated when the program terminates. A GDS can be removed to disk in response to memory demand.

- one or more **external data segments** (EDS)

External data segments are general purpose segments. They are used mainly for data. Because of attributes discussed later in this chapter, they can allow access to extremely large quantities of data.

Stack and global data are “fast access” segments. The system has mechanisms which allow the data they contain to be read and written faster than external data segments. Any virtual segment is subject to removal in response to memory demands of higher priority processes.

Virtual Memory

When a program executes, it typically performs one function (such as totalling an employee's hours) and passes its output on to another function within the same program (such as a wage calculating program or a paycheck program). Although the entire program is loaded into memory, only one such function is used at any one time. The remaining portions of the program may sit idly by, possibly occupying memory.

As you learned with the memory allocation concept, memory is mapped to a partition to hold the process' code and data segments. Without virtual memory, if there is not enough memory available for a process' segments, the process cannot execute; it must wait until sufficient memory is free to be mapped to its partition. When large programs or programs that access large amounts of non-virtual data are run, they must wait until few processes are running so that they may acquire the memory needed for their partition. Then, once running, other processes must wait for the large process to terminate before they can run (even though the large program may only be using a few segments and a small amount of memory at any given time). This also implies that no process can exceed the total memory size of the computer (since there is no way for sufficient memory to be mapped to the process' partition).

To avoid this restriction, HP-UX has implemented a memory management attribute, called **virtual memory**. Segments composing an executable file are marked virtual or non-virtual with the `/usr/bin/chatr` command. The segments of the file are marked as virtual segments by default when the compiled objects are linked with the `ld` command. When you execute virtual code or access virtual data, the system places those segments that are currently needed into the available memory within the process' partition. If there are more segments in the object than memory available, the additional virtual segments are copied to files on the virtual memory device. You specify which device is the virtual memory device when you configure the system.

When the executing code attempts to access a segment that is not present in memory, the system attempts to map additional memory to the process' partition. If the additional memory is not available, the system attempts to free memory that contains virtual segments no longer needed. These segments are "swapped out" (copied out) to files on the virtual memory device and the needed segments are "swapped in" to the newly freed memory. Because of the way that virtual memory is implemented, the "virtual address space" is much larger than the absolute address space of the process' partition.

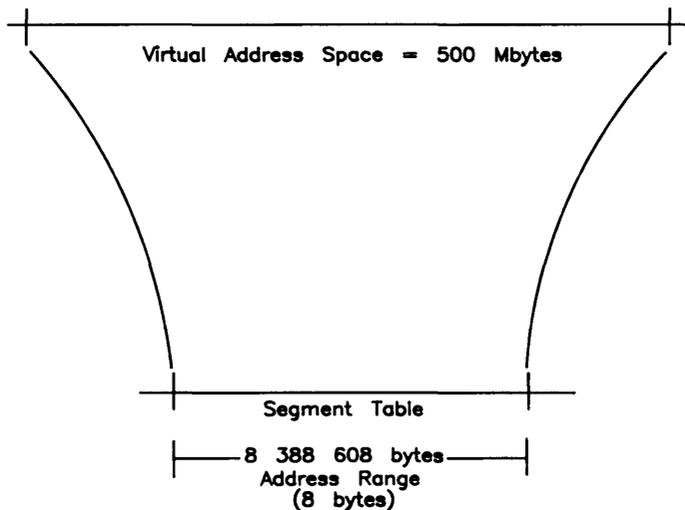


Figure 3-8. Virtual Address Space

In determining which segments to swap out, HP-UX uses the following criteria. No segments are swapped out until additional memory is needed. When memory is needed (to swap in a virtual segment being accessed), the system looks for any virtual segment that has been resident longer than a set length of time without being accessed. Segments meeting that criteria are “swapped out” until enough memory is free to load the needed segment. The set length of time referred to previously is specified with the system configuration. If no segment has been in memory without being accessed for the set length of time, the system attempts to recover memory through a variety of tactics, including suspending lower priority processes and using their memory and attempting to shrink the page frame pool. If the request still cannot be granted, the requesting process can be suspended until the system determines that enough memory is available to resume that process.

Since only the segment currently needed is loaded at any one time, your programs and data may actually be larger than the physical memory within the computer. The maximum size of a virtual program is about 500 Mbytes. Similarly, the maximum size of virtual programs that utilize the system partition (such as shared code segments) is about 500 Mbytes.

Virtual Memory: Benefits vs. Cost

Making segments virtual dramatically reduces the amount of memory required by each user partition. However, the costs of virtual memory are extensive. Virtual code segments often occupy twice their original space on disk: one non-virtual copy (the original copy) and one copy of the file in the virtual address space. Additionally, each time the computer swaps a segment in or out, time is required to copy the program to/from disk. Thus, the program runs more slowly. As more users utilize memory, the computer must do more and more swapping.

Shared Code

Often, several processes want to run the same program simultaneously (such as a text editor program). If the program is not shared, then each process running the program has a copy of the program's code and data. If the processes share one copy of the code, the amount of memory required for each process' partition dramatically decreases.

The term **shared code** describes user code which is loaded into the system partition. When a process executes shared code, it is directed to the copy of the code in the system partition. If the shared code is not yet loaded (no other process is currently accessing the code), the code is first loaded into the system partition before the process begins execution. Only one copy of the code exists in memory regardless of the number of processes running the program. When all processes accessing the shared code terminate, the memory in the system partition in which the shared code currently resides becomes available to satisfy requests for memory (unless the sticky bit was set on the file from which the code was loaded). The memory is not actually freed until a process requires it.

The system knows how many users are accessing shared code by maintaining a count (called the **use count**) of the number of processes accessing the code. When a shared program is loaded into the system partition, the use count for the program is set to one. When the process finishes executing the code, the use count is decremented.

For example, suppose that the text processor program `ed` is marked "shared". When a process first executes `ed`, its code segments are loaded into the system partition and its use count is set to one. Suppose that while the first process is executing `ed`, another process executes the `ed` program. Since the code already resides in the system partition, no additional memory is allocated. The new process simply executes the copy of `ed`'s code that resides in the system partition; its use count is incremented from one to two. The first process now finishes editing and terminates the `ed` program. The system decrements the use count of `ed`'s shared code. Since the use count is not yet zero, the shared code remains in memory. Finally, the second process finishes editing and terminates the `ed` program. The system decrements the use count of `ed`'s shared code segment and, finding its value to be zero, makes `ed`'s shared code segments available for use by other programs.

See *ld(1)* and *chattr(1)* for information about making programs shareable or non-shareable.

Shared Code and the Sticky Bit

Setting the sticky bit on a file containing shared code increments the shared code's use count by two instead of one when the shared code is loaded into the system partition. This keeps the use count from ever returning to zero, thus keeping the shared code segment in memory whether it is being accessed or not.

For example, suppose that the text processor program `ed` is marked "shared". Also suppose that the sticky bit for the file in which `ed` is stored is set. When a process first executes `ed`, the shared code is loaded into the system partition and its use count is set to two. Suppose that while the first process is executing, another process executes `ed`. The new process executes the copy of `ed`'s code that resides in the system partition; the use count of the shared code is incremented from two to three. The first process now finishes editing and terminates its execution of the `ed` program. The use count of the shared code decrements from three to two as the second process continues to edit. When the second process finishes editing, it terminates execution of the `ed` program. The use count of the shared segment decrements from two to one. Note that even though no process is accessing the shared code, its use count does not decrement to zero. The shared code remains in memory; the memory is not freed for other uses.

To return the use count of a "shared", "sticky" program to zero, the super-user must set the mode bits of the file containing the program such that the sticky bit is no longer set. When the program is again executed, the system recognizes that the sticky bit is no longer set and decrements the use count.

Shared Code: Benefits vs. Cost

Shared code significantly reduces the amount of memory required for process partitions when multiple processes are executing the same program. There is no cost associated with sharing code unless the file containing the shared code has its sticky bit set, or the system segment table overflows due to an excessive number of shared objects. In this case, the code occupies memory in the system partition whether the code is being used or not. Consider making such code virtual as well as shared and "sticky". Since the number of shared code segments in the system is limited by the number of entries in the shared system segment table, overuse of sharing can result in system segment table overflow errors.

Demand Load

Programs often contain routines and code which are rarely accessed. For example, error handling routines can comprise 80% or more of some program code and yet may be rarely accessed. As mentioned previously, when a program is loaded, it is copied in its entirety into main memory. If the unused code segments are a significant portion of the program, the memory allocated for that code is wasted.

With HP-UX, it is possible to mark code segments, data segments, and data pages (discussed later) as **demand loadable**. When a demand loadable segment is requested to be loaded, no segments are actually loaded. Instead, a bit is set specifying that the segment is demand-loadable; the system is “fooled” into believing that the segment is actually present in memory even though it is not. No memory is allocated for the non-loaded segments until those segments are actually accessed. Only when the program attempts to access a demand-loadable segment is memory actually allocated and the segment loaded from disk.

To make code demand-loadable, mark the segments that you want demand-loadable when the compiled code is linked (via the `-z` option of the `ld` command). Alternately, you can use the `/usr/bin/chatr` command to mark an existing executable file as demand-loadable. You can change a demand-loadable file such that it is no longer demand-loadable by using the `chatr` command.

Demand Load: Benefits vs. Cost

Making code segments demand-loadable reduces the amount of memory allocated for a user's partition. However, the program may actually take longer to execute than a program that is not demand-loadable if many of the demand-loadable segments are accessed.

Note that memory blocks are not allocated until the segment is actually accessed. Thus, if there is insufficient memory for the segment, an error will occur while the program is running; the program fails. If the demand-loadable attribute is not used, the lack of memory is detected when the program is loaded (because memory is allocated when a program is loaded).

Paged External Data Segments

A limitation of virtual memory as discussed so far is that all of an external data segment used by a program must be resident in memory when that segment is accessed. Suppose that you have written a program to analyze 30 Mbytes of data. (For example, finite element analysis programs and circuit analysis programs both use extremely large quantities of data.) That means that when your program runs, all 30 Mbytes of data need to be present in a process' partition, if the data was allocated in one un-paged EDS. However, your system does not have enough memory to hold the data. Even if the system had 30 Mbytes of memory to map into the partition, your program would be using so much memory that other users would not be able to do anything. Typically, you only need to access a small portion of that data at any one time. The remainder of the data simply sits in memory, occupying system resources. To solve this problem, HP-UX allows virtual external data segments to be **paged**.

A **paged segment** is a segment that is divided into parts of a fixed size called **pages** (1024 bytes is the default). The segment table, instead of storing the size and location of the entire segment (as is the case with un-paged virtual segments), stores a pointer to a page table. A **page table** is an ordered table indicating the address of each page in memory for the segment. If the page is currently on the disk, then the page table stores its disk location. The virtual memory system then moves virtual pages in and out of memory as needed, just as the virtual memory system moved entire segments in and out of memory in the previous discussion.

Not all pages of a segment have to be in memory at any given time. Thus, only a portion of a segment must be in memory at any given time, not the entire segment. This allows the segment to be larger than the size of memory, and still be accessed by the process; only the page being currently accessed must be resident in memory. Additionally, since each page is uniform in size, the virtual memory system can easily decide where to place the pages in memory. If one page is removed, then any other page can fit into its place.

The memory used for the pages of all the paged segments is allocated from a kind of memory "parking lot", called the **page frame pool**. When an executing program needs access to a paged external data segment, the system allocates the appropriate number of pages in the page frame pool and loads only that data into the pages. The memory pages are returned to a "free list" in the system's page frame pool when the process terminates.

When a new page is needed (a non-memory resident page is accessed) and there is not enough memory in the page frame pool, a page is swapped out to the virtual memory device. When a page is needed and is not resident, it is swapped in from the virtual memory device.

All paged segments in the system compete for the use of pages in the page frame pool. If no paged segments are active, then memory allocated to the page frame pool can be used for segments (for example, mapped to a process' partition) until the memory is needed by a paged segment. The maximum size of the page frame pool (and the size of each page) is determined by the system configuration. Page sizes are powers of two in the range 512 to 8 192. Programs that access pages in sequential patterns usually benefit from larger page sizes, while those that access pages randomly benefit from smaller page sizes.

Pages that are currently in the page frame pool and are entered into the page table for a particular segment are known as **working set pages**. The working set pages are linked together in a per segment list by the virtual memory system. The system provides a method to guarantee that a certain number of pages (called the **guaranteed working set**) are always available for a specific segment.

All pages that are not in the working sets of allocated paged segments fall into three categories:

- **dirty pages** — pages that were removed from a working set and must be written back to the disk before they can be re-assigned to another working set.
- **used pages** — pages that were removed from a working set and were not modified since being read into memory (and thus do not have to be written back to the disk).
- **free pages** — pages that are available for use and have no valid data in them. All pages start out as free pages. If a segment is de-allocated, then all the pages associated with it are placed in the free list.

All pages removed from some segment's working set are placed in either the list of used pages or the list of dirty pages, depending on whether they were modified. The dirty and used lists are maintained for the instance when a page is removed from a working set, is not written back to disk yet, and then is requested again. The dirty or used page can be restored to a working set much faster than if it had to be read back from the disk.

External data segments are automatically specified to be paged when the data objects are lined via the `1d` command. Additionally, you may specify that data is to be paged with the Extended Memory System (via the `ems` system call). You can use the `/usr/bin/chatr` command to specify that an existing paged external data segment is not to be paged.

Page Clustering

The system recognizes three types of paged access:

- sequential
- random
- normal

Sequential accessing occurs when a paged segment is accessed linearly in either direction. Random accessing occurs when there is no pattern or locality associated with the data accesses. Normal accessing has a high degree of locality with occasional occurrences of sequential and random accessing. The performance of sequential accessing can be improved by taking advantage of page clustering.

You can force page clustering by specifying the referencing pattern of an area of process memory as sequential with `memadvise`. Once page clustering is enabled for a paged object, one or more sequential pages will be read into memory whenever a page fault is detected. This reduces the number of page faults that occurs during sequential accessing. You also specify the size of the page cluster with `memadvise`. See the entry for `memadvise(2)` in the *HP-UX Reference* for more information.

With normal accessing (the system default), the system automatically enables page clustering when it detects a series of sequential page accesses. No clustering is ever attempted when a paged segment is marked as random.

Paging Benefits vs. Costs

The chief benefit of paging is that it allows a process to use quantities of data that exceed the physical memory limits of the computer. The maximum amount of memory allocated to the page pool is specified by the system configuration. Memory allocated to the page pool cannot be allocated to process partition(s).

A primary cost of paging data is the time required to read the file each time a page is read from disk. An additional cost of paging data is the time required to access the page. Each time a page is accessed, the process must first access the partition segment table, then access the page table (an external data segment) and then access the page (and possibly wait for it to be swapped in, if it is not already memory resident); access to paged external data segments is slower than accessing external data segments resident in the process' partition.

Combining Memory Management Tools

The memory management attributes previously discussed can be used in any combination, with some restrictions. These restrictions are:

- code segments cannot be paged.
- setting a file's sticky bit affects only the code segments in shared programs.
- global data segments cannot be paged or demand loaded.
- stack segments are always virtual and cannot be paged or demand loaded.

Wise system administration calls for a mixture of the memory management attributes previously discussed. Most program files should be shared, virtual, paged, demand loadable or some combination of these. Your system is shipped with a proper mixture for the "average system". The system configuration, as shipped, is set up for the same "average system". The average system is based on a Series 500 computer equipped with 1.5 Mbytes of memory with an environment of the following four concurrently active tasks:

- compilation of a FORTRAN program.
- random and sequential read and write access to elements in a 2 Mbyte virtual array.
- execution of a computationally intensive program.
- invocation of interactive commands (such as editing or listing the contents of a file).

By changing the mixture, altering the system configuration and observing the change in system response, you can "tune" the system for the optimum response for your application mix.

The Buffer Cache

Program code and the data which it uses must be transferred from disk into physical memory before it can be executed. The manner in which code is transferred depends on the attributes of the code and the manner in which the code is executed. All code executed via the `exec` system call is transferred into the process' partition via a buffer called the file system buffer cache. Additionally, most data that is read from or written to disk is transferred through the file system buffer cache.

The file system buffer cache is a collection of one or more buffers which the system uses as a temporary holding place for code/data being transferred between the disk and physical memory. The size of each buffer and the number of buffers in the cache is specified when the system is configured. As the code and data are moved into the buffer cache, the system copies the information from the buffer cache into the user's partition.

The buffer cache can be thought of as a long tube (with sections of uniform size) that is shared by all processes. When code and data are loaded into the system, the system reads a portion of the file, equal in size to one buffer and places it in the tube. The system repeats this procedure until the entire program is transferred. When another program is loaded, it is placed into the tube behind the previously loaded program. This continues until there is not enough space in the file system buffer cache to load the next program. At that time, the last recently accessed program is removed from the cache until there is enough room to load the new program.

If a user requests a program that is already in the buffer cache, the program is copied from the cache to the user's partition, eliminating the intermediate step of copying the file from disk to the buffer. The copy of the program in the buffer cache is then moved to the beginning of the cache, indicating that it is the most recently accessed program (and thus placing it last in the queue to be removed from the cache).

The primary advantage of the file system buffer cache is the speed with which large numbers of sequential reads are made to a data file. This advantage is largely due to an attribute of the file system buffer cache, called the **read ahead level**.

Read Ahead Level

The file system buffer cache has an attribute called the **read ahead level**. It is applicable primarily to users who are reading data from the disk with system calls. The read ahead level is the number of “buffers-full” of contiguous data the system should attempt to copy per disk access. For example, assume the read ahead level is four and a user is attempting to read 256 bytes of data from a file (via a system call). When the file is accessed, you would expect only the requested number of bytes to be copied into the buffer cache and then into the user’s partition. However, because the read ahead level is four, the system attempts to copy enough data to fill four cache buffers. Only the requested 256 bytes are copied from the cache into the user’s partition. The remaining data stays in the cache in anticipation of the user’s next data read request. Since the system has to access the disk (a time consuming process) to copy the requested 256 bytes, it might as well copy some additional data (up to a maximum specified by the read ahead level) the user is likely to need.

Data accessed in this manner must be contiguous and accessed sequentially. For example, assume a user is attempting to access 256 bytes of data from a file consisting of two extents (the first extent contains 2 Kbytes, the second contains 3 Kbytes). Also assume that each cache buffer is 1 Kbyte in size and that the read ahead level is four. When the user reads the first extent to access the requested 256 bytes, the system examines the read ahead level and attempts to copy 4 Kbytes (4 x 1K/buffer). However, after copying the first 2 Kbytes of data into the cache, it encounters the end of the extent and terminates the copy. Thus, only 2 Kbytes of data were copied into the buffer cache.

The File System Buffer Cache: Benefits vs. Cost

The primary benefit of the buffer cache is the increased speed with which large numbers of sequential or repeated data accesses are made. When the first of such transfers is made, the system recognizes that a sequential access has begun and attempts to read enough additional data to fill the read ahead level. Then when additional sequential accesses are made, the data is already present in memory, in the file system buffer cache. Thus less time is required to access the data after sequential access is detected.

Transferring a program from the buffer cache to a process’ partition is much faster than transferring a program from disk, through the buffer cache, to a process’ partition. Thus by increasing the size of the buffer cache, more program and file data can be held in memory and the apparent system response time decreases. However, memory used by the system cache is unavailable for use in user partitions and thus decreases that precious system resource. When the file system buffer cache exceeds a certain size, system performance begins to decrease since less memory is available for other system functions.

A major factor in determining the ideal size of the file system buffer cache is the amount of memory in the system. For a system with 2.0 — 2.5 Mbytes of RAM, performance begins to degrade when the cache is larger than 50 - 100 Kbytes. However, for a system with 4.0 - 8.0 Mbytes performance may not begin to degrade until the cache exceeds 200 - 800 Kbytes. The ideal size for the buffer cache also depends on such things as the amount of sequential data access performed and the speed of the disk drive. By default, the system chooses a reasonable size buffer cache based on the available memory in the system. The system administrator can alter the default size if she desires.

As a rule of thumb, consider that as the size of the buffer cache increases, the probability of accessing a segment via the cache increases and the probability of accessing a segment via the disk decreases. However, as the size of the cache increases, the amount of physical memory available decreases (thus decreasing the performance of other processes).

Peripheral Device I/O

HP-UX treats Input/Output (I/O) to a peripheral device in the same fashion as I/O to a file. In fact, before your computer can “talk” to a device, a file (called a device file) must be created. This file defines the location of the device and the manner in which the computer and the device must communicate. Device files are created with the `mknod` or `mkdev` commands and are usually stored in the `/dev` directory. To communicate with a device, simply redirect input from, or output to, the device file. The computer then uses the information contained in the special file to manage all transfer of data between it and the device.

Device Classes

All I/O devices can be classified as either block or character devices. Block devices are devices which transmit and receive data in blocks (typically 1 block = 1024 bytes, but the size of a block, is specified when initialized). Typically, block devices are disk mass storage devices. However, a disk’s built-in cartridge tape drive (available with HP 7908, HP 7911, HP 7912 or HP 7914 disk drives) and other magnetic tape drives are occasionally used as block devices. Character devices include any device which is not a block device, including printers, plotters, terminals, magnetic tape drives, and paper tape punches/readers. Disk mass storage devices are occasionally treated as character devices, even though they normally operate as block devices.

Drivers

The `mknod` command creates a device file from a driver number (also called **major number**), an address (also called **minor number**, and is defined next) and a driver. A driver is compiled code (supplied with your system) which defines the protocol and handshaking that allow an I/O device and the computer to communicate. For more information on drivers refer to the section “Modifying the Boot Area” in the “Toolbox” chapter. For more information on the `mknod` command refer to the section “Adding/Moving Peripheral Devices” in the “Toolbox” chapter.

Address

An address is a set of values which specify the location of an I/O device to the computer. The address is composed of up to four hexadecimal fields; the select code field, the bus address field, the unit field, and the volume field. An address is specified in a packed field that has the form:

`0xScAdUV`

- 0x** A two-character field specifying that the following field is a packed hexadecimal field. This must be typed in as the characters `0` (the number 0, not the letter O) and `x`.
- Sc** A two-digit hexadecimal value specifying the select code.
The select code is determined by the I/O slot in which the device’s interface card is installed. Refer to your computer’s installation manual, the section describing the installation of interface cards, for more information.
- Ad** A two-digit hexadecimal value specifying the port number or HP-IB bus address.
The bus address allows the computer to distinguish between two devices connected via the same HP-IB interface. Refer to the manual supplied with the peripheral to determine if the device has an address, and the method in which that address may be changed.
- U** A single-digit hexadecimal value specifying the unit number. The unit number’s meaning depends on the type of peripheral device.
- V** A single-digit hexadecimal value specifying the volume number. The volume number’s meaning depends on the type of peripheral device.

For a precise definition of these fields, refer to the discussion entitled “Adding/Moving Peripheral Devices” in this manual.

The HP-UX Hierarchy

The file system of HP-UX is organized in a tree structure. The base of the tree is the root of the file system, and the file name `/` is associated with the root. Under the root are nine standard directories created when you installed your system: `bin`, `dev`, `etc`, `lib`, `public`, `system`, `tmp`, `users`, and `usr`.

This section describes the basic purpose of the major directories in your HP-UX tree. You will find this useful as you add files and modify your system in the future. As you read the descriptions, reference them to Figure 3-9.

- `/bin`—contains frequently used commands, and those required to boot, restore, recover and/or repair the system.
- `/dev`—contains special device files used to communicate to peripherals. For more information, see *mknod(1M)*.
- `/etc`—all system administrative commands and configuration files reside here.
- `/etc/newconfig`—new versions of customizable configuration files and shell scripts are stored here following an update. You should keep these files intact here for future reference.
- `/lib` frequently used object code libraries and related utilities are placed in this directory.
- `/public`—used for free access of files to other systems via `uucp` or LAN.
- `/system`—contains object code for drivers; also contains the boot area.
- `/tmp`—a place to put temporary files (those normally with short lifetimes and which may be removed without notice).
- `/users`—user home directories go below this directory.
- `/usr`—less frequently used commands and other miscellaneous files are stuck under this directory.
- `/usr/adm`—system administrative data files lay here.
- `/usr/bin`—less frequently used commands and those not required to boot, restore, recover, and/or repair the system go here.
- `/usr/include`—high-level C language header files (shared definitions).

- `/usr/include/sys`—low-level (kernel-related) C language header files.
- `/usr/include/local`—localized C language header files.
- `/usr/lib`—less frequently used object code libraries, related utilities, and miscellaneous data files go here.
- `/usr/local`—localized files should be placed here.
- `/usr/local/bin`—localized commands should go here.
- `/usr/local/lib`—localized object code libraries are placed here.
- `/usr/local/man`—put any on-line manual pages for localized systems in this directory.
- `/usr/mail`—where your mail box resides.
- `/usr/man`—all on-line documentation shipped with your system can be found here.
- `/usr/man/man1 ... man7`—the unformatted version of *man(1)* pages.
- `/usr/man/cat1 ... cat7`—*man(1)* pages already processed to speed access go here.
- `/usr/spool`—spooled (queued) files for various programs.
- `/usr/spool/uucp`—queued work files, lock files, log files, status files, and other files for `uucp`.
- `/usr/spool/cron`—spooled jobs for `cron` and `at`.
- `/usr/spool/lp`—control and working files for the `lp` spooler go here.
- `/usr/tmp`—an alternative place (to `/tmp`) in which to place temporary files; this directory is usually used when there are many files and/or the temporary files may be very large.
- `/usr/contrib`—contains any contributed files and commands (from user groups).
- `/usr/contrib/bin`—any contributed commands are placed here.
- `/usr/contrib/lib`—any contributed object libraries are placed here.
- `/usr/contrib/man`—the on-line documentation for any contributed files, is placed in this directory.

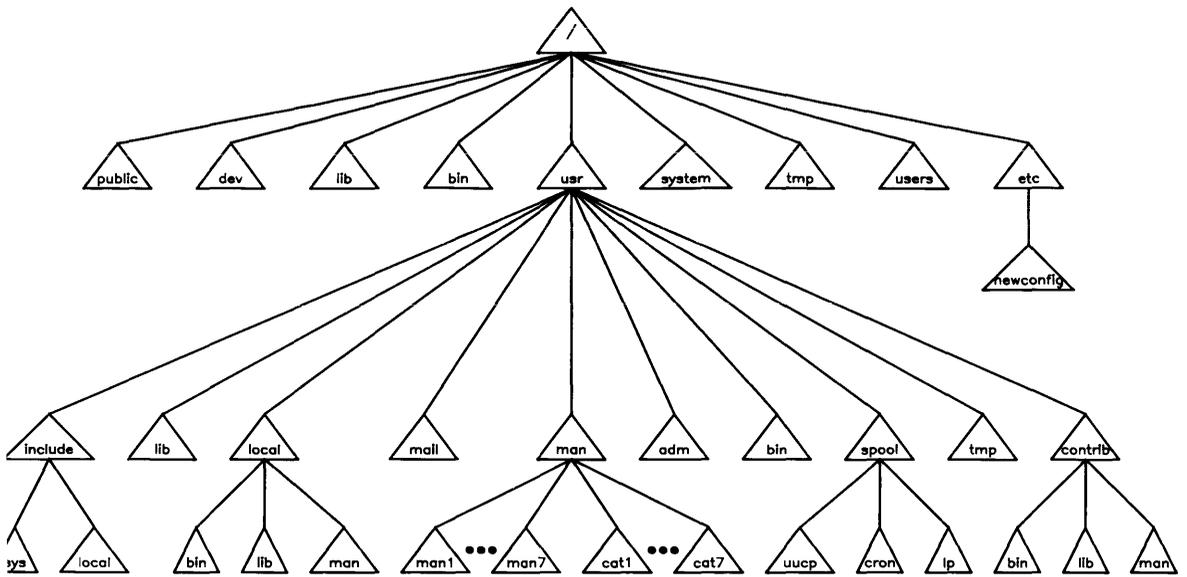


Figure 3-9. HP-UX Hierarchy

Notes

System Startup and Shutdown

From the time you switch on power to the computer until you have successfully logged in, many tasks are automatically performed by the system. These tasks include: testing the computer hardware, loading and initializing the operating system, communicating messages to the user(s), and running scheduled routines. To manage your HP-UX system effectively, you must understand which tasks are performed at which times.

This chapter provides you with a description of the computer's activities from power-up through successful completion of the `login` routine. This chapter also provides a step-by-step procedure for a controlled shutdown of your system. Throughout this chapter, you will learn about features of HP-UX that can ease your role as system administrator.

IMPORTANT NOTE

Always use the `shutdown` command before powering down your system. If you do not you may corrupt your file system. Refer to “Shutting Down the System” in this chapter for details.

System Startup Functions

System startup is often referred to as **booting the system**. Booting the system is getting your computer from a powered down state to a functional state, where HP-UX is running and ready to take input.

This section of the chapter tells how to get your system to a usable state (how to boot the system), and discusses the sequence of events that happens internally (what you don't see on your screen, but what is happening to get your system to the usable state).

Booting the System

This section explains the steps you must follow to boot your system. The details of each step (that is, what happens internally) are discussed in later sections.

System startup is made possible through a general-purpose piece of software called the boot ROM. ROM stands for Read Only Memory. It was specifically developed to support a wide variety of present and future Hewlett-Packard operating systems. Because different operating systems use different aspects of the boot ROM, the following description of the boot ROM's operation focuses on its use with HP-UX.

If you are unfamiliar with the Series 500 boot ROM, read the section later in this chapter called "The Boot ROM" before continuing. This will ensure that the correct operating system and system console are found during the boot procedure.

1. Turn power on to the hard disk drive containing the HP-UX operating system. Wait until the disk drive is ready before continuing with the next step. (Refer to the operator's manual for specifics on when your disk is ready.)
2. Turn power on to all peripherals connected to your computer.
3. Turn power on to your Series 500 computer.

The boot ROM will send messages to your screen. Figure 4-1 shows a typical display of boot ROM messages with an Internal Terminal Emulator (ITE) as the system console, on a Model 550 using an HP 98700 display system. **The display varies depending on the version of the boot ROM.**

```
Loader Rev 4.1
HP-UX Model 550 Release 5.2 (97079C)

Load done.
```

Figure 4-1. Boot ROM Display

4. Once the **Load done** message appears on an HP 98700 display system or on a Model 520, the screen will clear and the following copyright messages appear. The screen will not clear on any other console configuration (for example, an HP 2392a terminal).

```
(c) Copyright 1983, 1984, 1987 Hewlett-Packard Company, All rights reserved.
(c) Copyright 1979 The Regents of the Univer. of Colo., a body corporate.
(c) Copyright 1979, 1980, 1983 The Regents of the Univer. of Cal.
(c) Copyright 1980, 1984 AT&T Technologies. All Rights Reserved.
```

The display varies depending on the version of the boot ROM, and the label placed on the boot area.

The boot ROM searches for the first loadable operating system. Refer to the following section, “The Boot ROM Search Sequence” for information on searching for a loadable operating system.

Once the operating system (HP-UX) is found, the screen will clear and a series of messages will appear. These messages are from the HP-UX loader.

The second to the last line on your screen is a message about executing **fsck**. The **fsck** program checks the integrity of your file system. If the program finds something wrong with your file system, it will try to fix it. If a problem exists in the root file system, **fsck** will attempt to fix it, reboot, then check the rest of the file systems. If the problem is severe, you will be instructed to run **fsck** interactively. In this case, refer to Appendix A.

5. Log into your system.

The system is now ready for use.

On single-user systems or small multi-user systems, it may be useful to allow any user to power up the system. If this applies to your system, write a short document that describes the procedure for booting HP-UX (and changing system states if it applies) and distribute the document to all users. Knowing the specific details of your system—the hardware, configuration files, system states, and needs at your installation—should enable you to write a streamlined procedure for your users. This can ease your administration tasks and provide system users with more flexibility. Typically the system may be booted by simply turning on power to peripherals and the computer.

Overview of Internal Functions of System Startup

When you boot the system (described above), many things happen that you do not see on your screen. The “behind the scenes” startup for the typical HP-UX system follows these stages (each is described later):

1. The boot ROM is started. It tests the hardware and loads an operating system.
2. Control transfers to the HP-UX operating system.
3. HP-UX starts a process called **init**.
4. **init** brings the system to the default run-level, as specified by the `/etc/inittab` file. Unless you have changed your inittab file, this will be run-level 2.

The **init** process also runs the `/etc/bcheckrc`, `/etc/brc`, and `/etc/rc` command scripts.

5. **init** starts processes called **gettys** that give login prompts on terminals.
6. A user logs in.

There is also a mode of HP-UX, called run-level `s`, that can be referred to as a system administration mode. This mode is documented in the section called “System Administration Mode” later in this chapter.

The Boot ROM

On each CS/80 and SS/80 device connected to your Series 500 is a boot area defined when that device was initialized. Operating systems residing in the boot area are marked either as “loadable” or “not loadable” with the `/etc/osmark` command. If you have not modified your system since you installed it, you will only have one operating system (HP-UX) residing in one boot area.

If you are counting on the order of the operating systems found by the boot ROM’s search sequence (described below), make sure the mass storage device containing the operating system has completed its power-up cycle and is ready for use before powering up the computer; otherwise, the order in which the operating systems are found may be different.

If the boot ROM can neither locate nor successfully load an operating system, one or more boot ROM error messages are issued to the system console. These errors are explained in the Installation Guide supplied with the computer. If no messages at all are displayed, suspect a hardware problem in your system. Use the procedures described in the installation manual to verify that a hardware problem exists before calling your HP Customer Engineer for service.

The Boot ROM’s Search Sequence

When the boot ROM searches for an operating system to load, it scans all CS/80 and SS/80 devices connected to your Series 500 which were successfully found in the test phase. HP-UX must both be marked as an operating system and as loadable code. The boot ROM was designed to give removable media first priority (to allow for things like operating system updates), and so any media loaded in a 1/4-inch data cartridge tape drive, removable disc pack, micro-floppy and so on, will be searched for an operating system. Following this, all fixed media are also searched. Lower device addresses (minor numbers) are searched before higher addresses.

Note

The removable disc pack of an HP 7935 drive is treated as removable media by the Rev A boot ROM; Rev B, Rev 4.0, and later version boot ROMs treat this as fixed media.

According to the above priorities, external devices are searched in order of select code; a system at select code 4 would be found before a system at select code 5. Also, multiple units at the same select code and bus address are searched before moving to the next ascending select code or bus address.

To summarize, the search levels in ascending order are:

1. device class (removable media, internal discs, external discs)
2. select code
3. bus address (also called device address)
4. unit number

HP-UX Takes Control

Once the HP-UX operating system has been found and loaded successfully, many tasks are performed automatically by HP-UX. The first task is to search for the root file system. The **root file system** is the portion of the file system that forms the base of the file system hierarchy (that is, the portion of the file system on which other volumes can be mounted). The root file system contains the files required for HP-UX to properly run.

The root file system can exist on any CS/80 or SS/80 mass storage medium supported by Series 500 HP-UX, provided that it has been marked as a root device and has at least 16 Mbytes of storage, but this minimum size leaves little storage space for development work. To mark a device as the root volume, refer to the *rootmark(1M)* entry in the *HP-UX Reference*. If you have not modified your HP-UX system since you installed it, you probably won't have to worry about **rootmarking** or **osmarking** a disk.

Note

The documentation which follows describes the operation of the system as shipped to you; however, by altering certain configuration or system files, any of the following procedures can change. If, for example, you write your own */etc/rc* script, the paragraphs which follow may no longer apply.

HP-UX Starts the Init Process

After finding the root file system, HP-UX sets up its first process, `/etc/init`. The `/etc/init` process becomes process one (1) and has no parent. For more information on processes, refer to Chapter 3.

The `init` process reads a configuration file called `/etc/inittab`. Each line in the file `/etc/inittab` describes an activity for the system to perform when entering a given run-level. A **run-level** can be described as a set of processes allowed to run at a given time.

After `init` begins, but before it makes the first transition into run-levels 0-6, all entries marked `boot` or `bootwait` are executed. `init` then executes the `bcheckrc` program.

The `/etc/bcheckrc` (Boot CHECK Run Command) program checks to see if the system was properly shut down. To determine if the system was properly shut down, `bcheckrc` calls the `fsck` program. You should never modify the `/etc/bcheckrc` file.

`fsck` checks each file system listed in `/etc/checklist` to see if there might be a consistency problem. To do this, `fsck` looks at a flag called the **clean byte** in the superblock of each file system. When a file system is created, the clean byte flag is set to `FS_CLEAN`. When the file system is mounted (using the `mount` command), the clean byte flag is set to `FS_OK`. During a normal shutdown (that is, during execution of the `reboot` command), the clean byte is reset to `FS_CLEAN`. So, under normal conditions, the file system can be unmounted and `FS_CLEAN`, or mounted and `FS_OK`. (Refer to “Shutting Down the System” later in this chapter for more information.)

If, when `fsck` checks the clean byte, the file system is unmounted and `FS_OK`, the file system might be in an inconsistent state. In this case, `bcheckrc` will run `fsck` automatically using the **preen** mode. This will correct most errors found. (Refer to the discussion on the `preen` mode in Appendix A of this manual.

If the `fsck` command run from `bcheckrc` fails for any reason, `bcheckrc` starts a shell with the prompt (in `bcheckrc`)#, along with instructions to run `fsck` manually. If this occurs, **you must run `fsck` to ensure the integrity of your file system.**

Some file system problems must be fixed manually because of the risk of data loss. When you have completed running the manual `fsck`, you may be instructed to reboot the system. If you are instructed to reboot, **you must follow the instructions exactly to ensure the integrity of your system.** If `fsck` does not tell you to reboot, simply exit the shell by typing `[CTRL] [D]`. The `bcheckrc` program will then proceed.

Init Brings the System to Run-Level 2

Once the booting processes have been run, `init` comes up in the `initdefault` run-level as defined in `/etc/inittab`. The **initdefault run-level** is run-level 2 (as shipped). If `initdefault` is not specified, `init` will prompt the user for a value when the system reaches this point. Refer to the `init(1M)` and `inittab(4)` entries in the *HP-UX Reference* for more information.

Each time `init` changes run-level, either at boot time or when invoked manually, `/etc/inittab` is read. After reading `/etc/inittab` and signalling processes as required, a line in `/etc/inittab` invokes `/etc/rc`.

A file called `/etc/mnttab` contains a list of mounted file systems. This file is removed at boot time and during a system shutdown. The `/etc/rc` script checks for the existence of `/etc/mnttab` to determine whether to perform system initialization and to start various **daemon** (background) processes.

Invoking `/etc/rc`

Whenever `/etc/rc` is invoked, the `/etc/rc` script sets the environment variables `PATH` (the default search path that the system uses to find commands) and `TZ` (for time zone). `/etc/rc` next exports the `TZ` variable (using the `export` command). Exporting `TZ` causes `rc` (and any child process of `rc`) to override the default time zone (`EST7EDT`); for more information, refer to the `ctime(3C)` entry in the *HP-UX Reference* manual.

Next, the system console is set up and initialized with the `stty` command to set such attributes as the baud rate, communications protocol, and tab settings.

Contents of `/etc/rc`

You may customize `/etc/rc` to perform functions which you wish to occur every time the system is booted or whenever there is a change in run-level which `init` does not handle. As shipped, the `/etc/rc` shell script:

- Mounts the file systems configured in `/etc/checklist` (refer to `checklist(4)` in the *HP-UX Reference*).
- Sets the host name. This is used by various networking processes.
- Executes the `/etc/cron` program if it exists on your system.

`cron` executes commands at specific dates and times according to the instructions submitted by the `crontab` command (refer to `crontab(1)`).

You may want to add entries using the `crontab` command to automatically and periodically perform procedures such as:

- Backing up the system.
- Calling other HP-UX systems for mail and other `uucp` transactions.
- Executing system accounting commands (refer to Chapter 6).
- Starts the line printer spooling system if you have set it up on your system.
- Preserves editor files (if they exist).
- Removes some temporary files that are no longer needed by the system.
- Starts UUCP if it is set up on your system.
- Saves various logging files (by renaming them) and prints *revision* information about the HP-UX operating system software.

Init Spawns `gettys` to Cause a Login Prompt

Once `/etc/rc` has finished its run-level 2 execution, control returns to `/etc/init` which now executes the commands from the command field of all run-level 2 entries in `/etc/inittab`. Typically, `/etc/inittab`'s run-level 2 command field entries consist of `/etc/getty` commands, one for each terminal on which users are to log in. This sets up, on each terminal, the process that runs the login program and eventually runs the shell program once someone successfully logs in.

The `/etc/inittab` entries are of the form:

```
id:rstate:action:process
```

where `id` is a unique two-character identification code, `rstate`, specifies the run-levels to which this entry applies, `action` tells `init` what to do with the entry, and `process` is an HP-UX command to execute. Run-levels are described in *inittab(4)* of the *HP-UX Reference*.

The action **respawn** tells **init** to continuously re-create a **getty** process at the console in the specified run-levels. Leaving the **rstate** field empty (as shown below) will cause execution in all run-levels (0 through 6). The example below sets up a **getty** process for the console in all possible run-levels:

```
co::respawn:/etc/getty console H
```

As shipped to you, **/etc/getty** is invoked only for the system console in run-level 2. You will need to customize your system by adding additional **gettys** to **/etc/inittab** for each terminal supported by your system. (Refer to “Adding Peripheral Devices” in Chapter 5 for more information.)

The **/etc/getty** command is the first command executed for each login terminal. It specifies the location of the terminal and its default communication protocol, as defined in the **/etc/gettydefs** file. It prints the **/etc/issue** file (if present) and it causes the first **login:** prompt to be displayed. Eventually, the **getty** process is replaced by your shell’s process (refer to the following section, “A User Logs In”).

When that process is terminated (when you log out), the **/etc/init** process is signalled and takes control again. **init** then checks **/etc/inittab** to see if the process that signalled it is flagged as continuous (“respawn”) in the **inittab** entry. If the process is continually respawned, **init** again invokes the command in the command field of the appropriate **inittab** entry as described above (that is, the **getty** runs and a new **login:** prompt appears). If the process is not flagged as continuous, it is not restarted.

Note

Do **not** add **/etc/getty** entries to **/etc/inittab** for terminals which are not present. If you do, the **getty** process will repeatedly send an error message to the console, wait 20 seconds, and then exit.

A User Logs In

The tutorials supplied with your system describe how to log in (gain access to the system). This section describes the function of the operating system during that process.

1. The login process begins when you type in a user name in response to the `login:` prompt. Once the user name has been entered, `/etc/getty` executes the `login` program with the user name as an argument; `/bin/login` checks the name against the list of valid user names kept in `/etc/passwd`.
2. If the user name is valid, `login` checks to see if there is a password associated with the user name (the encrypted form of the password is stored in `/etc/passwd`). If there is a password associated with the user name, the system prompts for a password. The password typed in is encrypted and compared to the encrypted password stored in `/etc/passwd`. If a valid user name is entered and that name has no password associated with it, the user is logged in without further prompting.

For security reasons, if the user name entered is invalid (it is not found in `/etc/passwd`), the system still prompts for a password before denying access to the system. This makes it more difficult for an intruder to find and use a valid user name. Once access is denied, `login` displays its `login:` prompt and waits for another user name to be entered.

If you wish to keep track of all bad login attempts, create a log file called `/etc/btmp` by entering (while the `root` user):

```
touch /etc/btmp
```

If this file exists, the system uses it to log unsuccessful login attempts. You can read this file (using the `lastb` program) to help determine if unauthorized users are attempting to login.

The system also keeps track of all successful logins and logouts in a log file called `/etc/wtmp`. If this file is created, you can look at the login and logout information using the `last` command.

3. The `login` process sets numeric user and group IDs. The values are taken from the values supplied in the user ID and group ID fields of the `/etc/passwd` file.
4. The `login` process sets the current working directory to that supplied in the home directory field in `/etc/passwd`.

5. The `login` process executes (using the `exec` system call) whatever command is present in the command field of your `/etc/passwd` entry. Any command may be placed in the command field of `/etc/passwd`. Typically, the command invokes a shell for the user. The most common shells are `/bin/sh` and `/bin/csh`. If no entry exists in the `/etc/passwd` command field, `/bin/sh` is executed by default.

You may wish to execute an application program for the user. This is advisable when the user has no knowledge of HP-UX and only wants to use the system to run a specific application. For example, suppose that an inexperienced user wants to access HP-UX only to run the program `testx` (a program written by your company that tests widgets). The program is contained in his login directory. You might add an entry to `/etc/passwd` of the form:

```
john::135:12::/users/john:/users/john/testx
```

The name `john` is the user's login name and the values `135` and `12` are his user ID and group ID, respectively. The next entry (between two colons) is reserved for future use. You can use this field for comments. The entry `/users/john` is the user's login directory. The last entry is the command field; it specifies that when the user logs in, the program `/users/john/testx` is automatically run (instead of a shell). In this example, after the user `john` finishes executing the program `testx`, he will automatically be logged off the system.

The same thing happens in the more common case of a user executing a shell: when the shell is terminated with a `CTRL D` or an `exit` command, the user is logged off.

The command field of `/etc/passwd` is also useful for enabling a user to access information without logging onto the system. For example, the system is shipped with a `passwd` entry containing the user name `who` with the command `/bin/who` in the entry's command field. Supplying `who` in response to the login prompt causes a list of all system users (all users currently logged in including the user `who`) to be displayed on the terminal. The user is logged in only for the duration of the `who` program and is logged off when the program terminates. This login lets anyone determine a valid login name; you may wish to delete this entry to provide more security.

As shipped to you, `/etc/passwd` has entries for the users `who` (used as described above), `date` (which executes the `date` command providing handy access to the time and date), and `sync` (which executes the `sync` command). The `sync` command writes all the information contained in the system's I/O buffers (in RAM) to the disk.

6. Assuming a shell was generated in step 5, the shell now executes the system shell script. The **system shell script** sets up a user's environment. The possible system shell scripts are:
 - `/etc/profile` for the Bourne shell (`/bin/sh`) and for the restricted shell (`/bin/rsh`)
 - `/etc/csh.login` for the Berkeley C shell (`/bin/csh`)

As shipped to you, these scripts define and export the environment variables `PATH`, `TZ`, and `TERM`. Since `/etc/profile` and `/etc/csh.login` execute for each user as he logs in and since the super-user (`root`) owns these scripts, you (as system administrator) can modify `/etc/profile` and `/etc/csh.login` to change and export each user's default settings for the environment variables. This is ideal for forcing the execution of commands that each user should execute at login.

For example, `/etc/profile` and `/etc/csh.login` (as shipped to you) assume that `/etc/motd` (message-of-the-day) contains one or more messages and sends the contents of that file to each user's terminal at login (via the `cat` command; the output appears on the user's standard output). To change the message sent to each user, simply edit `/etc/motd`.

Edit `/etc/profile` and `/etc/csh.login` when you want to alter their function. New commands can be added to these scripts; old commands can be removed or modified. Changes made to these scripts do not go into effect until the script is executed. The script is executed automatically at login.

7. `/etc/profile` executes the `stty` command (for the C shell, `.login` executes the `tset` command) to set a terminal's characteristics. In addition, they define the path for the `MAIL` environment variable and they perform the following tasks:
 - Display the message-of-the-day (contained in `/etc/motd`).
 - Use `mail -e` to detect if any mail is present; if there is any mail, the message `You have mail.` is displayed.
 - Execute `news -n` which displays the names of all new files added to `/usr/news` since the last time news was read.

8. The shell executes the user's local environment script if it exists in the user's home (login) directory (note the "." prefix which normally makes these hidden files):
 - `.profile` (for the Bourne shell),
 - `.login` (for the C shell),

Typically, the local environment file is created by the system administrator for each user. Users may customize their local environment on the HP-UX system by modifying the local environment file. Typically, a user uses the local environment file to:

- Set and export (with the `export` command) environment variables such as shell prompts (PS1 and PS2) and the default search path (PATH). In the Bourne shell variables must be exported to have an effect upon subsequent processes. In the C shell, you must use `setenv`.
- Execute commands at login (for example, the `who` command, to see who else is on the system and the `ls` command to list the names of files in the login directory).
- Set terminal options with the `tset` command.

In addition to executing `.login`, the C shell also executes the file `.cshrc` (if it exists) each time a new C shell starts. Many programs (such as `vi`) allow you to start a shell from within the command. This is called a **shell escape**. `.cshrc` would be re-run for a shell escape. `.login` is executed following the execution of `.cshrc`.

9. Now that you have successfully logged in, the shell prints a prompt and waits for your first command.

System Administration Mode

In addition to the normal run-level (run-level 2), HP-UX comes with a system administration mode: run-level `s`. If the `initdefault` entry in `/etc/inittab` is `s`, then immediately you will get a Bourne shell at the console, logged in as `root`. The `bootwait` and `boot` entries in `/etc/bcheckrc` and `/etc/brc` are not executed. In this run-level no `gettys` are issued, nor are any actions taken by the script `/etc/rc`. Additionally, `bcheckrc` and `fsck` do not get executed.

Run-level `s` is a system maintenance run-level. When you shut down your system, you will be in run-level `s`. Other than during system shutdown, **run-level `s` is not recommended by Hewlett-Packard** since certain processes that monitor and check your system do not run in run-level `s`.

Booting Problems

Booting HP-UX (bringing up the system) should be a straight-forward process. However, in case of any difficulties, the following helpful suggestions are provided:

- If for any reason, the boot ROM is unable to find and load an operating system, informational and/or error messages are displayed on the system console. Refer to Appendix B in this manual.
- Remember that the mass storage device containing the HP-UX system must be powered up and have achieved a ready state **before** powering up your Series 500 computer. If the disk drive has not completed its power-up sequence (which may require several minutes on some disk drives), the boot ROM will not be able to access the disk and load the system.
- The boot ROM follows a specific search for the system console.
- The `/etc/bcheckrc` script executes the `fsck -P` command at bootup to check the file systems when the system was incorrectly shutdown. The file system consistency check program (`fsck`) is vital to the maintenance of your file system. If the file system becomes corrupt (whatever the cause), continuing to use the corrupted file system invites disaster. For this reason, if `fsck` finds serious file system errors it will prompt you to re-run `fsck` interactively. Since it is the `/etc/bcheckrc` program prompting you, you will see the prompt:

```
(in bcheckrc)#
```

You must run `fsck` on the corrupt file system to correct the errors. Refer to Appendix A, “Using the `fsck` Command”, in this manual for details on checking the file systems.

Shutting Down the System

Improperly powering down the computer (or an “on-line” mass storage device) can cause the file system to become corrupt. The `shutdown` command terminates, in an orderly and cautious manner, all processes currently running on the system. This allows you to power down the system hardware without adversely affecting the file system.

The `shutdown` command kills all unnecessary processes, forces the contents of the file system’s I/O buffers to be written to the disk (with the `sync` command), unmounts any mounted disks listed in `/etc/checklist`, removes the `/etc/mnttab` file, and takes the system into the system administration mode (run-level `s`). It also will optionally halt or reboot the system.

To shutdown the system from a normal operating mode, perform the following steps:

1. Login as the super-user `root`.
2. Move to the root directory of the file system by entering the command:

```
cd /
```

3. Execute the shutdown command.

The `shutdown` command allows you to specify a *grace_period*, which is the number of seconds you want `shutdown` to wait before terminating all processes. Note that if you have users on your system you should never shut down the system with a grace period of 0. You can also use the `-r` option to automatically reboot the system after reaching run-level `s`, or the `-h` option to halt the system.

The `shutdown` command looks like this:

```
/etc/shutdown [-r|-h] grace_period
```

The `-r` option shuts down the system and automatically reboots the system. The `-h` option shuts down, and halts, the system. This is used for powering down the computer. If you do not specify any options you will be placed in run-level `s`, the system administration mode.

If *grace_period* is non-zero, `shutdown` prompts to see whether you wish to send the standard broadcast message or enter your own message. If you elect to send your own broadcast message, type the message on the terminal. When you are finished typing the message, press `Return`. Then press and hold the `CTRL` key as you press `D` to signify the end of the message.

If *grace_period* is omitted, then after waiting 60 seconds, **shutdown** asks if you want to continue. When **shutdown** completes its task, it displays a message telling you to halt the system when you are ready.

4. If you executed **shutdown -h**, the system will halt, printing a message on the system console that says “halted”. You may now power down the system. The only way to reboot after halting is to cycle power on the system.

If you have not executed **shutdown -h**, you **did not halt** the system. If you wish to power down the system, you can halt the system by typing in:

```
reboot -h
```

5. If you do not wish to power down the system and have not halted the system, you can now perform system maintenance. When you are finished and need to resume normal operating run-level, you should type in:

```
reboot
```

Examples:

- To activate a newly configured kernel you should shut down the system and automatically reboot:

```
shutdown -r grace_period
```

This shuts down the system after *grace_period* seconds, then reboots the same operating system you are currently running.

- If you wish to install an interface card, you must turn power off to your computer. Halt the system by typing (note that this command line has a grace period of 0):

```
shutdown -h 0
```

Wait for the halted message, then turn the power off to the computer.

- If you wish to backup your system after giving your users two minutes to log off, you should change to run-level s by typing:

```
shutdown 120
```

After running backup, bring the system back up with all the daemons running by typing:

```
reboot
```

- If you wish to halt the system from run-level s with no daemons or programs running, type:

```
reboot -h
```

Note

The `shutdown` command does not address NS or ARPA/BSD networking. To understand how to `shutdown` the system when networking is involved, refer to your networking manuals.

Power Fail or Disk Crash Recovery

Since you have invested a significant amount of time installing HP-UX and creating file systems, it is important to maintain the file system to ensure its integrity for your users. Simple daily checks and procedures and correcting problems before they become catastrophic will save you from remaking the entire system. Backup procedures are discussed in Chapter 5, the section “Backing Up and Restoring the File System”. If these procedures are followed on a regular basis, a power failure or disk crash should not be catastrophic.

Likewise, during installation of HP-UX, you were encouraged to create a recovery system. The recovery system will be very important if your system problems are serious enough that the normal system will not even boot. Details on creating and using a recovery system are contained in Chapter 5 of this manual. Unless your disk has already crashed, **it is not too late to create a recovery system right now**. Take the time for this very important procedure.

If your electricity goes off or if you accidentally pull the plug on your Series 500, the computer simply stops. However, because the system was not shut down using the `shutdown` or `reboot` command, `fsck` will run during the next bootup.

If your hard disk crashes or the power fails, then try to boot and run `fsck`. (Refer to Appendix A and to this chapter, the section “HP-UX Starts the Init Process”.) If you can’t boot, use your recovery system. If none of the above work, then call your HP support engineer or re-install and restore your system from backups.

Notes

The System Administrator's Toolbox **5**

Adding/Moving Peripheral Devices	113
Adding/Removing Users	147
Adding to /etc/checklist	154
Backing up and Restoring the File System	156
Changing a Password	170
Changing and Creating System Run-Levels	171
Changing the HP-UX Environment Files	176
Communicating with System Users	184
Configuring the HP-UX Operating System	185
Controlling Disk Use	190
Creating File Systems	191
Creating Groups/Changing Group Membership	193
Creating and Using a Recovery System	194
Media Utilities	205
Modifying the Boot Area	217
Mounting and Unmounting File Systems	221
New Naming Conventions for Device Files	228
Removing Optional Products and File sets	231
Setting the System Clock	232
Setting Up the LP Spooler	235
Updating HP-UX and Installing Optional Products	247
Using Optinstall to Install Optional Products	258

The System Administrator's Toolbox **5**

Organized alphabetically by task or procedure, this chapter is designed to guide you through your designated tasks as the system administrator. Each major heading in the chapter identifies one or more administrative tasks. The procedure supplies at least one method for achieving the stated task. The following topics are covered (refer to the Table of Contents for the page number):

- Adding/Moving Peripheral Devices
- Adding/Removing Users
- Adding to /etc/checklist
- Backing up and Restoring the File System
- Changing a Password
- Changing and Creating System States
- Changing HP-UX Environment Files
- Communicating with System Users
- Configuring HP-UX
- Controlling Disk Use
- Creating File Systems
- Creating Groups/Changing Group Membership
- Creating a Recovery System
- Media Utilities
- Modifying the Boot Area
- Mounting and Unmounting Volumes
- New Naming Conventions for Device Files
- Removing Optional Products and Filesets
- Setting the System Clock

- Setting Up the LP Spooler
- Updating HP-UX and Installing Optional Products
- Using Optinstall to Install Optional Products

Adding/Moving Peripheral Devices

The HP-UX operating system requires the existence of device files to perform I/O to peripheral devices, such as disk drives, printers, tape drives, and terminals. Device files and an associated topic, block and character I/O, are discussed in the “Concepts” chapter of this manual. This section introduces you to the tools necessary to set up peripherals and create their associated device files. The section also discusses terminal hardware configuration and the HP-UX modifications required for communicating with terminals.

During the system installation process, a number of device files were created on your disk. If you have a fairly simple single- or multi-user system, the supplied set of device files may be all that you need. If, however, your system is a large or complex one (with many peripheral devices), you will need to create additional device files to communicate with those devices. You may also want to create new device files or change existing ones if you decide to add or remove particular peripherals at some later date, or if you find it necessary to tune your system by changing the locations (interfaces or bus addresses) of peripherals.

The default set installed with your system contains device files for the system console and device files that are used and required by HP-UX to communicate with some pseudo-devices; that is, hardware not considered to be peripherals but that requires device files for system communication (such as `/dev/tty`). These latter files must not be removed from the system under any circumstances, if HP-UX is to operate properly.

To see all of the currently installed device files on your system, log in on the system and type:

```
ll -R /dev
```

The system will respond by listing all the files under the `/dev` directory. The listing should include all of the files shown in Table 5-1. The table also includes brief explanations of the devices associated with these files and other useful information.

Table 5-1. Default Device Files

Device	c/b	Major	Minor	Notes
console	c	31 ¹	0xScAd00	System message port
syscon	c	31 ¹	0xScAd00	System console (linked to console)
systty	c	31 ¹	0xScAd00	System tty (linked to console)
tty	c	20	0x010000	Process group control terminal
null	c	15	0x000000	Null file ("bit bucket")

Before delving into the software aspects of adding/moving peripheral devices, be sure your peripheral hardware is set up correctly. The guidelines given in the Installation Guide supplied with your computer will help you configure your hardware. Make sure that you gracefully shut down your system before you change any of the address switches on your peripherals. To shut down the system, type:

```
/etc/shutdown -h
```

For details on `shutdown`, see the section "Shutting Down the System" in this chapter.

Overview of the Task

There are several basic steps required to add or move peripheral devices to your system. Here is an overview of the tasks you will need to accomplish; they are explained in detail later:

1. Using the guidelines covered in the Installation Guide supplied with your computer and the installation manual supplied with the peripheral device, determine the best place (in terms of HP-IB Bus Addresses, shared sets of I/O resources, expected usage, etc.) to locate the peripheral.
2. Connect the peripheral device. If the peripheral device requires an interface card, set the appropriate switches on the card and install the card in the computer. **Never install an interface card while the computer is powered up.** Then set any required switches on the device and connect it to the computer (or interface card). If you ever change the switch settings on an HP-IB device, be sure to power cycle the device before attempting to address it.

¹ Use major number 31 for consoles attached to the HP 27128 or HP 27130 interface cards and major number 29 for all others.

3. Ascertain whether the peripheral device will be addressed as a block or character device, or both (disk drives will require both modes of access). Block and character I/O are discussed in the “Concepts” chapter in this manual, and examples are provided later in this section.
4. Next, determine if the device file necessary to communicate with the peripheral device already exists on your HP-UX system. Some device files were shipped with your system and are shown in the table above. Default files reside in the `/dev` directory and follow the naming conventions explained in the *intro(7)* entry in the *HP-UX Reference* manual.
5. If the appropriate device file does not exist for the device in question,, you will have to create one. There are two ways to create device files — using the `mknod` command to create a particular device file or editing, then executing the `mkdev` shell script to create one or more device files. Your choice of which method to use depends on how many device files you need to create and how experienced you are at the process of creating them. Use the `mkdev` script or the tables given later in this section to get the parameters (major and minor numbers) needed by `mknod` to create the device files.

Determining the Peripheral’s Location

If the peripheral you wish to add/move is an HP-IB device, determine the select code and bus address where the device will reside. The Installation Guide supplied with your computer lists several guidelines to help you identify an appropriate location for your HP-IB peripheral. The guidelines for interface selection are reviewed here; you should still consult your Installation Guide to determine all available HP-IB bus addresses for devices on these interfaces.

- The system root device is usually located at select code 5 on a high-speed HP 27110A or HP 27110B interface card.
- The system printer (if present) should be on a medium- or low-speed HP-IB interface, separate from the system root device.
- A 9-track tape (if present) should be placed on a low-speed HP-IB.
- Avoid putting flexible disk drives on the same interface as the root device.
- Disks other than the root device should be placed on a separate HP-IB bus when possible.
- Graphics devices should be placed on low-speed HP-IB interfaces when possible.
- If you have an HP 98288A Display Station Buffer (DSB) board with a model 550, it must be installed in main processor board slots 4, 5, 6, or 7 by your HP Customer Engineer. This is usually bundled with the HP 98700H display station system.

Connecting the Peripheral

Connect the peripheral to your computer at the location you have just determined. The computer's Installation Guide provides instructions for installing an interface card and identifying its select code. The manual supplied with the peripheral details the procedure for connecting it to the computer and setting its address if it has one.

Terminal hardware configuration is covered in the computer's Installation Guide. You must create the associated device files for the terminal as well as follow the instructions at the end of this section to set up the software aspects of terminal configuration.

CAUTION

Do not attempt to unpack and connect a CS/80 disk drive (other than the HP 7908) yourself. The CS/80 disk drives are packed to prevent damage during shipment. To prevent damage to the device, an HP Customer Engineer must unpack, install and test the device.

Block versus Character Device Files

Determine whether you should create a **block device file** or a **character device file**. **Block device files** are used for communicating with disk mass storage devices that are to be used for mountable file systems. Block device files are also used for mounting a file system from a supported cartridge tape drive. However, mounting a file system from a cartridge tape drive is **NOT** a recommended procedure due to excessive wear on both the tape drive and the tape medium.

Character device files are used for communicating with terminals, printers, plotters, digitizers, magnetic tape drives, and, on occasion, disk mass storage devices. Communicating with a mass storage device (such as a disk) with a character device file causes the system to treat the disk like a magnetic tape drive (see the *disk(7)* entry in the *HP-UX Reference*) and the "Concepts" chapter of this manual. If you are going to use the `tar`, `tcio`, `cpio` or `dd` commands to write to tape, you will need a character device file.

In most cases, disks should have both block and character device file entries. All other devices should have only character device files.

Creating Device Files

If, by examining the entries in the `dev` directory, you have determined that the appropriate device file for the peripheral does not already exist, you must create one. Device files are created with the `mkdev` script or, alternatively, with the `mknod` command. `mkdev` is a shell script that uses the `mknod` command to create one or more device files; it allows you to create device files for every allowable address and device combination. It is also a source of information for parameters that you need to execute the `mknod` command. Those parameters are also given in tables later in this section. Before using `mkdev`, you must customize it (by editing the file) to select the device files to be created and to adjust their associated parameters.

The remainder of this subsection explains how to use the `mknod` command to create device files. While reading the remainder of this material, you may find it handy to have available a copy of `/etc/mkdev`.

To create a device file with the `mknod` command, you need to login as `root` and make an entry of the form:

```
/etc/mknod path_name file_type major minor
```

where *path_name* is the pathname of the device file to be created. You should select a file name for the device file which easily identifies the associated peripheral. The entry *intro(7)* in the *HP-UX Reference* manual describes a naming convention for device files. Using this naming convention makes your system easier to support and maintain. Device files are kept in the directory `/dev` for ease of housekeeping. Additionally, many commands expect to find device files in `/dev` and will fail if the required device file is not there.

file_type is a single character `b`, `c`, `n` or `p`; `b` specifies that the file is a block device file, `c` specifies that the file is a character device file, `n` specifies that the file is a network device file and `p` specifies that the file is a named pipe. See *mknod(1M)* for making network device files.

major is the number of the kernel driver used to communicate with the peripheral. A table of all major numbers is provided later in this section.

minor is a value specifying the actual address on the I/O bus. The minor number is made up of the select code, bus address, unit and volume numbers. The parts of the minor number are described in more detail in each device's section.

Be aware that the `mkdev` command automatically handles other aspects of the creation process besides executing `mknod` commands. These aspects include setting up the correct access modes on device files.

If you choose to use the `mknod` command (instead of modifying, then executing the `mkdev` script), determine the needed major parameters from the tables given later in this section. Follow the guidelines in the “Setting Appropriate Permission Masks” section to insure that correct access modes are set on the device files you create.

Using the `mkdev` Script

Before using `mkdev`, first make a copy of the file `/etc/mkdev` for archival purposes by typing:

```
cp /etc/mkdev /etc/mkdev.old
```

Now that you have saved an untouched version of the command (the file `/etc/mkdev.old`), you can use any of the HP-UX text editors to edit the “working version” of the script (the file `/etc/mkdev`). Customize it by following the instructions below and by using the detailed comments contained in the script. The commented script itself is a good source of information. Be certain the changes you make do not defeat the script.

Note

You must edit and customize the `/etc/mkdev` file before using it.

After you have modified the file, you can execute the script by logging in as `root` and typing:

```
/etc/mkdev
```

Alternatively, you can save the informative and diagnostic messages produced by the script for later examination. This is accomplished by redirecting a copy of the output to a file, as well as the screen. To redirect output to a log file, type:

```
/etc/mkdev | tee log_file
```

where *log_file* is the path name of the file where you wish to receive diagnostics.

After you have executed the `mkdev` script, you can examine the results by typing:

```
ll -R /dev
```

This “long” listing gives you information about all of the parameters that were used to create the device file. For example, you should see an entry similar to the following:

```
crw--w--w-  1 root    other    31 0x000000 May 20 09:30 console
```

The first character in the entry tells you whether the device file is a character (**c**) or block (**b**) device and the next series of characters represent the file’s access permissions. The major and minor numbers are the two numbers contained in the size field, in this case 31 and 0x000000 respectively (refer to the *ls(1)* entry in the *HP-UX Reference*).

If you make a mistake, delete the device files you wish to change and re-create them by editing and executing the `mkdev` script again. You should be aware, however, that deleting some of the default device files contained in `/dev` will cause severe problems because the system needs these files to operate properly. For example, you will not be able to access your root device if you delete its device file.

Editing the `mkdev` Script

The `mkdev` script contains a series of `mknod` “templates” for creating every allowable device/address combination. They are called templates because they are models that must be modified to reflect the actual parameters you want associated with the peripheral’s device file.

The script is organized into device classes. Separate sections and templates exist for: miscellaneous devices, terminals, CS/80 mass storage devices, non-CS/80 mass storage devices, magnetic (9-track) tape devices, printers, general HP-IB devices (plotters, digitizers, graphics printers, etc.), and CRT graphics devices.

Begin with reading the first few pages in the script. These pages describe the overall structure of the script and tell you how to modify it. Then determine what device class a peripheral belongs in and read the information in the script and in the sections that follow.

Before modifying the script, **be sure that you have created an archive copy** as described earlier. In general, modifying the `mkdev` script consists of the following steps:

1. Comment out the lines that read:

```
echo "mkdev: template version -- customize script before using it"
exit 1
```

by adding a comment sign (the `#` character) in front of each line. These lines indicate your intent to run a modified script. The script will not create any device files if you do not eliminate these lines.

2. Find the template or device class that corresponds to the peripheral.
3. Read the script's instructions pertaining to that device class.
4. Decide what name to use for the device file associated with the device.
5. Copy the `mknod` template if indicated by the instructions.
6. Modify the `mknod` template to correspond to the name you chose. Use the *intro(7)* naming convention or one of your own.
7. Fill in any of the template's missing parameters (or placeholders for parameters) where the instructions indicate; this includes the major and minor numbers for some device classes.
8. Remove the comment sign in front of the modified template so the line will be executed when you run the script.

Using `mknod` with the Supplied Tables

The following sections are structured by "device class" and contain the information and tables you need to create device files using `mknod`. These device class sections are sequenced just as in the `mkdev` script.

Each line in the tables (supplied in each device class section) corresponds to either one or two device files; two if the "raw" device entry is given on the same line as the regular entry. These tables use the following representation:

- The **Device** column represents either the literal name of a device file or a symbolic name. If not obvious from context, the section specifies whether the name is literal or symbolic.
- The **C/B** column specifies Character or Blocked access.

- The **Major** and **Minor** columns specify the major and minor parameters to be used with `mknod`.
- There may also be a column for suggested pathnames or notes. The **Notes** column contains commentary for your information only and should **never** be entered as part of a `mknod` command. Under no circumstances should you change any table entries flagged as: **Mandatory (do not change)**.

The rest of the “Adding/Moving Peripheral Devices” section contains:

- A table of all major numbers for each supported device class.
- Guidelines for setting “permission masks” to insure appropriate ownership of and access to device files.
- Specifics on Miscellaneous Devices.
- Specifics on Terminals and Modems.
- Specifics on Consoles.
- Specifics on Pseudo Terminals (pty’s).
- Specifics on CS/80 Hard Disks and Cartridge Tapes.
- Specifics on Magnetic Tape Devices.
- Specifics on Printers.
- Specifics on Plotters and Digitizers.

Table 5-2 shows the major numbers (numbers you need to use in the `mknod` command) for each supported device class. The specific tables in each of the following sections also contain the applicable major numbers.

Table 5-2. Major Numbers for Device Classes

Major	Device Class
1	All CS/80 type mass storage devices.
6 ²	8-inch HP 9895 flexible disk drives.
8 ²	5¼-inch HP 8290X flexible disk drives.
9 ²	HP 9885M/S flexible disk drives.
10 ²	Memory disk configured by <code>sdinit</code> .
11 ²	HP 7970 magnetic tape drive.
12	HP-IB devices, except CS/80 mass storage, CIPER protocol printers, or laser printers.
14 ²	CIPER protocol printers.
15	Null device.
18 ²	HP 27112A GP-IO interface card.
19 ²	Raw transfer to ASI or 8-channel MUX interface cards (see 31).
20	<code>/dev/tty</code>
22	Cooked output for HP 2631 type printers.
26	Raw format for the Model 520's built-in thermal printer.
28 ²	Models 520B and 520C graphics displays.
29 ³	Model 520 built-in console, HP 98700 console, 6-channel modem MUX, and the slave side of a pty.
31 ²	Normal ASI and 8-channel MUX interface cards.
32 ²	Model 520 standard color display and the HP 97062 color output interface.
33 ²	SRM (Shared Resource Manager) interface.
34 ²	HP 2285 EtherNet interface.
35 ²	HP 2680 and HP 2688 laser printers (not HP 2686).
36 ²	HP 7974 and HP 7978 magnetic tape drivers.

Table 5-2. Major Numbers for Device Classes (Cont.)

Major	Device Class
37 ⁴	Model 550 internal HP-IB.
38 ²	HP 27125 EtherNet interface.
39 ²	HP 27125 IEEE 802 interface.
40 ²	HP 2285 IEEE 802 interface (see 34).
41 ²	HP 98700 raw 8042 HP-HIL.
42 ²	HP 98700 HP-HIL devices.
43 ²	ITE (internal keyboard emulator) keyboard.
45 ²	Master side of a pty (see 29).

Setting Appropriate Permission Masks

Each device-class-specific section in the `mkdev` script shows a permission mask. If you use the `mknod` command instead of the `mkdev` script, make sure that permission masks and a few other items (automatically handled by the `mkdev` script) are properly set up.

You can do this by setting the appropriate protection mask for the device class you are creating before creating the device, or by creating the device file, then performing a `chmod` on the file.

The `mkdev` script sets up two permission masks:

```
defumask=111
restrictedumask=166
```

In the script each device class section has one or more lines such as:

```
umask $defumask
or
umask $restrictedumask
```

When not using the `mkdev` script, you must use the correct permission mask so the device file(s) will have correct access permissions.

² This is an optionally installed driver. See the section on installing optional products which follows in this chapter.

³ This driver accesses optionally installed system segments—see the section on Modifying the Boot Area in this chapter.

⁴ This driver is optional if the root disk is not on the internal HP-IB card. However, if the root disk is on the internal HP-IB, then this driver is required.

Miscellaneous Devices

The device files associated with the miscellaneous device class are precisely those default device files that the system needs in order to run properly. Each HP-UX installation must have the device files `/dev/null`, `/dev/console`, and `/dev/tty`. The device file `/dev/null` is a null file (a “bit bucket”) used by many HP-UX commands. The device file `/dev/console` identifies the system console and the device file `/dev/tty` is a synonym for the control terminal associated with a process group.

These miscellaneous device files are copied to your system when HP-UX is installed. They should not be changed or modified. If one or more of these files is accidentally deleted or otherwise destroyed, you can recreate it by editing the `mkdev` script and removing the comment sign (the `#` character) from in front of the corresponding entry. Alternatively, recreate it with the `mknod` command using the character/blocked designation, major, and minor numbers given below.

Three default device files are shown in Table 5-3. If you need to recreate them, you must use `umask 111` before executing the `mknod` command.

Table 5-3. Default Device Files

Device	c/b	Major	Minor	Notes
console	c	31	0x000000	Mandatory (do not change)
tty	c	20	0x010000	Mandatory (do not change)
null	c	15	0x000000	Mandatory (do not change)

For example, to recreate the device file for the `null` device, log in as the user `root` and type the following lines (each followed by `[Return]`):

```
cd /dev
/etc/mknod null c 15 0x000000
```

There needs to be a `/dev/systty` (which is linked to `/dev/console`), and a `/dev/syscon` (which is linked to some terminal—usually the console). This is explained in *init(1M)*.

Memory Volumes

Creating a device file using driver number 10 enables you to treat a portion of your computer's RAM as if it were a disk device. Once a memory "disk" has been created, it may be treated just as any disk device. It can be mounted, for instance, or used to contain a boot area. It can also be used to test procedures which access a disk frequently, enabling you to avoid disk delays during testing. One obvious difference is, since a memory volume is made up of RAM, it cannot survive a system power-down.

Table 5-4. Treating RAM as a Disk Device

	Suggested Pathname	C/B	Major	Minor
Raw Memory Volume	/dev/rmdU	c	10	0x0000U0
Block Memory Volume	/dev/mdU	b	10	0x0000U0

When creating a device file for a memory "disk", the select code, bus address, and volume number parameters are ignored. The hexadecimal **unit** number is used to create multiple memory "disks" (a maximum of 16 "disks" are allowed). For example, the command:

```
/etc/mknod /dev/rmdc c 10 0x0000c0
```

creates a character device file called `/dev/rmdc`, which can now be used to communicate with a portion of your computer's RAM as if it were a disk. The amount of RAM allocated to a particular memory volume is set by the **interleave** parameter of **sdinit**. This number is specified in 512-byte blocks. 2047 is the largest number of blocks ("sectors") you can specify. Using 0 will destroy the volume. Note that memory allocated to a memory volume is **not** virtual, and thus is unavailable for any other use. A memory volume must be initialized before it can be used.

To de-allocate RAM from a memory volume and return it to the system, re-initialize the memory volume (using **sdinit** with a *blocksize*, *bootsize*, and *interleave* of zero), as in:

```
sdinit /dev/rmdc 0 0 0
```

Terminals and Modems

Communication ports — user terminals as well as modems — need to be identified by one or more device files, depending on the intended use of the port. Device `ttys` files are required for ports that receive incoming signals (“dial in” modems); `tty` files are required for terminals (hard-wired ports). Ports that transmit signals (“dial out”) require `cua` and `cul` device files.

The following entries require that `umask 111` be executed before using `mknod`. The general template for ports is shown in Table 5-5.

Table 5-5. Port Information for `mknod`

Device	c/b	Major	Minor	Notes
<code>ttyxx</code>	c	<i>M</i>	<code>0xScAd0V</code>	<i>Sc</i> , <i>Ad</i> and <i>V</i> are explained below
<code>ttidx</code>	c	<i>M</i>	<code>0xScAd0V</code>	<i>Sc</i> , <i>Ad</i> and <i>V</i> are explained below
<code>cuaxx</code>	c	<i>M</i>	<code>0xScAd0V</code>	<i>Sc</i> , <i>Ad</i> and <i>V</i> are explained below
<code>culxx</code>	c	<i>M</i>	<code>0xScAd0V</code>	<i>Sc</i> , <i>Ad</i> and <i>V</i> are explained below

xx a two-digit line identifier

M the major number (29 for the HP 27140, and 31 for the HP 27128 or HP 27130)

0x shows that the following number is hexadecimal

Sc the select code of the interface being used (the slot number the interface card is in)

Ad the port address for each port, beginning with number 0.

If you are using a single port interface such as the HP 27128A ASI card, the port address will be `00` (so the minor number would be `0xSc0000` in our first example above).

For multi-port interfaces such as the HP 27130B eight-channel MUX card or the HP 27140A six-channel modem MUX card, the port address is the RS-232 port number your terminal is plugged into. With, for example, `tty09` plugged into the second port of an HP 27130B interface at select code 6, the correct `mknod` would look like:

```
/etc/mknod tty09 c 31 0x060100
```

- OV The digit before the volume number (*v*) is always 0. The volume number in the device file minor field, has special meaning with ASI and MUX cards. *v* should always be a zero (0) for the HP 27130 8-channel MUX. To properly configure your system to talk to modems and data links via ASI and 6-port modem MUX cards, refer to Tables 5-6 and 5-7.

Table 5-6. ASI Volume Numbers

Bit Order	When Clear (0)	When Set (1)
3	Ignored	Ignored
2	Ignored	Ignored
1	Simple Protocol (United States)	CCITT Protocol (Europe)
0	Dial-in (Direct Connect)	Dial-out

Table 5-7. MUX Volume Numbers

Bit Order	When Clear (0)	When Set (1)
3	Ignored	Ignored
2	Ignored	Direct Connect (overrides bit 0)
1	Simple Protocol (United States)	CCITT Protocol (Europe)
0	Dial-in	Dial-out

HP-UX associates the system console port with the device file `/dev/console`. This may or may not be an ITE (Internal Terminal Emulator).

Example Port Device Files

Assume that you want to create device files for a modem at select code 2 (using an HP 27128A ASI card), and associate it with `/dev/tty04`. Because the modem will be used as a dial-in and dial-out port, log in as the root user and use the following `mknod` command lines:

```
cd /dev
/etc/mknod ttyd04 c 31 0x020000
/etc/mknod cua04 c 31 0x020001
/etc/mknod cul04 c 31 0x020001
```

Notice that the minor number for the `cua` and `cul` device files ends with a 1. There are now three device files associated with the dial-in and dial-out modem at select code 2.

Note

A single-user HP-UX Series 500 system can have a maximum of 2 ports: a system console and 1 additional port which is used with `uucp`.

A multi-user HP-UX Series 500 system can have a maximum of 16, 32 or 64 ports—depending upon which license you have purchased. (This is the maximum number of ports that may be used by `login`). For some systems (and for certain applications), using this maximum number of ports may be counter-productive in terms of performance, disk space and available memory.

For setting up ports for UUCP, refer to the UUCP article in *Concepts and Tutorials* for a more detailed explanation.

Terminal Configuration Information

A complete list of the terminals supported by Series 500 HP-UX is provided in the *HP 9000 Series 500 Configuration Information and Order Guide* supplied with your system. The Installation Guide supplied with your computer discusses the hardware aspects of hooking up a terminal to your system. This section offers the software configuration information you need.

After dealing with the hardware hookups, terminals must be configured so they can “talk” to HP-UX. Series 500 HP-UX requires that terminals be configured to have the characteristics listed below. If a particular configuration option is not available on your HP terminal, then the option is already properly chosen (as a default value) by the terminal.

Terminal Parameters

The manual supplied with the terminal describes how to use the function keys to configure the terminal. Generally, you will press a key that chooses the “terminal configuration” option and alter the appropriate fields by answering prompts from the terminal’s configuration program. Configure the terminal with the following values:

Tab=Spaces	NO	RETURN Def	CR
RETURN=ENTER	NO	LocalEcho	OFF
CapsLock	OFF	Start Col	1
ASCII 8 Bits	YES	XmitFnctn(A)	NO
SPOW(B)	NO	InhEolWrp(C)	NO
InhHndShk(G)	YES	Inh DC2(H)	YES

Datacomm Parameters

For datacomm purposes, the following configuration parameters should also be set. The method for setting these values is similar to that outlined above; details are provided in the manual supplied with the terminal.

These configuration parameters must be set the same on your terminal/console as on your system. On the system the parameters can be set temporarily using the **stty** command. They can also be set for your datacomm line using the **/etc/gettydefs** file. When you log in, your terminal is associated with a line in **/etc/inittab**. The **getty** command in **/etc/inittab** initializes your line with the options in the associated **/etc/gettydefs** file. You must set your terminal to match those characteristics specified in the **getty** for the device. Refer to the *inittab(4)*, *gettydefs(4)*, and *getty(1M)* entries in the *HP-UX Reference*.

The following datacomm parameters are recommended for HP-UX. Notice that DataBits and EnqAck are different from what you originally set up for the system console. DataBits should be set to 8 if you are using 8-bit characters (such as for NLS). EnqAck should be “no” so you can utilize the **~F** (scroll by 1 page) in **vi**.

Parity	NONE	DataBits	8
Clk	INT	StopBits	1
EnqAck	NO	TR(CD)	HI
Chk Parity	NO	RecvPace	Xon/Xoff
SRRXmit	NO	RR(CF)Recv	NO
XmitPace	Xon/Xoff	SRRInvert	NO
CS(CB)Xmit	NO		

Except in the case of using the terminal as a system console (discussed below), you may use any **baud rate** that the terminal will handle. The baud rate setting on the terminal **must** match the baud rate parameter in the **getty** command located in the terminal's entry in the `/etc/inittab` file as discussed below.

If you are using the terminal as the system console, set the terminal's baud rate at 9600 to match the HP-UX expectation for the system console. After the system is installed and running, you may change some of the configuration parameters to suit your own needs. For example, changing the HP-UX expectation for a particular baud rate is done by modifying one of the parameters to the **getty** command located in the `/etc/inittab` file (and associated with the terminal in question). Further information is provided in the section that follows ("Special Considerations for Terminals"), in the `getty(1M)`, `gettydef(4)`, and `inittab(4)` entries in the *HP-UX Reference*, and in the "System Startup and Shutdown" chapter of this manual.

Special Considerations for Terminals

When a terminal is added to the system, you must perform the steps described in the preceding section and add entries to the `/etc/ttytype` and `/etc/inittab` files. This allows a user to log in from the terminal. Add entries to these files as described below.

The `/etc/ttytype` entries have the form:

model_number location

where *model_number* is the the product number of the terminal or computer (as defined in `/etc/terminfo`) and *location* is the device file associated with the terminal/computer and contained in the `/dev` directory. Placing comments on each line (preceded by the # character) will help you remember which terminal belongs to each user.

Here is a sample `/etc/ttytype`:

```
9020    console      # Frodo's (administrator) system console
2622    tty00        # Bilbo's terminal
2622    tty01        # Gandalf's terminal
2623    tty02        # Strider's terminal
dialup  tty03        # Greybeard's dialup modem
```

Most `/etc/inittab` entries have the form:

id:rstate:action:/etc/getty -txxx device_file_name N X

The first three fields (shown as *id*, *rstate*, and *action*) are discussed both in *init(1M)* in the *HP-UX Reference* manual and in this manual’s “System Startup and Shutdown” chapter. The normal values for these fields are: **id** = unique two character string, **rstate** = 2, and **action** = **respawn** (for continuous).

The two-character string **id** is arbitrary but must be unique for each entry. It is used to refer to the same entry/process in other states. The **respawn** flag specifies that the command in the command field (such as **getty**) is to be re-invoked once the process terminates (typically, when a user logs off the system).

The fourth field must contain the **/etc/getty** command; it is immediately followed by three parameters. The first parameter, **-t xxx**, is the optional time-out option for use with modems. The second parameter, *device_file_name* is the file name (**tty04**) — not the complete path name (**/dev/tty04**) — of the terminal’s or modem’s character device file. The named file must reside in the **/dev** directory. The third parameter to **getty**, represented by *N*, specifies a speed indicator for **getty**; a value of **H** is common for “hardwired” (9600 baud terminal) lines, a value of **3** is common for dial-up (300/1200 baud modem) lines. For more information, see the *getty(1M)* and *gettydef(4)* entries in the *HP-UX Reference* manual.

For example, to add a terminal on **/dev/tty04** the **/etc/inittab** entry would be:

```
04:2:respawn:/etc/getty tty04 H
```

Note that the **id** field **04** corresponds to the last two digits of the device file (**tty04**) for the terminal on which **getty** is invoked. This convention is often used with “continuous” **getty** processes that get killed in the single-user state but is **not** required syntax: any two-character string will suffice if used consistently.

The system will recognize the new **getty** only if **/etc/inittab** is re-read. You can cause the system to re-read **inittab** either by changing states or by executing **/etc/telinit** (*init(1M)*). On a multi-user system, be certain to set up **/etc/inittab** terminal entries **for each terminal** connected to the system. Refer to the “System Startup and Shutdown” chapter in this manual and to the *getty(1M)*, *gettydef(4)*, and *inittab(4)* entries in the *HP-UX Reference* for further details.

Dealing with an Unresponsive Terminal

If, for whatever reason, a terminal will not respond (or does not appear to respond) to your commands, two solutions are available. The first is to simply log off the system (using `exit` or `CTRL-D`) and then login again. Generally this will clear up any problems.

Another solution is to type the following **exactly** as shown — blanks are significant. You may not see anything echoed on the screen. If you have a hardwired terminal on an HP 27128 ASI card, this action may log you off of HP-UX.

```
CTRL-J stty sane erase "^H" kill "^U" echo CTRL-J
```

This sets the “erase” character to `CTRL-H` and the “kill” character to `CTRL-U`. When the screen and keyboard response returns, type:

```
tset
```

Your terminal should now exhibit proper behavior. As another option to this procedure, you may also do a hard reset of your terminal, and then execute the `tabs` command.

Consoles

To successfully boot and use HP-UX, you must have a supported terminal device as the system console. This list includes (but is not limited to) the built in ITE of a Model 520, the HP 98700 display system on a Model 550, and the HP 2623. The console **always** has the device file `/dev/console`. HP-UX will also link two additional files to `/dev/console`— they are `/dev/syscon` and `/dev/systty`. For more information on the selection of the console and how HP-UX selects the console, see Chapter 4 (“System Startup and Shutdown”) of this manual.

There are four basic configurations possible to “talk” to your console; they are:

- the built-in terminal (ITE) of the Model 520, which **always** has a major number of `29`, and a minor number of `0x000000`.
- any ASI or 8-channel modem MUX card; the major number will be `31`, and the minor number must be `0x000000`. If the boot ROM does not find a supported console at select code 0, port 0, unit 0 and volume 0, or an HP 98700, then HP-UX will fail.
- a 6-port modem MUX, which has a major number of `29`, and a minor number of `0x000004`.

- an HP 98700 display device on a Model 550. Up to three HP 98288A Display Station Buffer (DSB) cards may be placed on the stack (by your Customer Engineer), from slots 4 thru 7. The lowest ordered DSB will become your system console, and would have a major number of **29** and a minor number of **0xffAd00** where **ff** indicates the device is located in the stack, and **Ad** is the slot. Slot 4 would become **0xff0000**, while slot 7 would become **0xff0300**.
- if you have both a terminal at **0x000000** and an HP 98700 display device, the display device will be selected as the console.

Make sure the appropriate driver is installed in your boot area before attempting to reboot your system configured to talk to a different console.

Pseudo Terminals

Often applications need some form of software support which enables an application program to pretend it has a terminal. This is accomplished by using a **pseudo terminal**. A pseudo terminal is a pair of character devices: a **master** device and a **slave** device. The slave device provides processes (in this case, user applications) an interface identical to that described in *termio(7)* of the *HP-UX Reference* manual.

The difference between an HP-UX pseudo terminal and the interface described in *termio*, is that the latter always have a hardware device of some sort behind them—like an HP 2623 terminal. A slave device, on the other hand, has another process manipulating it through the master half of the pseudo terminal. Anything written on the master device is given to the slave device as input, and anything written on the slave device is presented as input on the master device.

Table 5-8. PTY Information for mknod

Device	c/b	Major	Minor	Notes
ptyXX	c	45	0xfeYY00	Master side of pseudo terminal
ttyXX	c	29	0xfeYY00	Slave side of pseudo terminal

According to HP-UX naming conventions, the master side device file should be called `/dev/ptym/ptyXX`, and the slave side `/dev/pty/ttyXX`, where *XX* is an identifying letter from *p* to *w*, and a hexadecimal digit. As an example, `/dev/ptym/ptyp0` (master) and `/dev/pty/ttyp0` (slave) would be the lowest numbered pseudo terminal pair; `/dev/ptym/ptywf` and `/dev/pty/ttywf` would be the highest ordered pair.

YY is a unique hexadecimal value used to identify the relationship between master and slave (a lot like a cattle brand).

As an example:

```
/etc/mknod /dev/ptym/ptyp0 c 45 0xfe7700
/etc/mknod /dev/pty/ttyp0 c 29 0xfe7700
```

would create a master and slave pair called `ptyp0` and `ttyp0`.

Note that all pseudo terminal devices are located in the directories `/dev/pty` (slaves), and `/dev/ptym` (masters)—do not change these naming conventions. For more information on pseudo terminals, see both the *termio(7)* and *pty(7)* sections of the *HP-UX Reference* manual.

Hard Disks, Flexible Disks, and Cartridge Tapes

When you set up your mass storage media, you must create device files for them. The four items that must go into the `mknod` command line are:

- Name of the file.

Using HP-UX naming conventions, the device file names will be created under special directories in the `/dev` directory. A character device is distinguished from a block device by placing all character devices in a directory that starts with “r”. For example, the device file names for an HP 7945A disk drive that will be a mounted file system might be:

```
/dev/dsk/1s0          (block)
/dev/rdsk/1s0         (character)
```

The directories, and a description of their use, follows:

- `/dev/dsk`— Block device files for hard disks and flexible disks.
- `/dev/rdsk`— Character device files for hard disks and flexible disks.
- `/dev/ct`— Block device files for cartridge tape.
- `/dev/rct`— Character device files for cartridge tape.

These naming conventions are different than previous releases of HP-UX. Your 5.2 HP-UX system was installed using the old naming convention, but we recommend switching to the new naming convention. To convert existing files to the new naming convention use the procedures in the section “New Device File Naming Conventions”. Both this convention and the old convention is supported for this release (5.2). You should use the new naming convention since the old one may not be supported in future releases.

- type of the device file

Each hard disk (except the root disk), flexible disk, and cartridge tape drive must have two device files associated with it: a block device file and a character device file.

- major number

The major number differs between different types of mass storage devices. For most mass storage devices the major number will be 1. Look up the product number of your mass storage device in Table 5-10 at the end of this section.

- minor number

The address-dependent minor number is the same for both block and character entries.

The minor number consists of a select code (the slot number the interface card is installed in), HP-IB address (set on the mass storage device), unit number, and volume number (usually 0). For each possible HP-IB address where mass storage devices may be located, there can be several minor numbers.

You must have restricted access permission on all device files that are associated with mountable file systems, giving read/write permission to the owner (root) only. This prevents someone from mounting unauthorized media on your system, and prevents everyone on the system from accidentally overwriting a file system residing on the device associated with this device file.

If you have set up a new hard disk, you should type (to change both block and character files):

```
chmod 600 /dev/rdsk/device_file_name
chmod 600 /dev/dsk/device_file_name
```

CS/80 and SS/80 “root” Disk and Cartridge Tape

Table 5-9 shows the default device files created during the installation process. These represent your root file system device and the device file associated with the cartridge tape you installed from. Two device file names are given: when first installed, your root device will have the old naming convention (`/dev/hd` and `/dev/rhd`), if you have run the `mvdevs` script your root device will have the new naming convention (`/dev/dsk/0s0` and `/dev/rdisk/0s0`). Note that the minor number is based on the hardware address.

Table 5-9. Root Disk and Cartridge Tape Default Device Files

Device after Installation	Device after Mvdevs	c/b	Major	Minor
<code>/dev/hd</code>	<code>/dev/dsk/0s0</code>	b	1	0xScAdUV
<code>/dev/rhd</code>	<code>/dev/rdisk/0s0</code>	c	1	0xScAdUV
<code>/dev/update.src</code>	<code>/dev/update.src</code>	c	1	0xScAdUV

A complete listing of supported CS/80 and SS/80 devices is shown in Table 5-10. As you add peripherals to your system, such as a second HP 7914P disk drive, you will want to look up the major and minor number configurations for that device.

Table 5-10. Supported Mass Storage Devices

Product Number	Description	Major	Minor
HP 7908P/R	16.5 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7911P/R	28.1 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7912P/R	65.6 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7914P/R	132.1 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7914TD	132.1 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7933H	404 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7935H	404 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7941A	23.8 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7945A	55.5 Mbyte CS/80 Disk Drive	1	0xScAd00
HP 7946A	55.5 Mbyte CS/80 Disk Drive and Cartridge Tape Drive	1	0xScAd00
HP 97093A	Model 520 builtin 10 Mbyte CS/80 Disk Drive	1	0x070000
HP 9122S/D	Single (or dual) 630 Kbyte Micro Disk	1	0xScAdU0
HP 9125S	Single 270 Kbyte 5¼ inch Floppy	1	0xScAd00
HP 9130K	Model 520's built-in 256 Kbyte CS/80 Flexible Disk Drive	1	0x070010
HP 9133H	22.3 Mbyte CS/80 Disk, 630 Kbyte Micro Disk	1	0xScAd00
HP 9134H	22.3 Mbyte CS/80 Disk	1	0xScAd00
HP 9144A	Stand alone CS/80 cartridge tape	1	0xScAd00
HP 82901M	540 Kbyte capacity, 5¼ inch Flexible Disk Drive (dual drive, master)	8	0xScAdU0
HP 82902M	270 Kbyte capacity, 5¼ inch Flexible Disk Drive (single drive, master)	8	0xScAdU0
HP 9895A	2.4 Mbyte capacity, 8 inch Flexible Disk Drive (dual, master)	6	0xScAdU0

Table 5-10. Supported Mass Storage Devices (cont.)

Product Number	Description	Major	Minor
HP 9885M	0.5 Mbyte capacity, 8 inch Flexible Disk Drive (single, master)	9	0xSc00U0
HP 9885S	0.5 Mbyte capacity, 8 inch Flexible Disk Drive (single, slave)	9	0xSc00U0
HP 88140L	67 Mbyte built-in CS/80 cartridge tape drive of the following disk drives: <ul style="list-style-type: none"> • HP 7911P/R • HP 7912P/R • HP 7914P/R 	1	0xScAd10 ⁴
HP 88140S	16.7 Mbyte built-in CS/80 cartridge tape drive of the HP 7908P/R disk drive	1	0xScAd10 ⁴

Nine-Track Magnetic Tape

When you set up your magnetic tape driver, you must create device files for them. The four items that must go into the `mknod` command line are:

- name of the file

Using HP-UX naming conventions, you should create the device file under special directories in the `/dev` directory. A character device is distinguished from a block device by placing all character devices in a directory that starts with “r”. `/dev/mt` will hold block device files for magnetic tape (this is not currently supported, but is reserved). `/dev/rmt` will hold character device files for magnetic tape.

Refer to the section “Naming Conventions for Magnetic Tape”.

These naming conventions are different than previous releases of HP-UX. Your 5.2 HP-UX system was installed using the old naming convention. To convert magnetic tape device files using the old naming convention to the new naming convention, use the procedures in “New Device File Naming Conventions”. Both this convention and the old convention are supported for this release (5.2). You should begin using the new naming convention since the old one may not be supported in future releases.

⁴ The minor number shown is for a single controller drive. For a dual controller drive, use `0xScAd00`.

- type of the device file

All magnetic tape drive device files should be character type.

- major number

The major numbers for magnetic tape drives is shown in Table 5-11.

- minor number

The minor numbers for magnetic tape drives is described below.

Table 5-11. Nine-Track Tape Devices

Product Number	Description	Major	Minor
HP 7970E	9-track Tape Drive (1600 bpi)	11	0xScAd0V
HP 7971A	9-track Tape Drive (1600 bpi)	11	0xScAd0V
HP 7974A	9-track Tape Drive (800 or 1600 bpi)	36	0xScAdUV
HP 7978A	9-track Tape Drive (1600 or 6250 bpi)	36	0xScAdUV

Magnetic Tape Minor Number

The minor number consists of the following fields:

0xScBaUV

- 0x** This prefix indicates the number is hexadecimal.
- Sc** This field is the hexadecimal representation of the select code. The select code is the slot number the interface card is in.
- Ba** This field is the HP-IB bus address. It is determined from the switch settings on the tape drive.
- U** The single hexadecimal unit number (U) represents a four-bit binary value. Setting and clearing the bits of this binary value affects the manner in which the tape drive operates, as indicated in Table 5-12.

Table 5-12. Unit Number for Magnetic Tape

Bit Order	When Clear (0)	When Set (1)
7	Industry Standard mode	Old compatibility mode
6	Immediate report on (ignored by HP 7970/7971)	Immediate report off (ignored by HP 7970/7971)
5	Reserved (ignored)	Reserved (ignored)
4	Tape density of 1600 bpi (ignored by HP 7970/7971)	Tape density of 800 bpi on HP 7974; 6250 bpi on HP 7978 (ignored by HP 7970/7971)

- v The volume number (V). The single hexadecimal volume number (V) represents a four-bit binary value. Setting and clearing the bits of this binary value affects the manner in which the tape drive operates, as indicated in Table 5-12.

Table 5-13. Volume Number for Magnetic Tape

Bit Order	When Clear (0)	When Set (1)
3	Ignored	Ignored
2	Rewind on close	No rewind on close
1	System V file compatibility mode	Berkeley file compatibility mode
0	Ignored	Ignored

For more information on the use of magnetic tape, see Chapter 3 (Concepts) of this manual, or the *mt(7)* section of the *HP-UX Reference* manual.

Naming Conventions for Magnetic Tape

The naming convention described in *mt(7)* of the *HP-UX Reference* is useful for keeping track of how a tape drive minor number is set up. The device `/dev/rmt/0mn` is the first tape mechanism, medium (1600) density, no rewind. The device `/dev/rmt/0h` is the same mechanism configured for high (6250) density operation, rewind on close (note the absence of **n** suffix).

If you connected an HP 7978 tape drive to select code 5, set the tape drive's bus address to 3, and executed the following commands:

```
mknod /dev/rmt/Omn c 36 0x050304
mknod /dev/rmt/Oh c 36 0x050310
```

you could access the same drive as a 6250 bpi device using the “Oh” device and as a 1600 bpi device using the “Omn” name. You could also use the “mt” command to do various positioning operations on the tape without having to provide a device name because **mt** uses the default device `/dev/rmt/Omn`. Since **tar** defaults to `/dev/rmt/0m` you may also wish to create this file.

Printers

This section provides the **mknod** information needed to create device files for the printer device class. You can use this information, or you can use the `/etc/mk1p` script to create device files for printers. See the “Setting Up the LP Spooler” section later in this chapter for information on `/etc/mk1p`.

Note

For all HP-supported printers, you can use the **mknod** command lines in the `/etc/mk1p` script as guideline for creating the printer device file. This script is described in more detail in the section, “Setting Up the LP Spooler” later in this chapter.

To create device files for a printer, first determine the printer's location (i.e., interface and bus address). Use the guidelines given earlier in this section and in the Installation Guide supplied with your computer to select the most appropriate location. Finally, create the device file for the printer using either the **mknod** command or the `/etc/mk1p` script. You must assign a **unique** device file name to each entry you create; see the *intro(7)* entry in the *HP-UX Reference* for a suggested naming convention. If you are not using the `/etc/mk1p` script, you must execute **umask 111** before using **mknod**.

All printers on HP-UX are character devices, but they can be used in different “modes”: you can communicate with printers using drivers that either interpret (**cooked mode**) or do not interpret (**raw mode**) the data. The `/dev/mk1p` script has templates for the correct **mknod** command lines.

Table 5-14. Supported Printing Devices

Product Number	Description	Suggested Pathname	Major	Minor
HP 2225A	150 cps ThinkJet [™] printer	/dev/lp2225a	12,22,37 ⁶	0xScAdUV ⁷
HP 2563A	300 lines per minute dot-matrix impact printer	/dev/lp2563a	12,22,14 ⁹	0xScAdUV ⁷
HP 2565A	600 lines per minute dot-matrix impact printer	/dev/lp2565a	12,22,14 ⁹	0xScAdUV ⁷
HP 2566A	900 lines per minute dot-matrix impact printer	/dev/lp2566a	12,22,14 ⁹	0xScAdUV ⁷
HP 2601A	40 characters per second Daisywheel Impact Printer	/dev/lp2601a	22	0xScAd00
HP 2602A	25 characters per second Daisywheel Impact Printer	/dev/lp2602a	22	0xScAdUV
HP 2608S	400 lines per minute dot-matrix impact printer	/dev/lp2608s	14	0xScAdUV ⁷
HP 2631B	180 cps dot-matrix impact printer	/dev/lp2631b	22	0xScAdUV ⁷
HP 2631G	180 cps dot-matrix impact printer	/dev/lp2631g	12,22,37 ⁶	0xScAdUV ⁷
HP 2671A	120 cps dot-matrix thermal printer	/dev/lp2671a	22	0xScAdUV ⁷
HP 2671G	120 cps dot-matrix thermal printer	/dev/lp2671g	12,22,37 ⁶	0xScAdUV ⁷
HP 2673A	Intelligent dot-matrix graphics thermal printer	/dev/lp2673a	12,22,37 ⁶	0xScAdUV ⁷
HP 2932A	200 cps dot-matrix impact printer	/dev/lp2932a	12,22,37 ⁶	0xScAdUV ⁷
HP 2933A	200 cps dot-matrix impact printer	/dev/lp2933a	12,22,37 ⁶	0xScAdUV ⁷
HP 2934A	200 cps dot-matrix impact printer	/dev/lp2934a	12,22,37 ⁶	0xScAdUV ⁷

Table 5-14. Supported Printing Devices (Cont.)

Product Number	Description	Suggested Pathname	Major	Minor
HP 82906A	160 cps dot-matrix impact printer	/dev/lp82906a	12,22,37 ⁶	0xScAdUV ⁷
HP 97090A	Model 520 built-in thermal printer	/dev/lp97090a	22,26 ⁸	0x060000
HP 2680A	45 page per minute laser printer	/dev/lp2680a	35	0xScAd00
HP 2686A	8 page per minute laser printer	/dev/lp2686a	22/31 ¹⁰	0xScAd00
HP 2688A	12 page per minute laser printer	/dev/lp2688a	35	0xScAd00

Unit and Volume Numbers for Printer Device Files

The unit and volume number fields of the minor number have special meaning when creating device files for printers.

For the HP-UX printer driver (major number 22), the single-digit hexadecimal value for Volume is made up of four bits, two of which control the wrap-around and character-per-line characteristics of the printer. The Unit number is 0. Table 5-15 shows and describes the bits involved when connected over HP-IB with non-CIPER protocol:

Table 5-15. Volume Number for non-CIPER Printer Protocol

Bit Order	When Clear (0)	When Set (1)
3	Ignored	Ignored
2	Ignored	Ignored
1	Disable wrap-around	Enable wrap-around
0	132 character line length	80 character line length

For example, a printer at select code 3 and bus address 3 would use the following `mknod` command for wrapping around after 80 characters:

```
mknod /dev/lpxxxxa c 22 0x030303
```

For major number 14 (CIPER printer driver), the unit number flags whether the device file handles the data in “cooked” mode or “raw” mode. Volume number is always 0.

⁶ When connected via HP-IB, use driver 12 for raw mode and driver 22 for cooked mode. When connected via the Model 550's internal HP-IB, use driver number 37 for raw mode and driver 22 for cooked mode.
⁷ See the “Unit and Volume Numbers for Printer Device Files” section which follows.
⁸ Use driver 26 for raw mode and driver 22 for cooked mode.
⁹ For option 200, use driver 12 for raw mode and driver 22 for cooked mode. For option 290, use driver 14 for both raw and cooked mode.
¹⁰ For raw output use driver 31, for cooked output use driver 22.

Table 5-16. Unit Number for CIPER Printer Protocol

Bit Order	When Clear (0)	When Set (1)
3	Ignored	Ignored
2	Ignored	Ignored
1	Ignored	Ignored
0	raw mode	cooked mode

Using Printers as Spooled Devices

There is one additional decision you need to make. Printers can be accessed through the line printer spooler (refer to the *lp(1)* entry in the *HP-UX Reference*) as spooled devices; files are kept in a spool directory until the device is ready to process them. If your printer is set up as spooled device, you can direct output to it at any time, whether it is busy or not.

Follow the guidelines in the “Setting Up the LP Spooler” section of this chapter to create the printer device file and set up the spooler system. That section also explains commands which control the LP (line printer) Spooler.

RS232 Printers

If you have an RS232 printer that is **not** associated with a model (refer to the section “Setting Up the LP Spooler” section), then you must modify your */etc/rc* file. The commands you add to your */etc/rc* file depend on the printer and must include things like the transmission baud speed, parity, and ENQ/ACK or XON/XOFF pacing; they configure the datacomm line so information can be sent to the printer.

For example, if you have an HP 2686A LaserJet Printer associated with the device file */dev/lp*, you should add the following lines to */etc/rc*:

```
nohup sleep 2000000000 < /dev/lp &  
stty -parenb -ienqak cs8 9600 -cstopb -clocal ixon opost onlcr tab3 < /dev/lp
```

nohup tells the system not to send a hang-up signal even when the process terminates. The **sleep** command receives input from the device associated with */dev/lp*. Once the line is open, the **stty** command is used to configure the line.

The options required for your printer should be documented in the “interface” or “configuration” section of the printer’s manual. The options for **stty** are documented in *termio(7)*.

Plotters and Digitizers

This section provides the `mknod` information needed to create device files for the plotter and digitizer device classes.

To create a device file for a device in this class, first determine the peripheral's location (i.e., interface and bus address). Use the guidelines given earlier in this section and in the Installation Guide supplied with your computer to choose an appropriate location. Then use Table 5-17 to find the major number that corresponds to that specific device. Finally, create the device file for the printer using the `mknod` command. Remember to execute `umask 111` before using `mknod`.

Table 5-17. Supported Graphic Devices

Product Number	Description	Suggested Pathname	Major	Minor
HP 7470A	A-size, single pen plotter	/dev/plt7470a	12	0xScAd00
HP 7475A	B-size, 6 pen plotter	/dev/plt7475a	12	0xScAd00
HP 7550A	B-size, 8 pen plotter	/dev/plt7550a	12	0xScAd00
HP 7580B	D-size, 8 pen plotter	/dev/plt7580b	12	0xScAd00
HP 7585B	E-size, 8 pen plotter	/dev/plt7585b	12	0xScAd00
HP 7586B	E-size, 8 pen, roll feed plotter	/dev/plt7586b	12	0xScAd00
HP 9872C	B-size, 8 pen plotter	/dev/plt9872c	12	0xScAd00
HP 9872T	B-size, 8 pen plotter	/dev/plt9872t	12	0xScAd00
HP 98700	Graphics display system	/dev/plt98700	15	0xffAd00
HP 98710	Graphics accelerator	/dev/plt98710	15	0xAd0000
HP 98760A	Standard color display on the Model 520	/dev/plt98760a	32	0x010000
HP 98770B	High performance display on the Model 520	/dev/plt98770b	28	0x010000
HP 98780B	Monochromatic display on the Model 520	/dev/plt98780b	28	0x010000
HP 97062A	Color output interface on the Model 520	/dev/plt97062a	32	0xSc0000
HP 9111A	Data Tablet	/dev/dig9111g	12	0xScAd00

Useful Naming Conventions

You must assign a **unique** device file name to each entry you create. The *intro(7)* entry in the *HP-UX Reference* explains device file naming conventions. Generally, use **r1p** followed by the product number for raw printers, **p1t** followed by the product number for plotters, and **dig** followed by the product number for digitizers. If more than one device with the same product number is present, be certain not to duplicate their device file names. For example, to differentiate between two HP 9872 plotters, name the first one **p1t9872** and the second **p1t9872.1**.

Adding/Removing Users

The material in this section covers only the software or configuration aspects of adding/removing a user to/from the HP-UX system. If the user will have his own terminal, you need to install the terminal and do some associated configuration before the user can log in to the system; see the “Adding/Moving Peripheral Devices” section of this chapter.

Each user is defined by an entry in `/etc/passwd`. Without this entry, the user cannot log in. To add a user to the system, you must add a line to this file and do a few other things. A complete description of the `/etc/passwd` file can be found in the *passwd(4)* entry in the *HP-UX Reference* manual.

Two approaches for adding users to the system are offered here. Both approaches require the aforementioned entry in the `/etc/passwd` file. The procedure for creating that entry is explained next. Following that, a listing of a shell script that partially automates the process of adding users to the system is supplied. Finally, a step-by-step method for adding users is presented. If you expect to add a few users to the system, it will probably be worth your time to type in the shell script listed below to ease the task of adding users. If you have a single-user system or expect to add only one or two users to your system, the step-by-step process will probably be your best choice. Both approaches accomplish the same task; the “automation” of adding users is the only functional difference between the two.

Creating the `/etc/passwd` Entry

To create an entry in the `/etc/passwd` file for the new user, first log in to the system as the super-user `root`.

If this is the first time you are following this procedure, make a copy of the original `/etc/passwd` that was shipped with your system before continuing. To copy the file, type:

```
cp /etc/passwd /etc/passwd.old
```

where `/etc/passwd.old` will be your unmodified (original) copy of the file.

Next, using the text editor of your choice (such as **ed**, **vi**, or **ex**), edit the file `/etc/passwd`. Add a line to the file describing the new user. The new line must have the form (the description follows):

```
user_name::user_id:group_id:comment:login_directory:command
```

The colon character (`:`) is used to delimit the various fields in the entry.

user_name is the user's login name, consisting of 1 to 8 lowercase letters or other characters.

`::` represents an empty password field. Passwords and the *passwd* command are discussed later in this section.

user_id is the real user ID — a **unique** integer value that the system uses to identify the user. If the real user ID is 0, then that user has super-user capabilities. As the system was shipped to you, the real user ID 0 is associated with the user **root**. By convention, the values 1 through 99 are reserved for system use. Therefore, pick any unused number greater than 99 for this field.

NOTE

There should be only one entry per real user ID; the user whose real user ID is 0 should be named **root**.

group_id is the real group ID — an integer value shared by all members of the same group. This entry corresponds with the group entry in `/etc/group`; see the “Creating Groups/Changing Group Membership” section in this chapter for details.

comment is a word or phrase that identifies the user or specifies the reason for the entry. Typically, this field contains the user's full name and other information such as his location or phone number.

login_directory is the absolute path name of the user's login directory. This becomes the user's working directory when he logs in. The directory need not exist when the entry to `/etc/passwd` is made. However, the directory must exist before the user can log in. A user's login directory is usually a subdirectory of the `/users` directory and has the same name as the user's login name. For example, a user whose last name is Young might have login name **young** and home directory `/users/young`.

command is the name of a single command to be executed for the user at login — this should be an absolute pathname. Typically, `/bin/sh` (or `/bin/csh`) is placed in this field to invoke the shell (or C-shell) for the user. However, the name of any executable program or command may be placed in this field. The command can be either a compiled program or a shell script but no arguments to the command or script should be supplied. If the command field is left blank, `/bin/sh` is executed by default. When the user logs in, the command listed in this field is executed and control is passed to that program. Once the program terminates, the user is logged out.

Once you are satisfied with the contents of `/etc/passwd`, write the modified file to the disk and terminate the editing session.

The “Makeuser” Script

This section contains the shell script for adding users to the system. This script assumes that certain files are located where they were when the system was shipped. If you have moved these files, edit the script to match their new locations.

To use this script, you need to:

- Log in to the system as the super-user `root`.
- Use one of the text editors to create the `/etc/makeuser` file by typing in the listing below. The name `/etc/makeuser` is only a suggestion.
- Change the mode of the file by typing:

```
chmod 744 /etc/makeuser 
```

This gives you read, write and execute permission on the file but restricts the access of all other users to read permission.

- After creating the new user’s `/etc/passwd` entry, execute the script by typing:

```
/etc/makeuser user_name 
```

where *user_name* is the new user’s username from the `/etc/passwd` entry.

Here is the “makeuser” shell script:

```
: #/etc/makeuser: create a new user

USERS=/users
if [ $# != 1 ]
then
    echo "Usage: makeuser name"
    exit 1
fi
if [ -d $USERS/$1 ]
then
    echo "Home directory already exists."
    exit 1
fi
if grep `^$1\:` /etc/passwd >/dev/null
then
    :
else
    echo "No password entry."
    exit 1
fi
mkdir $USERS/$1
chown $1 $USERS/$1

ls -ld $USERS/$1
ls -la $USERS/$1
echo "Remember to add the new user to a group."
```

The Step-by-Step Method

If you decided not to use the “makeuser” script, here is a step-by-step procedure for accomplishing the same task. The following procedure assumes that certain files are located where they were when the system was shipped. It also assumes that an appropriate entry for the new user already exists in the `/etc/passwd` file.

1. Create a login directory for the user with the `mkdir` command by typing:

```
mkdir /users/user_name 
```

where *user_name* is the new user’s name and the entire path name (`/users/user_name`) matches the `login_directory` field of the user’s `/etc/passwd` entry.

2. Create `.profile` (or `.login` for Cshell users) and `.exrc` files for the user. If the file `.profile` exists in a user's login directory, the shell attempts to execute that file at the end of the login process. As discussed in Chapter 4, this file typically contains shell commands and environment variable definitions which customize the user's environment and/or automatically run one or more programs. If the file `.exrc` (also discussed in Chapter 4) exists in the user's login directory, it is used to map terminal characteristics and key definitions for some of the HP-UX text editors.
3. Because you (the user `root`) created the new user's directory and copied the `.profile` and `.exrc` files into his directory, you own both his directory and his files. To change the ownership to the user, type:

```
chown user_name /users/user_name 
```

(where `user_name` is the user and `/users/user_name` is his login directory) to change the directory ownership and type:

```
chown user_name /users/user_name/. [a-z]* 
```

(where `user_name` is the user) to change the ownership of the files. The specification `/users/user_name/. [a-z]*` matches all the files in the user's directory that begin with a period and are followed by a lower-case letter and then anything else.

4. Check the ownership and permissions of the user's directory by typing:

```
ls -ld /users/user_name 
```

and check the status of the user's files by typing:

```
ls -la /users/user_name 
```

See the `ls(1)` entry in the *HP-UX Reference* for an explanation of the display.

5. If you are using the group access features available on HP-UX, see the "Creating Groups/Changing Group Membership" section in this chapter.

Whether you used the "makeuser" method or the step-by-step method, the new user is now installed on the system. A few optional considerations still bear examination.

Some Optional Items

If you are using HP-UX's group access capability, you may want to add the user to a group or change the group ID associated with the user's files. The user's group must exist in `/etc/group` and the user must be made a member of that group before the `chgrp` command can be used to change the group ID associated with the user's files. A user may only belong to one group at any given time. For details on these operations, refer to the "Creating Groups/Changing Group Membership" section in this chapter and the *chgrp(1)* and *group(4)* entries in the *HP-UX Reference*.

Depending on the needs at your installation, consider using the `chmod` command to change the protection mode of the user's login directory and files. A commonly used mode value is `0755` which provides read, write, and execute (search) permission for the file's owner while providing only read and execute (search) permission for all others.

If you are adding a terminal for this user, see the "Adding/Moving Peripheral Devices" section to set up the terminal and add entries to the `/etc/ttytype` and `/etc/inittab` files.

Setting the New User's Password

The new user does not have a password at this point but may log in without one. Depending on the security needs at your installation and your own inclination, you can:

- Ask the user to create a password for himself.
- Create a password for the user and tell him what it is.
- Force the user to create a password for himself the first time he logs in to the system.

The procedures for the last two choices are supplied below.

Creating a Password for the User

To set a password for the user, first become super-user. Then type:

```
passwd user_name 
```

and respond to the system's prompt for a new password; see the *passwd(1)* entry in the *HP-UX Reference* for details. This will set the new user's password to the password you typed.

Forcing the User to Create a Password

If you neither want to create a password for the user nor leave it up to him to create one, you can set a parameter that forces him to create a password the first time he logs in to the system. To accomplish this requires that, in the user's `/etc/passwd` entry, the password field's optional "aging" field contains two periods. The optional aging field is separated from the password field with a comma (see the *passwd(4)* entry for details). Thus a typical entry for a user without a password might be:

```
john:.:.:105:77:J Jackson,production:/users/john:/bin/sh
```

Removing a User from the System

To remove a user from the system, delete his entries from the `/etc/passwd` and `/etc/group` files. Then remove the user's `/user` directory and his other directories and files (or move them to someone else's directory and change ownership) to release the disk space for other users. The easiest way to remove the user's files is to type:

```
rm -r /users/user_name 
```

Note that this **removes all** the user's files and directories.

If you also wish to remove the terminal associated with that user, delete the terminal's entries from the `/etc/ttytype` and `/etc/inittab` files. Refer to the "System Startup and Shutdown" chapter in this manual and *inittab(4)* in the *HP-UX Reference* for details.

Suspending a User from the System

If you wish to keep a user off the system for a time, you can temporarily revoke his login privileges by modifying his line in `/etc/passwd`. If his password is replaced with an asterisk (*), he cannot use the system until you delete that asterisk (and then give him a new password). The following example illustrates this:

```
atilla:*:101:5:Atilla the Hun:/users/atilla:/bin/sh
```

Adding to /etc/checklist

The `/etc/checklist` file contains a list of file systems. A **file system** is an organization of files and directories on a disk. When you installed HP-UX, one file system, the root file system, was created. You may create several file systems (one per disk) if necessary.

The format of an entry in `/etc/checklist` is:

```
dev_name blk_dev_name directory type pass_num 0 comment
```

where:

dev_name The device name used by `fsck`. **dev_name** must be the **character device file** associated with the file system (for example, `/dev/rdisk/1s0` rather than `/dev/dsk/1s0`).

blk_dev_name The **block device file** name used by `mount` and `umount`.

directory The directory where **blk_dev_name** is to be mounted.

type A two-character code for the type of device. The possible values for type are:

rw	mount with read/write permission for the file system
ro	mount with read-only permission for the file system
xx	ignore this entry

pass_num `fsck` will check the **rw** and **ro** type entries in the order you specify. The root file system (`/dev/dsk/0s0`) should always be “1” and it should be the only file system set to “1”. Any file system labeled “2” will be checked after the root file system. File systems labeled “3” will be checked after the file systems labeled “2”. If more than one file system is specified as the same value, then `fsck` deals with all of them in parallel if the `preen` option is chosen. This speeds up the time required for `fsck` if the disks are on separate HP-IB interfaces. If **pass_num** is omitted or has a value of `-1`, `fsck` will deal with these entries sequentially.

0 This field always has a value of “0”.

comment This field is preceded by a “#”. You can put any comment in this field.

The information stored in the `/etc/checklist` file is useful to the following HP-UX programs:

Program	Purpose
<code>mount -a</code>	During bootup (via <code>mount -a</code> in <code>/etc/rc</code>), or if you execute the command, <code>mount -a</code> , all file systems with a type of <code>rw</code> and <code>ro</code> in <code>/etc/checklist</code> will automatically be mounted.
<code>umount -a</code>	During shutdown (via <code>umount -a</code> in <code>/etc/shutdown</code>), or if you execute the command, <code>umount -a</code> , all file systems with a type of <code>rw</code> and <code>ro</code> in <code>/etc/checklist</code> will automatically be dismounted.
<code>fsck</code>	If you execute <code>fsck</code> without providing a list of file systems, all devices in <code>/etc/checklist</code> of type <code>rw</code> and <code>ro</code> will be checked.

The example `/etc/checklist` file in Figure 5-1 will cause the following to happen at bootup:

- `fsck` will check both the `/dev/rdisk/0s0` and the `/dev/rdisk/1s0` file systems. `fsck` will ignore all `xx` entries.
- All entries with type `rw` or `ro` will be mounted. In this example, `/dev/dsk/1s0` will be mounted on the directory `/usr` with read/write permission. This is accomplished automatically at bootup, using the `mount -a` command in the `/etc/rc` file.

```
/dev/rdisk/0s0 /dev/dsk/0s0 / rw 1 0 #root
/dev/rdks/1s0 /dev/dsk/1s0 /usr rw 2 0 #7945
```

Figure 5-1. Example `/etc/checklist` File

If you are temporarily removing a disk from the system, you should invalidate the entries for that disk by changing the disk's type to `xx`.

Backing up and Restoring the File System

Backing up your system means copying your system's files onto a backup medium, such as cartridge tape. You can use this copy to recover lost data if there is a hardware failure, a system crash, or if you accidentally remove or corrupt a file. Backups can be made on cartridge tape, flexible disk, or 9-track tape. Recovery procedures are also detailed in this section.

To minimize the chance of loss, backups should be stored at a different location from the main file system. "Data safes", specially designed air-tight, water-proof containers for mass storage media, are available from many computer accessory manufacturers. If a file or the entire file system is lost or destroyed, you can recover by restoring the latest version of your system backup.

The backup script (`/etc/backup`) can be used to do either a full or an incremental backup. You can customize the script as explained later in this chapter. If you use 9-track tape, you must modify the `backup` script.

NOTE

If you have just updated your system from an older version of HP-UX you will need to move the new `backup` script from the `/etc/newconfig` directory to the `/etc` directory.

Backup Strategies and Trade-offs

The method, frequency and extent of the backup operation depends on how much you use your system and how much data you feel you can afford to lose.

Daily Archive Backups

One backup strategy is to make complete backups of the file system on a daily basis. A complete backup is often called an **archive backup**. Restoring the file system from a full archive backup consists of restoring the most recent backup tape or flexible disk. While relatively expensive in terms of media, system resources and the time required to make full daily backups, the time and effort spent recovering the system is minimal.

Incremental Backups

An **incremental backup** contains only files that have changed since the last archival backup. Incremental backups almost always require less time and less backup media than archive backups.

Mixing Archive and Incremental Backups

Hewlett-Packard recommends the following backup schedule:

- full archival backup weekly or biweekly
- store the backup at least 2 weeks
- daily incremental backup
- take an archive backup and store it in a permanent archive monthly.

You should continue to make incremental backups until:

- one or two weeks have passed since the last archive backup (if you are maintaining an archival schedule);
- the size of the backups becomes unwieldy (for example, larger than one tape); or
- you feel it is necessary to create a new archive backup for any reason.

Suppose, for example, that you make a complete backup of the file system on Monday and make incremental backups on Tuesday and Wednesday. Each incremental backup contains only those files that have changed since Monday. Further assume that, on Thursday, the file system is destroyed. The file system may be reconstructed by first restoring Monday's archival backup of the file system and then restoring the files from Wednesday's incremental backup. Note that the file system is now restored to the end of Wednesday's incremental backup. All work not on a backup has been lost.

Things to Consider about File System Backups

There are several things to think about when backing up your system, particularly the first time.

- What media will I use to perform the backup?
- What device should I back up to?
- Where is the backup script?
- Do I need to modify the backup script?
- When should I perform my backup?
- Where will errors be logged?

What Media Will I Use to Perform the Backup?

Using the script provided with the system (`/etc/backup`), you can back up your system onto cartridge tape or 9-track magnetic tape.

Since you must install HP-UX from cartridge tape, you probably already have a cartridge tape drive. However, since **all** UNIX systems can talk to 9-track magnetic tape, you might perform a backup onto magnetic tape simply so other systems can read the tape (that is, for file transfer).

Cartridge tape is the recommended backup media because it is easy to store and it is easy to retrieve information from. A cartridge tape holds 16 Mbytes on a 150-foot tape or 67.5 Mbytes on a 600-foot tape.

Nine-track magnetic tape is the most expensive backup media, but if you invest in a magnetic tape drive that writes 6250 bpi (bits per inch), you will be able to store more data per tape than with any other option. (A 2400-foot magnetic tape written at 6250 bpi will hold approximately 140 Mbytes of data.) 800 or 1600 bpi 9-track tapes hold less per tape than cartridge tapes. With the new `ftio` command backups to 9-track tapes are faster than before. Refer to the *ftio(1)* entry in the *HP-UX Reference*.

What Device Should I Back Up to?

You must choose a device file that is associated with the chosen backup drive. The program provided for backing up your system (`/etc/backup`) uses, as a default, the device you used during installation or your last update. This device file name is `/dev/update.src`. If you do not want to use this device you may edit the backup script to change the default device or you may change it interactively when you run backup.

Where Is the Backup Script?

The steps listed under “Performing a System Backup” assume the backup script is in the `/etc` directory. On a newly **installed** system (not an update), the scripts will be in the `/etc` directory, therefore do nothing here.

On a newly **updated** system (for example, you just updated your system from 5.1 to 5.2), the scripts may be in the `/etc/newconfig` directory. The customizing part of updating your system checks to see if the file exists in the `/etc` directory. If the file already exists in the `/etc` directory, the customize scripts will not overwrite the file.

If the scripts are left in the `/etc/newconfig` directory after the update you should move them to the `/etc` directory. If you have made any changes to your old version of the backup script you may wish to implement the changes in the new version. The scripts have changed for the 5.2 release of HP-UX. If you use an older version of the script you should follow the instructions in the previous revision of the manual.

Do I Need to Modify the Backup Script?

In general you do not need to modify the backup script. In a few cases you **must** modify the script, and in several other cases you may **want** to modify the script. This manual will not discuss the optional modifications. However, if you wish to read through the script, it has many helpful comments. In a script file, everything on the line which follows a pound sign (`#`) is a comment.

You **must** modify the script if:

- You are backing up to 9-track magnetic tape.

To prepare to backup, you must edit the `/etc/backup` script and replace these lines:

```
cpio -ocx      |
tcio -o $dest
```

with this line:

```
cpio -ocBx > $dest
```

or the line:

```
ftio -ocxM $dest
```

- You are using a cartridge tape drive with an autochanger.

If you will use an autochanger cartridge tape drive (such as the HP 35401) you must edit the `/etc/backup` script and add the `-l` and `-n` options to the `tcio` command. For example, if you wish to use up to four tapes, starting with tape one, your new `tcio` command line will look like this:

```
tcio -o -l 1 -n 4 $dest
```

The autochanger must be in selective mode for the autochanger option to work properly. For additional details on the autochanger options, refer to the `tcio` entry in section 1 of the *HP-UX Reference*.

When Should I Perform My Backup?

To make sure all files are correctly backed up, your system should be shut down to run-level `s` for backups. This is to prevent any programs or users from accessing and modifying files during the backup. If files are modified during backup, file consistency cannot be maintained.

Backups on cartridge tape are generally performed at night, using `cron`. The section called “Performing Backups Automatically” discusses this.

Where Will Errors Be Logged?

The `/etc/backup` script will write (log) the following information to the file `/etc/backuplog`: the start and finish times of the backup, the number of blocks copied, and any error messages that may have occurred during the backup. Information and messages written to this log file are appended onto the end of the file.

Performing a System Backup

The following procedure will back up your system onto cartridge tape (or magnetic tape if you have modified the `/etc/backup` script to write to a magnetic tape device).

1. Login as the super-user `root`. If you are not the super-user you will have problems copying files that you do not own or have permission to access.
2. Execute the shutdown command by typing:

```
shutdown 0
```

For more information on the shutdown procedure, refer to the section “Shutting Down the System” in Chapter 4.

3. Mount all file systems you wish to back up.

The **shutdown** command stopped all processes and unmounted all file systems in the **/etc/checklist** file. If you wish to back up information on those file systems you must now re-mount them by typing:

```
devnm / | setmnt
mount -a
```

This creates the **/etc/mnttab** file and mounts all file systems in **/etc/checklist**.

4. Insert the backup media.

If you are backing up onto cartridge tape, and you have the autochanger tape unit, it must be in the selective mode to use the autochanger options from **tcio**.

5. Change to the root directory by typing:

```
cd /
```

6. Type the backup command line.

- a. If you are doing an **archival** backup, type:

```
/etc/backup -archive
```

- b. If you are doing an **incremental** backup, type:

```
/etc/backup
```

7. Verify or type in the correct destination device path name.

You will get a message similar to:

```
backing up to /dev/update.src
enter new device name to change the backup destination.

this will timeout in 1 minute
```

The device file, **/dev/update.src**, is the file you installed or updated from. This is the device file associated with the source media on your install or update. If you are using that device for your backup, either press **[Return]** or let the program time out.

If you wish to back up to some other device, type in the device file name (make sure it is the character special device rather than the block special device).

If you don't know, you can exit the backup procedure by typing **[CTRL] [D]**.

The backup procedure will now check the file name. It will verify that the device file is the character special file, and that it already exists. If it doesn't exist, you will get the following message:

```
Warning: you may be backing up to a file
```

If you get this message, exit the backup procedure (by entering `CTRL D`) and check the device file name.

During a backup to cartridge tape, if the end of the cartridge tape is reached during the backup process, it prompts you to insert a new medium with the following message:

```
tcio: to continue, type new device name when ready, return implies  
same device
```

When this occurs, change the backup medium and press the `Return` key. The backup process will then continue.

If you have a cartridge tape autochanger you do not need to respond to this message.

8. When the backup has finished, remove the backup media.
9. Label the backup media with the date and the type of backup (archive or incremental) and store it in a secure place.
10. Unmount your file systems. **This must be done before you change directories or start processes.** To unmount your file systems, enter:

```
umount -a
```

11. Check the file system by typing in:

```
fsck -P
```

For more information on `fsck` refer to “Using the FSCK Command” in Appendix A.

12. Return to your normal run-level. You can either reboot or you can use the `init` command:

a. to reboot to the normal run-level, enter:

```
reboot
```

b. To use the `init` command, enter:

```
rm /etc/mnttab
init 2
```

13. Examine the information and messages sent to the file, `/etc/backuplog` to determine if any errors occurred during the backup process.

Backing Up Selected Files onto Flexible Disk or Magnetic Tape

A typical device file name for a flexible disk drive is `/dev/rdisk/1s0`. If you created a special device file for your drive with some other name, or if you are backing up to magnetic tape, replace `/dev/rdisk/1s0` (in the following examples) with the appropriate character special device file name.

If you are backing up selected files, do the following:

1. Go to the directory containing the files you wish to back up:

```
cd directory_name
```

2. Use the `cpio` command as follows:

a. To back up all files and subdirectories from the current directory, type:

```
find . -print | cpio -ocBx > /dev/rdisk/1s0
```

b. To back up all files in your current directory, type:

```
ls | cpio -ocBx > /dev/rdisk/1s0
```

c. To back up selected files in your current directory and subdirectories, type:

```
ls file_name dir_name/file_name | cpio -ocBx > /dev/rdisk/1s0
```

The file names should be separated by blank spaces. If your files are in different directories, you can specify relative path names for your file names.

Backing up Selected Files onto Cartridge Tape

During system installation or update, a character special device file, `/dev/update.src`, was created, which is associated with the cartridge tape you used to install HP-UX. If you created a special device file with some other name, replace `/dev/update.src` (in the following examples) with the appropriate character special device file name.

If you are backing up selected files, do the following:

1. Go to the directory containing the files you wish to back up:

```
cd directory_name
```

2. Use the `tcio` and `cpio` commands as follows:

- a. To back up all files and subdirectories from the current directory, type:

```
find . -print | cpio -ocx | tcio -o /dev/update.src
```

- b. To back up all files in your current directory, type:

```
ls | cpio -ocx | tcio -o /dev/update.src
```

- c. To back up selected files in your current directory and subdirectories, type:

```
ls file_name dir_name/file_name|cpio -ocx|tcio -o /dev/update.src
```

The file names should be separated by blank spaces. If your files are in different directories, you can specify relative path names for your file names.

Restoring the System

Restoring the system means using your backups to put lost files back on the system. There are three scenarios where you might need to restore your system:

- Someone on the system lost a file (perhaps accidentally deleted it) and needs a copy.
- You can boot the system, but the file system is destroyed to the point of not being able to access files and programs.
- Your file system is so badly damaged you can't even boot the system.

Each of these scenarios are described below.

Restoring Selected Files

When you need to restore selected files onto your HP-UX system, you should do the following:

1. Log in as either the super-user, **root**, or as the file's owner.
2. Write protect the tape on which your backup is stored.
3. Change directories. You must reside in the correct parent directory before restoring files. The correct parent directory is the same as the directory you were in when you created the backup. If you are restoring from an archive or incremental backup, you must be in the root (*/*) directory. If you are restoring files from a selected file backup, you must be in the directory where you performed the backup.
4. Place the cartridge tape in the mass storage device and **wait for the cartridge tape drive's conditioning sequence to complete** (that is, wait for the busy light to go off after putting the tape in the drive) before continuing with this process.

If you wish to restore a single file (or several files), and you are restoring from a multiple-cartridge tape backup, you can list the files on the media with the **-t** option to **cpio**.

5. Once the backup medium is ready, enter one of the following command forms to copy the files:

For 9-track magnetic tape, type:

```
cpio -iBcdmux [patterns] < special_file
```

For cartridge tape, type:

```
tcio -i special_file | cpio -icdmux [patterns]
```

Note that *special_file* is the name of the character special device file associated with the backup device (usually */dev/update.src*, */dev/rmt/0m*, or */dev/rct/c0*). *[patterns]* is an optional parameter used to specify which files to recover. If you wish to recover all the files, do not specify a pattern. If you wish to recover specific files, list them (separated by a blank space) where you see *[patterns]*.

Patterns may include wildcard characters like ***** and **?** if they appear inside apostrophes. for example the pattern **'*/mail/*'** will restore all the files in the **mail** directory.

If you know which media the file is on (you used the **-t** option in step 4), you can insert the correct media and use the **R** option in **cpio**. The **R** option allows you to resync the headers so you do not need to read through all the media.

Restoring the File System When You Can Still Boot the System

If you need to restore the system due to major problems, and the system is still functioning, log in as the super-user `root` and run the `shutdown` and `fsck` commands as referenced previously in the section “Performing a System Backup”. In many cases, the `fsck` command can repair even serious problems in the file system. Often, lost files will show up in the `/lost+found` directory after running `fsck`.

NOTE

Any programs or files that are being run or used on the system while restoring the system will not be updated. For example, if the `root` user runs the shell, `/bin/sh`, then `/bin/sh` will not be restored from the tape. You must copy `/bin/sh` to someplace else.

To restore the entire file system:

1. Log in as the super-user, `root`. Follow the procedure in “Becoming the Root User” in this chapter.
2. Write protect the tape or flexible disk on which your backup is stored.
3. Change directories. Since you are restoring from an archive or incremental backup, you must be in the root (`/`) directory.
4. Place the backup medium in the mass storage device. If your backup goes across several tapes, make sure you insert the first one. **Wait for the cartridge tape drive’s conditioning sequence to complete** before continuing with this process.
5. Once the medium is ready, enter one of the following command forms.

For 9-track magnetic tape, type:

```
cpio -iBcdmuvx < special_file
```

For cartridge tape, type:

```
tcio -i special_file | cpio -icdmuvx
```

Note that *special_file* is the name of the character special device file associated with the backup device (usually `/dev/update.src`, `/dev/rmt/0m`, or `/dev/rct/c0`).

Restoring the File System When You Can't Boot the System

If the entire file system is destroyed or if the system is in such poor shape that the `cpio` command will not function properly, then one of two options is available.

NOTE

If your file system is destroyed, you should take the time to understand the circumstances which caused the problem so you can prevent having to repeat this procedure.

Option One If you set up a recovery system after your initial installation (using the procedures described in “Creating and Using a Recovery System” in Chapter 5), you can boot your system and rebuild your file system from your backup recovery system. The recovery system is a functional HP-UX system on cartridge tape or flexible disk.

Option Two If you have not created a recovery system, your system must be re-installed from the original distribution medium. Follow the instructions in the installation manual to re-install the system. If you have updated your system since you installed, you will also have to do one (or more) updates before you begin restoring files.

Once you have re-installed the original system and it is operating properly, use the forms of the `cpio` and `tcio` commands given in the previous section (“Restoring the File System When You Can Still Boot the System”) to copy (restore) the most recent archive and incremental backup(s) from the backup device to the system’s root device.

System Restoration and Shared Files

In general, the system cannot write to a busy file. A file (pure Series 500 executable code) is “busy” if the file is open or is marked as shared and being executed with `exec`. (Shared files are discussed in the “Concepts” chapter.) Thus, files being used during a system restoration — particularly `/bin/cpio` — should not be shared files. If they are marked as shared, they may not be recovered from the backup.

Diagnostics

One of the characteristics of incremental backups is that they depend heavily on the system clock. Both the current time and date as well as the time and date associated with the file being used as a reference point for the backup (such as `/etc/archivedate`) have to be reasonably accurate to insure useful incremental backups. Always check, and if necessary reset, the clock (using the `date` command) if the system has been powered down for any reason or if a check of the clock shows any appreciable amount of inaccuracy.

Performing Backups Automatically

Incremental backups can be performed automatically by using the `crontab` command to schedule `backup` (where it gets executed by the `cron` “clock daemon”). Refer to the `cron(1)` and `crontab(1)` entries in the *HP-UX Reference*.

To add automatic backups to your system, perform the following:

1. Login as the super-user, `root`.
2. Add the following line to your existing cron information file:

```
55 23 * * 1-5 /etc/backup
```

If you don't know what your existing cron file is named, you can create a copy of it by executing:

```
crontab -l > new_cron_file
```

then add the new line to it.

3. Use the `crontab` command with the file's name as an argument. For example, if your cron information file is called `croninfo`, enter:

```
crontab croninfo
```

This creates a file, `/usr/spool/cron/crontabs/root`, which overwrites the existing file, `/usr/spool/cron/crontabs/root`. `cron` will automatically do a backup at 11:55 p.m.

When running backups with `cron`, there is no way of knowing if the system is inactive without logging users off. Choose a time when you think no one will be working. Send a message to all users requesting them to log off. The `backup` script notifies all current users when the backup begins.

If you run backups from `cron`, perform the following steps:

1. Assign the `backup` script's error output device to a special file associated with a printer (default is `/dev/lp`).
2. Every morning after a backup:
 - a. Examine the information and messages listed to the printer during the previous night's backup process.
 - b. Remove, label and store the backup medium.
3. Every evening before a backup:
 - a. Be certain that the printer associated with the `backup` script's error output device is on-line.
 - b. Install a blank backup medium.

Changing a Password

The “Adding/Removing Users” section in this chapter discusses creating passwords for users. This section discusses how either a user or the system administrator may change passwords.

Any regular user on the system may change his own (but no one else’s) password by typing:

```
passwd
```

The **passwd** command prompts for the existing (old) password before allowing the user to continue. Once the correct old password is entered, the command prompts for a new password. Enter at least 6 characters and/or digits of your choosing. At least 2 characters must be alphabetic, and at least 1 must be a numeric or special character. Actually, fewer characters may be used but they must be entered three times before the system will accept them (this is only true if you are super-user). Note that control characters like those generated by `[Back space]` are accepted but sometimes difficult to remember. The password is not echoed on the screen (for security purposes). The command then prompts you to re-enter the password to confirm it. Do so and, if the two entries match, the program accepts the new password. If the two entries do not match, you will be prompted to enter it twice again. It takes approximately 15 seconds for the system to install the password.

Users will occasionally create passwords for themselves which they cannot remember. Once a user has forgotten his password, he cannot log in to the system and will probably come to you, the system administrator, for help. Because only the encrypted form of the password exists in `/etc/passwd`, even you cannot determine the user’s password, hence you must assign the user a new password.

To change a user’s password, become super-user and type:

```
passwd user_name
```

where *user_name* is the user’s login name. You will be prompted for the user’s new password. Only the super user may use this method for changing a password.

If you change the password for the user **root** you may want to write down the password and keep it in a secure place. If this password is lost or forgotten no one can log in as the super-user and you will either need to completely re-install your system or will need to use your recovery system. **Note that a complete re-installation of the system will destroy all the files on the disk.**

Changing and Creating System Run-Levels

A **run-level** is a state in your system where a specific set of processes are allowed to run. This set of processes is defined in the `/etc/inittab` file for each run-level. You can define up to six run-levels.

Most systems will use only the two run-levels shipped with your system: run-level 2 for normal multi-user mode, and run-level `s` for system administration. You can move between these two run-levels using the `shutdown` and `reboot` commands. This section is written for the system administrator who requires more than the two default run-levels.

One of the tools you need as the system administrator is the ability to move properly from one system run-level to another. Also, you may find it useful to create new system run-levels for particular tasks or applications specific to your installation. The material in this section covers some protection issues associated with these capabilities followed by guidelines for changing the run-level of the system and creating new system run-levels.

As discussed in the “System Startup and Shutdown” chapter in this manual, the system administrator (or anyone with the `root` user capabilities) may change the system’s run-level by executing the `init` command. Also, anyone having write permission to the file `/etc/inittab` can create new run-levels or re-define existing run-levels. Even if this user lacks the capability to invoke `init` to enter a modified run-level, his ability to re-define existing run-levels in `/etc/inittab` is potentially dangerous to your system. Make sure that the aforementioned permissions are correct.

If you purchased a single-user system, the system was shipped to you such that run-level `s` uses only the system console and run-level 2 uses both the system console and a single `uucp` modem (for data communication with other HP-UX and/or UNIX systems). You can create other run-levels on this system but you cannot add any other users. Adding `getty` entries to run-level 2 on a single-user system has no effect other than to waste a large amount of processor time. If yours is a single-user system, note that much of the following material applies primarily to multi-user systems. It should be clear from the context which of the discussed features apply to single-user systems.

Changing the System's Run-Level

Many of the system maintenance tasks you perform as system administrator require the system to be in the system administration run-level (run-level `s`). When the HP-UX system is first booted/powered up, it comes up in run-level 2. The system administration run-level may be entered by executing the `shutdown` command or the `init` command. These recommended entries are described in more detail in the “System Startup and Shutdown” chapter.

In the system administration run-level (run-level `s`), the only access to the system is through the system console by the user `root`. At this point, the only processes running on the system will be the shell on the system console, and processes that you invoke. Commands requiring an inactive system can now be run. One such command is `fsck` whose multiple passes and use of redundant information in the file system require a static system.

The following is a general procedure for changing the system from one run-level to another. You must be logged in as the super-user to change the system's run-level.

1. If any users are on the system, ask them to log off before you change run-levels. Changing to another run-level while users are logged on will kill (terminate) their processes if the run-level you are moving to does not contain explicit `rstate` entries in `/etc/inittab` for their `getty`. Use the `write` or `wall` commands to communicate with the users. Note that the `wall` (write all) command immediately sends your message to the terminal of each user on the system and, in the process, interrupts whatever they are doing (but does not stop execution); avoid using `wall` unless you feel it is necessary.

If the differences in the new and old run-levels are minor enough (for example, the addition of a printer), it may not be necessary to ask users to log off.

2. After users are off the system as necessary, force the system to write the contents of its I/O buffers to the file system by typing:

```
sync
```

It is a good idea to repeat the `sync` command a second time. This is recommended because, after `sync` executes the file system primitive `sync(2)` and returns, the writing of the I/O buffers has been scheduled but may not have yet taken place.

3. Next, change to the desired run-level by typing:

```
/etc/init new_run_level
```

where *new_run_level* is the number of the run-level you wish to enter. It is assumed that the run-level you are entering contains appropriate */etc/inittab* entries to kill any outstanding user processes, if those processes should not be present in the new run-level.

When taking the system from the multi-user run-level (run-level 2) to the system administration run-level (run-level s), **use the shutdown command instead of init s to change the system's run-level.** The **shutdown** command performs certain operations not otherwise performed. See the *shutdown(1M)* entry in the *HP-UX Reference* or the “Shutting Down the System” section in Chapter 4 for a more complete description of **shutdown**.

Also, be aware that a **cron** process is initiated only the first time the system enters run-level 2.

Re-reading */etc/inittab*

If you wish to make a change to the current run-level, such as adding a new **getty**, the system will need to re-read */etc/inittab* before it will execute the new command. To accomplish this, execute */etc/telinit*. Refer to the *init(1M)* entry in the *HP-UX Reference* for more information.

Creating New System Run-Levels

You can create new run-levels if you find it useful but **do not re-define run-level 2**. It is acceptable to make certain, suggested modifications to run-level 2 (such as the addition of more *getty* entries to */etc/inittab*). Before creating a new run-level, make a copy of the original */etc/inittab* file (using the **cp** command) and save the original version of the file under a different name (such as */etc/orig_inittab*). If anything goes wrong, you will still have a relatively untouched version of the file.

To create new run-levels, use one of the HP-UX text editors to make entries in `/etc/inittab`. These entries will define how you want the system to operate in its new run-level. Each one line entry in `/etc/inittab` should contain:

- a two-character id used to identify a process or process group;
- a list of run run-levels to which each entry applies;
- an action to be performed, such as `respawn`;
- the command that will be executed when that run-level is entered.

Refer to *init(1M)* and *inittab(4)* in the *HP-UX Reference* for a more complete description of `inittab`'s run-level entries. Once `/etc/inittab` contains all of the entries you want for the new run-level, save the file and exit the text editor. As before, warn all users to log off the system and follow the other procedures in the “Changing the System’s Run-Level” section above **before you change run-levels**.

In a few cases, such as when a newly created run-level closely matches an existing run-level (i.e., the differences between the two are trivial), you can move freely between run-levels as long as entering the new run-level does not kill (user or system) processes that may have begun in the previous run-level. If the new run-level is not specified in the `rstate` field of the `/etc/inittab` entry for their `getty`, the process will be killed. Watch for side effects however. Consider the case where a user logs off, you then change run-levels (from say, run-level 2 to run-level 4) and when the user attempts to log back in, he cannot because an `/etc/getty` entry does not exist for him in your run-level 4 definition.

Whenever the system enters the newly-defined or created run-level, its actions are similar to those described in the “System Boot” section (of the “System Startup and Shutdown” chapter in this manual) except that the commands executed are those identified by the new run-level number. Some files, such as `/etc/rc`, have no entries for run-levels other than run-level 2. The system boot and login processes occur more or less as described (in that same chapter).

Example /etc/inittab

The following is an example `/etc/inittab` for a system that contains a system console and four terminals. Run-level 2 is a multi-user run-level, with a `getty` on every terminal. Run-level 3 is a test run-level, with a `getty` on both the system console and the system administrator's terminal (`/dev/tty01`) and "kill" entries for the other terminals. This run-level could be used by a system administrator who preferred to work from his own terminal rather than from the system console. The system console could also be moved by executing `init` from another terminal.

```
is:2:initdefault:
st::sysinit:stty 9600 clocal icanon echo opost onlcr ienqak ixon icrnl
    ignpar < /dev/systty
bl::bootwait:/etc/bcheckrc </dev/syscon >/dev/syscon 2>&1 #bootlog
bc::bootwait:/etc/brc 1>/dev/syscon 2>&1 #bootrun command
lp::off:/bin/nohup /bin/sleep 999999999 < /dev/lp & stty 9600 < /dev/lp
rc::wait:/etc/rc </dev/syscon >/dev/syscon 2>&1 #run com
pf::powerfail:/etc/powerfail 1>/dev/console 2>&1 #power fail routines
co::respawn:/etc/getty console H
01:23:respawn:/etc/getty tty01 H
02:2 :respawn:/etc/getty tty02 H
03:2 :respawn:/etc/getty tty03 H
04:2 :respawn:/etc/getty tty04 3
```

Changing the HP-UX Environment Files

The system boot and login processes provide many opportunities to customize the environment in which your system operates. Customization is achieved primarily by altering the contents of one or more files known as **environment** files. The following list summarizes the files that you may want to alter and identifies the types of changes you may want to make. Use these suggestions in conjunction with Chapter 4, the section “System Startup Functions”, to determine which files to modify.

NOTE

The system may not boot if some entries in `/etc/inittab`, `/etc/rc`, and `/etc/passwd` are modified. The parts of these files that are shipped should not be changed, though additions can be made as necessary for terminals, commands, and users. You should check the `/etc/passwd` and `/etc/group` files with the `pwck` and `grpck` commands after making any changes.

/etc/inittab

This file contains entries for the different run-levels (supplied or created) on your system. Refer to “Changing and Creating System Run-Levels” in this chapter and to the “System Startup and Shutdown” chapter.

/etc/rc

This shell script defines miscellaneous actions to be taken after system boot or maintenance (following a shutdown). This script typically contains commands to:

- Mount file systems via the `mount` command.
- Start the `cron` program running.
- Start the line printer spooling system (if configured).
- Clean up any logging files.
- Start System Accountings (refer to Chapter 6 in this manual).
- Set your system’s nodename.
- Run `expreserve` to preserve editor files (refer to the `ex(1)` entry).
- Turn on LAN.

/etc/passwd

This text file identifies the user name, real user and group IDs, home (login) directory, and execution command for every valid user on the system. The execution command is the command executed when the user correctly logs in. **You must add an entry to this file for each new user who is added to your system.** Refer to “Adding/Removing Users” in Chapter 5.

/etc/group

This text file identifies the users that form a group. It associates group IDs with group names. It also contains a list of users and associates those users with a group name and a group ID. Refer to “Creating Groups/Changing Group Membership” in Chapter 5.

/etc/motd

This text file contains messages that are printed to each user when he logs in. If you have a message that you want to communicate with every user (such as a message specifying a new system update), write the message in this file by using your favorite text editor. As each user logs in, the message will be printed (assuming that the scripts `/etc/profile` and `/etc/csh.login` are not modified to remove the command that prints `/etc/motd`).

/usr/news

This is a directory owned by the user `root`. It is shipped as an empty directory and can be used by you to communicate with users on the system. You can also change the directory permissions to allow any user to put messages here. Place any message you want in a file contained in this directory. If there is a `news` command in either the file `/etc/profile`, in `$HOME/.profile` or `$HOME/.login` (the user’s personal version of `.profile`), the file you placed in the `/usr/news` directory will be announced when the user logs in. Depending on the options used with `news`, a user only receives the message once. Refer to the *news(1)* entry in the *HP-UX Reference* for details.

/etc/profile or /etc/csh.login

These shell scripts are automatically executed for users upon logging into their shell: `/etc/profile` is executed for users logging into the Bourne shell and `/etc/csh.login` is executed for users logging into the C shell. This is an ideal location to place commands that each user is required to execute. For example, you may want every user to read the message of the day file (`/etc/motd`) since it contains information that each user should see before beginning her work. This is accomplished by placing the statement:

```
cat /etc/motd
```

in the `/etc/profile` or `/etc/csh.login` shell scripts. These scripts are also an ideal location to define and export default environment variables (such as `PATH` and `TZ`) in case the user does not set them in his `.profile` shell script.

/etc/utmp

This is a binary file that contains a list of currently logged in users and some system startup information. It is automatically created by the system and is used by the `who` command.

/etc/wtmp

This is a binary file used by the system to keep a history of logins, logouts, and date changes. The contents of this file are accessed with the `last` command. To create this file, type: `touch /etc/wtmp`.

/etc/btmp

A binary file which, if it exists, is used by the system to keep track of bad login attempts. You must explicitly create this file to use this feature. The contents of this file are accessed with the `lastb` command.

/etc/securetty

A text file which, if it exists, specifies the `tty` files on which the `root` user can log in. You must explicitly create this file and place the `tty` device file names in it to use this feature. The entries should be the `tty` device file name but not the path name. The file can contain more than one entry but only a single entry per line. If you do not explicitly create this file, the user `root` may log in on any `tty` device. Note that this security feature does not restrict a normal user from using `su` to become the superuser on any device. Here is a typical `/etc/securetty` file with two entries:

```
console
tty05
```

\$HOME/.profile, \$HOME/.cshrc, \$HOME/.login

These shell scripts are executed at the following times:

- `$HOME/.profile` (Bourne shell) is executed each time the user successfully logs in
- `$HOME/.cshrc` (C shell) is executed each time a new C shell is started. A new C shell is started each time the user successfully logs in, and each time the user starts a new C shell, such as using the shell escape feature of `vi`.
- `$HOME/.login` (C shell) is executed each time the user successfully logs in, but after `$HOME/.cshrc` is executed

For example, they may include a definition of the default shell prompt (the `PS1` and `PS2` environment variables in the Bourne shell, `prompt` in the C shell), the default search path (the `PATH` environment variable), and some editor information (the `EXINIT` environment variable). It also generally includes the execution of one or more commands such as the `export` command—to export environment variable definitions, the `who` command—to identify who is logged in on the system and the `mail` command—to automatically display mail that has been received.

Changes made to the `.profile` script do not go into effect until the script is executed. By typing the following in your current shell, `.profile` or `.cshrc` will execute in the current environment:

```
. .profile          # In the Bourne shell
source .cshrc      # In the C shell
```

\$HOME/.exrc

This file maps terminal characteristics and sets up new key definitions so that features like arrow keys can be used with the **ex** family of HP-UX editors (**vi**, **ex**, etc.). The file **.exrc** must exist in the user's home directory (**\$HOME**) to use these features. The editor searches for **\$HOME/.exrc** and, if it exists, uses the definitions to create extra editor features.

Note that the **.exrc** file is functional **only if the EXINIT environment variable is not defined**. **EXINIT** can be defined and exported from either **/etc/profile** or **\$HOME/.profile**. The **.exrc** file serves a function similar to **EXINIT**. Refer to the appendix to "The vi Editor" article in the *HP-UX Concepts and Tutorials* manual for further details.

Note

Examples of **.profile**, **.login**, and **.exrc** are shipped under the names **/etc/d.profile**, etc. You may find it useful to customize these files and provide them to new users by default.

/usr/lib/terminfo

This subsystem identifies terminal capabilities for programs such as the **vi** text editor. It defines terminal attributes for all Series 500 models and HP supported terminals. It also contains terminal attributes for terminals **not** supported by Series 500 HP-UX; these are provided for your convenience, but Hewlett-Packard does not support their use.

/etc/checklist

This text file contains a list of mountable file systems. When no device file specification is supplied with the **fsck** command, **fsck** performs its checks on the file systems listed in **/etc/checklist**. This file is also used by the system accounting **diskusg** command, and the **mount**, **umount**, and **fsckclean** commands.

The file **/etc/checklist** is shipped with a single device file name: **/dev/rhd**. This file corresponds to the hard disk on which you installed the system and which contains the root file system. You should add entries for each additional disk drive containing a file system which you want automatically mounted. Refer to "Adding to **/etc/checklist**" in this chapter for more information.

/etc/catman

Executing the `catman` command expands the `nroff` (formatted) versions of manual pages (used by the `man` command) into their “processed” form. Subsequent accesses via `man` use the processed manual page, significantly improving response time. The price for the improved speed is disk space—the expanded files will use about the same storage space as the originals. This doubles the disk usage for manual pages because the original files remain intact. By default, running `catman` causes manual pages in all the `/usr/man/manX`, `/usr/local/man/manX`, and `/usr/contrib/man/manX` directories (where `X` is 0 through 9, or 1M) to be processed and stored in the corresponding `/usr/man/catX`, `/usr/local/man/catX`, and `/usr/contrib/man/catX` directories. If you run `catman` without the `-z` option the pages are put in compressed form in the corresponding `.Z` directories. The `catman` command creates the directories if they do not exist.

You have three alternatives for creating on-line documentation:

- Create all the processed manual pages by executing `/etc/catman` with no parameters. This process can take as long as five or six hours to complete so you might want to run it in the background and/or at night.
- Create selected sections of the processed manual pages by executing `/etc/catman sections` (where `sections` is one or more logical sections in the *HP-UX Reference* such as 1).
- Do not execute `/etc/catman` at all. If you create all the `/usr/man/cat` directories, the first time `man` is executed for any given manual entry, the entry is processed, added to the appropriate `cat` directory, and used in subsequent accesses.

Use the following script to create the appropriate compressed `cat` directories:

```
cd /usr/man
for num in 1 2 3 4 5 6 7 8
do
    mkdir cat$num.Z
done
```

The third alternative is recommended if you can spare some disk space but do not want to use any more than is necessary. With this “build-as-you-go” alternative, the system only fills the `cat` directories as manual pages get accessed by `man`.

When the processed `man` pages exist, you can remove the `nroff` source files and thus recover much of the disk space required by the formatted version of the manual.

/etc/issue

This file contains information that is printed by the terminal's **getty** process prior to the login prompt. Messages that identify the computer or provide the system name might be stored in this file.

/etc/csh.login, /etc/rc, and /etc/profile

These three files need to be edited in order to set the correct date information in the environment. The format for setting the time zone environment variable is:

```
TZ=XXXHYYY
```

where:

- XXX** is an alphabetic abbreviation of the standard time zone, usually three letters in length.
- H** represents the difference between standard local time and Greenwich Mean Time, in hours. Fraction hours are indicated in minutes (for example, 3:30 for Newfoundland). Negative hours are allowed (for example, -9:30 for South Australia).
- YYY** is an alphabetic abbreviation of the daylight time zone for your area, usually three letters in length. **YYY** may be deleted if Daylight Savings Time is not observed in your geographic area.

Insert or modify the lines in **/etc/rc** and **/etc/profile**:

```
TZ=XXXHYYY  
export TZ
```

Insert or modify the lines in **/etc/csh.login**:

```
setenv TZ XXXHYYY
```

For example:

- In Eastern time zone, use **TZ=EST5EDT**
- In Central time zone, use **TZ=CST6CDT**
- In Arizona, where Daylight Savings Time is not observed, use **TZ=MST7**

For more information pertaining to setting the system clock, refer to the section “Setting the System Clock” in Chapter 5.

/usr/lib/tztab

The `/usr/lib/tztab` file describes when and where Daylight Savings Time (in the United States) is in effect. It is implemented by listing the values of the TZ variable, followed by the dates it is in effect. It can be modified to accommodate changes. This file was created because of recent U.S. legislation which changed the definition of Daylight Savings Time. Refer to *tztab(4)* for details on modifying this file.

/etc/ttytype

This file works with the `tset` command. Change this file when adding terminals and modems to your HP-UX system. This file works with the `tset` command. Change the samples (for example, 300h console) to reflect the true terminal types attached to your system. Refer to the section “Adding Peripheral Devices” in this chapter for more information.

/usr/adm/errfile

This is an ASCII text logging file. The system uses this file to log system errors or warnings. Urgent messages are also written to `/dev/console`. It is created by the system and grows without bounds.

Communicating with System Users

The `/usr/news` directory and the `news` command provide a way to get brief announcements to the system users. The files `/etc/profile` and `/etc/csh.login`, unless modified, notify each user at login that news exists if `/usr/news` contains entries.

More pressing items (such as announcing an upcoming archival backup) can be entered in the message-of-the-day file, `/etc/motd`. Unless modified, `/etc/profile` and `/etc/csh.login` print the contents of `/etc/motd` on a user's display during login. Keep these messages short enough to easily fit on the user's screen.

Longer messages or even major documents are best sent with the `mail` command. Any user can send a message to any other user with `mail`. When activated to send a message, the `mail` command takes the message, flags it with the recipient's user name and stores it in a file. The next time the recipient executes `mail`, the command informs him that he has mail. Most users keep some form of the `mail` command in their `.profile` file so it will automatically be executed during login. This is done by default when `/etc/profile` and/or `/etc/csh.login` execute.

To write to users who are already logged in, use the `write` or `wall` commands. Note that if a user has executed the `mesg` command with the `-n` (no) option, write permission to that user's terminal is denied and the `write` command will not work. In this case, use the `wall` command.

When the `wall` (write all) command is run by the super-user, any user protections are overridden; the command immediately sends its message to every user's terminal, regardless of the tasks they are performing. Thus, if you are logged on as the super-user, avoid using `wall` unless it concerns a pressing matter such as an impending system shutdown; consider a user's irritation at receiving an unimportant message while he is editing a file.

Configuring the HP-UX Operating System

HP-UX allows certain operating system related attributes to be configured. These attributes determine the manner in which the system allocates memory, schedules processes, and performs file I/O— and thus, the performance of your system. They are configured using the `uconfig` command.

Configurable Attributes

The attributes that you can specify (configure) are:

- **virtual memory device**—(`vm_device`) the mass storage device that is used by virtual memory. The default is (0 0 0 0 0), which specifies that the default is the root device.
- **cache buffer size**—(`cache_buf_size`) the size (in bytes) of an individual buffer in the file system buffer cache. The size of the cache buffer is optimized if it corresponds to the block size on your disk volume. The default is 1024 bytes.
- **number of cache buffers**—(`cache_buf_num`) the number of buffers that form the file system buffer cache. The default is 0, telling the system to dynamically compute the value.
- **read ahead level**—(`read_ahead_level`) the number of “buffers full” of information that is read into the buffer cache, when a sequential data access is detected. The default is 0, telling the system to dynamically compute the value.
- **swap time**—(`swap_time`) the criterion used by the virtual memory system when determining which segment(s) to swap out of memory. When a memory block is needed by the virtual memory system, it examines all virtual segments in memory. Any virtual segment that has been in memory longer than the “swap time” is eligible to be swapped out. If no virtual segment has been in memory longer than the “swap time”, the system swaps out the least recently accessed virtual segment. The swap time is measured in ticks, with 0 telling the system to dynamically compute the default.
- **page size**—(`page_size`) the size (in bytes) of each page, when data is paged in the virtual memory system. The default page size is 1024 bytes.
- **page swap time**—(`page_swap_time`) the time a page remains memory resident before being swapped to disk. The page swap time is measured in ticks, with 0 telling the system to dynamically compute the default.

- **page frame pool size**—(vm_pool_size) the maximum size (in bytes) of the memory allocated to the page frame pool (no matter how many memory blocks are free), for the virtual memory system. If the default value is 0, a new value is calculated to optimize the page frame pool. This value then becomes the default. When you ask for default values, the system sets the default back to 0.
- **display memory size**—(scroll_pages) the size, in pages (one page of display memory equals 24 displayed lines) of the display memory of the Model 520's display. On the HP 98700 ITE, one page is 46 lines of 120 characters. Two pages (48 lines) are the default.

When HP-UX is installed on a Model 520, the computer's display and keyboard act as a "terminal". As a terminal, it needs memory to hold the information to be displayed. Increasing the size of the display memory increases the amount of data that can be scrolled on the display. Each page of display memory allocated reduces the amount of memory available to the system by about 6 Kbytes.

If, at power-up, the system does not have enough memory available to allocate the requested amount of display memory, the system notifies you and allocates one page of display memory.

The primary status of the Model 520 "terminal" identifies the amount of display memory in the "terminal". In the terminal's primary status byte, each page of display memory allocated appears to be 2 Kbytes, instead of 6 Kbytes, as indicated in the preceding paragraph.

NOTE

The display memory size attribute is ignored when HP-UX is running on a Model 530, 540, or 550 computer.

- **process-per-user maximum**—(max_proc_per_usr) an integer specifying the maximum number of processes a single user can have. The default is 500 processes.

- **stack size**— (*stack_size*) the maximum size (in bytes) of a process' stack segment. The default of 0 tells the system to dynamically compute this value.
- **interactive time**— (*interactive_time*) the amount of CPU time a process can consume after it has achieved a high priority by accepting input from a keyboard, and still be favored as an interactive process. If the process receives no further input for a time equal to this parameter's value, then the process is no longer favored as being interactive. The interactive time is measured in "ticks", where one tick equals 10 milliseconds. 300 ticks is the default value.
- **message queue IDs** (*max_num_msgids*) the maximum number of message queue identifiers (refer to *msgctl(2)*, *msgget(2)*, *msgop(2)*). The maximum can range from 5 to 1000, and is rounded down to the closest multiple of 5. The default is 100 IDs.
- **message size**— (*max_msg_size*) the maximum size, in bytes, of any single message. This can range from 256 bytes to either 65 536 bytes or *max_msg_qbytes*, whichever is less. The default is 8 192 bytes.
- **message queue size**— (*max_msg_qbytes*) the maximum number of bytes in a message queue. This can range from 256 bytes to either 65 536 bytes or *max_msg_space*, whichever is less. The default is 16 384 bytes.
- **total message size**— (*max_msg_space*) the maximum number of bytes in the total of all messages in all message queues in the IPC facility. This can range from 256 to 523 264 bytes. The default is 32 768 bytes.
- **semaphore IDs**— (*max_num_shmids*) the maximum number of semaphore identifiers (refer to *semctl(2)*, *semget(2)*, *semop(2)*). This number can range from 5 to 1000, and is rounded down to the closest multiple of 5. The default is 100 IDs.

- **shared memory IDs**—(`max_num_shmids`) the maximum number of shared memory identifiers. This number can range from 5 to 1000, and is rounded down to the closest multiple of 5. The default is 100 IDs.
- **shared memory attaches**—(`max_num_shm_segs`) the maximum number of shared memory segments that can be attached to a single process (refer to `shmctl(2)`, `shmget(2)`, `shmop(2)`). This number can range from 0 to 1000. The default is 10.
- **shared memory size threshold**—(`max_shm_vsegsz`) the upper limit of normal virtual shared memory segments. Requests for shared memory segment sizes larger than this value will be allocated as paged virtual shared memory segments. This value can range from 0 to 523 264 bytes. The default is 16 384 bytes.
- **working set ratio**—(`work_set_ratio`) a decimal value (representing a percentage), specifying the minimum number of virtual pages that are guaranteed to any process in memory.

Suppose that you are running a program that, if completely loaded into the system, required 1000 pages to be allocated to your partition. Also suppose that the working set ratio is 0.04. This guarantees that 0.04×1000 pages, or 40 pages, are mapped to your process' partition. If more pages are available in the page frame pool, they may be mapped to your process' partition as well. However, when pages are needed by another partition (and none are available in the page frame pool), you are guaranteed that your process' partition will have at last 4% of its maximum need (40 pages). The default is 0.002 (0.2%).

How to Configure Your Operating System

The system is configured with the `uconfig` command. This command writes the new configuration values to the specified boot area of the boot device (the mass storage device from which the system can be booted). This means that **to see the effect of the new configuration, you must shut the system down and re-boot** (thus loading the kernel and the new configuration values from the boot area).

The operating system being used to modify configuration parameters in a boot area must be the same version as the operating system residing in the boot area being modified.

The file system **should** be in the system administration run-level (run-level `s`), and have an `/etc/fsck` command performed before any of the following operations are attempted.

To configure the system (with other than the default configuration attribute values), you must create a text file. Each line in the text file must have the form:

```
id value [# comment]
```

where **id** is a fixed name identifying the attribute you wish to change, and **value** is the new value of the attribute. You can attach comments to any line in the file (and thus make a note to yourself of the reason for the value change) by entering the comment after a **#** character.

A text file containing all configurable parameters and their current values can be easily created by redirecting the output of **uconfig** with no arguments:

```
uconfig > this.config
```

This file can then be edited to contain the desired parameter values.

Once the file is created, it can be copied to the boot area of a device with the **uconfig** command. If you change the values in the boot area the system must be rebooted before the system will recognize the new configuration. Refer to the *uconfig(1M)* entry in the *HP-UX Reference* manual.

Setting the Default Configuration Parameters

The *HP-UX Reference* manual describes each id and their range of acceptable values for each attribute. Should you accidentally set values that reduce the performance of your system, you can restore the system's default configuration values by simply entering (where **boot_device** is the name of the special file of the boot device):

```
uconfig -d <boot_device>
```

Controlling Disk Use

As system administrator, you should keep track of the amount of disk space available to users and the distribution of free disk space across file systems. The following commands will help you evaluate your disk use and identify future disk needs.

- The **du** command should be executed regularly (weekly or bi-weekly) and the output kept in an accessible file for later comparison. This method lets you spot users who are rapidly increasing their disk usage.

The output from **du** is given in 512-byte blocks.

- Use the **find** command to locate large or inactive files. For example, the following entry records in the file **aging_files** the names of files neither written nor accessed in the last 90 days:

```
find / -mtime +90 -atime +90 -print > aging_files
```

- Use the **df** command to list the amount of free disk space on a volume.

The output from **df** is given in 512-byte blocks.

- Use the system accounting package as described in the chapter “System Accounting”.

Some files, if present, are written to automatically by certain HP-UX commands (to monitor system use and for general house-keeping). Some files are created automatically by the commands that require them. Both of these sorts of files are called logging files. If not periodically checked and cleared, these files simply continue to grow.

Here are some typical logging files:

- **/etc/utmp** (binary) - current login status.
- **/etc/wtmp** (binary) - history of logins, logouts and date changes.
- **/etc/mnttab** (binary) - mounted devices (not the official list kept by the system in the kernel).
- **/usr/adm/sulog** (ASCII) - history of use of the **su** command.
- **/usr/lib/cron/log** (ASCII) - history of actions by **cron**.

The only way to avoid logging is to link log files to **/dev/null**.

Creating File Systems

The HP-UX system provides a command, `sdinit` which “makes” (creates) a file system (structured directory format volume).

Follow these steps to create a file system for the Series 500 HP-UX system:

1. Connect the mass storage device on which the file system will exist to your HP-UX system. See the “Adding/Moving Peripheral Devices” section earlier in this chapter and the installation manuals supplied with your Series 500 computer and/or the mass storage device for hardware installation details.
2. If a special (device) file does not exist for the mass storage medium, create one using the `mkdev` script or the `mknod(8)` command and the directions in the “Adding/Moving Peripheral Devices” section of this chapter.
3. Once the mass storage device is properly installed, run the media initialization utility `sdinit`. This utility initializes the medium on which the file system will reside. If the medium has been initialized before, you may skip this step. The format is:

```
/etc/sdinit /dev/fname blocksize bootsize interleave
```

where */dev/fname* is special file describing the new media, and *blocksize*, *bootsize*, and *interleave* are optional arguments. For more on these arguments, see Chapter 3 (Concepts) of this manual or the *HP-UX Reference* manual.

4. Next, mount the new file system. This is described in the section “Mounting and Unmounting Volumes”. The basic steps are:

```
# create a directory on which to mount the new file system  
mkdir /mount_directory  
  
# mount the new file system onto '/mount_directory'  
mount /dev/fname /mount_directory
```

where */dev/fname* is the name of the special file associated with the mass storage medium.

7. Create the `lost+found` directory. The program `fsck` requires that a directory `lost+found` be present on every file system, so that `fsck` can put stray files there. This directory must be created, then it must have some empty entries in it. This is accomplished by creating many files (100 will do) and then removing them. This creates “slots” that `fsck` can use. Use the following series of commands (where `mount_directory` is the directory on which the file system is mounted as shown above):

```
# create the lost+found directory
mkdir /mount_directory/lost+found

# go to the lost+found directory
cd /mount_directory/lost+found

# create approximately 100 files
touch `(cd /bin; ls)`

# remove the files we just created
rm lost+found/*
```

8. Add the new file system to `/etc/checklist`.

If the newly created file system is intended as a permanent addition, you may wish to modify `/etc/checklist` so the new file system will be mounted when the system is booted.

Creating Groups/Changing Group Membership

A group is defined by a single line in the `/etc/group` file. Each entry in the file consists of four fields, separated by colons. To create a group, edit the `/etc/group` file and make an entry for the group. The general form of the entry for a group is:

```
group_name:password:group_id:member1, member2, ..., memberN
```

The *group_name* field contains the name of the group.

The *password* field is not currently used. However, to prevent non-group members from switching to this group (with the `newgrp` command), place an asterisk (*) in this field.

The *group_id* field is the unique integer ID shared by all group members.

The *member1, member2, ..., memberN* list is composed of the user name of each group member; user names are separated by commas.

To alter a group's membership, simply modify the membership field for the group entry in the `/etc/group` file. When you are satisfied with the group definition, write the modified file to disk and terminate the editing session.

Note that a user may belong to many different groups. By using the `newgrp` command, the user can change his effective group ID to that of another group. A user's default group is specified by his group ID entry in `/etc/passwd`.

Creating and Using a Recovery System

A **recovery system** is a bootable subset of your HP-UX system. It contains only enough of the system to allow you to boot and to help fix your file system. It is used only if your normal HP-UX system cannot boot.

Once your system has been installed, the first thing you should do is make a recovery system. Then, if you can't boot from your root disk because your root disk is too corrupt or because you forgot your root password, your recovery system will be available to boot and repair your file system.

The recovery system is easy to build, and is invaluable if you ever need it. A recovery system is built using a shell script, `/etc/mkrs`. You can build a recovery system in multi-user mode; you don't need to have your users log off. You will build your recovery system on one 150-foot cartridge tape.

When to Create/Recreate the Recovery System

You should create a recovery system as soon as you have installed your HP-UX operating system and configured/customized it.

Each time you change the boot area or configuration (such as changing the console device) on your root system you should also remake your recovery system. This is **required** if changes to the console device resulted in a change to `/dev/console`. In other situations (such as changing the boot area) it will save you time if you ever need to re-create a root system—if your recovery system is up-to-date, then you don't need to remember what was in your root system to get it back to the same run-level.

Note that you may not know if your boot area has been altered: this may be done automatically during an update. To check this, use the `osck -v` command for both the root system and the recovery system. If the two boot areas are different, then you should remake the recovery system.

Creating a Recovery System

Four programs are needed to make a recovery system:

- `/etc/mkrs`— a shell script that creates the recovery file system
- `/etc/dolinus`— a program that sets several file system parameters to values that are optimal for cartridge tape (called by `mkrs`)
- `/etc/undolinus`— a program that resets the file system parameters to their usual values (called by `mkrs`)
- `/etc/mkrs.devs`— a program that finds the major and minor number of your root device

The recovery system has a boot area so you can boot using just the recovery system. The recovery system also has a small file system, containing the following files and directories:

- `/bin` The `/bin` directory contains a small subset of HP-UX commands. Use the `ls` command to list the files you have on your recovery system.
- `/dev` The `/dev` directory contains the device files that existed on your system when the recovery system was created.
- `/disc` This directory can be used to mount a file system.
- `/etc` The `etc` directory contains the tools and files necessary to fix your root file system: `fsck`, `init`, `mknod`, `oscp`, `osck`, `rootmark`, `sdfinit`, `mount`, and `umount`. It also contains small `inittab`, `profile`, and `rc` files, which are necessary for booting.
- `/tmp` This directory is used for temporary file storage.

To create the recovery system:

1. Log in as the super-user, **root**.

You will be accessing privileged commands, so you must have super-user privileges.

2. Determine whether the device files in **/dev** exist for the tape drive on which you wish to create the recovery system. The **mkr**s program will use the following defaults:
 - a. Default for the root device: **/dev/dsk/0s0**, **/dev/root**, or **/dev/hd**. One of these files should exist on your system. If none of them exist, you must either create one of them or supply the name of the device file associated with your root disk as an option on the command line. The root device file can be either block or character type; the other **does not** have to exist.
 - b. Default for the recovery device: **/dev/update.src**, **/dev/rct/c0**, or **/dev/rct**. One of these files should exist on your system. If none of them exist you must either create one of them or supply the name of the device file associated with the recovery device as an option on the command line. The recovery device file can be either block or character type; the other **does not** have to exist.

Refer to the section “Adding Peripheral Devices” for procedures on how to create device files.

3. Create the recovery system by using the **mkr**s command. **mkr**s has the form:

```
mkrs [-f rcdev] [-r rootdev] [-t type] [-v] [-m series]
```

See the following section, “Using the **mkr**s Script”, for details on options and defaults.

4. Boot the recovery system to verify that it works. For this step, you will need to shut down the system. You probably will want to test-boot the recovery system during off hours if you have other users on your system. Follow the steps in the section “Booting the Recovery System”.
5. Put the recovery system in a safe place and **LOCK IT!**

When you boot using the recovery system, you come up as the root user. This is potentially a serious security problem. It is up to you, the system administrator, to keep this recovery system safe (so you can use it if needed) and out of sight (so unauthorized people do not have access to it).

Using the `mkr`s Script

`mkr`s has the form:

```
mkr [-f rcdev] [-r rootdev] [-t type] [-v] [-m series]
```

where:

rcdev is the name of the device file for the recovery system (i.e., the cartridge tape drive or flexible disk drive you are creating the recovery system on). The `mkr`s command will, by default, look for the following device files:

```
/dev/update.src if it exists as a character device file, else  
/dev/rct/c0     if it exists as a character device file, else  
/dev/rct       if it exists as a character device file, else  
                 the device file must be specified.
```

If none of the above defaults exist on your system, you must either create one of them or you must specify the recovery device file using the `-f` option. The recovery device file can be either a block or a character device file.

An error message will result if the user does not use one of the defaults and does not specify a recovery device file name.

rootdev is the name of the device file for the root device. The `mkr`s command will, by default, look for the following root device files:

```
/dev/dsk/0s0   if it exists as a block device file, else  
/dev/root     if it exists as a block device file, else  
/dev/hd       if it exists as a block device file, else  
                 the device file must be specified.
```

If none of the above defaults exist on your system, you must either create one of them or you must specify the root device file using the `-r` option. The recovery device file can be either a block or a character device file. An error message will result if a default root device file does not exist and the user does not specify a root device file name.

type can be either `ct` (cartridge tape) or `md` (micro disk). The default is `ct`. This is correct for your S500 system.

series This value is normally not needed. If `mkr`s cannot determine the type of system you have it will send you an error message. If this happens re-execute `mkr`s using the `-m` option with either `300` or `500`. Since you are creating the recovery system for your Series 500 machine, use the value `500`.

For example, if your root file system is associated with the device file, `/dev/dsk/0s0`, and you will be creating your recovery system on the tape drive associated with the device file `/dev/rct2`, you would type the following command:

```
mkrs -f /dev/rct2
```

The `mkrs` process takes about 1 hour on a 150-foot cartridge tape.

Booting the Recovery System

To use your recovery system you will need to boot, then use the recovery tools to gain access to your root disk. Follow these steps to boot your system:

1. Power up the tape drive that will hold your recovery tape. Put the recovery tape in the tape drive and wait for the busy light to remain off.
2. Turn on your computer. The boot ROM will search your on-line disk and tape drives for the first bootable operating system. You must make sure the tape drive containing the recovery system is the first device the boot ROM finds. Unless you have an HP 7935 hard disk on line, or have another cartridge tape drive on line, the recovery system will probably be the first bootable system. Refer to Chapter 4: "System Startup and Shutdown", the section called "The Boot ROM's Search Sequence" for more details.

The booting process takes about 10 minutes. When it's done, you will see the words:

```
Welcome to the HPUX Recovery System
```

You are now in the recovery system.

Shutting Down the Recovery System

Following is the correct method of halting, or shutting down, your recovery system:

1. Make sure the hard disk (root disk) is not mounted. To check, execute the `mount` command with no parameters. If the disk is mounted, unmount it by entering:
`umount /dev/hd`
2. Execute the `sync` command.
3. When the busy light on the tape drive remains off, halt the system by entering:
`reboot -h`
4. Turn off power to the computer.
5. Take the cartridge tape out of the disk drive.
6. Turn on power to the computer and boot from the hard disk (root disk).

Using the Recovery System

A recovery system is intended to repair certain damage that might occur on your root file system. However, if the damage is severe or if the damage extends across the entire file system, it may be easier to re-install HP-UX and then restore files from your backup media.

This section describes how to recover from specific, and often localized, problems on your file system. If none of these problems apply to your situation, or if after correcting these problems you still cannot boot from your root disk, then you probably need to re-install the system and restore from backups.

Once you have booted your recovery system and you see the shell prompt on your display, you can use the following steps to try to recover your root file system. The procedure outlined here makes the following assumptions:

- you cannot boot your regular system; you suspected a problem and used the recovery system to boot
- your root device is called `/dev/hd` (block device file) and `/dev/rhd` (character device file)
- your recovery device is called `/dev/ct` (block device file) and `/dev/rct` (character device file)

Use `ll -R /dev` to determine what device files are actually present on the recovery system.

Root device, in the following procedure, refers to the device that is root under normal circumstances (the hard disk drive associated with your root file system).

Step 1. Check Your File System

If you think your root file system is corrupted, then run `fsck` on the **character** device file associated with your root device (for example, `/dev/rhd`).

If the `fsck` appears to solve the problem, then shut down the recovery system and reboot from your hard disk. Shutdown procedures are described in the section “Shutting Down the Recovery System”.

If the reboot fails, then come up on the recovery system again and go on with step 2. If the boot succeeds but other problems still exist on the disk (such as missing or corrupted files), then go to Step 4.

Step 2. Mount the Root Device

Once the integrity of the file system is ensured, mount the root device using:

```
mount /dev/hd /disc
```

Step 3. Check the Critical System Files

To get your root volume to a state where you can boot from it, you need to check several files. The critical files for HP-UX are listed below. You should still be booted from the recovery system. For each file, the appropriate action to fix the file is also listed:

File	Action
<code>/bin/sh</code>	Copy the version of this file on the recovery system to the root volume, then remove and relink <code>/bin/rsh</code> . The commands are: <pre>cp /bin/sh /disc/bin/sh ln /disc/bin/sh /disc/bin/rsh</pre>
<code>/etc/init</code>	Copy the version of this file on the recovery system to the root volume: <pre>cp /etc/init /disc/etc/init</pre>

`/etc/inittab`

If `inittab` is corrupted, `init` might fail. To work around this problem, save the `inittab` file (you may want to go edit it later), then create a single line `inittab`. Do this as follows:

```
mv /disc/etc/inittab /disc/etc/inittab.save
echo "is:s:initdefault:" > /disc/etc/inittab
```

Be very careful to type the second line exactly as shown (including the quotes).

`etc/ioctl.syscon`

If you have changed the device used as the console, it is possible that `/etc/ioctl.syscon` is incorrect, or it may have otherwise become corrupted. Work around this problem by removing the file (the next time the system is booted a correct file will automatically be created):

```
rm /disc/etc/ioctl.syscon
```

`/dev/console`

This file (which is also linked to `/dev/syscon` and `/dev/systty`) could be corrupted. If it is corrupted, or if the file does not match the console, then the system may not boot.

If you have not made changes to the console device on your root volume then use the following information to compare these files on the recovery system to the files on the root volume. Type:

```
ll /dev /disc/dev
```

If the files on the root volume do not match those on the recovery system, then correct the problem by doing the following:

```
# remove the three files, console, syscon, and systty
rm /disc/dev/console /disc/dev/syscon /disc/dev/systty

# Use the appropriate parameters to make /dev/console match
# the /dev/console file on the recovery media (using
mknod).
# Note that you cannot copy (using cp) device files.

# link the files
ln /disc/dev/console /disc/dev/syscon
ln /disc/dev/console /disc/dev/systty
```

If you have changed the console device refer to the section called “Notes on the System Console Device” at the end of these procedures.

Step 4. Fix Other Problems

If you have rebooted from the root volume, you can now fix other possible problems as described below:

1. If `/etc/inittab` was corrupted, you can now edit the version that was saved to fix it. Once edited, move it back to `/etc/inittab`. (Refer to the next section for details on fixing corrupted files.) Until you have tested your newly edited `inittab`, you should make the default state run-level `s`. You can switch to other states using `init x`, where `x` equals the desired run-level, 0-6.
2. If you lost other system files, you should **update** your system. **update** requires that at least the following commands be available.

```
/bin/sh           /bin/mkdir
/bin/pwd          /bin/cpio
/usr/bin/lifcp    /usr/bin/tcio
/etc/update       /etc/sysrm
```

If any of these are missing, you can get them from your recovery tape by mounting the tape and copying the missing command(s) to the root device. You may already have `/bin/sh` on your system (from Step 3). To get the files onto your system, execute the following sequence:

```
mkdir /disc           only if /disc does not already exist
mount /dev/ct /disc
cp /disc/bin/mkdir /disc/bin/pwd /disc/bin/cpio /bin
cp /disc/usr/bin/lifcp /disc/usr/bin/tcio /usr/bin
cp /etc/update /etc/sysrm /etc
```

3. If you think the boot area on your root device has been corrupted, then create a raw device file for root (assuming none exists) and copy the boot area from the recovery system to the root device as follows:

```
oscp -o /dev/rct /dev/rhd
```

NOTE

The boot area on the recovery system is a copy of the boot area that existed on the root disk when the recovery system was created.

Also, the commands normally used to create backups are on your recovery tape. These commands are `cpio`, `tcio`, and `tar`. If these commands are missing from your root disk, and you wish to restore from backups, you can mount the recovery tape and copy the commands to the root disk. Refer to the procedure in Step 4 for copying commands from the recovery system to the root disk.

Notes on the System Console Device

When you change the console device you may also need to make changes to the boot area and/or to the device file (`/dev/console`). The following changes to the system console device require changes to either the boot area or to the `/dev/console` file:

- changing the console from a terminal connected to an ASI or 8-port mux card to a terminal connected to a 6-port modem mux card changes the major number of `/dev/console` from 31 to 29, changes the minor number (see “Consoles” in the section “Adding/Moving Peripherals”), and requires the optional `HP27140.opt` driver segment in the boot area (the ASI and 8-port mux cards use the optional driver segment `HP27128.opt`),
- changing the console from a terminal connected to an ASI or 8-port mux to an HP 98700 display changes the major number of `/dev/console` from 31 to 29, changes the minor number (see “Consoles” in the section “Adding/Moving Peripherals”), and requires the optional `HP98700.opt` driver segment in the boot area (the ASI and 8-port mux cards use the optional driver segment `HP27128.opt`),
- changing the console from a terminal connected to a 6-port modem mux card to an HP 98700 display does not change the major number, but does change the minor number of `/dev/console` (see “Consoles” in the section “Adding/Moving Peripherals”), and requires the optional `HP98700.opt` driver segment in the boot area,
- the reverse of the above three scenarios.

If you have changed the console device AND your system is not bootable then one of the following probably happened:

- `/dev/console` was not changed as required to match the new console device. You cannot use the recovery system to fix this (you won't be able to boot from the recovery system). You need to boot from the regular system and put the old console device back on the system, boot, make the appropriate changes to `/dev/console` (remove the existing `/dev/console`, `syscon`, and `sys tty`). If the required driver segment is not in the boot area, then add it (use `oscp` as shown below to add the segment to the boot area), shutdown your system, put the new device back on, and reboot.

```
oscp -a /disc/system/<hpux_product_#>/<segment> /dev/rhd
osck -v /dev/rhd
```

where `<hpux_product_#>` is the product number of the HP-UX operating system (the product number will be on the label of your most recent installation or update tape) and `<segment>` is the name of the optional driver segment that is needed (identified above).

- `/dev/console` was changed INCORRECTLY. You must boot from the recovery system using the old console device.

Once booted you can fix this by doing the following:

```
rm /disc/dev/console
mknod /disc/dev/console c major minor
rm /disc/dev/syscon /disc/dev/systty
ln /disc/dev/console /disc/dev/syscon
ln /disc/dev/console /disc/dev/systty
```

where *major* is the appropriate major number and *minor* is the appropriate minor number.

- `/dev/console` was changed correctly but the kernel segment required to use the new device is not present in the boot area. You must boot from the recovery system using the old console device.

Once booted you can fix by doing the following:

```
oscp -a /disc/system/<hpux_product_#>/<segment> /dev/rhd
osck -v /dev/rhd
```

where `<hpux_product_#>` is the product number of the HP-UX operating system (the product number will be on the label of your most recent installation or update tape) and `<segment>` is the name of the optional driver segment that is needed.

Media Utilities

Media is what you store data on: hard disk, flexible disk, cartridge tape, or 9-track tape. This section discusses the commands and utilities you should use to initialize, monitor, maintain, and use with your media.

The following concepts are covered:

- Initializing media
 - Initializing hard disks for HP-UX use
 - Initializing LIF volumes
- Commands and utilities to store files and transfer files between computers
- Commands to monitor your file system
- Commands to verify the integrity of your media

Initializing Media

What Is Initialization?

Before a disk or tape can be used for the first time, it must be **initialized** (or **formatted**) for use with your disk drive and computer. Initialization performs two main functions:

- Checks the mass storage media for defects (areas where information cannot be stored).
- Sets up a **directory** (a list of the files on the disk or tape).

When Do You Need to Initialize?

You need to initialize:

- media you use as part of your HP-UX file system (**sdinit**)
- media you wish to use to transfer files between HP-UX and a language workstation (**lifinit**)
- flexible disks (always before you use them the first time) (**sdinit**)

You do **not** need to initialize:

- cartridge tape and 9-track tape that you wish to use to transfer files between two HP-UX or UNIX systems using **tar**, **tcio**, **cpio**.

Initialization of the HP-UX root disk is performed as you are installing the HP-UX system on your computer. If this is the only mass storage device you will be using, then you need not be concerned with any further initialization.

Initializing Disks to SDF Format

The Series 500 computers recognize SDF (Structured Directory Format) on initialized disks and tape. The `sdformat` command is used to initialize media in this format.

The `sdformat` command performs five functions: initialization, certification, interleave factor selection, block size assignment, and boot area creation.

Initialization

It initializes your media in SDF, which is recognized by all HP 9000 Series 500 computers.

Certification

It optionally certifies your media. Certification verifies that the media accurately reproduces the data written on it. If any portion of the media fails certification, that portion is “spared” - that is, excluded from any further I/O operations.

The certification process can be **disabled** by specifying the `-i` option on the `sdformat` command line. Note that use of the `-i` option is strongly discouraged. Although skipping the certification step saves time, you are left with initialized media whose reliability is unsure at best.

Interleave Factor

It selects an *interleave factor* for the media. The interleave factor is an integer specifying how many (if any) sectors are skipped each time an I/O operation occurs (a **sector** is the smallest amount of media space that can be read or written at one time).

For example, an interleave factor of two (2) causes sectors 1, 3, 5, 7, ... to be written on or read from. When the end of the track is reached, the media wraps around and begins using sectors 2, 4, 6, and so on. Thus, two passes are required to fill the media. If an interleave factor of four (4) is specified, the media uses sectors 1, 5, 9, 13, ... on the first pass, sectors 2, 6, 10, 14, ... on the second pass, sectors 3, 7, 11, 15, ... on the third pass, and finally sectors 4, 8, 12, 16, ... on the final pass.

The purpose of the interleave factor is to facilitate maximum data transfer to/from the media. Faster devices (such as hard disks) do well with an interleave factor of one (i.e. no sectors are skipped). This puts data closer together on the media, enabling data to be provided as fast as the device can read it. Slower devices (such as external flexible disk drives) need a larger interleave factor to provide data slowly enough for the device to process it.

In general, SS/80 disks work best with an interleave of 2, CS/80 disks work best with an interleave of 1.

If no interleave factor is specified, `sdformat` assigns a default of one. This works well with most media. The exceptions are the internal 10 megabyte Winchester disk available on the Model 520, which has a recommended interleave factor of four, and external flexible disk drives. Note that the built-in flexible disk drive on the Model 520 has been optimized such that an interleave factor of one is appropriate.

Block Size

It assigns a *block size* to be used in data transfers to/from the media. A block size is an integer specifying the number of bytes per block of data. When data is then written to or read from the media, it is saved up until one block's worth of data is accumulated, and then the entire block is transferred.

The block size is used to simultaneously determine the amount of media space used, and the speed at which data transfers are made. Smaller block sizes save media space but cause inefficient data transfers. Larger block sizes cause data to be transferred more efficiently and quickly but waste media space.

To illustrate the block size's effect on media space, you need to understand how a block size is used by a particular medium. Whenever a block size is defined, the medium for which it is defined automatically allocates one block for every file yet to be created on that medium. Thus, if the block size is 2048 bytes, for example, a file containing 32 bytes is still allocated 2048 bytes, leaving 2016 bytes that are unused yet unavailable for any other use. If the file happens to grow such that it now contains 2049 bytes, another 2048-byte block is allocated for it, leaving 2047 bytes unused and therefore wasted. When a medium becomes riddled with these chunks of unused space, it is said to be **internally fragmented**.

Large block sizes, however, permit much more efficient data transfer. For example, consider the two block sizes, 256 bytes and 2048 bytes, which are to be used to read a 1 megabyte file. If the medium on which the file resides was initialized with a 256-byte block size, it would take 3907 read operations from the medium before the entire file is read. With the 2048-byte block size, however, only 489 read operations are needed. You can see the larger block size greatly reduces the number of device accesses needed, thereby reducing wear and tear on the device. Also, the data can be transferred in much less time.

Obviously, a compromise must be made. The recommended block size for hard disks is 1024 bytes. For flexible disks, block sizes of 256 bytes or 512 bytes work well. Depending on the application, block sizes should not exceed 4096 bytes (sometimes useful for serial data access from hard disks). If the block size you specify is not a power of two, **sdformat** rounds it up to the next power of two. If you do not specify a block size, **sdformat** uses a default block size of 512 bytes.

One final point to keep in mind involves the **cache buffer size** (set by the **uconfig(1M)** command) and its relationship to the block size. You should never set the cache buffer size smaller than the largest block size you are supporting on your system. For example, if you have a hard disk with a block size of 2048 bytes, a hard disk with a block size of 1024 bytes, and two flexible disk drives with block sizes of 256 and 512 bytes, respectively, your cache buffer size should be at least 2048 bytes. If in this example the cache buffer size is 1024 bytes, the number of cache buffers would effectively be halved, degrading system performance. If the cache buffer size is 4096 bytes, half of every cache buffer would be wasted.

Boot Area

It optionally creates a *boot area* on the medium being initialized. A boot area is a section of the volume which is set apart to contain the various code segments needed to boot up HP-UX and any optional products you may have purchased. If you want to use a particular medium as the boot-up device for your system, then specify the boot area size, in bytes, on the **sdformat** command line. A minimum boot area size of 500 000 bytes is recommended. If you omit the boot area size, **sdformat** uses a default size of zero bytes (no boot area is created).

Using sdformat

When is it appropriate to use **sdformat**, and on what devices? You should always use **sdformat** on hard disks. Do not use **sdformat** on nine-track magnetic tape.

For pre-certified cartridge tapes, do not use **sdformat** if you are using the cartridge tape with **backup**, **tcio**, or other raw applications (i.e., those applications using character special files). If you want a boot area on the pre-certified cartridge tape, you should use **sdformat** (with the **-i** option to inhibit certification).

For cartridge tapes that have not been pre-certified, **sdformat** should be used to certify them (i.e., do **not** use the **-i** option).

A helpful hint: if you have any medium that you would like to certify, but you do not want the Structured Directory Format written on the medium, specify a **bootsize** which is larger than the total capacity of the medium. For example, for a DC500 cartridge tape, specify a *bootsize* greater than 67 megabytes. **Sdfinit** completes the certification process, and then aborts when it determines that the specified *bootsize* is too large for the medium.

Examples

```
sdfinit /dev/hd 1024 1000000
```

This example initializes the hard disk addressed by `/dev/hd` with a block size of 1024 bytes, and a boot area of 1 Mbyte. The default interleave factor of one is selected.

```
sdfinit /dev/rfd.0 256 0 3
```

This example initializes the flexible disk addressed by `/dev/rfd.0` with a block size of 256 bytes, a boot area size of zero, and an interleave factor of three.

```
sdfinit /dev/ct881401 512 100000000
```

This example certifies the DC600 cartridge tape addressed by `/dev/ct8814011`. **Sdfinit** aborts after certification because the specified boot area size (100 Mbytes) is larger than the capacity of the cartridge tape.

Initializing Media to LIF Format

Note that if you are going to make a LIF¹¹ copy of files on a flexible disk you can use the LIF commands covered in the *HP-UX Reference*. These commands allow you to make copies of LIF ASCII files on media initialized using any HP Series 200, 300 or 500 workstation-based operating system, whether it be Pascal or BASIC.

¹¹ LIF stands for Logical Interchange Format. It is an HP standard format used for directories and files on mass storage devices (such as flexible and hard disks). It allows *media interchange* between various machines that use it, such as using the same disks with several 5¹/₄ and 3¹/₂ inch flexible disk drives made by HP.

Is the Media Initialized?

To determine whether or not your disk is initialized in LIF format:

- place it in your disk drive,
- type the following:

```
lifls /dev/rfd0
```

where `lifls` is the command to list the files on the flexible disk, and `/dev/rfd0` is an example of a special device file name.

The above steps causes a list of files similar to the following to be displayed if the disk has been initialized and contains files.

```
PLOT_DEMO  PRINT_DEMO  GINPUT_DEMO  HELLO_DEMO  HELLO_TEST
```

If the disk is not initialized the following appears in your display:

```
lifls(open): I/O error
lifls : Can not list /dev/rfd0; NOTLIF
```

Creating a LIF Volume

You can create a LIF volume in the HP-UX file system with the *lifinit* command. If your media has never been initialized, it must be initialized using *sdinit* before *lifinit* can be used. *Lifinit* writes a LIF volume header on a volume or file and has the following form:

```
lifinit [-vnnn] [-dnnn] [-n VOL_NAME] FILE_NAME
```

The options may appear in any order. Definitions of the options are:

- vnnn* sets the volume size to *nnn* bytes. If *nnn* is not a multiple of 256, it is rounded down to the next such multiple. This number should be the capacity of the media you wish to copy files to (for example, 270336 for 5¼ inch flexible disks). If you do not specify a volume size it will default to 256 Kbytes for regular files.
- dnnn* sets the directory size to *nnn* file entries. If *nnn* is not a multiple of 8, it is rounded up to the next multiple. If you do not specify a directory size the default size is calculated based on the volume size. Refer to the *lifinit(1)* entry in the *HP-UX Reference* for details.

-n *VOL_NAME* sets the volume name to be *VOL_NAME*. If the **-n** option is omitted, the volume name is set to the last component of the path name specified by *FILE NAME*. If *VOL_NAME* is longer than 6 characters, it is truncated to 6 characters. ***VOL_NAME* must be all uppercase (this is a LIF standard).**

FILE_NAME The name of the file on the LIF volume. *FILE_NAME* must be all uppercase (this is a LIF standard).

For example, to write a LIF volume header to an HP-UX file that is to be copied to a flexible disk, type the following:

```
lifinit -v270336 -d240 -nVOL VOL
```

where the volume size is the total number of bytes contained on a 5¼ inch flexible disk. Note again that the LIF standard dictates that both the LIF volume name (**-nVOL**) and the LIF file name must be in uppercase.

Although LIF volume files can exist without problems on HP-UX, the system sees them as being possible bad files and so it generates a warning about them during executions of **fsck** (file system check). For this reason, you should remove LIF volume files when you are through with them (after their contents have been stored on flexible disks).

Commands and Utilities to Transfer Files

The commands you can use to transfer files are:

- **cpio**
- **ftio**
- **tcio**
- **tar**
- **dd**
- **LIF Utilities**

Each of these commands and utilities is described below.

cpio

This command is used to transfer files between your hard disk, 9-track magnetic tape, and flexible disks. It is also used with **tcio** to transfer files to/from cartridge tape.

It accepts a list of files from standard input (i.e., through pipes or redirection) and generates an archive to standard output (i.e., through pipes or redirection).

Examples of this command are given in the section “Backing Up and Restoring your File System” in this chapter, and in the *HP-UX Reference*, **cpio(1)**.

ftio

This command has been developed by Hewlett-Packard as a faster alternative to **cpio** or **tar**. It is similar to **cpio** and can be used for the same purpose. It is also compatible with **cpio** in that output from **cpio** is always readable by **ftio** and output from **ftio** is readable (with exceptions) by **cpio**. Refer to the *ftio(1)* entry in the *HP-UX Reference* for more information.

tcio

The command, **tcio**, is used primarily as a filter between archiving programs and a cartridge tape. The two main archiving programs on HP-UX are **tar** and **cpio**). **tcio** enables immediate report (which enables streaming) for cartridge tape drives that support immediate report (9144 drives). It also allows buffering of data into large blocks (up to 64 Kbytes) —this reduces wear and tear on older devices that don't support streaming.

Additionally, **tcio** provides utility functions (-u option) such as unloading tapes, writing tape marks at specific blocks (by default, it writes a tape mark to block 0 to prevent accidental image restores), and performing software-driven verification. It also provides the user a software interface to autochanger units, allowing the user to specify which of a set of tapes to read, write, or load.

Examples of this command are given in the section “Backing Up and Restoring your File System” in this chapter, and in the *HP-UX Reference*, **tcio(1)**.

tar

tar should be used to transfer files between HP-UX and other UNIX operating systems since **tar** is standard on all UNIX systems. The **tar** command (tape archive), like **cpio**, understands and keeps intact the hierarchical directory structure.

For example, to archive all your users' directories onto a 9-track magnetic tape at `/dev/mt/Omn`, you would use the following command line:

```
tar cvf /dev/mt/Omn -C /users
```

This creates (`c` option) a new archive in the file (`f` option) `/dev/mt/Omn`, with the verbose (`v` option). The input for the archive (`-C` option) is the full `/users` directory.

To get the information off the tape into the current directory, enter:

```
tar xvf /dev/mt/Omn
```

dd

The command, `dd`, can be used to copy a file from one place to another. It is different from `cp` in that it can be used to make some conversions on the file, transfer the file between different media, or reblock the file.

One example of how to use `dd` is when you need to create a new boot area. Since you don't want to write to your boot area until you are fairly sure you have a workable kernel, you can copy the first 1024 bytes of your boot area to a file by using `dd`:

```
dd if=/dev/rhd of=temp_file bs=1024 count=1
```

then add to and delete from the temporary file (using `oscp` on the temporary file) until you have the boot area desired. Once you have a finished version, use `osck` to list the segments, and recreate the "real" boot area using `oscp`.

For more information on the boot area, read the section in this chapter called "Modifying the Boot Area".

Another example of using `dd` is when you need to do an image copy from one hard disk to another. When doing an image copy, make sure you have properly initialized the destination disk so no information is written onto bad tracks.

LIF Utilities

The LIF utilities are commands that enable you to read and write files in Hewlett-Packard's LIF format. LIF is a format that HP-UX, the BASIC operating system, and the Pascal Workstation all understand (as well as many other Hewlett-Packard operating systems).

Getting a set of HP-UX files into a format that is readable by a language workstation requires three HP-UX commands: `lifinit`, `lifcp`, and `cat`. These commands are used in the following three steps:

1. Create a LIF volume with `lifinit` (explained in the section called “Initializing Media in LIF Format”).
2. Use `lifcp` to write the files to this volume.
3. Use `cat` to write the LIF volume to the initialized LIF media (usually a 5¼ inch flexible disk).

Copying HP-UX Files to LIF Volumes

Once you have created a LIF volume, you can write files to the volume using the `lifcp` command. The `lifcp` command has the following format:

```
lifcp hpux_file VOL_NAME:FILE_NAME
```

where *hpux_file* is a file in your HP-UX directory, *VOL_NAME* is the name you gave to the LIF volume when you created it, and *FILE_NAME* is the name that file is given on the LIF volume. Again, LIF files must be in the uppercase characters.

For example, if you wish to transfer the HP-UX file called `testing.p` in the `/users/engel/progs` directory, to the LIF volume called `VOL1` in the current directory, you would use the following command line:

```
lifcp /users/engel/progs/testing.p VOL1:TESTING
```

You will receive an error message if there is not enough room left on the LIF volume for the entire file. You must then create another LIF volume and copy the file to it.

Moving the LIF Volume to A Disk

After you have copied your files to the LIF volume file, use the HP-UX `cat` command to write the LIF volume to the flexible disk. Do this with the following steps:

1. Insert the flexible disk into the disk drive.
2. List the contents of the disk by executing the following command:

```
lifls /dev/file_name
```

where *file_name* is the name of the device file associated with the disk drive holding your flexible disk (for example, `/dev/rfd`).

Listing the the contents of the disk helps determine if there are any files that should be saved. If you need to save a file which is on the disk read ahead to the section called “Moving LIF Files Onto HP-UX”.

3. Copy the LIF volume file to the disk using HP-UX `cat`. **Using the `cat` command to copy files to a flexible disk overwrites everything on the disk.** If you think you need to save any files on the flexible disk, go back to step 2.

If your LIF volume name on HP-UX is called `VOL1` and the flexible disk you wish to copy it to is associated with the device file `/dev/rfd`, you would enter the following command:

```
cat VOL1 > /dev/rfd
```

Once the LIF volume has been copied to the flexible disk, remove the LIF volume from your current directory by using the HP-UX `rm` (remove) command. Type the following:

```
rm VOL1
```

Adding Files to a LIF Volume

Assume that you already have a 5¹/₄ inch flexible disk in LIF ASCII format and you now want to write an additional file to the disk leaving the current contents of the disk intact. To do this, you use the following command:

```
lifcp hpux_file /dev/file_name:FILE_NAME
```

where *hpux_file* is the HP-UX file you want to copy to the LIF disk; *file_name* is the name of the device file associated with the flexible disk drive (for example `rfd`); and *FILE_NAME* is the uppercase file name given to the *hpux_file* stored on your LIF disk.

Before copying a file to the disk, it is a good idea to check to see how much storage space you have on the disk. To find out how much space there is left on your flexible disk, type:

```
lifls -l /dev/file_name
```

This gives you a listing of the files on the disk and how much room they are consuming.

Moving LIF Files Onto HP-UX

There are some occasions where it becomes necessary to copy LIF files from a flexible disk to the HP-UX file system. An example of this is if you have just received the latest revision of a program on a flexible disk and need to transfer it to the hard disk on your system. To read a LIF file from a flexible disk into your HP-UX directory you must:

1. Place the flexible disk in the disk drive.
2. List the files on the flexible disk using the `lifls` command as previously stated. This helps you to verify that the file is on the disk.
3. Copy the file `FILE_NAME` from the disk into the HP-UX file `hpux_file` using the following command line:

```
lifcp /dev/dev_file:FILE_NAME hpux_file
```

where `dev_file` is the file name associated with the disk drive holding the LIF file.

For example, if you wish to copy the file called `TESTING` from the disk in the disk drive associated with the `/dev/rfd` file, to a file called `testing.p`, type in the following command line:

```
lifcp /dev/rfd:TESTING testing.p
```

Commands to Monitor Your File System

Monitoring your file system includes looking for very large files (`find`), checking for disk usage (`du`), and checking for the amount of free disk space (`df`). These are described in the section, “Controlling Disk Use”, in this chapter.

In addition to the commands discussed in “Controlling Disk Use”, you can use HP-UX system accounting to monitor system usage. Refer to the chapter “System Accounting”.

Commands to Verify the Integrity of your Media

To verify the integrity of the data on your file system, you should use the `fsck` command. For information on `fsck` refer to the appendix “FSCK”.

In addition to `fsck`, a program called `fsdb` can be used to “de-bug” your file system. `fsdb` must be used with great care, and should be used **only** by HP-UX gurus.

The only way to ensure you always have a copy of your files and file system is to do periodic backups. Backup concepts and steps on how to perform a backup is covered in “Backing up Your File System” in this chapter.

Modifying the Boot Area

There are times when you will want to add or remove code segments (usually drivers) from the boot area of your HP 9000 Series 500 computer. When you installed your HP-UX system the boot area was configured to match the equipment you had connected at that time (and this may not be totally true). For example, there are three different console drivers. If you installed HP-UX from an HP 98700 display device connected to a 6 port modem mux, then you will have the code necessary to support both the HP 98700 and the mux at driver 29. At some time later, though, if you want to use an HP 2623 terminal as the console (also on the 6 port modem mux) you will need the code for the HP 2623 in the boot area.

Before modifying your system, you **must** shut down your system to bring it to run-level *s*. See the “Shutting Down the System” section in Chapter 4 for more information on this procedure. Hewlett-Packard recommends that you also do an **fsck** before altering your kernel.

To add or delete segments from the boot area (kernel), you must be logged in as **root** (the super-user account) and be in run-level *s*.

How to Add Segments

A list of optional kernel segments is given in the section “Optional System Segments”.

To install an optional segment, type in:

```
oscp -a /system/xxxxxxx/yyyyyyyy /dev/rhd
```

where *xxxxxxx* is the product number of the code you wish to install, *yyyyyyyy* is a segment which resides under that directory, and */dev/rhd* is the boot volume character special file. As an example, let's say you wish to add the Local Area Network segment:

```
oscp -a /system/50954A/localnet.opt /dev/rhd
```

Once you have added code to the kernel, you will need to reboot the system. Since the kernel is loaded into memory at the time you boot, no change will be reflected until you stop and restart the system (or execute **reboot -r**). Refer to the section “Shutting Down Your System” in Chapter 4 for more information.

Removing Segments

There are two basic steps you must follow to safely remove a kernel segment: first split out the good section into a file (for example, *new.kernel*), and then replace the old boot area with your newly created kernel. To accomplish this first step, type:

```
oscp -s /dev/rhd
```

where */dev/rhd* is the volume containing the boot area. The `oscp` command is interactive—it will prompt you to find out what to do with each kernel code segment:

```
SEGMENT   OFFSET   BYTES   SYSTEM/TYPE   SEGMENT           REVISION
      0         0    4188   HP-UX STANDARD SYSTEM POWERUP    5.1
File to append segment to? (system) new.kernel
Appending to file ('new.kernel')
```

You must tell `oscp` to put the segments you **want to keep** in the file *new.kernel*. After you specify *new.kernel*, you will be able to hit the Return key to get this file as the default—until you specify a different file.

When you get to the segment you wish to remove, respond with a new file name. By redirecting the segment to */dev/null*, you will eliminate that segment (the original should still be in the */system* directory):

```
43  301356  12476  HP-UX STANDARD INTERNAL HP-IB    5.1
File to append segment to? ('new.kernel') /dev/null
Appending to file ('/dev/null')
```

After rerouting the undesired segment to */dev/null*, if you get another segment you wish to keep, you **must** enter *new.kernel* once again. In general, make sure that you route all the segments you want to keep into the *new.kernel* file.

You may wish to remove driver segments to decrease the size of the boot area. This is desirable, since the kernel always remains in memory. For example, if you had the segment for Local Area Net in your current boot area, and you do not use LAN, you are wasting in excess of 300 Kbytes of memory.

To actually update the operating system in the boot area, you simply enter:

```
oscp -m new.kernel /dev/rhd
oscp: please enter new system ID (non-blank ID required):
NEW AND IMPROVED
```

This overwrites the boot area on `/dev/rhd` with the file you just created, `new.kernel`. Notice that `oscp` asked for a new ID field to label the new boot area with. We chose `NEW AND IMPROVED` for this example, but you will probably want something a little more descriptive.

Once you have overwritten code to the kernel, you will need to reboot the system. Since the kernel is loaded into memory at the time you boot, no change will be reflected until you stop and restart the system (or execute `reboot -r`).

Replacing Segments

If you need to replace a segment with a newer version, you need to remove the old segment (refer to the section “Removing Segments”), and then add the new segment (refer to the section “How to Add Segments”).

Checking the Boot Area

HP-UX has a command to list what is in your boot area—`osck`. You may execute `osck` at any time; the system need not be shut down (in run-level `s`):

```
osck -v /dev/rhd
```

For more information on the boot area, see Chapters 3 and 4 of this manual, and the `oscp(1M)` entry in the *HP-UX Reference*.

Optional System Segments

A **segment** is a piece of code that can be added to your kernel to allow you to use additional devices or products. Some segments are required, and will always be included in your kernel. The segments in Table 5-19 are optional segments, and are stored under a `/system/xxxxxx` directory, where `xxxxxx` is the product number you have purchased. For example, `/system/97083A` is the multiuser IMAGE directory, and `/system/97089C` is the 16-user 550 directory. Table 5-19 includes the driver number (used in the `mknod` command), the segment name, and a description.

Table 5-19. Optional System Segments

Driver Number	Segment Name	Description
14	CIPERLP.opt	Ciper printers; e.g., HP 2608
35	HP268X.opt	HP 2680 and HP 2688 laser printers (not HP 2686)
18	HP27112.opt	HP 27112A GP-IO (general purpose I/O) card
38,39	HP27125A.opt	LAN interface card (HP 27125 Ethernet and IEEE 802)
31	HP27128.opt	Normal transfer to ASI and 8-port MUX cards (HP 271128 and HP 27130) (see driver #19)
29	HP27140.opt	6-port modem MUX card. This segment is required on the Model 520, or if your console is on the MUX card, or if you console is the HP 98700.
11	HP7970.opt	HP 7970 and HP 7971 9-track magnetic tape drives
36	HP7974.opt	HP 7974 and HP 7978 9-track magnetic tape drives
32	HP97062_GR.opt	Graphics for the standard console display on the Model 520 and HP 97062 color output interface
29,41-43	HP98700.opt	Bit-mapped displays and ITE
28	HP98770_GR.opt	Monochromatic and high performance color displays on the Model 520 (used by Device independent Graphics Library)
9	HP9885.opt	HP 9885 8-inch flexible disk drive
6,8	HPIB_FLEX.opt	HP 9895 5 ¹ / ₄ -inch flexible disk drive, HP 8290X 5 ¹ / ₄ -inch flexible disk drive (not built-in)
none	im*.opt	Image Data Base
none	fcs*.opt	Image data base utilities
10	MEMORY_VOL.opt	Accessing memory as a pseudo-mass storage device (refer to sdfini (1))
34, 40	localnet.opt	Basic local area network capabilities (HP 2285 Ethernet and IEEE 802)
19	SERIAL.opt	Raw transfer to ASI or 8-port MUX interface cards (see driver #31)
33	SRM.opt	Shared Resource Manager interface
none	debug*.opt	System debugger

Mounting and Unmounting File Systems

When HP-UX is installed, only one file system (the root file system) exists. You may create, modify, and delete files from this system. By default (i.e., installation), the HP-UX file system exists on this one volume and therefore, on one CS/80 or SS/80 mass storage medium. It is possible to have other file systems on **different** file systems; any other mass storage device supported by Series 500 HP-UX can be used as an additional file system. To accomplish this, the additional file system(s) are attached to either the “/” directory (root) or other mounted file systems. The process of attaching additional and functionally independent file systems to the root file system is called **mounting** and is achieved with the `mount` command. The process of removing independent file systems from the root file system is called **unmounting** and is achieved with the `umount` command (note that the spelling is `umount`, not `unmount`).

Once a block special (device) file exists for the new disk device (and the disk is initialized, of course), the file system the device contains can be mounted. See the “Adding/Removing Peripheral Devices” section in this chapter for information on creating device files. The mounting operation makes any files on the new (mounted) file system become part of the file system hierarchy. Files can then be created, modified and deleted on this new file system. When you are finished with the files on that file system, it can be unmounted. Unmounting a file system removes its files from the file system hierarchy. More specifically, the association between the mounted file system and the root file system is broken (disconnected). The files themselves are untouched and remain on the mass storage medium; they may be accessed by re-mounting the file system.

In the file system’s superblock, there is an informational byte called the clean byte. When you create a file system the clean byte is set to `FS_CLEAN`. When you mount a file system, the clean byte is set to `FS_OK`. When you unmount a file system the clean byte is reset to `FS_CLEAN`.

If you add your file system to `/etc/checklist` the `/etc/bcheckrc` program will mount and check the file system at bootup. `/etc/bcheckrc` uses the clean byte to determine if the system was properly shut down. If the clean byte is `FS_OK` (not `FS_CLEAN`), it was not unmounted with the `umount` command and could be corrupted. `bcheckrc` will run `fsck` if the clean byte is `FS_OK` (unless it is the root device) to correct corruption before continuing. `/etc/rc` mounts each file system in `/etc/checklist` after `bcheckrc` has checked them.

For an explanation on how to add entries to the `/etc/checklist` file refer to the section “Adding to `/etc/checklist`”.

To Mount a File System

The file system to be mounted must be initialized at some point with `sdformat` (see the section called “Media Utilities” in this chapter). Initializing the file system with this utility insures the correct format for the Series 500 HP-UX file system.

You must create a device file (if one does not yet exist) for the mass storage device containing the file system which is to be mounted. The special file must be a block special file; see the “Adding/Removing Peripheral Devices” section in this chapter for details.

Before attempting to mount a file system, be certain the mass storage device associated with the file system is powered up and is on-line. If the file system is on removable medium (such as a flexible disk), insert the file system in the mass storage device at this time. Do not remove the flexible disk until its file system is unmounted.

Decide what directory in the HP-UX file system will be used to mount the file system. It is best if you choose a directory that is at the root of the HP-UX file system. For example, */direct*.

When a file system is mounted, the file system it contains is attached to a directory in the existing file system. Any files that the directory previously contained appear to be **temporarily** replaced by the file system contained on the mounted file system. Because of the confusion that may result (from the temporary “disappearance” of files in the mount directory), use only an empty directory created specifically for mounting.

The diagrams that follow, for the sake of illustration, show a file system mounted on a directory that does contain files but this is **not** standard practice. Consider a directory called */direct* that contains two files, *file1* and *file2*. Assume that you want to mount a flexible disk (that contains a hierarchical file system of its own as shown in the following illustration) on the */direct* directory. The process of mounting the file system, modifying files on that file system, and unmounting the file system is shown in the following illustrations.

Figure 5-2 shows the */direct* directory on the existing mounted file system. It also shows the file system hierarchy on the as-yet-unmounted flexible disk file system.

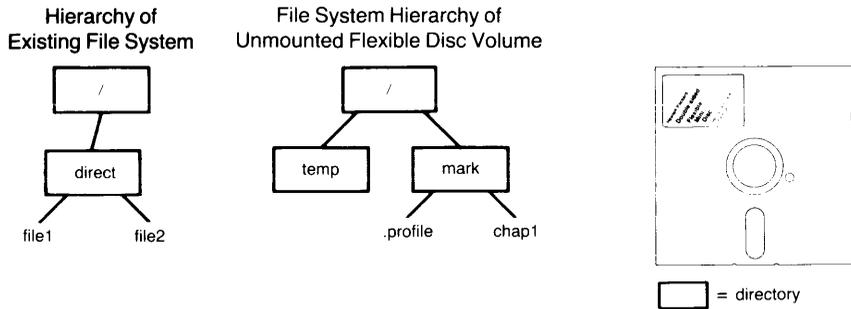


Figure 5-2. File System Hierarchy Before Mounting

Figure 5-3 shows the file system hierarchy once the flexible disk file system is mounted on the `/direct` directory. The file `newfile` has been added to the flexible disk file system after it was mounted. Notice that the files `file1` and `file2` previously available in the `/direct` directory are no longer accessible; the files are still there, they just cannot be accessed until the flexible disk file system is unmounted.

The flexible disk file system was mounted with a command of the form:

```
/etc/mount /dev/fd_name /direct
```

where `/dev/fd_name` is the special (device) file associated with the mass storage device containing the flexible disk and `/direct` is the directory on which the flexible disk file system is mounted.

Hierarchy of Mounted File System

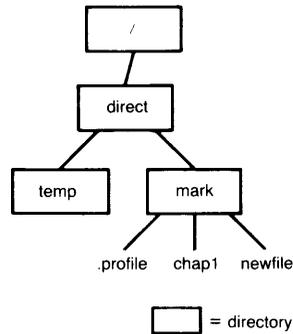


Figure 5-3. File System Hierarchy After Mounting

Figure 5-4 shows the `/direct` directory on the existing mounted file system after the flexible disk file system is unmounted. The `file1` and `file2` files may once again be accessed. The diagram also shows the file system hierarchy on the unmounted flexible disk file system.

The flexible disk file system was unmounted with a command of the form:

```
/etc/umount /dev/fd_name
```

where `/dev/fd_name` is the special (device) file associated with the mass storage device containing the flexible disk file system.

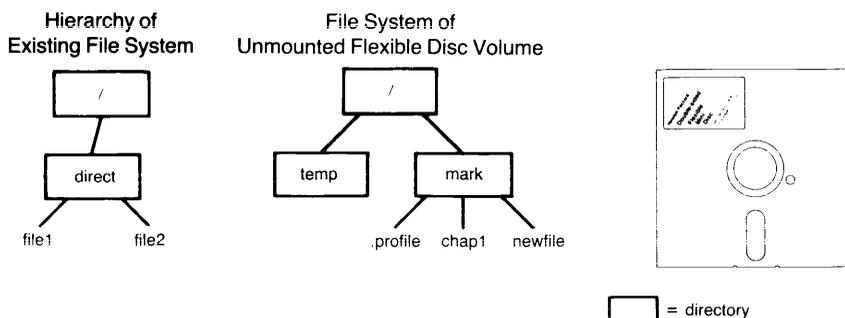


Figure 5-4. File System After Unmounting

Note

Always unmount a file system before removing it from its mass storage device. Removing a mounted file system from its mass storage device before unmounting it is likely to corrupt the file system.

To Unmount a File System

Use the following procedure to unmount a file system.

1. Make sure that all files on the file system are static; no one should be accessing any file on the file system. Attempting to unmount a file system that has open files (including your current working directory) causes the `umount` command to fail without unmounting the file system.
2. Enter the following:

```
/etc/umount special_fname
```

where *special_fname* is the pathname of the special (device) file of the device associated with the mounted file system. This command fails if there are open files on the file system you are attempting to unmount.

3. When the shell prompt (\$) is again displayed on your screen, it indicates that the file system is unmounted. If the file system is on a removable medium (such as a flexible disk), the medium can now be removed safely.

Errors

You can't unmount a file system that has open files. The following situations are the most frequent cause of open files on a file system:

- having your current working directory on a file system causes an open file on the file system.
- if a program stored on a file system is a shared program and the use count of that program is not zero, the file associated with the program is still open.
- if a file has been accessed and the sticky bit is set in the file's protection mode, the use count of the file is always greater than zero; the file is always open.

If you get the error message, "cannot open /etc/mnttab", there are two possible scenarios: either you were in the system administration mode (run-level s) and /etc/rc had not yet executed, or your /etc/rc script did not contain the `setmnt` command. If you are creating the /etc/mnttab file in the the system administration mode, you would use the following sequence:

```
setmnt
hd /
^D
```

If you need to add it to your /etc/rc file, one possible way is to add the following lines:

```
setmnt <<-!
hd /
!
```

Either method will create the mnttab file. From then on, each time you mount a file system, `mount` will automatically add entries into `mnttab`.

Mounting/Unmounting File Systems Using `/etc/checklist`

If you wish to mount all the file systems (except root) listed in `/etc/checklist`, enter the following:

```
mount -a
```

The full path name where each file will be mounted must also exist in `/etc/checklist`.

If you wish to unmount all file systems in `/etc/checklist`, enter the following:

```
umount -a
```

To automatically mount all file systems at bootup, add the `mount -a` entry to the `/etc/rc` file. To automatically unmount all file systems at shutdown, verify that the `umount -a` entry is in the `/etc/shutdown` file. Refer to “Adding to `/etc/checklist`” in this chapter.

New Naming Conventions for Device Files

To be consistent with the standard naming convention for mass storage device files, the HP-UX device file naming convention has changed.

- All cartridge tape devices go in subdirectories:
 - raw (also called character) devices go in the `/dev/rct` directory,
 - block device files go in the `/dev/ct` directory.
- All magnetic tape devices go in subdirectories:
 - raw (also called character) devices go in the `/dev/rmt` directory,
 - block devices go in the `/dev/mt` directory (currently unsupported, but reserved).
- All hard disk and flexible disk devices go in subdirectories:
 - raw (also called character) devices go in the `/dev/rdisk` directory,
 - block devices go in the `/dev/dsk` directory.
- No other devices are affected.

On this release of HP-UX all commands will support both the old naming convention and the new naming convention. All examples in this manual reflect the new naming conventions unless the command or subsystem does not use new naming conventions. For example, although the installation procedure is shown in the old naming conventions, the backup procedure is shown using the new naming conventions.

If you administer both S300 (or S800) and S500 HP-UX machines, you should change to the new naming conventions since the current Series 300 and Series 800 releases are installed with the new conventions.

To help you make the change, there is a new command: **mvdevs**. The syntax of the command is:

```
mvdevs [-vilu]
```

- v The verbose option. This option prints information on your screen as it is executing.
- i Interactive option. When you use this option **mvdevs** will ask you, for each device file, if you want to move it and if the name automatically chosen is acceptable.
- l The long names option. With this option all device files will be renamed using the new naming convention as it is described in Section 7 of the *HP-UX Reference*. The default new naming convention is a shorter version of what is stated in the *HP-UX Reference*.
- u The undo option. This option will move all your device files back to their original names. This option can be used only if you have already run **mvdevs**.

You cannot execute **mvdevs** in the background since it is an interactive process. The **mvdevs** script will not change the name of the `/dev/update.src` device file (the device file created and used by the update program). The **mvdevs** script **will** do the following:

- move all your magnetic tape drive, cartridge tape drive, flexible disk drive, and hard disk drive device files to file names with the new naming convention (with the exception of `/dev/update.src`).
- Change your existing `/etc/backup`, `autobkup` and `/etc/checklist` files to reflect the new device file names.

- create the following two files:

- `/etc/mvdevs.log`

This file is a log of the changes that were made. Single entries indicate new directories. Double entries indicate a moved file (the first entry is the from file, the second entry is the to file). You will notice that some files are first moved to a temporary file, then to their final destination. This is because their device file name was the same name as a new directory (`dsk`, `rdsk`, `mt`, `rmt`, `ct`, `rct`).

- `/etc/sed.mvdevs`

This file is a sed file that can be used to change files that explicitly name the old devices. The files will be changed to reflect the new device names. For example, if you have a script file that uses the old `/dev/rct`, and `mvdevs` has renamed it to `/dev/rct/c0`, the `/etc/sed.mvdevs` file will change the reference from `/dev/rct` to `/dev/rct/c0`.

To use it, type:

```
sed -f /etc/sed.mvdevs srcfile > newfile
mv newfile srcfile
```

where *srcfile* is your original script file and *newfile* is a new (temporary) file. You then need to move (or copy) the new file back to the original name. **Do not redirect the output to the original file name.** If you do, you will destroy the original file and will have nothing.

Removing Optional Products and File sets

If you are no longer using a file set, you should remove it so you have more space on your file system. The program `/etc/sysrm` performs the opposite of `update`; it removes optional file sets.

1. Become the root user.
2. Determine which file sets you wish to remove.
A directory, `/etc/filesets`, contains a complete list of file sets you have installed on your system.
3. Shut down the system (refer to the section “Shutting Down the System” in Chapter 4).
4. Type in the following command, where *fileset* is the name or number of the product to be removed (determined in step 2):

```
/etc/sysrm fileset
```

The file set(s) you typed in will no longer be available. You can load them back into the system, if needed, by using the update procedure (Refer to “Updating HP-UX and Installing Optional Products”).

5. Return your system to normal operating mode by typing in:

```
reboot
```

Setting the System Clock

The system clock should always have the correct time and date because a number of commands make use of the clock to accomplish their tasks. Occasionally, the system clock needs to be set or reset. There is no need to reset the system clock if you have shut the system down—your Series 500 computer has a battery which keeps the clock current.

Only the effective super-user can change the system clock. To set the current time and date:

1. Login as the super-user `root`.
2. Insure that the time zone environment variable `TZ` is set properly by typing in: `echo $TZ` (for more information refer to `tzset` under the `ctime(3)` entry in the *HP-UX Reference* manual).

Typically, `TZ`'s value is set with a variable declaration (as shown below) in the file `/etc/profile`. It can also be set from an application program with the `tzset` library routine.

As shipped to you, the system is set up to run in the Mountain Time Zone. To change the time zone to your time zone, modify the `/etc/profile` file to contain two entries of the form:

```
TZ=XXXHYYY
export TZ
```

where `XXX` and `YYY` are three letter representations of the standard and daylight time zones for your area and `H` represents the difference between current local time and Greenwich Mean Time, in hours. The `export TZ` line will remain the same regardless of the time zone. For example, in Denver, Colorado you would enter the following:

```
TZ=MST7MDT
export TZ
```

where `MST` stands for Mountain Standard Time and `MDT` stands for Mountain Daylight Time.

Here are some other examples:

- For St. Clair Shores, Michigan: `TZ=EST5EDT`
 - For Norman, Oklahoma: `TZ=CST6CDT`
 - For Seattle, Washington: `TZ=PST8PDT`
 - For Hawaii: `TZ=HST10` since Hawaii has no Daylight Savings Time.
3. Now that the time zone is set, you can set the correct time and date (using the `date` command) by typing an entry of the form:

```
date MMddhhmm{yy}
```

- MM** A two-digit integer representing the month. For example, 03 represents March.
- dd** A two-digit integer representing the day of the month. For example, 02 represents the second day of the month.
- hh** A two-digit integer specifying the current hour in terms of a twenty-four hour clock. For example, 03 specifies 3:00 am and 14 specifies 2:00 pm.
- mm** A two-digit integer specifying the number of minutes past the stated hour. For example, 04 specifies four minutes past the hour.
- {yy}** An **optional** two-digit integer specifying the last two digits of the current year; this parameter may be omitted if the year is already correct. For example, 85 specifies 1985 as the current year.

When `date` is executed it echoes the time and date on your screen.

The `make` program (refer to the *make(1)* entry in the *HP-UX Reference*) is quite sensitive to a file's time and date information and to the current value of the system clock. While setting the clock forward will not effect `make`, **setting the clock backward by even a small amount may cause make to exhibit extremely bizarre behavior**. Avoid setting times earlier than the current system clock's value.

As mentioned in the "Backing Up and Restoring the File System" section in this chapter, the process of making incremental backups depends heavily on the correctness of the date. This is because incremental backups are always made in relation to a dated file.

Altering the system clock may also cause some unexpected results for routines scheduled by **cron**; refer to the *cron(1)* entry in the *HP-UX Reference*. When setting time back, **cron** doesn't run until the clock "catches up" to the point from which it is set back. For example, if you set the clock back from 8:00 to 7:30 (which is **not** advised), **cron** will not begin executing until the clock again reads 8:00. If you are setting the clock ahead, **cron** attempts to "catch up" by immediately executing all routines scheduled to run between the old time and the new time. For example, if you set the clock ahead from 9:00 to 10:00, **cron** immediately executes all routines scheduled to run between 9:00 and 10:00.

If you are only changing the clock by a small amount (20 - 30 minutes), **cron**'s behavior should not present a problem and no corrective action is necessary. However, if you are changing the clock by a larger increment, perform the following steps:

1. Log in as the super-user.
2. Enter the following command:

```
ps -ef
```

to run the process status command and locate the **cron** process information supplied by **ps**.

3. Terminate the **cron** process by entering the command:

```
kill -9 pid
```

where *pid* is the process id associated with **cron**. The **ps** command displays this number in a column labeled **pid**.

4. Change the time and date with the **date** command.
5. Start the **cron** process running again by entering the command:

```
cron
```

Setting Up the LP Spooler

HP-UX provides a series of commands, collectively referred to as the LP Spooler, to configure and control line printer spooling. Line printer spooling is a mechanism by which printing requests and their associated files get stored temporarily in a spool directory until they can be printed. The LP Spooler can be customized to spool to different printers and allow printers to be grouped into various classes to increase the overall efficiency of the system. Some of the LP commands are available to all users; others, only to the system administrator. The LP Spooler replaces the `lpr` command; `lpr` is a script which involves `lp`, acting like the original line printer spooler. The LP Spooler is a superset of `lp` capabilities.

What is in this Section

This section explains how to set up and use the LP Spooler on your Series 500 HP-UX machine. It consists of the following subsections:

- *LP Spooler Terminology and Overview* - an introduction to the LP Spooler.
- *Installing the LP Spooler* - step-by-step method to install and start the spooler system.
- *General-purpose LP Spooler Commands* - spooler commands available to all users.
- *System Administrator LP Spooler Commands* - spooler commands available only to the system administrator (the root user).
- *Other LP Spooler Administrator Duties* - tips on monitoring the spooler.
- *How Models Work* - description of what a printer model is.

LP Spooler Terminology and Overview

A **request** is a combination of one or more files to be printed and all associated information such as destination, number of copies, and other **lp** options. When **lp** is invoked, it associates a unique ID with the request and passes the request to the **LP scheduler** (invoked by the **lpsched** command). The LP scheduler routes the request to the proper **interface program** to do the actual printing on a device; the program functions as an interface between **lpsched** and printing devices. **Models** of interface programs are supplied with the LP Spooler and, in some cases, have options to use specific printer features such as expanded or compressed print. The models can be used as is, modified for your specific needs, or used as templates for creating new interface programs.

The **lp** command directs output to the default destination unless a destination is specified when **lp** is executed. The **default destination** may be set or changed by the system administrator. A **destination** is either a printer or a class. A **class** is a name given to a list of printers. Each class must contain at least one printer although a printer may belong to zero, one, or more classes. If the destination is a specific printer, the output gets handled only by that printer. If the destination is a class, the output gets handled by the first available printer belonging to that class.

A complete LP Spooler configuration for a system consists of devices, destinations (printer names and classes), interface programs, and the LP Spooler commands in the **/usr/bin** and **/usr/lib** directories.

The LP Spooler distinguishes between logical destinations and physical destinations. Logical destinations are defined using the **lpadmin** command whereas physical destinations are defined using **mknod** — which associates physical devices with special (device) files. A single physical destination may be associated with one or more logical destinations. **lp** requests are directed to a logical destination as long as it has been set to accept requests (refer to *accept(1M)*). When a corresponding physical destination (a printer) is available and has been enabled (refer to *enable(1)*), the request is transferred to it.

Installing the LP Spooler

To install and configure the LP Spooler, perform the following steps:

1. Log in as the super-user (**root**).
2. Check the following 3 configuration files:

- **/etc/passwd**

This file should have an entry providing ownership of the LP Spooler to the user **lp**. There may be other users also associated with the group **bin** in your particular configuration.

You may want to add password protection to the **lp** user. To do this, log in as the user **lp** and execute the **passwd** command; refer to the *passwd(1)* entry in the *HP-UX Reference* for details. You can also prevent logins by putting an "*" in the password field of the **lp** entry.

- **/etc/group**

This file should have an entry providing group ownership of the LP Spooler to the user **bin**.

- **/etc/rc**

This file should contain commands to start up the LP scheduler every time the system is booted. As shipped, your **/etc/rc** file should contain the lines:

```
# Start lp printer scheduler, if configured
/usr/lib/lpshut > /dev/null 2>&1
if [ -s /usr/spool/lp/pstatus ]
then
    /usr/lib/lpsched
    echo line printer spooler started
fi
```

The three configuration files are set up correctly when you install your system. If you update your system, check the file **/etc/newconfig/Update_info** for details on your new revision of HP-UX.

3. Edit the `/etc/mk1p` script.

You will use the `/etc/mk1p` script to configure your LP Spooler and set up your printer device files. For each type of printer you have, you must edit the script in the following manner:

- a. Remove the lines that appear just before section 1:

```
echo "mk1p: template version -- customize script before using it"
exit 1
```

- b. Uncomment (i.e., remove the “#” in column 1) all the command lines applicable to the printer you are setting up.
- c. If necessary, change the names of select code (`sc`), bus address (`ba`), and unit/volume (`uv`) to correctly describe your printer.
- d. If the printer will function as the default printer, the `name` and `dev` values should both be set to `1p`. If it will serve as an auxiliary printer, the `name` and `dev` values should be changed to the device file name of the auxiliary printer.

NOTE

If you have a system printer, you should always name its corresponding special file `/dev/1p`, because some commands use this special file as a default. You can create an individual special file for your favorite printer and give it the pathname `/dev/1p` (there is one created for you during system installation). Alternately, you can take an existing special file for the printer and create a link to it from the pathname `/dev/1p`.

4. Execute the `/etc/mk1p` script.

When you have correctly edited the `/etc/mk1p` script (see step 3), type: `/etc/mk1p` Return. The script will perform the following steps for each printer:

- a. Make the correct special device file for the printer.
- b. Shut down the LP scheduler.
- c. Execute the `lpadmin` command with the printer name (`-p` option), special device file name (`-v` option), printer model name (`-m` option), and any other appropriate options.
- d. Execute `accept` and `enable` to allow requests to reach the printer.
- e. Restart the LP scheduler with the `lpsched` command.

The script then executes the `lpadmin` command with the `-d` (default) option to select the default printer name. Usually the default printer name is `lp`.

5. To see that the LP spooler's "scheduler" is properly running, execute:

```
lpstat -t
```

6. If the scheduler is terminated improperly, you may need to remove the file `SCHEDLOCK` before the scheduler will begin working. Do this by typing:

```
rm -f /usr/spool/lp/SCHEDLOCK Return  
/usr/lib/lpsched Return
```

The `SCHEDLOCK` file acts as a "semaphore" to keep more than one scheduler from running at any given point in time. The `lpshut` command automatically removes the `SCHEDLOCK` file when it terminates the LP scheduler.

Example

Assume, for example, that you want to set up an HP 2225A Thinkjet printer as a spooled device, and you want to make it the system printer (the default printer). The printer is on the HP-IB at select code 5, bus address 1. To install the printer, perform the following steps:

1. Edit the `/etc/mk1p` script:
 - a. find the reference to “HP 2225A” in “SECTION TWO” of the script.
 - b. Change the select code (sc) from “??” to “05”.
 - c. Change the bus address (ba) from “??” to “01”.
 - d. Change the unit and volume (uv) from “??” to “00”.
 - e. Uncomment (i.e., remove the # in the first column) each line in the script from `cd /dev to $1psched`.
2. Execute the `/etc/mk1p` script by typing:

```
/etc/mk1p
```

Once this is done, your HP 2225A printer is installed and you can send files to it (through the spooler system) by issuing commands of the form:

```
lp myfile
```

where *myfile* is the name of the file you wish to print.

General-Purpose LP Spooler Commands

The following is a brief overview of the LP Spooler commands available to all users; for further details consult the *HP-UX Reference* manual.

- **cancel** Cancels requests to an LP Spooler line printer made with the **lp** command. The user may address a specific printer or a specific request ID number. Refer to the *lp(1)* entry in the *HP-UX Reference*.
- **disable(1)** Disables one or more physical printers such that they will not print **lp** requests. Refer to the *enable(1)* entry in the *HP-UX Reference*.
- **enable** Activates one or more physical printers to print **lp** requests.
- **lp** Sends requests to an LP Spooler line printer. Requests are files and associated printing information (flags, etc.) sent to the spooler. The **lp** command returns (to standard output) a unique ID associated with a request.
- **lpstat** Prints current LP Spooler status information such as requests, IDs, and scheduler information.

System Administrator LP Spooler Commands

The following commands are available only to the system administrator (the user **root**) or the LP Spooler administrator (the user **lp**). Further details are contained in this section and in section 1M the *HP-UX Reference* manual.

- **accept** Allows *lp* requests to occur on one or more logical destinations where a “destination” is a printer or class of printers.
- **lpadmin** Configures the LP Spooler system by describing printers, classes, and devices. The LP scheduler must **not** be running when most **lpadmin** command options are used.

For example, if you have an HP 2934A that is accessible through the device file `/dev/lp`, you can use the following command line:

```
/usr/lib/lpadmin -plp -v/dev/lp -mhp2934a -h
```

`-plp` specifies the printer. The logical destination name is **lp**.

`-v/dev/lp` specifies the full path name of the printer’s special (device) file — the physical destination.

`-mhp2934a` specifies a model in the `/usr/spool/lp/model` directory.

`-h` specifies that the printer is “hard-wired”.

- **lpmove** Moves requests queued by the LP scheduler from one destination to another. The LP scheduler must **not** be running when **lpmove** is used. Refer to the *lpsched(1M)* entry in the *HP-UX Reference*.
- **lpsched** Schedules requests taken by **lp** for spooling to line printers.
- **lpshut** Shuts down the LP scheduler. Refer to the *lpsched(1M)* entry in the *HP-UX Reference*.
- **reject** Rejects **lp** requests on one or more logical destinations where a “destination” is a printer or class of printers. Refer to the *accept(1M)* entry in the *HP-UX Reference*.

Other LP Spooler Administrator Duties

There are several other activities that you may need to carry out as the system administrator of the LP Spooler system:

- determining the current status of the LP Spooler system;
- starting and stopping the LP scheduler;
- grouping printers into classes;
- removing destinations (printers and classes of printers);
- moving requests to other destinations.

Determining LP Spooler Status

The command **lpstat** has options that provide a variety of information about your LP Spooler system. Used without any options, **lpstat** prints the status of all requests that you have made to **lp** and the **-t** option gives complete LP Spooler status information. For example, **lpstat -t** results in output similar to:

```

scheduler is running
system default destination: lp
device for lp: /dev/lp
lp accepting requests since Jun 14, 15:37
printer lp now printing lp-165.  enabled since Jun 23 13:31
lp-165          williams          62489    Jul  9 12:53 on lp
lp-166          jones             1374     Jul  9 13:39

```

The options that you can specify with **lpstat** are:

- a***[list]* Print the request acceptance status (with respect to **lp**) of logical destinations. *List* is a list of intermixed printer names and class names. If you do not specify *list*, the acceptance status of all logical destinations is printed.
- c***[list]* Print class names and their members. *List* is a list of class names. If you do not specify *list*, all classes and their members are printed.
- d** Print the system default destination for **lp**.
- o***[list]* Print the status of requests. *List* is a list of intermixed printer names, class names, and request IDs for which you want request status. If you do not specify *list*, **lpstat -o** has the same effect as **lpstat** (with no options).
- p***[list]* Print the status of printers. *List* is a list of logical printer names. If you do not specify *list*, the status of all printers is printed.
- r** Print the status of the LP scheduler.
- s** Print a status summary that includes the status of the LP scheduler, the name of the system default destination, a list of class names and their members, and a list of logical printers names and their associated special (device) file names.
- t** Print all status information.
- u***[list]* Print the status of requests for particular users specified by the login named in *list*. If you do not specify *list*, the status of all users' requests is printed.
- v***[list]* Print the pathnames of the physical devices associated with the logical printer names specified in *list*. If you do not specify *list*, the names of all of the logical printers and their associated physical devices are printed.

You can specify any combination of the above options on an **lpstat** command line.

In addition to using zero or more of *lpstat*'s options, you can also follow the command with particular request IDs, in which case **lpstat** provides status information about those requests.

Controlling the LP Scheduler

The LP scheduler services all `lp` requests by routing them to an interface program associated with the specified printer or class of printers. Interface programs control the actual printing on the devices.

To start the LP scheduler running, use:

```
/usr/lib/lpsched
```

The scheduler must be running for the LP Spooler to be available for use. However, you **must** shut down the scheduler before using either `lpadmin` or `lpmove`. To shut down the scheduler, use:

```
/usr/lib/lpshut
```

Remember to re-start the scheduler once you are through using `lpadmin` or `lpmove`.

Building Printer Classes

A **class** is a name given to a group of one or more printers. When requests are sent to a class, they are serviced by the first available printer that is a member of that class.

The `-c` option of the `lpadmin` command inserts a printer into a particular class. If the class does not already exist, it is created. If the class does exist, the printer is added. For example, you could associate the printer described above to a class with:

```
/usr/lib/lpadmin -plp -cclass1
```

This creates the class `class1` (unless it already exists) and inserts the printer `lp` into it.

Removing Destinations

LP Spooler destinations (printers, classes, or both) are removed with the `lpadmin` command. To remove a printer from a specific class, use `lpadmin`'s `-r` option:

```
/usr/lib/lpadmin -plp -rclass1
```

Removing the last remaining member of a class causes the class itself to be deleted. In the example above, since `lp` is the only member of `class1`, the class is deleted.

To remove an entire class of printers, use `lpadmin`'s `-x` option:

```
/usr/lib/lpadmin -xclass1
```

To remove a printer that is not a member of a class, use `lpadmin`'s `-x` option as follows:

```
/usr/lib/lpadmin -xlp
```

Note

No printer or class of printers can be removed if it has any pending requests. You can use `lpmove` or `cancel` to move or delete the requests.

Moving Requests

Occasionally it is useful to move requests from one destination to another, such as when one printer is down for repairs. The `lpmove` command is provided for this purpose. Before using the command make sure that `lp sched` is not running. To shut down the LP scheduler, execute:

```
/usr/lib/lpshut
```

You can use `lpmove` in one of the following ways.

- Move all requests for printer `lp1` to printer `lp2`:

```
/usr/lib/lpmove lp1 lp2
```

- Move the request with the ID `lp1-103` to printer `lp2`:

```
/usr/lib/lpmove lp1-103 lp2
```

`lpmove` never checks the acceptance status of the new printer (whether or not `accept` has been executed on it) when it moves requests; therefore, you should execute:

```
lpstat -alp2
```

to see if `lp2` can accept requests before actually redirecting requests to it.

Note

Moving requests from one printer to a dissimilar printer may cause incorrect output. The options specified by the user for the original may be meaningless on the new printer.

How Models Work

Models are shell scripts, C programs, or other executable programs that interface between `lp sched` and devices. Several model scripts are shipped with your system and are located in the `/usr/spool/lp/model` directory. As shipped to you, this directory includes model scripts for a generic “dumb” printer, the HP 2225A, HP 2631G, HP 2686A, HP 2688A, HP 2934A, and the HP 9000 Model 520 internal thermal printer. These model scripts must have a permission mode of 644 and be owned by `lp` and group `bin`. Refer to the `/etc/mk1p` script for a description of the provided models.

If you want to modify one of the models for your system needs, make a copy of it, modify the copy, and then associate the copy with a printer using `lpadmin` with the `-i` (interface) option.

Refer to *lpadmin(1M)* for more details on models.

Updating HP-UX and Installing Optional Products

This section describes the steps necessary to update your HP-UX system, as well as how to install optional products such as the SRM access utilities (Shared Resource Manager), LAN (Local Area Network) and optional partitions of your operating system. Since the process of updating or installing optional products could involve changes to the HP-UX kernel, you should carefully follow the preparatory steps below before proceeding. Note that the procedure is exactly the same for updating and for optional product installation. You should read the definitions and discussion in the first part of chapter 2 (“Installing HP-UX”).

An overview of the entire update procedure is:

1. prepare the system for an update
2. locate the product (optional product, operating system update, or optional partition),
3. load the update tools if you are updating your operating system,
4. perform the update,
5. exit the update program
6. Check for additional information in the *Installation Notes* or in the files in the `/etc/newconfig/Update_info` directory.

Each of these 6 steps is described in the following subsections.

Preparing to Update

The HP-UX kernel could be modified when you update the system. Because of this, it is always possible to crash your disk while updating. By following these simple steps, you will be able to minimize any risks to the integrity of your computer system and data.

Shut Down Your System

You do not need to specify any option, other than the grace period, when shutting down the system for an update. For more information, refer to the section “Shutting Down the System” in Chapter 4.

Do an fsck

Now that your system is in single-user mode, you can (optionally) do a file system check using the `fsck` command. Your system probably does not need to be fscked (particularly if you regularly check it). For more on how to use the `fsck` command see Appendix A, “Using the FSCK Command”.

Mount all File Systems

After you have shutdown and checked (`fsck`) your system, you must mount all file systems. To do this, you must first create the `/etc/mnttab` file using the following procedure.

1. Enter the command:

```
devnm /
```

- a. If it returns **one line**, enter:

```
devnm / | setmnt
```

- b. If it returns **more than one line**, determine which device is your root file system and pipe that to the `setmnt` command. For example, if your root file system is `hd`, then you would enter:

```
devnm / | grep hd | setmnt
```

2. You must now mount all file systems other than root. If your file systems are in the `/etc/checklist` file, type `mount -a`. If your file systems are not listed in `/etc/checklist`, you must explicitly mount them. If you have a file system on `/dev/hd1` that you wish to mount as `/d1`, you should use the command line:

```
mount /dev/hd1 /d1
```

Refer to the section “Mounting and Unmounting File Systems” for more information.

Back up your file system

If you make a mistake, and possibly corrupt your file system while updating your computer, you should be able to recover all of your data **if you have adequately backed up your system**. Refer to the “Backing up and Restoring the File System” section of Chapter 5 (“The System Administrator’s Toolbox”) for more information on how to archive your system.

Find /dev Major and Minor Numbers

You need to know the major and minor numbers of the drive used to read the update media, and for the hard disk being updated as well. **Be sure you know the correct values of these numbers before you continue.** You can obtain this information by typing:

```
ll /dev/source /dev/dest
```

where *source* is the tape drive your update will be loaded from, and *dest* is the hard disk you will be updating (probably your root disk). Make sure you write these values down, because the `/etc/update` program uses screen menus—you won't be able to “scroll” back to find these numbers.

Locate and Write-protect the Product

Locate the write-protect mechanism (labeled “SAFE”) on the top, rear, left-hand corner of the cartridge tape. **The arrow on the protect screw should point toward the word SAFE.** If it does not, use a coin or screwdriver to turn the protect screw such that the arrow points toward the word SAFE. Place this tape in the CS/80 data cartridge drive connected to your system with the SAFE label in the rear left hand corner. Only the BUSY and PROTECTED indicators should now be lit. The drive will begin a cartridge tape conditioning sequence that takes approximately two minutes. **Do not proceed until the busy light remains off.**

Load the Update Tools

The update tools need to be loaded **ONLY** if you are updating your operating system with a new set of update media. If you are adding an optional partition or loading an optional product, you do not need to load the update tools. If you are not updating your operating system, go to the section called “Perform the Update”.

If you are updating your operating system, type in:

```
lifcp -a /dev/source:GETTOOLS /tmp/gettools
chmod 700 /tmp/gettools
/tmp/gettools /dev/source
rm /tmp/gettools
```

where the device `/dev/source` is the character special device file name assigned to the cartridge tape drive you just inserted the update media in. Executing `/tmp/gettools` causes any new tools related to the update process to be extracted from the media and put into your current file system. This could take from one to several minutes to complete.

Perform the Update

Note

Before you perform the update, you must have completed the preparatory steps to ensure your system is ready. You must have copied the major and minor numbers of the cartridge tape drive the update will be on, and the major and minor numbers of the disk you will be performing the update to (usually your root disk).

If you have a non-HP terminal, you **MUST** execute the update program with a `-m` option. This will turn off all the menus in the update program. You will be prompted for the appropriate choices, rather than see the menu, on your screen.

1. Type in:

`/etc/update`

Your system will reboot to remove any remaining processes. You will see your normal boot messages, and then the screen should clear and the menu shown in Figure 5-5 will appear. This is the main update utility menu. All update procedures are treated as sub-tasks from this menu.

```

*****
                HP-UX UPDATE UTILITY -- MAIN MENU
*****
                Select Choice

                Source Device          Destination Device

Major Number   = -1   Major Number   = 1
Select Code    = -1   Select Code    = 4
Bus Address    = -1   Bus Address    = 1
Unit Number    = -1   Unit Number    = 0
Volume Number  = -1   Volume Number  = 0

                DISPLAY options for a new partition
                EXIT update
                CHANGE source device
                CHANGE destination device

```

Figure 5-5. Main Utility Menu

Note the four softkeys at the bottom of your screen:

- **NEXT** will move the highlight to the next item in each menu.
- **PREVIOUS** will move the highlight to the previous item in each menu (the item listed above the current item).
- **SELECT** will execute the currently highlighted option.
- **QUIT** will exit the `update` program at any time.

The source device will be listed as either the source device used in the last update or as all -1s. The destination device will be your root disk. If the source device is shown as all -1s it **must** be changed.

2. CHANGE the source device.

By using the **NEXT** and **PREVIOUS** softkeys, choose the “CHANGE source device” option on the main menu and press **SELECT**. You will see the top half of the menu shown in Figure 5-6.

```

*****
                HP-UX UPDATE UTILITY -- MAIN MENU
*****

Current Source Device

Major Number = -1
Select Code  = -1
Bus Address  = -1
Unit Number  = -1
Volume Number = -1

NEW Major Number? 1
NEW Select Code?  4
NEW Bus Address?  5
NEW Unit Number?  0
NEW Volume Number? 0

```

Figure 5-6. Change Device Menu

As you are prompted for each item, enter the source device's major number, select code, bus address, unit and volume numbers in **decimal format**. You have these numbers written down in hexadecimal format. In our example the major number was 4, and the minor number was 0x070400 in hexadecimal format (do not type in any leading zeros for these values). The minor number has the format:

0xScBaUV

where **0x** indicates the number is in base 16, **Sc** is the select code, **Ba** is the bus address, **U** is the unit number, and **V** is the volume.

Once you have entered the volume number, the main menu will appear. Notice that the new source device values are now shown. Check that the values shown on the menu match those you have written down. It is possible that you could make a mistake while converting from hexadecimal to decimal format.

3. **CHANGE** the destination device.

You generally will not need to change the destination device. Change the destination device **ONLY** if you are updating a disk other than your root disk.

Use the **NEXT** and **PREVIOUS** softkeys to choose the “CHANGE destination device” option on the menu and press **SELECT**. You should now see a screen very similar to the menu shown in Figure 5-6, only you will be changing the destination device rather than the source device.

In exactly the same manner as you just changed the source device, enter the new destination device major and minor numbers, which you have written down. We will use major number 0 and minor number 0x0e0500 in our example.

Once you have entered the new volume number, the update program will attempt to **mount** the device you have listed at that address. If it is the root device (which is the normal case), the following prompt will appear near the bottom of the console:

```
Cannot mount the destination device.  
Is this the ROOT device? ('y'or'n') >>
```

Because the method of updating the root file system versus another hard disk is different, you must tell the program that you are indeed updating the root file system by typing y. Otherwise, you should enter an n.

Once you have entered the correct addresses for the source and destination devices, you see these values reflected in the main menu, similar to our example menu in Figure 5-7. If either of these values are wrong, you can go back to change either the source or the destination device. **Do not continue if you are unsure of these values!** Use the **QUIT** softkey if you are not sure of these device addresses, and go back to step 1 to begin again.

```

*****
HP-UX UPDATE UTILITY -- MAIN MENU
*****
Select Choice

Source Device      Destination Device

Major Number  = 1    Major Number  = 1
Select Code   = 4    Select Code   = 4
Bus Address   = 5    Bus Address   = 1
Unit Number   = 0    Unit Number   = 0
Volume Number = 0    Volume Number = 0

DISPLAY options for a new partition
EXIT update
CHANGE source device
CHANGE destination device

```

Figure 5-7. Main Menu After Changing Devices

4. Choose the “DISPLAY” option.

Using the **NEXT** and **PREVIOUS** keys, choose the “DISPLAY options for a new partition” menu item and press **SELECT**. The **update** procedure will now read the update tape to get a list of available options, which takes a couple of minutes. You should see the screen shown in Figure 5-8.

```
*****  
HP-UX UPDATE UTILITY -- READING FILE MENU  
*****  
reading
```

Please insert media for a new partition.
When the busy light goes off, press [Return]

Figure 5-8. Reading File Menu

If you loaded new update tools, then the correct media is already inserted and you need to press `[Return]`. If you did not need to load new update tools, then you can insert the media now, and press `[Return]`.

The `update` procedure will read the tape, and a new main menu will appear.

5. You will see a menu similar to that in Figure 5-9. On the new menu, notice a product name on the upper left segment of the screen, and the list of product “file sets”.

```

Partition: "16-USER-5.1"           Media Number: "1"
*****
                HP-UX UPDATE UTILITY -- MAIN MENU
*****
                select choice

Load "97089C" file set
Load "97081C" file set

Process ALL file sets
DISPLAY options for a new partition
EXIT update
CHANGE source device
CHANGE destination device

```

Figure 5-9. File set menu for Update

At this point you have several options:

- If you wish to load all the file sets at one time, use the softkeys to select the **Process ALL file sets** option. This procedure could take 20 to 60 minutes depending upon the processor and peripherals being used.
- If you wish to load just the core system (basically the update for HP-UX itself), use the softkeys to select the option similar to **Load "97089C" file set**. Note that in each "Load xxxxxx" option, the xxxxxx is the product number or name for that file set.
- If you wish to load the core system and certain optional products, select the options you want.

You will select one load option at a time. Each time, that file set will be loaded, and you will return to the file set menu. When you have loaded all the file sets you wish, press the **QUIT** softkey to exit. You will be returned to the main menu, shown in Figure 5-9.

- If you wish to load a second product, unload the current tape, insert the new tape, and when the busy light remains off select the **DISPLAY options for a new partition** option. You will be returned to a new menu similar to Figure 5-9. Continue with step 5.
- If you wish to abort the entire update procedure, select the “EXIT update” menu item.

The **update** program will immediately load this file set if it has never done so previously. If it has loaded the file set, the **update** program will inform you that the product exists on your system and asks you if you want it removed. **y** will remove the old file set, and re-load the new one. Answering **n** will prevent this file set from being loaded.

When the selected option is complete, the main menu (similar to the menu shown in Figure 5-9) will be re-displayed, but with one or more of the “load” options removed. Those options corresponding to the file sets you have already loaded will not be displayed. If you decided to load all the file sets, there will be no “load” options displayed.

6. Leave the update program.

If you have loaded all the products you want in this session, select the **EXIT update** option on the main menu. The program will inform you that it is unloading the media, which will take a few minutes. The system will reboot.

Note

Do not cycle power during the reboot.

The reboot of your system may appear to take longer than normal. This is because the first time you reboot after doing an update, scripts execute which customize your system for the updated products you installed.

7. Check for Additional Information.

Following this reboot process, you should log in and check to see if you have files in `/etc/newconfig/Update_info`. Also look for any other update files in the `/etc/newconfig` directory or in the `/tmp/update.log` file. Follow instructions in these files, and instructions in the *Installation Notes*, if supplied. The file called *README* contains useful information about your updated system.

Using Optinstall to Install Optional Products

Most of the optional products on HP-UX should be installed using the update procedure documented in the section “Updating HP-UX and Installing Optional Products” earlier in this chapter. If your optional product requires you to use `optinstall`, use the information in this section.

1. The optional product is supplied on cartridge tape for installation from your cartridge tape drive.

Examine the supplied cartridge tape containing the product. Locate the write-protect mechanism (labeled “SAFE”) at the front upper right-hand corner of the medium. Make sure the arrow is pointed to “SAFE.” If it is not, using a coin or screwdriver, **turn the protect screw such that the arrow is pointed toward the word “SAFE.”**

2. Determine from which device you want to load the tape’s data. This is the “source device.”
3. Power up the source device. After the drive’s buzzer has sounded, insert the cartridge tape into the cartridge tape drive. Wait for the drive’s busy light to extinguish before continuing.
4. Log in as the super-user and execute the following command:

```
optinstall product_number [unload][debug]
```

where `product_number` is the product number of the option to install. If the **unload** keyword is specified, the cartridge tape is automatically rewound and unloaded at the end of the update. Refer to *optinstall* (8) in the *HP-UX Reference* manual for additional information. The following are some typical examples:

```
optinstall 97071A
optinstall 97059A
```

The exact entry is the same as that listed on the spine of tape cartridge for that product.

The system responds by printing the following on the system console:

```
HP-UX FEATURE PRODUCT INSTALLATION UTILITY
```

5. The system then lists the default parameters for the utility:

```
Here are the default parameters for this installation:
```

```
* Source device:      88140 L/S tape cartridge
                      select code   = 5
                      bus address   = 0
                      unit number   = 1

* Destination device: HP-UX root volume
```

```
Are these values satisfactory for your system?
If they are not, you will be instructed to supply
responses for each parameter, interactively.
(Enter y or n, then RETURN; default is 'yes')
```

When an option is incorporated into the operating system, the file system is altered. The destination device specifies which file system is altered. The default is the current root file system.

6. If the displayed parameters are correct, enter **y**, then continue with Step 10.

If you want to change one or more of the parameters, enter **n**, and continue with step 7.

7. If you typed a negative answer, you are prompted to identify the source device:

```
* Source device:      88140 Cartridge Tape Drive
                      select code   = 5
                      bus address   = 0
                      unit number   = 1
```

```
Do these parameters accurately describe our source device?
(Enter y or n, then RETURN; default is 'yes')
```

If the source device is correctly identified, press to select the default response (yes) or enter **y**. Continue the installation procedure with step 8.

If the source device is not correctly identified, enter **n** (then continue the installation procedure with step a):

- a. The system next prompts to find the select code of the source device:

**Enter the select code of your 88140 tape drive.
The range for the select code is 0 through 23, inclusive.**

Enter the select code of the source device, then press **Return**. Entering no value (simply pressing **Return**) causes the most recently entered value (or the default value, if it has never been changed) to be used.

Note

When asked to enter numerical information (such as a select code or bus address), do not use leading zeros with the values you enter. For example, to specify the value 7, enter 7, not 07 or 007. Use of leading zeros can cause unexpected results.

- b. The system next prompts to find the bus address of the source device:

**Enter the bus address of your 88140 tape drive.
The range for the bus address is 0 through 1, inclusive.**

Enter the bus address of the source device, then press **Return**. Entering no value (simply pressing **Return**) causes the most recently entered value (or the default value, if it has never been changed) to be used.

- c. The system next prompts to find the unit number of the source device:

**Enter the unit number of your 88140 tape drive.
The range of the unit number is 0 through 1, inclusive.**

Enter the unit number of the source device, then press **Return**. Entering no value (simply pressing **Return**) causes the most recently entered value (or the default value, if it has never been changed) to be used.

8. Next, you are prompted to identify the destination device:

```
* Destination device: HP-UX root volume
```

```
Is your destination device correctly described?  
(Enter y or n, then RETURN; default is 'yes')
```

If the destination device is correctly identified, enter **y**, then continue the installation procedure with Step 9.

If the destination device is not correctly identified, enter **n**, then continue the installation procedure with Step a.

a. The system next prompts to find the select code of the destination device:

```
Enter the select code of the destination device.  
The range for the select code is 0 through 23, inclusive.
```

Enter the select code of the destination device, then press **Return**. Entering no value (simply pressing **Return**) causes the most recently entered value (or the default value, if it has never been changed) to be used.

b. The system next prompts to find the bus address of the destination device:

```
Enter the bus address of the destination device.  
The range for the bus address is 0 through 7, inclusive.
```

Enter the bus address of the destination device, then press **Return**. Entering no value (simply pressing **Return**) causes the most recently entered value (or the default value, if it has never been changed) to be used.

Since the unit number of the destination device must be zero (0), you are not prompted for this value.

9. Next the system displays the menu of default value shown in step 5 previously (the new values you entered during the prompting sequence replace the original values displayed). And again, you are prompted to specify whether or not the values displayed are valid for system installation. Continue the installation procedure from step 5. (This time, the values shown for each installation parameter are the values you specified in steps 5 through 8.)

10. Now that all of the parameters for the installation program are correct, the system prompts you to re-examine the values and make sure that they are accurate:

```
Are you sure you are ready to begin the installation/update procedure on
the destination disk?
(You should have a current backup of your file system!)
(Enter y or n, then RETURN; default is 'NO!')
```

If you are NOT satisfied with the installation parameters, either press (selecting the default answer NO) or enter n. The program terminates. Restart the procedure at step 4.

If you are satisfied with the parameters and are ready to begin the installation or update, enter y. The system begins the installation and supplies the following comments as it proceeds.

```
Mounting the source device.
Checking the source device for product 97xxxA
Installing/Updating the 97xxxA product.
```

The system then lists files for the product that are being installed. Once all the files have been installed, the following message appears:

```
THE UPDATE/INSTALLATION OF HP-UX FEATURE PRODUCT ON THE
DESTINATION DISC IS NOW COMPLETE.
```

To install another optional product, go back to step 4 of this procedure.

If the **unload** keyword was not specified when you invoked **optinstall**, the tape is not automatically rewound after an option installation. To rewind and unload the tape manually, execute:

```
tcio -urV /dev/rmt
```

The above example assumes that **/dev/rmt** is the special file for the cartridge tape drive. To perform **tcio** to rewind your tape, you may have to create a special file for the drive using **mknod**. Refer to the “Adding/Moving Peripheral Devices” section of this chapter.

This may take a few minutes to execute, so it is useful to do it in the background.

System Accounting

Multi-user HP-UX allows concurrent sharing of computer resources among multiple users: several users can be logged in, all sharing disk space, memory, and the CPU. On multi-user systems, HP-UX System Accounting provides the means to:

- monitor disk space usage for individual users
- record connect session data (logins/logouts)
- collect resource utilization data (such as memory usage, and execution times) for individual processes
- charge fees to specific users
- generate summary files and reports that can be used to analyze system performance and bill users for resource consumption

What Is in This Chapter?

HP-UX System Accounting allows you to accomplish accounting tasks through a number of versatile commands. This chapter illustrates the use of these commands and contains the following sections:

- “Installation and Daily Usage” shows the routine daily usage of System Accounting and shows you how to install it.
- “Overview of System Accounting” provides the background information necessary to understand how to use System Accounting.
- “Disk Space Usage Accounting” illustrates the use of the accounting commands that monitor disk space utilization on a per-user basis.
- “Connect Session Accounting” describes the commands that record and report connect session accounting information.
- “Process Accounting” shows how to generate per-process accounting data and reports.
- “Charging Fees to Users” is the section where you learn how to charge fees to users.
- “Summarizing and Reporting Accounting Information” shows how to generate the main daily and monthly accounting reports that are used to monitor system performance and bill users.
- “Updating `accts` and `acct` Files” describes how to set up the file `/usr/lib/acct/holidays` on your system.
- “Fixing Corrupted Files” Occasionally, during day-to-day usage of System Accounting, certain files may become inconsistent or messed up; this section shows how to fix these files.
- “Sample Accounting Shell Scripts” provides listings of shell scripts that you might find useful on your system.

In addition to these sections, the section “System Accounting Files” contains brief definitions of all the files used by System Accounting.

Note

Much of the material in this chapter assumes greater knowledge of HP-UX than is required of the “average” user. In particular, System Accounting borrows many concepts from the previous chapters “Concepts”, and “System Boot and Login.” If you are unfamiliar with the concepts and terminology in those chapters, then you should review them.

Installation and Daily Usage

Now that the basics have been covered, you can start learning how to use System Accounting on a daily basis. The purpose of this section is to show you:

1. What you must do to get Accounting running on your system.
2. How System Accounting automatically creates daily and monthly accounting data and reports.

After reading this section, you should be able to install Accounting on your system. Once properly installed, Accounting will automatically generate daily and monthly accounting data and reports.

How to Install System Accounting

Not all users require accounting services on their systems. For this reason, HP-UX System Accounting is provided as an option: if you want to use Accounting, you must install it yourself. Installation procedure is covered here.

There are four steps in the installation process:

1. Updating `/etc/rc`
2. Updating `/etc/shutdown`
3. Creating `crontab` entries
4. Setting `PATH` for accounting commands

Each of these steps must be carried out to insure that System Accounting automatically creates daily and monthly accounting information. Detailed descriptions of each step follow.

Updating /etc/rc

The system initialization shell script `rc` must be updated to automatically start System Accounting when the system is switched into multi-user mode. This requires adding the following entry in the **state 2** section:

```
/bin/su - adm -c /usr/lib/acct/startup
```

Updating /etc/shutdown

To insure that accounting is turned off when the system is brought down via `shutdown`, you must add the `shutacct` command to the `shutdown` shell script. The call to `shutacct` should be placed in the section of `shutdown` where all processes are killed by the `/etc/killall` command. By calling `shutacct` after `killall`, process accounting information can be captured for the processes that were terminated by `killall`. The entry for the `shutacct` command should be made as follows:

```
/usr/lib/acct/shutacct
```

Note

If you do not use `/etc/shutdown` to bring your system down, then you should use some other means—such as `turnacct off` or `shutacct` by itself—to turn system accounting off before shutting down your system.

Creating crontab Entries

To automate the daily and monthly creation of accounting data, you should create a **crontab** file that **cron** can use to automatically run certain accounting commands. This process entails the following steps:

1. Log in to System Accounting as the user **adm**.
2. Use an editor to create the **crontab** file containing the accounting commands that are to be run automatically by **cron**. (The actual entries to make in this file are shown after these steps.)
3. Execute the **crontab(1)** command, specifying the file created in step 2 as input. This step insures that the **crontab** file created in step 2 will be scanned by **cron** every minute. After invoking this command, the step 2 file will be stored in the file:

```
/usr/spool/cron/crontabs/adm
```

4. At this point, you are finished creating **crontab** entries. If you ever want to change the entries, simply re-edit the file created in step 2 and use the **crontab(1)** command again.

The following entries, accompanied by a description of each, should be made in the **crontab** file created in step 2:

- `0 4 * * 1-6 /usr/lib/acct/runacct 2> /usr/adm/acct/nite/fd2log`

runacct, the main accounting shell script, should be executed daily (during non-prime hours) to generate daily accounting reports. The above entry executes **runacct** at 4:00am every Monday through Saturday. Error messages will be redirected to the file **/usr/adm/acct/nite/fd2log**, if any errors occur while **runacct** executes.

- `0 2 * * 4 /usr/lib/acct/dodisk`

dodisk creates total accounting records that summarize disk space usage for individual users. This entry runs **dodisk** at 2:00am every Thursday morning.

- `5 * * * * /usr/lib/acct/ckpacct`

To insure that the process accounting file, **pacct**, doesn't get too large, the command **ckpacct** should be executed hourly. This entry invokes **ckpacct** at five minutes into every hour.

- `15 5 1 * * /usr/lib/acct/monacct`

The monthly merging of accounting data is facilitated through the `monacct` command. This entry allows `monacct` to generate a monthly total report and total accounting file. `monacct` will be executed at 5:15am on the first day of every month.

Note

The dates and times shown in the `crontab` entries above are only suggestions; you can tailor `crontab` entries to suit your needs. However, if you use different entries than those shown here, be sure that `monacct` is run at such a time as to allow `runacct` sufficient time to finish.

Setting PATH for Accounting Commands

Finally, you should set the `PATH` shell variable in `/usr/adm/.profile` so that System Accounting knows where to look for commands. Path should be set as follows:

```
PATH=/usr/lib/acct:/bin:/usr/bin:/etc:/usr/adm
```

Summary of Daily Operation

The daily operation of System Accounting is summarized by the following steps:

1. When HP-UX is switched into multi-user mode, the system initialization shell script `rc` executes the accounting command `startup`. The purpose of `startup` is to start Accounting, and it performs the following functions:
 - a. Calls `acctwtmp` to add a boot record to `wtmp`. This record is marked by storing "acctg on" in the device name field of the `wtmp` record.
 - b. Turns process accounting on via `turnacct on`. `turnacct on` executes `accton` with the filename argument `/usr/adm/pacct`.
 - c. It removes work files left in the `sum` directory by `runacct`.
2. A report of the previous day's accounting information can be created by running `prdaily`. Obviously, this step is omitted the first day that Accounting is installed, because the previous day's accounting information doesn't yet exist. However, after `runacct` has been executed, `prdaily` will generate valid reports.

3. The **ckpacct** command is executed every hour via **cron** to insure that the process accounting file **pacct** doesn't become too large. If **pacct** grows past a set maximum number of blocks, **turnacct switch** is invoked, which creates a new **pacct** file. (Other conditions may also limit the size of the process accounting file or turn process accounting off; for more details, see the discussion of **ckpacct** in the "Process Accounting" section.) The advantage of having several smaller **pacct** files is that **runacct** can be restarted faster if a failure occurs while processing these records.
4. The **chargefee** program can be used to charge fees to users. It adds records to the file **fee**. These records are processed during the next execution of **runacct** and merged in with total accounting records.
5. **runacct** is executed via **cron** each night. It processes the active fee file and the process, connect session, and disk total accounting files. It produces command and resource-usage summaries by login name.
6. When the system is turned off using **shutdown**, the **shutacct** command is executed. The purpose of **shutacct** is to stop Accounting, and it performs the following functions:
 - a. Writes a termination record to **wtmp** via the command **acctwtmp**. This record is marked by having "acctg off" in the device name field.
 - b. Turns process accounting off by calling **turnacct off**.

Overview of System Accounting

In this section, the intrinsics of System Accounting are examined. Key terms are defined, commands are introduced, system data flow is described, and finally, you are shown the login and directory structure of System Accounting.

Definitions

The following terms are used often in System Accounting; understanding these definitions is essential to successfully using accounting capabilities. Additional HP-UX terms are in the Glossary.

connect session

This denotes the period of time in which a user is connected to the system. It starts when the user logs in and finishes when the user logs out.

prime/non-prime connect time

Prime time is the time during the day when the computer system is most heavily used—for example, from 9:00am to 5:00pm. Non-prime time is the remaining time during the day when the system is less heavily used—from 5:00pm to 9:00am in this example.

When reporting computer time usage, System Accounting distinguishes between prime and non-prime time usage. You can specify prime and non-prime time on your system by editing the file `/usr/lib/acct/holidays`. (For details on the `holidays` file, see the section “Updating the Holidays File” in this chapter.)

Note

Prime time is in effect only on weekdays (Monday through Friday); non-prime time is in effect during the weekends (Saturdays and Sundays) and on any holidays specified in the `holidays` file.

process accounting records

Once System Accounting is installed and turned on, the following occurs: whenever a process terminates, the kernel writes a process accounting record for the terminating process into the current process accounting file, `/usr/adm/pacct` by default (you can specify that a file other than `pacct` be used as the process accounting file, if you want).

A process accounting record contains resource-usage data for a single process; it summarizes *how much* of the various resources the process used during its lifetime. Examples of information contained in process accounting records are:

- the user ID of the process's owner
- the name of the command that spawned the process
- the amount of time it took the process to execute

For greater detail on the contents and format of process accounting records, see *acct(5)* in the *HP-UX Reference Manual*.

total accounting records

These records, created by various accounting commands, contain summary accounting information for individual users. These records provide the basic information for many reports generated by System Accounting. Some examples of information contained in these records are:

- the ID and user name of the user for whom the total accounting record was created
- the total number of processes that the user has spawned during the accounting period for which the total accounting record was created
- fees for special services rendered to this user

The exact contents and format of total accounting records can be found in *acct(5)*. In addition, commands covered in later sections of this chapter show how these records are created and used by System Accounting.

Introduction to Commands

System Accounting provides many versatile commands to accomplish numerous varied tasks. There are commands that create data, commands that display data, commands that remove data, commands that merge data, and commands that summarize and report data. In addition, the output of one command may be the input to others, and so on.

Accounting commands can be logically categorized into six basic command groups:

- installation
- disk usage accounting
- connect session accounting
- process accounting
- fee charging
- summarizing and reporting accounting information

Descriptions of these command groups, along with a brief synopsis of each command, follow:

Installation

These commands insure that System Accounting is properly installed. They are used to turn accounting on when HP-UX is powered up and turn accounting off when the system is shut down. They may also do some file cleanups. Two such commands exist:

- **startup**—starts accounting when HP-UX is switched to multi-user mode. Invoked from `/etc/rc`.
- **shutacct** turns off accounting when HP-UX is turned off via the `/etc/shutdown` shell.

Disk Usage Accounting

In general, these commands produce disk usage accounting information: they show disk space usage (in blocks) for individual users. They also produce total accounting records. There are four commands:

- **acctdusg** and **diskusg**—both commands show how many blocks of disk space users are consuming. They differ in command options, and the manner in which they produce the information—**acctdusg** takes its input from a list of path names created by **find**, and **diskusg** looks at the inodes of the file system to create its output.
- **acctdisk**—this command produces total accounting records. Its input is supplied (either directly or indirectly) from **acctdusg** or **diskusg**.
- **dodisk**—Produces total accounting records by using the **diskusg** and **acctdisk** commands. **dodisk** is normally invoked by **cron**.

Connect Session Accounting

Independently of System Accounting, the programs **login** and **init** record connect sessions by writing records into **/etc/wtmp**. Accounting commands can display or fix this file, and can produce total accounting records for this file. There are five commands:

- **fwtmp**—displays the information contained in **wtmp**.
- **wtmpfix**—normalizes connect session records that span date changes (see *date(1)*). Also validates login names in connect session records.
- **acctcon1**—summarizes **wtmp** in ASCII readable format, producing one line per connect session.
- **acctcon2**—takes input of the format produced by **acctcon1** and produces total accounting records as output.
- **prctmp**—used to display the session record file. (The session record file is normally **/usr/adm/acct/nite/ctmp**.)

Process Accounting

When process accounting is turned on, the kernel writes a process accounting record to `pacct` whenever a process terminates. A number of accounting commands exist that summarize and report this accounting information. In addition, certain commands turn process accounting on or off and insure that `pacct` doesn't become too large. There are eight process accounting commands in all:

- `accton`—turns process accounting on or off, depending on whether or not a filename argument is supplied with the command. If no filename is given, then process accounting is turned off; the kernel stops writing process accounting records to `pacct`. If a filename is specified, then the kernel starts writing process accounting records to the specified filename.

`accton` uses the system call `acct(2)` to turn process accounting on or off. In addition, only the super-user can execute `accton`.

- `ckpacct`—checks the size of the process accounting file `pacct`. If `pacct` becomes too large, then a new `pacct` file is created via `turnacct switch`. **If disk space becomes critically short, then process accounting is turned off until sufficient space is available.** This command is normally invoked by `cron`.
- `turnacct on | off | switch`—performs one of three functions, depending on which argument (`on`, `off`, or `switch`) is specified. `turnacct on` turns process accounting on by calling `accton` with the default filename argument `/usr/adm/pacct`; `turnacct off` turns process accounting off by calling `accton` with no filename argument; `turnacct switch` renames the current `pacct` file (so that it is no longer the current process accounting file) and creates a new, empty `pacct` file.
- `acctcom`—displays process accounting records contained in `pacct` (or any specified file).
- `acctcms`—takes `pacct` as input, and produces summary accounting information by command, as opposed to by process.
- `acctprc1`—produces readable process accounting information, mainly for input into `acctprc2`.
- `acctprc2`—takes input of the form produced by `acctprc1` and produces total accounting records.

Charging Fees

Occasionally, you may want to charge a user for something. For example, you might charge fees to users for fixing any damaged files that they have. The **chargefee** command allows you to charge fees to specific users.

Summarizing and Reporting Accounting Information

This group of commands summarizes and reports the data created through the command groups described above. These are the commands that are probably used most frequently; they represent the highest level of accounting commands. Five such commands exist:

- **prtacct**—takes as input total accounting records and displays the records in ASCII readable format.
- **acctmerg**—combines the contents of separate total accounting files into a single total accounting file. Allows the merging of disk, process, and connect session total accounting records.
- **runacct**—the main accounting shell script. Normally invoked daily by **cron**, this command processes disk, connect session, process, and fee accounting information and produces summary files and reports. It accomplishes its task by proceeding through various run-levels. In each successive run-level it invokes accounting commands to perform a specific task. For example, in one run-level, total accounting records for connect sessions are created; in another, disk, connect session, process, and fee total accounting records are merged to create one total accounting file.
- **prdaily**—invoked by **runacct** to format a report of the previous day's accounting data; the report is stored in the file `/usr/adm/acct/sum/rptmmdd` where *mmdd* is the month and day of the report. **runacct** may also be used to display a report of the current day's accounting information.
- **monacct**—invoked once a month (or accounting period), this command summarizes daily accounting files and produces a summary files for the accounting period.

System Data Flow

At this point, you have the rudimentary knowledge necessary to understand how System Accounting works; you know some important definitions and should basically know what the various commands do. The purpose of this section is to help you visualize how the different commands work together to create accounting data.

Figure 6-1 illustrates how accounting data is created. The diagram is broken into five separate sub-diagrams, each one representing the data flow for a given command group. The following notational conventions are used:

Symbol	Description
source \Rightarrow dest	Wide arrows represent the <i>transfer of data</i> from a source to a destination. The source is at the start of the arrow; the destination, at the point. For example, the inodes of the file system are the source of information used by <code>diskusg</code> , which in turn is the source of disk usage reports that are inputs to <code>acctdisk</code> .
cause \rightarrow object	Thin arrows represent cause-effect relationships. The cause lies at the start of the arrow; the object affected lies at the point. For example, <code>turnacct on</code> invokes <code>accton</code> which then signals the kernel to begin writing process accounting records to <code>pacct</code> .
files	Boxes with rounded corners represent files or groups of files. In a more general sense, they represent the inputs to and outputs from the various commands.


Note

The installation commands do not appear in the diagram, because they aren't directly involved in the data creation process; they merely insure that it happens.


Note

The commands `runacct` and `prdaily` are shown as having no inputs. This isn't exactly true: they do have inputs, but they get their inputs by executing other accounting commands. In essence, their inputs are the same basic inputs of the other command groups.

Disk Usage Accounting

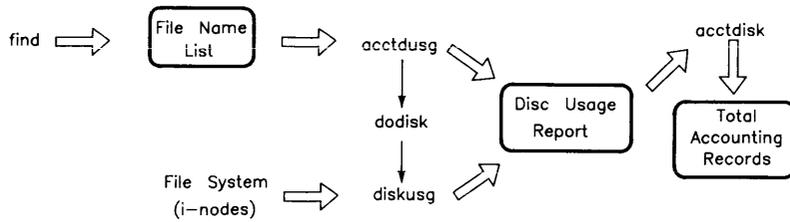

Connect Session Accounting

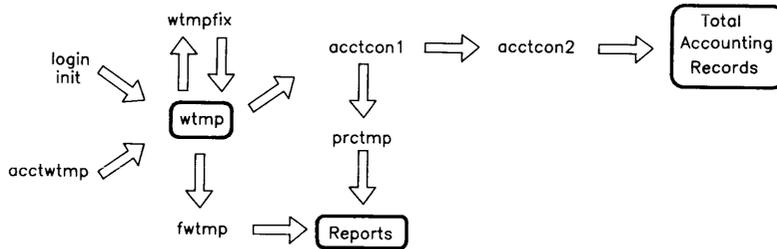

Process Accounting

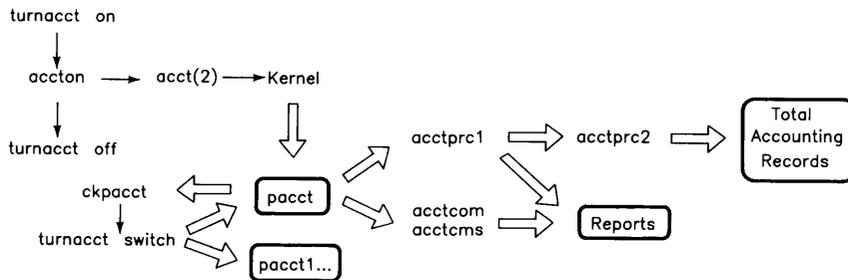


Figure 6-1. System Accounting Data Flow Diagram

Charging Fees



Summarizing and Reporting



Figure 6-1. System Accounting Data Flow Diagram (con't)

Login and Directory Structure

You now know the basics, but you still can't begin learning the day-to-day usage of accounting commands until you know where to log in. In addition, you should know the accounting directory structure—where the various commands, directories, and files are located. These two topics are discussed here.

Logging In

The login name for System Accounting is **adm**; the user ID for **adm** is 4. The **adm** login is a member of the **group adm**, and the **group adm** has a group ID of 4, also.

The home directory for the **adm** login is **/usr/adm**. You log in to System Accounting the same way you do for any account—simply supply the login name to the HP-UX login prompt:

```
login: adm
```

Note

The integrity of accounting data files must be maintained if System Accounting is to generate accurate reports. For this reason, it is highly recommended that a password be used with the **adm** login.

Directory Structure

System Accounting uses a multi-level directory structure to organize its many accounting files. Each directory in this structure stores related groups of files, commands, or other directories. (See the section “System Accounting Files” for definitions of the accounting data files.)

Figure 6-2 illustrates this structure, and descriptions of each directory follow:

- `/usr/adm`—contains all active data-collection files, such as `pacct` and `fee`.
- `/usr/adm/acct`—contains the `nite`, `sum`, and `fiscal` directories described below.
- `/usr/adm/acct/nite`—stores data files that are processed daily by `runacct`.
- `/usr/adm/acct/sum`—cumulative summary files updated by `runacct` are kept here.
- `/usr/adm/acct/fiscal`—periodic (monthly) summary files created by `monacct` are found here.
- `/usr/lib/acct`—System Accounting commands reside here.
- `/etc`—contains `wtmp`, and shell scripts `rc` and `shutdown`.

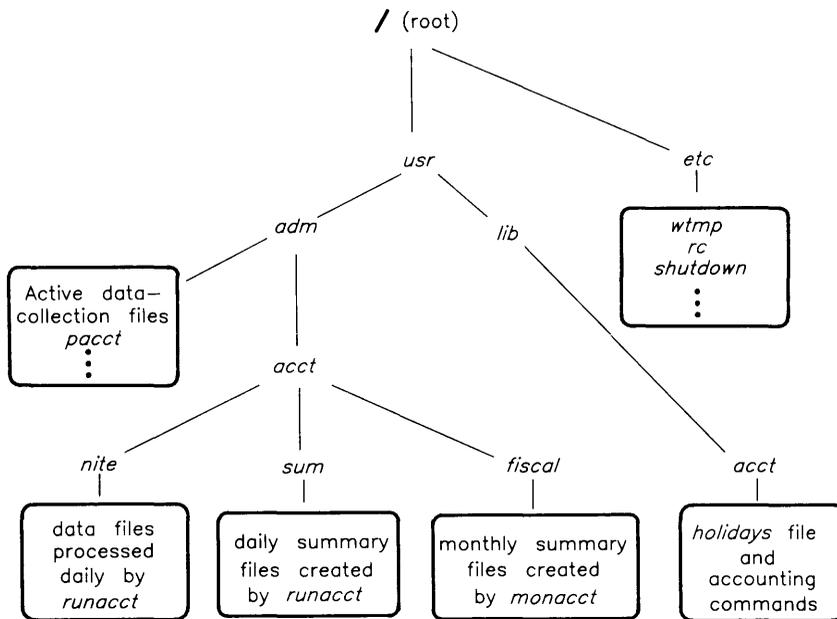


Figure 6-2. System Accounting Directory Structure

Disk Space Usage Accounting

System Accounting provides the means to monitor disk space utilization for individual users. In this section, disk space usage accounting commands are explained. Before reading this discussion, you may want to review the “File System Implementation” section of the “Concepts” chapter.

Disk usage commands provide two main functions: they report disk usage (in blocks) for individual users and create disk total accounting records (supplied as inputs to commands such as `prtacct` or `runacct`).

Reporting Disk Space Usage

Two commands—`acctdusg` and `diskusg`—report disk usage for individual users; both commands show the number of disk blocks allocated to specific users. However, each command has slightly different options. In addition, each differs in the manner in which it produces accounting information.

`acctdusg`

`acctdusg` takes from standard input a list of path names, usually created by the `find` command. For each file in the list, `acctdusg` identifies the owner of the file, computes the number of blocks allocated to the file, and adds this amount to a running total for the file’s owner. When finished looking through the list, `acctdusg` displays the information accumulated for each user: user ID, user name, and number of blocks used.

This command is useful for reporting disk usage information for specific users or files. For example, suppose you want to know how many blocks of disk space you are using: your user ID is 351, user name is `bill`, and your home directory is `/users/pseudo/bill`. The following illustrates how you would use the `find` and `acctdusg` commands to show this information.

```
$ find /users/pseudo/bill -print > bills.files
$ acctdusg < bills.files
00351  bill                30
$ rm bills.files
```

In the above example, `bill` is using 30 blocks of disk space. The series of commands shown could easily have been combined into one line, such as:

```
$ find $HOME -print | acctdusg
00351  bill                30
```

The next example shows how to use **acctdusg** to generate disk usage information for all files in the system:

```
$ find / -print | acctdusg
00350 fred 11
00351 bill 30
00352 mike 17
00353 sarah 13
00354 molly 18
00000 root 3
00004 adm 36
00001 bin 2434
```

Two options are included with **acctdusg**:

- u no_owners** If **-u** is given, then path names of the files for which no owner is found are written into the file *no_owners*. This option could potentially find users who are trying to avoid disk charges.
- p p_file** The password file */etc/passwd* is the default file used by **acctdusg** to determine ownership of files. If the **-p** option is used, then **acctdusg** will use *p_file* instead. This option is not needed if your password file is */etc/passwd*.

The shell script **grpdsug** provided in the section called “Sample Accounting Shell Scripts” displays disk accounting information for users in a given group. It illustrates the use of the **-u** option with **acctdusg**.

diskusg

This command reports disk usage information in the same format as **acctdusg** user ID, user name, and total disk blocks used. However, **diskusg** generates disk accounting information by looking through the **inodes** of a specified special file (see *inode(5)* and the “File System” section of the “Concepts” chapter for more information on inodes and special files.) Therefore, **diskusg** is faster and more accurate than **acctdusg**.

The syntax of the **diskusg** command is:

```
diskusg [options] [files]
```

It generates a disk usage report from data in *files*, if specified; otherwise standard input is used. **diskusg** is normally invoked with the *files* argument. When specified, *files* are the special filenames of the devices containing the inode information used by **diskusg** to generate its report. *files* is normally a special file from the */dev* directory.

The following options may be used with `diskusg`:

- `-s` This tells `diskusg` that: (1) input is in `diskusg` output format, and (2) that all lines for a single user should be combined into a single line. This option is used to merge data from separate files, each containing the output from using `diskusg` on different devices.
- `-v` This option is useful for finding users who are trying to avoid disk space accounting charges. When this option is specified, `diskusg` writes records to `stderr` (standard error output) showing the special file name, inode number, and user ID of files that apparently have no owner.
- `-i fnmlist` Causes `diskusg` to ignore the data on those file systems whose file system name is in `fnmlist`. `fnmlist` is a list of file systems separated by commas or enclosed within quotes.
- `-p p_file` This is the same as the `-p` option of `acctdusg`.
- `-u u_file` This option produces **exactly** the same output as the `-v` option. The difference between the two options is that `-v` writes its output to `stderr`; this option writes its output to the file `u_file`.

The output of `diskusg` is normally used by `acctdisk` to create disk total accounting records. In addition, `diskusg` is normally called by `dodisk`.

The following example creates disk usage information for all users whose files reside on the disk whose device file is `/dev/rdisk/0s0`. **Note that the file system used in this example is the same as was used in the previous `acctdusg` example.**

```
$ diskusg /dev/rdisk/0s0
0      root      10616
1      bin       778
4      adm       96
350    fred      14
351    bill      32
352    mike      20
353    sarah     16
354    molly     22
355    horatio   2
501    guest     2
```

The differences between `diskusg` and `acctdusg` are best illustrated by comparing their outputs. Note that:

1. `acctdusg` places leading zeros on user IDs; `diskusg` doesn't.
2. `acctdusg` counts files **only under each users \$HOME directory**. Files that users own in directories other than their home directory (for example, files in the `/tmp` directory) are counted as files with no owner.
3. Two extra users—`horatio` and `guest`—show up in the output of `diskusg` when compared with the output from

```
find / -print | acctdusg
```

This occurred because the directories of these two users were empty; therefore, no disk usage totals were generated. However, `diskusg` looked at inodes and saw that `horatio` and `guest` were actually using two blocks for the directories themselves.

4. If two or more users have links to a particular file, then `acctdusg` will prorate disk space usage for the file between each user. For example, if three users had a link to a 300-block file called `skurbnich.dat`, each user would be charged for 100 blocks of this file.

Creating Total Accounting Records

Two commands are used to create total accounting records: `acctdisk`, and `dodisk`.

acctdisk

`acctdisk` takes from standard input records of the format produced by `acctdusg` and `diskusg`. From these records, `acctdisk` produces disk total accounting records that may be inputs to `prtacct` or `runacct`.

The following would write disk total accounting records to the file `disktacct` for all users in the group `pseudo`:

```
find / -group pseudo -print | acctdusg | acctdisk > disktacct
```

The next example would generate disk total accounting records for all users who have files on the disk `rhq`. The total accounting records are written to the file `disktacct`.

```
diskusg /dev/rdisk/0s0 | acctdisk > disktacct
```

`acctdisk` has no options and is normally invoked by `dodisk`.

dodisk

dodisk is normally invoked by **cron** to create disk total accounting records for daily usage by System Accounting. The syntax for **dodisk** is:

```
dodisk [-o] [ files ... ]
```

In the default case, **dodisk** creates disk total accounting records on the special files whose names are stored in **/etc/checklist**: the special file names are supplied as input to **diskusg**, which pipes its output to **acctdisk**, which in turn creates total accounting records.

If the **-o** option is used, **dodisk** creates total accounting records more slowly by using **acctdusg** instead of **diskusg**.

If *files* are used, disk accounting will be done on these file systems only. If the **-o** option is used, then *files* should be mount points of mounted file systems; if omitted, they should be the special file names of mountable filesystems.

Note

See the “Daily Usage and Installation” section of this chapter for more information on how **dodisk** should be invoked by **cron**.

Connect Session Accounting

Whenever a user logs in or out of HP-UX, the program `login` records the connect session in the file `/etc/wtmp`. Records in `wtmp` contain the following information:

- the terminal name on which the connect session occurred,
- the login name of the user,
- the current time/date at login or logout, and
- other status information (see *utmp(5)* for details).

System Accounting provides commands that allow you to write records to `wtmp`, to display and manipulate `wtmp`, and to create total accounting records from `wtmp`. These commands are covered in this section.

Writing Records to `wtmp` – `acctwtmp`

The command `acctwtmp` allows you to write records to `wtmp` for whatever reason you might have. `acctwtmp` is normally invoked by `startup` and `shutacct` to record when System Accounting was turned on and off respectively. The format of the command is:

```
acctwtmp "reason"
```

where *reason* is string describing the reason for writing the record to `wtmp`. **Note that** `acctwtmp` does not directly write records to `wtmp`: it writes a record containing the terminal name, current time, and reason string to standard output. To actually write the record to `wtmp` you must append the output from `acctwtmp` to the `wtmp` file as follows:

```
acctwtmp "reason" >> /etc/wtmp
```

The *reason* string may be any combination of letters, numbers, spaces, and the dollar sign (\$), but may not exceed 11 characters in length. (*reason* must be enclosed in double quotes as shown.)

Displaying Connect Session Records – `fwtmp`

To display the contents of `wtmp`, you can use the command `fwtmp`. When no options are used, `fwtmp` takes from standard input records of the format contained in `wtmp`; it writes to standard output the ASCII readable equivalent of the input records. The output of this command can either:

1. be edited, via a HP-UX editor such as `vi`, and then rewritten to `wtmp` using special `fwtmp` options described below; or
2. supplied as input to commands which convert the information to total accounting records.

The syntax of `fwtmp` is:

```
fwtmp [-ic]
```

The options can be used in any combination. The following table describes what the different combinations do.

Option	Description
<code>-ic</code>	Denotes that input is in ASCII readable form and is to be converted to binary form. This is essentially the opposite of using <code>fwtmp</code> without any options.
<code>-i</code>	Both input and output are in ASCII readable format. This is the same as performing an ASCII to ASCII copy.
<code>-c</code>	Both input and output are in binary format—a binary to binary copy.

The following example shows the output produced by `fwtmp` and is followed by descriptions of each column in the report:

```
$ fwtmp < /etc/wtmp
      system boot    0 2 0000 0000 479472540 Mar 12 03:49:00 1985
root   co console    0 7 0000 0000 479475173 Mar 12 04:32:53 1985
      acctg on      0 9 0000 0000 479493135 Mar 12 09:32:15 1985
mike   a1 ttya1      352 7 0000 0000 479493590 Mar 12 09:40:00 1985
mike   a1 ttya1      352 8 0011 0000 479496000 Mar 12 10:20:00 1985
sarah  07 tty07      353 7 0000 0000 479518335 Mar 12 16:32:15 1985
bill   10 tty10      351 7 0000 0000 479521475 Mar 12 17:24:35 1985
sarah  07 tty07      353 8 0011 0000 479522478 Mar 12 17:41:18 1985
bill   10 tty10      351 8 0011 0000 479526487 Mar 12 18:48:07 1985
      co console    0 8 0011 0000 479526488 Mar 12 18:48:08 1985
      acctg off     0 9 0000 0000 479526493 Mar 12 18:48:13 1985
      system boot    0 2 0000 0000 479389800 Mar 12 05:00:00 1985
```

Column Description

- 1 The login name of the user who logged in or out.
- 2 `/etc/inittab` id (this is usually the number of the line on which the connect session took place).
- 3 The name of the device on which the connect session occurred.
- 4 Process id of the user who logged in or out.
- 5 Entry type. This field contains information on the type of record—for example, it shows whether the record is a login record (entry type=7), logout record (entry type=8), or if the record was written by `acctwtmp` (entry type=9). See *utmp(5)* for more details on this field.
- 6—7 Exit status for connect session. See *login(1)* and *utmp(5)* for details.
- 8 Time that entry was made (in elapsed seconds since January 1, 1970).
- 9—12 The equivalent of column 8 in date/time format showing month, day, time of day (in 24-hour format), and year.

Fixing wtmp Errors – wtmpfix

When a user logs into HP-UX, the `login` program stores the value seven (7) in the entry type field of the connect session record. When the same user logs out, an entry type of eight (8) is recorded. You can see this by examining the sample output created by `fwtmp` in the previous section. Note that in the example, login records precede their corresponding logout records in chronological order.

Occasionally, this time-stamped ordering becomes inconsistent: logout records might precede login records. (This occurs when the date and time are reset while users are still logged in.) When this happens, the commands that create connect session total accounting records will not work properly.

Fortunately, there is a command that fixes corrupted `wtmp` files: `wtmpfix`. `wtmpfix` takes as input `wtmp` binary records and corrects the time/date stamps to be consistent; its standard output is also binary `wtmp` records. Its syntax is:

```
wtmpfix [files]
```

If *files* is given, then input is taken from *files*. A dash (-) can be used in place of *files* to indicate standard input. **Note that if you specify `wtmp` as both input to and output from this command, `wtmp` will be destroyed.** Therefore, take care not to destroy `wtmp`. The following shows how to properly fix `wtmp` using `wtmpfix`:

```
$ wtmpfix /etc/wtmp > wtmp.temp
$ fwtmp -c < wtmp.temp > /etc/wtmp
$ rm wtmp.temp
```

Creating Total Accounting Records

This final set of connect session accounting commands is used to create connect session total accounting records. Before reading any further, you may want to review Figure 6-1 (in the “System Data Flow” section).

acctcon1

`acctcon1` converts a sequence of login/logoff records (of the format contained in `wtmp`) read from its standard input to a sequence of records, one per login session. Its input is normally redirected from `wtmp`; its output is columnar ASCII and can be supplied as input to `prctmp` or `acctcon2`.

The use of `acctcon1` is illustrated below by first displaying the contents of `wtmp` with `fwtmp` and then using `acctcon1` to create connect session summary file. The columnar data produced by `acctcon1` is described after the report.

```
$ fwtmp < /etc/wtmp
      system boot    0  2 0000 0000 479472540 Mar 12 03:49:00 1985
root   co console    0  7 0000 0000 479475173 Mar 12 04:32:53 1985
      acctg on       0  9 0000 0000 479493135 Mar 12 09:32:15 1985
mike   a1 ttya1       352 7 0000 0000 479493590 Mar 12 09:40:00 1985
mike   a1 ttya1       352 8 0011 0000 479496000 Mar 12 10:20:00 1985
sarah  07 tty07       353 7 0000 0000 479518335 Mar 12 16:32:15 1985
bill   10 tty10       351 7 0000 0000 479521475 Mar 12 17:24:35 1985
sarah  07 tty07       353 8 0011 0000 479522478 Mar 12 17:41:18 1985
bill   10 tty10       351 8 0011 0000 479526487 Mar 12 18:48:07 1985
      co console     0  8 0011 0000 479526488 Mar 12 18:48:08 1985
      acctg off      0  9 0000 0000 479526493 Mar 12 18:48:13 1985
$ acctcon1 < /etc/wtmp
520095488  353  sarah  1665  2478  479518335  Tue Mar 12 16:32:15 1985
521012224  352  mike   0      0      479493590  Tue Mar 12 09:40:00 1985
520095488  351  bill   0      5012  479521475  Tue Mar 12 17:24:35 1985
521011712  0     root   41047 6488  479475173  Tue Mar 12 04:32:53 1985
```

Descriptions of the columnar data produced by `acctcon1` follow:

- | Column | Description |
|--------|---|
| 1 | Shows the device address (in decimal equivalent of major/minor device address) at which the connect session occurred. |
| 2 | Gives the user ID for the connect session record. |
| 3 | Displays the login name for the user. |
| 4 | Shows the number of prime connect time seconds that were used during the connect session. |
| 5 | Shows non-prime connect seconds. |
| 6 | The connect session starting time (in seconds elapsed since January 1, 1970) is displayed here. |
| 7-11 | The remaining columns convert column six to date/time format. |

In addition to its normal usage, `acctcon1` has four options:

Option	Description
--------	-------------

- | | |
|----------------------|--|
| <code>-p</code> | This option tells <code>acctcon1</code> not to produce one record per connect session. Instead, <code>acctcon1</code> simply echoes its input—one line per <code>wtmp</code> record—showing line name, login name, and time (in both seconds and day/time format). Using this option is similar to using <code>fwtmp</code> , except that this option doesn't show status information, whereas <code>fwtmp</code> does. |
| <code>-t</code> | <code>acctcon1</code> maintains a list of lines on which users are logged in. When it reaches the end of its input, it emits a session record for each line that still appears to be active. It normally assumes that its input is a current file, so that it uses the current time as the ending time for each session in progress. The <code>-t</code> flag causes it to use, instead, the last time found in its input, thus assuring reasonable and repeatable numbers for noncurrent files. |
| <code>-l file</code> | This option causes a line usage summary report to be placed in <i>file</i> . This report shows each line's name, number of minutes used, percentage of total elapsed time used, number of sessions charged, number of logins, and number of logins and logoffs. This report can be used to keep track of line usage, identify bad lines, and find software/hardware oddities. Note that hang-up, termination of login, and termination of the login shell each generate logoff records; therefore, the number of logoffs is often three to four times the number of connect sessions.

Shown below is an example of the line use file (<code>line_use</code>) created from the same <code>wtmp</code> file used in the previous <code>acctcon1</code> example; the standard output of <code>acctcon1</code> has been redirected into the file <code>ctmp</code> . |
| <code>-o file</code> | Using the <code>-o</code> option (e.g., <code>acctcon1 -o f_overall</code>) causes <i>file</i> to be filled with an overall record for the accounting period, giving starting time, ending time, number of reboots, and number of date changes. |

```
$ acctcon1 -t -l line_use < /etc/wtmp > ctmp
$ cat line_use
TOTAL DURATION IS 899 MINUTES
LINE    MINUTES PERCENT # SESS  # ON  # OFF
console 856    95      1     1     1
tty07   69     8       1     1     1
ttya1   40     4       1     1     1
tty10   84     9       1     1     1
TOTALS 1049   --      4     4     4
```

prctmp

The **prctmp** command is simple. Its only function is to put headings on the output created by **acctcon1**: **prctmp** makes a readable report from the output of **acctcon1**.

prctmp takes its input from standard input; therefore, to create a **prctmp** report from **acctcon1** information, you can simply pipe the output from **acctcon1** into **prctmp** as follows:

```
$ acctcon1 < /etc/wtmp | prctmp
```

prctmp will respond by generating a report with appropriate headings over the columns of output from **acctcon1**.

acctcon2

acctcon2 creates connect session total accounting records from standard input of the format created by **acctcon1**. In other words, to create connect session total accounting records, simply send the output from **acctcon1** into the input of **acctcon2**.

The total accounting records created by **acctcon2** are sent to standard output. So if you want to store these records, you must redirect standard output. The following command line shows how to write total accounting records from the connect session record file (**wtmp**) into the file **ctacct**:

```
$ acctcon1 < /etc/wtmp | acctcon2 > ctacct
```

Process Accounting

Process accounting commands provide the means to accumulate execution statistics—such as memory usage, CPU time, number of input/output transfers—for individual processes. This section describes how to:

1. Turn process accounting on,
2. Turn process accounting off,
3. Make sure that the process accounting file (**pacct**) doesn't become too large,
4. Display process accounting records,
5. Generate a command summary report, and
6. Create total accounting records from the process accounting file.

You might find it helpful to look at the System Data Flow Diagram (Figure 6-1) when reading this section.

Turning Process Accounting On

Before System Accounting can generate process accounting data, process accounting must be turned on; two commands can be used to accomplish this task: **turnacct on** and **accton**. After process accounting has been turned on, the kernel will write a process accounting record, for every terminating process, into the current process accounting file (**pacct** by default).

Note

The **startup** command, placed in the system initialization shell script **/etc/rc**, automatically turns process accounting on. Therefore, if you have updated **/etc/rc** for System Accounting (as described in the section “How to Install System Accounting”), process accounting will automatically be activated, and you should seldom need to use the commands described here.

These commands are described only for your benefit should you ever need to manually turn process accounting on or off.

turnacct on

The command used most often to activate accounting is **turnacct on**; only the super-user and the **adm** login can execute this command. **turnacct on** assumes that the process accounting file is the default file **pacct**. The action of **turnacct on** can be summarized as follows:

1. Check to see if the process accounting file **pacct** exists.
2. If **pacct** doesn't exist, then create a new **pacct** file.
3. Turn process accounting on by invoking **accton** with the filename argument **pacct**.

To execute this command, simply enter **turnacct on** to the HP-UX prompt. Note that only the **adm** login and the super-user can execute this command.

accton

Again, only the super-user and the **adm** login can execute **accton**. When invoked with a filename argument, **accton** turns on process accounting and makes the specified filename the current process accounting file. For example,

```
$ accton /usr/adm/pacct
```

tells the kernel to start writing process accounting records to the file **/usr/adm/pacct**. The next example would activate process accounting and make the current process accounting file **/usr/adm/XX107**:

```
$ accton /usr/adm/XX107
```

note

You must make sure that the filename you specify is an existing file; otherwise, **accton** will fail.

Note that in the System Data Flow Diagram (Figure 6-1), **accton** is shown calling another routine, **acct**. **acct** is the system call that actually tells the kernel to start writing process accounting records. See the *HP-UX Reference* for more details on **acct**.

Turning Process Accounting Off

Two commands are used to turn process accounting off: **turnacct off** and **accton** (with no filename argument). These commands tell the kernel to stop writing records to the current process accounting file.

note

If you have updated the `/etc/shutdown` shell script as described in the section “How to Install System Accounting,” you may seldom ever use these commands. The reason is that the **shutacct** command, added to `/etc/shutdown`, automatically turns process accounting off.

turnacct off

turnacct off can be executed by only the super-user and the **adm** login. **turnacct off** turns process accounting off by invoking the **accton** command without the optional filename argument. You execute this command by typing:

```
$ turnacct off
```

accton

When **accton** is invoked without the optional filename argument, process accounting is turned off. You would enter this command as:

```
$ accton
```

As shown in the System Data Flow Diagram (Figure 6-1), **accton** tells the kernel to stop writing process accounting records by using the system call **acct**.

Checking the Size of `pacct`

On a multi-user system, many processes can execute during a single hour. Therefore, process accounting files have the potential to become quite large. System Accounting has built-in mechanisms that insure that the default process accounting file `pacct` doesn't become too large. The two commands used for this purpose are: `turnacct switch` and `ckpacct`.

note

The commands described here work only on the default process accounting file, `pacct`.

`ckpacct`

The command `ckpacct` is normally invoked by `cron` every hour to insure that the current process accounting file `pacct` hasn't become too large. The format of `ckpacct` is:

```
ckpacct [blocks]
```

If the size of `pacct` exceeds the `blocks` argument, 1 000 by default if `blocks` is not specified, then `turnacct switch` is executed, which renames the current `pacct` file and creates a new `pacct` file.

Note

If the number of free blocks in the `/usr` file system falls below 500, `ckpacct` will automatically turn off process accounting via `turnacct off`. When at least 500 blocks become available, process accounting will be reactivated.

The kernel may also enforce a size limit on the size of `pacct`. This will take precedence over the limit set by `ckpacct`. See `acctsh(1M)` and `acct(2)` in the *HP-UX Reference Manual* for more details.

turnacct switch

`turnacct switch` is used to create a new `pacct` file when the current `pacct` file is too large. The action of `turnacct switch` can be summarized as follows:

1. Process accounting is temporarily turned off.
2. The current `pacct` file is renamed to `pacctincr`, where *incr* is a number starting at 1 and incrementing by one for each additional `pacct` file that is created via `turnacct switch`.
3. Since the old `pacct` file was renamed to `pacctincr`, a new, current `pacct` file is created.
4. Process accounting is restarted; the kernel starts writing records to the newly created `pacct` file.

The example below illustrates the effect of using the `turnacct switch` command. In the example, `turnacct switch` is executed from the `adm` home directory `/usr/adm`. Comment lines begin with a cross-hatch(`#`) and are included in the example only as explanatory material.

```
$ #
$ # First, list all the process accounting files
$ # (at this point, there is only one).
$ #
$ ll pacct*
-rw-rw-r--  1 adm    adm      2196 Mar 21 12:44 pacct
$ #
$ # Now execute turnacct switch, which will rename the current
$ # pacct file to pacct1 and will create a new pacct file.
$ #
$ turnacct switch
$ #
$ # Now verify this by listing all process accounting
$ # files again.
$ #
$ ll pacct*
-rw-rw-r--  1 adm    adm        72 Mar 21 12:46 pacct
-rw-rw-r--  1 adm    adm      2196 Mar 21 12:44 pacct1
$ #
$ # The current process accounting file is pacct. The previous
$ # process accounting file is now named pacct1.
$ #
```

Displaying Process Accounting Records – acctcom

The `acctcom` command allows you to display records from any file containing process accounting records. Normally you would use this command to display records from the `pacct` files (`pacct`, `pacct1`, `pacct2` ...).

`acctcom` is a very versatile command; its syntax follows:

```
acctcom [[options][file]] ...
```

If no *file* is specified, `acctcom` uses the current `pacct` file as input. Input can also be taken from standard input. Some of `acctcom`'s options allow you to select only the records that you want to see; other options control the format of the report.

The information contained in this section is organized as follows:

- First, definitions are given for the columnar data produced by `acctcom`.
- Command options that control the format of the report are discussed.
- Options that allow you to select particular records are described.
- Finally, to help you understand how to use `acctcom`'s options, sample `acctcom` reports are shown.

Definitions of Information Produced by acctcom

`acctcom` generates a columnar report with descriptive headings on each column. Each line of the report represents the execution statistics that a particular process accumulated during its lifetime. The following table defines the standard columns in the report—i.e., the columns that are displayed when none of `acctcom`'s options are specified.

Column Header Definition

COMMAND NAME The name of the command or program that spawned the process is shown here. Whenever you enter a command, you are spawning a process. For example, if you enter the command

```
$ 11 /usr/lib/acct
```

you are creating a process with the command name `11`. If a command requiring super-user privileges is executed, a `#` appears before the command name.

USER The login name of the user who created the process is displayed here.

TTYNAME	This is the name of the terminal from which the process was executed. If the process was not executed from a known terminal (for example, if it was executed via <code>cron</code>), then a question mark(?) appears in this column.
START TIME	The time that the process began executing (in <code>hh:mm:ss</code> format) is displayed here.
END TIME	This is the time (<code>hh:mm:ss</code>) that the process finished executing.
REAL (SECS)	The number of seconds that elapsed from START TIME to END TIME is shown in this column.
CPU (SECS)	This column shows how much of the CPU's time a process used during its execution.
MEAN SIZE(K)	This is a rough estimate (in kilobytes) of the amount of memory that a process used during execution. This estimate is based on the number of 512-byte memory segments held at process exit, rounded up to the next 512-byte unit. HP-UX Accounting reports memory usage only for resident, non-paged segments. This will include the process's stack, global data segment, heap, non-shared code, some operating system data structures, and possibly some data (if not paged or shared).

However, virtual memory statistics ARE NOT INCLUDED!

Note also that only memory that is held for a complete sixtieth of a second will be reported; therefore, **processes that execute for only a very short time (less than 1/60th of a second), may show zero memory usage!**

The table below defines the columns that are not displayed on the standard report, but which can be displayed by using `acctcom` options.

Column Header	Definition
F	For a process created by <code>fork</code> which does not do an <code>exec</code> , this column takes the value 1 ; commands which require super-user privileges show a 2 ; super-user commands which do a <code>fork</code> without an <code>exec</code> show a 3 ; otherwise, this column shows a 0 .
STAT	This column displays the system exit status. (This is not the status returned by <code>exit</code> to a parent process during <code>wait</code>). When a process terminates normally, this field shows a 0 . If a command terminates abnormally, then a value other than zero is shown. For example, if you interrupt a command with the <code>[DEL]</code> key, this column will contain a 2 .
HOG FACTOR	The hog factor is computed as the CPU time divided by REAL time; it provides a relative measure of the available CPU time used by the process during its execution. For example, a hog factor of less than 0.50 indicates that the process spent less than half of its time using the CPU. A hog factor of 0.75 indicates that a process spent 75% of its time using the CPU.
KCORE MIN	Provides a combined measurement of the amount of memory used (in kilobytes) and the length of time it was used (in minutes). It is computed as follows:

$$\text{KCORE MIN} = \text{CPU (SECS)} * \text{MEAN SIZE(K)} / 60$$

CPU SYS This is the portion of total CPU time that was spent executing operating system code, such as system calls (for example, writing to disk).

USER (SECS) This is the remaining portion of CPU time. User CPU time is the amount of time actually spent executing a process's code (rather than system code).

CPU FACTOR Whenever you execute a command, the CPU spends part of its time actually executing the command's code (user CPU time) and spends the rest of its time performing system functions, such as writing to the disk or terminal (system CPU time). That is, total CPU time is comprised of both *system* and *user* CPU time:

$$\text{CPU (SECS)} = \text{CPU SYS} + \text{USER (SECS)}$$

The CPU factor shows the ratio of user CPU time to total CPU time:

$$\text{CPU FACTOR} = \text{USER (SECS)} / (\text{CPU SYS} + \text{USER (SECS)})$$

For example, if a command has a CPU factor of 0.35, that means that the CPU spent 35% of its time executing user code and 65% performing system functions.

CHARS TRNSFD The number of characters (bytes) read and/or written by the command is displayed in this column.

BLOCKS R/W This column shows the number of file system blocks read and/or written as a result of executing this command. **This number is not directly related to CHARS TRNSFD and may vary each time the command is executed**, because BLOCKS R/W is affected by directory searches made before opening files, other processes accessing the same files, and general file system activity.

Report Format Options

When no report format options are specified, `acctcom` will produce a report containing only the default information. Optional information can be displayed only by using the report format options. Definitions of the report format options follow:

Option	Description
-a	Causes average statistics to be displayed at the end of the report. The following information is shown: <ul style="list-style-type: none">• total number of commands processed (<code>cmds=xxx</code>)• average real time per process (<code>Real=x.xx</code>)• average CPU time per process (<code>CPU=x.xx</code>)• average USER CPU time per process (<code>USER=x.xx</code>)• average SYS CPU time per process (<code>SYS=x.xx</code>)• average characters transferred (<code>CHARS=x.xx</code>)• average blocks transferred (<code>BLK=x.xx</code>)• average CPU factor (<code>USR/TOT=x.xx</code>)• average HOG factor (<code>HOG=x.xx</code>)
-b	Using this option will display the process records in reverse order: most recently executed commands will be shown first.
-f	Prints the <code>fork/exec</code> flag (F column) and process exit status (STAT column) on the report.
-h	Causes the optional <code>HOG FACTOR</code> column to be displayed, instead of the standard mean memory size column <code>MEAN SIZE(K)</code> .
-i	The optional I/O counts— <code>CHARS TRNSFD</code> and <code>BLOCKS R/W</code> —replace the standard <code>MEAN SIZE(K)</code> column in the report.
-k	Replace the standard <code>MEAN SIZE(K)</code> column with <code>KCORE MIN</code> .

- m Show the default column **MEAN SIZE(K)** on the report. This option is used to include **MEAN SIZE(K)** when it has been bumped off by another option. For example,


```
$ acctcom -km
```

 produces a report showing both **KCORE MIN** and **MEAN SIZE(K)**.
- r Include the optional **CPU FACTOR** column in the report.
- t Show separate system and user CPU times (**CPU SYS** and **USER (SECS)** respectively).
- v Using this option will suppress the printing of column headings at the top of the report.
- q This option is the same as the **-a** option, except that individual process accounting records are not displayed—only the averages are displayed.
- o *ofile* Copy the input process accounting records to *ofile*.

Record Selection Options

The options described here allow you to select the records that are included in the report produced by **acctcom**. The table shown below defines and provides examples for each option:

Option	Description
-l <i>line</i>	Display only the processes that were executed from the user terminal <i>/dev/line</i> . For example, <pre style="margin-left: 40px;">\$ acctcom console</pre> would display records only for the processes that were created from the terminal console .

-u *user* Show only the processes belonging to *user*. *user* can be any of the following:

- a user ID (for example, `acctcom -u 355`)
- user name (`acctcom -u horatio`)
- a cross-hatch `#` (`acctcom -u#`)
- a question mark `?` (`acctcom -u?`)

If `#` is specified as the user name, then only the commands that require super-user privileges will be displayed by `acctcom`. If `?` is given as the user, then only the processes with unknown process IDs will be displayed.

As an example, the following two commands are equivalent:

```
$ acctcom -u 0
$ acctcom -u root
```

-g *group* Show only the processes belonging to *group*. *group* may be specified as either a group name or group ID. For example, suppose the group `pseudo` with group ID 300 is defined in `/etc/group`; then the following two commands are equivalent:

```
$ acctcom -g 300
$ acctcom -g pseudo
```

-s *time* Select processes existing **at or after** *time*. Time is given in 24-hour format—`hr[:min[:sec]]`. The following example would display all the processes that existed at or after 3:30pm:

```
$ acctcom -s 15:30
```

-e *time* Select processes that existed **at or before** *time*. Time is supplied in 24-hour format `hr[:min[:sec]]`. The next example would display all the processes that existed between midnight and 12:15am:

```
$ acctcom -e 0:15
```

-S *time* Select processes **starting** at or after time where *time* is in 24-hour format. The following example would display all the processes that **started** at 1:30:42pm or after:

```
$ acctcom -S 13:30:42
```

-E *time* Display only the processes that **terminated** at or before *time*, where time is in 24-hour format *hr:[min[:sec]]*. Note both the **-S** and **-E** options with the same *time* argument will cause **acctcom** to display only the processes that existed at the specified *time*. For example, to see all the processes that existed at exactly 30 minutes past noon, you would enter:

```
$ acctcom -S 12:30 -E 12:30
```

-n *pattern* Show only the commands matching *pattern*. *pattern* can be a regular expression as described in *ed*, except that **+** means one or more occurrences. For example, to display all processes that were created by executing the **ls** command, you would enter:

```
$ acctcom -n ls
```

To display all the commands that start with **acct**, enter:

```
$ acctcom -n acct
```

To see all the commands that contain the letter **m** in their spelling, you would type:

```
$ acctcom -n .*m.*
```

-H *factor* Display only those processes whose hog factor exceeds *factor*. For example,

```
$ acctcom -H 0.85
```

would display all the processes that spent over 85% of their execution time in the CPU. You can use this option to find greedy processes—processes that are hogging the CPU.

-0 *time* Show only those processes whose system CPU time exceeds *time*, specified in seconds. The following example would be used to determine which processes took more than 8.25 seconds of operating system CPU time to execute:

```
$ acctcom -0 8.25
```

This option could be used to determine which processes are making heavy use of the operating system calls.

-C *sec* Show only the processes whose total CPU time (**SYS + USER**) exceeds *sec* seconds. The next example would display all the processes that used over 5.28 seconds of CPU time to execute:

```
$ acctcom -C 5.28
```

-I *chars* Display only the processes transferring more characters than the limit given by *chars*. For example,

```
$ acctcom -I 10240
```

will display all the processes that transferred over ten kilobytes of characters ($10\,240 = 10 \times 1\,024$ bytes).

Sample Reports

The following sample report illustrates the use of `acctcom` without any options. The report generated is the standard report produced when no options are specified.

```
$ acctcom
ACCOUNTING RECORDS FROM: Thu Mar 21 12:52:26 1985
COMMAND      START      END      REAL      CPU      MEAN
NAME         USER      TTYNAME  TIME      TIME      (SECS)   (SECS)   SIZE(K)
#accton     root      console  12:52:26  12:52:26   0.12     0.10     19.00
ls          sarah     tty07    14:04:08  14:04:08   0.28     0.23     16.50
ckpacct     adm       ?        14:30:00  14:30:05   5.13     1.45     24.00
pwd         bill     tty10    15:09:07  15:09:07   0.48     0.22     22.50
find        sarah     tty07    18:51:37  18:51:39   2.73     0.15     26.50
tabs        root     console  19:10:18  19:10:18   0.92     0.13     23.50
stty        root     console  19:10:19  19:10:19   0.88     0.08     26.00
mail        bill     tty10    19:10:21  19:10:22   1.78     0.23     28.50
news        root     console  19:10:23  19:10:23   0.73     0.12     23.00
acctcom     adm      ttya0    19:53:16  19:53:38  22.58     2.55     28.50
```

Now display all the processes created between 7:00pm and 7:30pm by the user `root`. In addition, include the optional CPU factor and average statistics in the output.

```

$ acctcom -S 19:00 -E 19:30 -u root -ah
START AFT: Thu Mar 21 19:00:00 1985
END BEFOR: Thu Mar 21 19:30:00 1985
COMMAND          START      END          REAL      CPU      HOG
NAME             USER      TTYNAME     TIME      TIME      (SECS)  (SECS)  FACTOR
tabs            root      console    19:10:18 19:10:18    0.92    0.13    0.14
stty            root      console    19:10:19 19:10:19    0.88    0.08    0.09
news            root      console    19:10:23 19:10:23    0.73    0.12    0.16
cmds=3 Real=0.84 CPU=0.11  USER=0.02  SYS=0.09  CHAR=26.12  BLK=11.50
USR/TOT=0.19 HOG=0.13

```

Sample reports are helpful, but the best way to learn the various `acctcom` options is to use them. Take a few minutes to experiment with this command; it is very powerful and can provide you with much useful information if used properly.

Command Summary Report – `acctcms`

The `acctcms` command takes process accounting records as input; but instead of reporting on the individual processes, `acctcms` generates a report on the commands that generated the process accounting records. The action of `acctcms` can be summarized as follows:

1. `acctcms` looks through the input process accounting records and accumulates execution statistics for each unique command name. This information is stored in internal summary format—one record per command name.
2. Depending on the `acctcms` options used, the command summary records created in step 1 are sorted.
3. The command summary records are written to standard output in the internal summary format mentioned in step 1. (To get an ASCII, readable report of this information, you would use the `-a` option described later.)

The syntax of the `acctcms` command is:

```
acctcms [options] files
```

where *files* is a list of the input process accounting files for which the command summary report is to be generated.

Producing a Readable Report – the -a option

By default, the output of `acctcms` is in internal summary record format; if you display it to your terminal, all you see is gibberish. To get a human-readable report, use the `-a` option.

The `-a` option causes `acctcms` to produce a report with descriptive column headings. Total and average (mean) execution statistics for each command are displayed—one line per command—along with total and average statistics over all commands in the report. Descriptions of the columnar data produced by `acctcms` follow:

Column Header	Description
COMMAND NAME	The name of the command for which execution statistics are summarized. Unfortunately, all shell procedures are lumped together under the name <code>sh</code> , because only object modules are reported by the process accounting system.
NUMBER CMDS	The total number of times that the command was invoked.
TOTAL KCOREMIN	The total amount of kcore minutes accumulated for the command. (See the “Definitions of Information Produced by acctcom” for a more accurate description of kcore minutes.)
TOTAL CPU-MIN	The total CPU time that the named command has accumulated.
TOTAL REAL-MIN	Total accumulated real time seconds are displayed in this column.
MEAN SIZE-K	The average amount of memory (in kilobytes) consumed by the command.
MEAN CPU-MIN	The average CPU time consumed per command invocation is shown here; the following equation shows how it is computed: $\text{MEAN CPU-MIN} = \text{TOTAL CPU-MIN} / \text{NUMBER CMDS}$
HOG FACTOR	This column shows the average hog factor over all invocations of the command. It is computed as: $\text{HOG FACTOR} = \text{TOTAL CPU-MIN} / \text{TOTAL REAL-MIN}$
CHARS TRNSFD	This column shows the total number of characters transferred by the command. Note that this number may sometimes be negative.
BLOCKS READ	A total count of the physical blocks read and written by the given command. (See the section “Displaying Process Accounting Records — acctcom” for details on the significance of this total.)

Note

When only the **-a** option is specified, the report is sorted in descending order on the **TOTAL KCOREMIN** column: commands using more **TOTAL KCOREMIN** are shown before those using fewer **TOTAL KCOREMIN**. This report gives a relative measure of the amount of memory used over time by the various commands: commands toward the start of the report are making more use of memory resources than are commands toward the end of the report.

Other Options

In addition to the **-a** option, several other options can be used to control the format of the report generated by **acctcms**. Some options specify which field to sort the report on; other options control the printing of prime/non-prime time usage. The following table defines these options and illustrates their use.

Option	Description
--------	-------------

- | | |
|-----------|--|
| -c | Sort the commands in descending order on TOTAL CPU-MIN , rather than the default TOTAL KCOREMIN . This report can be used to determine which commands are using most of the computer's CPU time. |
| -n | Causes the report to be sorted in descending order on the column named NUMBER CMDS . Commands toward the start of this report are the ones used most frequently; commands toward the end are used least often. |
| -j | All commands invoked only once are combined on one line of the report; this line is denoted by having ***other in the COMMAND NAME column. This option is useful for shortening a report that has many one-invocation commands. |
| -o | Used only with the -a option , -o causes the report to be generated only for commands that were executed during non-prime time (as specified in the holidays file). You can use this option to get a non-prime time command summary report. |
| -p | Also used only with the -a option , -o elicits a report only only for commands that were executed during prime time (as specified in holidays). This option is used to get a prime time command summary report. |

- apo** When the options **-o** and **-p** are used together with **-a**, a combination prime and non-prime time report is produced. The output of this report is same as that produced by **-a** alone, except that the **NUMBER CMDS**, **TOTAL CPU-MIN**, and **TOTAL REAL-MIN** columns are divided into two columns—one for prime time totals, the other for non-prime time. (Prime time columns have a **(P)** header, while non-prime time columns are headed by **(NP)**.)
- s** Specifies that any named input files following the **-s** on the command line are already in internal summary format. This option is useful for merging previous **acctcms** reports with current reports. The following example uses **-s** to create a command summary report from previous process accounting files (**pacct?**) and the current process accounting file (**pacct**). The final ASCII report is stored in the file **ascii_summary**.
- ```
$ acctcms pacct? > old_summary
$ acctcms pacct > new_summary
$ acctcms -as old_summary new_summary > ascii_summary
```

### Sample Report

The ASCII reports produced by **acctcms** contain more than 80 characters per line. When these reports are displayed at an 80-column terminal, the lines wrap around on the screen. In addition, if the report is printed on an 80-column printer, some of the rightmost columns will be lost. Therefore, be sure to use either:

1. a printer with compressed print capabilities, so that all of the report will fit on standard computer paper; or
2. a printer with enough columns to display all the information—for example, a 132-column printer.

The following example generates a command summary report for the current process accounting file (no file is specified, so the current `pacct` file is assumed). By giving the `-j` option, all the commands that were executed only once are grouped under the command name `***other`. Note also that total execution statistics for all commands are grouped under the command name `TOTALS`.

```
$ acctcms -aj
```

| TOTAL COMMAND SUMMARY |             |                |               |                |             |              |            |              |             |
|-----------------------|-------------|----------------|---------------|----------------|-------------|--------------|------------|--------------|-------------|
| COMMAND NAME          | NUMBER CMDS | TOTAL KCOREMIN | TOTAL CPU-MIN | TOTAL REAL-MIN | MEAN SIZE-K | MEAN CPU-MIN | HOG FACTOR | CHARS TRNSFD | BLOCKS READ |
| TOTALS                | 61          | 17.63          | 0.38          | 164.49         | 46.25       | 0.01         | 0.00       | 104553       | 1027        |
| acctcms               | 17          | 12.13          | 0.16          | 0.35           | 76.72       | 0.01         | 0.45       | 49192        | 306         |
| sh                    | 8           | 2.43           | 0.09          | 152.86         | 26.79       | 0.01         | 0.00       | 9043         | 163         |
| more                  | 3           | 0.73           | 0.02          | 10.50          | 31.00       | 0.01         | 0.00       | 21618        | 83          |
| ll                    | 6           | 0.61           | 0.04          | 0.11           | 16.50       | 0.01         | 0.33       | 5715         | 95          |
| acctcom               | 4           | 0.58           | 0.02          | 0.07           | 28.50       | 0.01         | 0.30       | 15319        | 42          |
| ***other              | 9           | 0.54           | 0.02          | 0.14           | 25.26       | 0.00         | 0.16       | 459          | 161         |
| cat                   | 4           | 0.19           | 0.01          | 0.35           | 22.97       | 0.00         | 0.02       | 3112         | 52          |
| rm                    | 2           | 0.11           | 0.00          | 0.02           | 22.22       | 0.00         | 0.29       | 0            | 29          |
| chmod                 | 2           | 0.10           | 0.00          | 0.01           | 22.00       | 0.00         | 0.35       | 0            | 15          |
| accton                | 2           | 0.08           | 0.00          | 0.02           | 19.00       | 0.00         | 0.29       | 0            | 22          |
| sed                   | 2           | 0.08           | 0.01          | 0.04           | 14.50       | 0.00         | 0.13       | 73           | 38          |
| echo                  | 2           | 0.05           | 0.00          | 0.02           | 20.00       | 0.00         | 0.16       | 22           | 21          |

## Creating Total Accounting Records

Two commands—`acctprc1` and `acctprc2`—are used to create total accounting records from the process accounting files. The output from `acctprc1` is supplied as input to `acctprc2` which produces the total accounting records. These commands are normally invoked by `runacct` to produce daily accounting information.

### acctprc1

This command reads process accounting records from standard input, adds login names corresponding to the user ID of each record, and then writes for each process an ASCII line showing:

- the ID of the user that created the process
- the user's login name
- prime CPU time in ticks (a "tick" is one sixtieth of a second)
- non-prime CPU time, also in ticks
- mean memory size (in memory segment units of 512 bytes each)

The format of **acctprc1** is:

```
acctprc1 [ctmp]
```

Input must be redirected from a process accounting file.

The following example creates a file, **ascii\_ptacct**, containing ASCII process accounting information that can be used to create process total accounting records. This file is created from the current process accounting file **pacct**.

```
$ acctprc1 <pacct >ascii_ptacct
```

Normally, **acctprc1** gets login names from the password file **passwd**, which is sufficient on systems where each user has a unique user ID. However, on systems where different users share the same user ID, the **ctmp** file should be specified; it helps **acctprc1** distinguish different login names that share the same user ID.

When specified, **ctmp** is expected to contain a list of login sessions of the form created by **acctcon1**, sorted by user ID and login name.

### **acctprc2**

This command reads from standard input records of the form created by **acctprc1**; it then summarizes the records by user ID and name, and then writes the sorted summaries to standard output as total accounting records. The following example creates total accounting records for all processes in the current process accounting file **pacct**; the total accounting records are stored in the file **ptacct**.

```
$ acctprc1 <pacct |acctprc2 >ptacct
```

---

## Charging Fees to Users – chargefee

System Accounting provides the capability to charge fees to specific users; the **chargefee** command is used to accomplish this task. **chargefee** allows you to charge generic *units* to a specific login name. The syntax of this command is:

```
chargefee login_name number
```

where *number* is the number of units to be charged to a particular user, and *login\_name* is the login name of the user to whom *number* units are to be charged.

---

### note

*number* can be any whole number in the range -32 768 to 32 767; when charging fees, keep in mind that the sum of each user's fees must also be within this range.

---

**chargefee** accumulates fee charge records in the file `/usr/adm/fee`. These records are then merged with other accounting records via **runacct**.

### Examples

The following example charges 25 units to the user whose login name is **horatio**:

```
$ chargefee horatio 25
```

Suppose you inadvertently charged 247 units to the user named **zimblits**, and you want to return his charges to their original value. You would enter the following:

```
$ chargefee zimblits -247
```

---

## Summarizing and Reporting Accounting Information

This final group of commands summarizes and reports accounting information. Certain commands display and merge total accounting files, while others generate the daily and monthly reports used to analyze system performance and bill users for resource usage. The following commands are discussed in this section:

- *prtacct*—displays total accounting records
- *acctmerg*—merges total accounting files
- *runacct*—generates daily summary files and reports
- *prdaily*—displays the daily summary files and reports created by *runacct*
- *monacct*—creates monthly summary files and reports

### Displaying Total Accounting Records – *prtacct*

The *prtacct* command allows you to display the contents of a process accounting file. Its format is

```
prtacct file "heading"
```

where:

- *file* is the name of the total accounting file to be displayed
- "*heading*" is a comment to be included in the standard report header produced by *prtacct*

The format of the *prtacct* report is described next and is followed by an example.

## Report Format

*prtacct* produces a columnar report with one line per total accounting record. Descriptive column headings are included in the report. Definitions of each column follow:

| Column Header  | Description                                                                                                                                                                                                                                                                                                                     |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| UID            | The user ID of the owner of the total accounting record—i.e., the ID of the user for whom the total accounting record was created.                                                                                                                                                                                              |
| LOGIN NAME     | The login name of the owner of the total accounting record is displayed here.                                                                                                                                                                                                                                                   |
| CPU (MINS)     | The total amount of CPU time (in minutes) that the user has consumed. This column is divided into prime and non-prime columns ( <b>PRIME</b> and <b>NPRIME</b> respectively). Information in these columns is created through process accounting commands.                                                                      |
| KCORE-MINS     | This represents a cumulative measure of memory and CPU time that a user consumed (see “Definitions of Information Produced by acctcom” for a more precise definition). Information in this column is also divided into <b>PRIME</b> and <b>NPRIME</b> columns. This information is created through process accounting commands. |
| CONNECT (MINS) | Identifies the real time used (in minutes). In essence, what this column identifies is the amount of time that the user was logged in to the system. This column is also subdivided into <b>PRIME</b> and <b>NPRIME</b> columns. The connect session accounting commands are the source of this information.                    |
| DISK BLOCKS    | The total number of disk blocks allocated to the user is shown here. This information is created via disk space accounting commands.                                                                                                                                                                                            |
| # OF PROCS     | The total number process spawned by the user is displayed here. This information is created via the process accounting commands.                                                                                                                                                                                                |
| # OF SESS      | This column shows how many times the user logged in. Connect session accounting commands create this data.                                                                                                                                                                                                                      |
| # DISK SAMPLES | This column indicates how many times the disk accounting was run to obtain the average number of disk blocks listed in the <b>DISK BLOCKS</b> column.                                                                                                                                                                           |
| FEE            | The number of fee units charged via <i>chargefee</i> is displayed here.                                                                                                                                                                                                                                                         |

## Example

The following example displays disk total accounting records. First the total accounting records are created via disk space accounting commands; then they are displayed using *prtacct*. When examining this report, take note of the following:

1. The similarities between this and the sample report produced by *diskusg* (see “Disk Space Usage Accounting”).
2. Only the columns relating to disk space usage have non-zero values, because the total accounting records were created only from disk space usage accounting commands.

```
$ for file_system in `cat /etc/checklist`
> do
> diskusg $file_system >dtmp.`basename $file_system`
> done
$ diskusg -s dtmp.* |sort +0n +1 |acctdisk >disktacct
$ prtacct disktacct "DISC TOTAL ACCOUNTING RECORDS"
```

Mar 26 17:01 1985 DISC TOTAL ACCOUNTING RECORDS Page 1

|     | LOGIN   | CPU (MINS) |       | KCORE-MINS |       | CONNECT (MINS) |       | DISK   | # OF   | # OF  | # DISK |         |
|-----|---------|------------|-------|------------|-------|----------------|-------|--------|--------|-------|--------|---------|
| FEE | UID     | NAME       | PRIME | NPRIME     | PRIME | NPRIME         | PRIME | NPRIME | BLOCKS | PROCS | SESS   | SAMPLES |
| 0   | TOTAL   | 0          | 0     | 0          | 0     | 0              | 0     | 11598  | 0      | 0     | 10     | 0       |
| 0   | root    | 0          | 0     | 0          | 0     | 0              | 0     | 10616  | 0      | 0     | 1      | 0       |
| 1   | bin     | 0          | 0     | 0          | 0     | 0              | 0     | 778    | 0      | 0     | 1      | 0       |
| 4   | adm     | 0          | 0     | 0          | 0     | 0              | 0     | 96     | 0      | 0     | 1      | 0       |
| 350 | fred    | 0          | 0     | 0          | 0     | 0              | 0     | 14     | 0      | 0     | 1      | 0       |
| 351 | bill    | 0          | 0     | 0          | 0     | 0              | 0     | 32     | 0      | 0     | 1      | 0       |
| 352 | mike    | 0          | 0     | 0          | 0     | 0              | 0     | 20     | 0      | 0     | 1      | 0       |
| 353 | sarah   | 0          | 0     | 0          | 0     | 0              | 0     | 16     | 0      | 0     | 1      | 0       |
| 354 | molly   | 0          | 0     | 0          | 0     | 0              | 0     | 22     | 0      | 0     | 1      | 0       |
| 355 | horatio | 0          | 0     | 0          | 0     | 0              | 0     | 2      | 0      | 0     | 1      | 0       |
| 501 | guest   | 0          | 0     | 0          | 0     | 0              | 0     | 2      | 0      | 0     | 1      | 0       |

## Merging Total Accounting Files – *acctmerge*

Normally executed by *runacct*, the *acctmerge* command merges separate total accounting files into a single total accounting file. All the total accounting records for a particular user name and ID are merged together to form one total accounting record for the given user name and ID. This command is useful for merging disk, connect session, and process total accounting files together to form a single, comprehensive total accounting file.

*acctmerge* reads standard input and up to nine additional files, all in total accounting record format (or an ASCII version thereof). Its syntax is

```
acctmerge [options] [file] . . .
```

where:

- *options* control the report format and the manner in which records are merged.
- *file* is one of up to nine files (in addition to standard input) that are to be merged into a single total accounting file, written to standard output.

### Command Options

The following options may be used with *acctmerge* to control the report format and the manner in which the total accounting records are merged:

| Option | Description |
|--------|-------------|
|--------|-------------|

- |    |                                                                                                                                                                                                                                                                                                                                                   |
|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| -a | <i>acctmerge</i> normally produces output as total accounting records. Using the -a option causes <i>acctmerge</i> to produce output in ASCII. Note that the output generated by using this option is the same as the report produced by <i>prtacct</i> , except that no report headings or totals are displayed—only the columnar data is shown. |
| -i | In the default case, <i>acctmerge</i> assumes that its input files contain total accounting records. If -i is specified, then <i>acctmerge</i> will expect input files to be in the ASCII format created by the -a option.                                                                                                                        |
| -p | This option simply echoes input records—no merging or processing is done. The output is displayed in the format produced by the -a option.                                                                                                                                                                                                        |
| -t | Produces a single total accounting record that summarizes all input records. To see the ASCII version of this record, you must use the -t and -a options together:                                                                                                                                                                                |

```
$ acctmerge -t -a <tot_acct_recs
```

**Note that -t and -a can be specified in any order, but they must be specified separately as shown.**

- u Normally, *acctmerg* merges records that have the same user ID and user name. Using *-u* causes *acctmerg* to merge records on the basis of same user ID only—i.e., disregard the user name as a key on which to merge records.
- v This option causes *acctmerg* to produce output in verbose ASCII format. The same report is produced as the *-a* option, except that floating point numbers are displayed in more precise notation:

*<mantissa>e<exponent>*

The *-a*, *-v*, and *-i* options are useful if you wish to edit total accounting records. For example, suppose that you have created a total accounting file (*ptacct*) containing process total accounting records, and you want to make some adjustments to these records. The following sequence could be used to make “repairs” to this file.

```
$ acctmerg -v -a <ptacct >ptacct.ascii
 edit ptacct.ascii as desired ...
 then copy the changes back to ptacct
$ acctmerg -i <ptacct.ascii >ptacct
```

## Example

The following example creates disk, process, and connect session total accounting records, merges them together, and stores the merged file in the file `merged_file`.

```
$ # First, create disk space usage total accounting records (dtacct)...
$ #
$ for fs in `cat /etc/checklist`
> do
> diskusg $fs >dtmp.`basename $fs`
> done
$ diskusg -s dtmp.* |sort +0n +1 |acctdisk >dtacct
$ #
$ # Now create connect session total accounting records (ctacct)...
$ #
$ acctcon1 </etc/wtmp |acctcon2 >ctacct
$ #
$ # Create process total accounting records (ptacct)...
$ #
$ >ptacct
$ for p_file in pacct*
> do
> acctprc1 <$p_file |acctprc2 >>ptacct
> done
$ #
$ # Now merge all the total accounting files (?tacct) into
$ # a single total accounting file (tacct)...
$ #
$ acctmerg dtacct ctacct <ptacct >tacct
```

## Creating Daily Accounting Information – `runacct`

`runacct` is the main daily accounting shell procedure. It is normally initiated via `cron` during non-prime hours. `runacct` processes disk, connect session, process, and fee accounting files. It prepares cumulative summary files for use by `prdaily` and/or for billing purposes. This section discusses the following aspects of `runacct`:

- files processed by `runacct`
- the run-levels that `runacct` progresses through while executing
- recovery from `runacct` failure
- restarting `runacct`
- reports produced by `runacct`

## Files Processed by *runacct*

The following files, processed by *runacct*, are of particular interest to the reader. (File-names are given relative to the directory */usr/adm/acct*.)

- *nite/lineuse* contains usage statistics for each terminal line on the system. This report is especially useful for detecting bad lines. If the ratio of logoffs to logins on a particular line exceeds 3 to 1, then there is a good possibility that the line is failing.
- *nite/daytacct* contains total accounting records from the previous day.
- *sum/tacct* contains accumulated total accounting records for each day's total accounting records (*nite/daytacct*) and can be used for billing purposes. It is restarted each month or fiscal period by the *monacct* shell script.
- *sum/daycms* is produced by *acctcms*. It contains the daily command summary. The ASCII version of this file is in *nite/daycms*.
- *sum/cms* holds the accumulation of each day's command summaries (*sum/daycms*). A new *sum/cms* file is created each month by *monacct*. The ASCII version of this file is in *nite/cms*.
- *sum/loginlog* maintains a record of the last time each user logged in.
- *sum/rprtMMDD* is the main daily accounting report created by *runacct*. This report can be printed via *prdaily*.

*runacct* takes care not to damage files in the event of errors. A series of protection mechanisms are used that attempt to recognize errors, provide intelligent diagnostics, and terminate processing in such a way that *runacct* can be restarted with minimal intervention. To accomplish these goals, the following actions are performed by *runacct*:

- *runacct*'s progress is recorded by writing descriptive messages to the file *nite/active*.
- All diagnostics output during the execution of *runacct* are redirected to the file *nite/fd2log*.
- If the files *lock* and *lock1* exist when *runacct* is invoked, an error message will be displayed, and execution will terminate.
- The *lastdate* file contains the month and day that *runacct* was last run and is used to prevent more than one execution per day.
- If *runacct* detects an error, a message is written to */dev/console*, mail is sent to *root* and *adm*, locks are removed, diagnostics files are saved, and execution is terminated.

## The Run-Levels of *runacct*

In order to allow *runacct* to be restartable, processing is broken down into separate re-entrant *states*. As *runacct* executes, it records its progress by writing the name of the most recently completed run-level into the file called */usr/adm/statefile*. After processing for a run-level is complete, *runacct* examines *statefile* to determine which run-level to enter next. When *runacct* reaches the final run-level (CLEANUP), the *lock* and *lock1* files are removed, and execution terminates. The following table describes *runacct*'s run-levels:

| State      | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SETUP      | The command <i>turnacct switch</i> is executed. The process accounting files, <i>pacct?</i> , are moved to <i>Spacct?.MMDD</i> . The <i>/etc/wtmp</i> file is moved to <i>nite/wtmp.MMDD</i> with the current time added on the end.                                                                                                                                                                                                                                                                                                 |
| WTMPFIX    | <i>nite/wtmp.MMDD</i> is checked for correctness by <i>wtmpfix</i> . Some date changes will cause <i>acctcon1</i> to fail, so <i>wtmpfix</i> attempts to adjust the time stamps in the <i>nite/wtmp.MMDD</i> file if a date change record appears.                                                                                                                                                                                                                                                                                   |
| CONNECT1   | Connect session records are written to <i>ctmp</i> . The <i>lineuse</i> file is created, and the <i>reboots</i> file, showing all of the boot records found in <i>nite/wtmp.MMDD</i> , is created.                                                                                                                                                                                                                                                                                                                                   |
| CONNECT2   | <i>ctmp</i> is converted to connect session total accounting records in the file <i>ctacct.MMDD</i> .                                                                                                                                                                                                                                                                                                                                                                                                                                |
| PROCESS    | The <i>acctprc1</i> and <i>acctprc2</i> programs are used to convert the process accounting files, <i>Spacct?.MMDD</i> , to the total accounting records in <i>ptacct?.MMDD</i> . The <i>Spacct</i> and <i>ptacct</i> files are correlated by number so that if <i>runacct</i> fails, the unnecessary reprocessing of <i>Spacct</i> files will not occur. One precaution should be noted: <b>When restarting <i>runacct</i> in this run-level, remove the last <i>ptacct</i> file; if you don't, <i>runacct</i> will not finish.</b> |
| MERGE      | Merge the process and connect session total accounting records to form <i>nite/daytacct</i> .                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| FEES       | Merge in any ASCII <i>tacct</i> records from the file <i>fee</i> into <i>nite/daytacct</i> .                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| DISK       | On the day after the <i>dodisk</i> shell script runs, merge <i>nite/disktacct</i> with <i>nite/daytacct</i> .                                                                                                                                                                                                                                                                                                                                                                                                                        |
| MERGETACCT | Merge <i>nite/daytacct</i> with <i>sum/tacct</i> , the cumulative total accounting file. Each day, <i>nite/daytacct</i> is saved in <i>sum/tacctMMDD</i> , so that <i>sum/tacct</i> can be recreated in the event it becomes corrupted or lost.                                                                                                                                                                                                                                                                                      |

- CMS** Merge in today's command summary with the cumulative summary file *sum/cms*. Produce ASCII and internal format command summary files.
- USEREXIT** Any installation-dependent (local) accounting programs can be run in this run-level. For example, you might want to execute commands that generate daily billing data for individual users (the shell script *acct\_bill* in the section called "Sample System Accounting Shell Scripts" could be used for this purpose). To have local accounting programs executed by *runacct*, simply enter the commands in *runacct* in the code for the **USEREXIT** run-level of *runacct*.
- CLEANUP** Clean up the temporary files, run *prdaily* and save its output in the file *sum/rprtMMDD*, remove the locks, then exit.

### Recovering from Failure

It is possible that *runacct* might fail and terminate abnormally. The primary reasons for *runacct* failure are:

- a system "crash"
- not enough disk space remaining in */usr*
- a corrupted *wtmp* file

If the *nite/activeMMDD* file exists, check it first for error messages. If the *nite/active* file and lock files exist, check *fd2log* for any mysterious messages. The following are error messages produced by *runacct* and the recommended recovery actions:

- **ERROR: locks found, run aborted**

The files *lock* and *lock1* were found. These files must be removed before *runacct* can be restarted.

- **ERROR: acctg already run for date: check /usr/adm/acct/nite/lastdate**

The date in *lastdate* and today's date are the same. Remove *lastdate* before restarting *runacct*.

- **ERROR: turnacct switch returned rc=?**

Check the integrity of *turnacct* and *accton*. The *accton* program must be owned by *root* and have the *setuid* bit set.

- **ERROR: Spacct?.MMDD already exists**

File setups probably already run. Check the status of files, then run setups manually.

- **ERROR: /usr/adm/acct/nite/wtmp.MMDD already exists, run setup manually**

You must perform the **SETUP** step manually, because the daily *wtmp* file already exists.

- **ERROR: wtmpfix errors see /usr/adm/acct/nite/wtmperror**

*wtmpfix* detected a corrupted *wtmp* file. See the section “Fixing Corrupted Files” for details on fixing *wtmp* errors.

- **ERROR: connect acctg failed: check /usr/adm/acct/nite/log**

*acctcon1* encountered a bad *wtmp* file. Again, see the section “Fixing Corrupted Files” on how to fix the file.

- **ERROR: Invalid run-level, check /usr/adm/acct/nite/active**

the file *statefile* is probably corrupted. Check *statefile* and read *active* before restarting.

### Restarting runacct

*runacct* is normally run via *cron* only once per day. However, if an error occurs while executing *runacct* (as described above), it may be necessary to restart *runacct*. *runacct* has the following syntax:

```
runacct [mmdd [state]]
```

When called without arguments, *runacct* assumes that it is being invoked for the first time on the current day; this is how *runacct* is invoked by *cron*. The argument *mmdd* is necessary if *runacct* is being restarted and specifies the month and day for which *runacct* will rerun the accounting. The entry point for processing is based on the contents of *statefile*. To override *statefile*, include the desired entry *state* on the command line.

For example, to start *runacct*, you would enter:

```
$ nohup runacct 2> /usr/adm/acct/nite/fd2log &
```

To restart *runacct* on the 26th day of March:

```
$ nohup runacct 0326 2> /usr/adm/acct/nite/fd2log &
```

To restart *runacct* at run-level WTMPFIX on June 1st:

```
$ nohup runacct 0601 WTMPFIX 2>/usr/adm/acct/nite/fd2log &
```

## Daily Reports

*runacct* generates five basic reports upon each invocation. Brief descriptions of each report follow. **Detailed descriptions of the reports are found in the following section, “Displaying runacct Reports — prdaily.”**

- **Daily Line Usage Report**—summarizes connect session accounting since the last invocation of *runacct*. It provides a log of system reboots, power failure recoveries, and any other records dumped into */etc/wtmp* via *acctwtmp*. In addition, it provides a breakdown of line utilization.
- **Daily Resource Usage Report**—gives a summary of resource usage per individual user: it basically merges all the total accounting records for individual users and displays the records, one per user.
- **Daily Command Summary**—summarizes resource usage data for individual commands since the last invocation of *runacct*. The data included in this report is useful in determining the most heavily used commands; you can use these commands’ characteristics of resource utilization when “tuning” your system.

This report is sorted by **TOTAL KCOREMIN**, an arbitrary but often-good yardstick for calculating “drain” on a system.

- **Monthly Total Command Summary**—This report is exactly the same as the Daily Command Summary, except that the Daily Command Summary contains command summary information accumulated only since the last invocation of *runacct*, while the Monthly Total Command Summary summarizes commands from the start of the fiscal period to the current date. In other words, the monthly report reflects the data accumulated since the last invocation of *monacct*.
- **Last Login**—simply gives the date each user last logged in to the system. This could be a good source for finding likely candidates for the archives, or getting rid of unused login directories.

## Displaying runacct Reports – prdaily

As *runacct* finishes executing, it deposits a report of the current day's accounting in the file */usr/adm/acct/sum/rptmmdd*, where *mmdd* is the month and day that the report was generated. The *prdaily* command is used to display the contents of any daily report file created by *runacct*. Its syntax is

```
prdaily [-l] [-c] [mmdd]
```

where:

- *mmdd* is an optional report date. If no date is specified, *prdaily* produces a report of the current day's accounting information. Previous days' accounting reports can be displayed by using the *mmdd* option and specifying the exact report date desired.
- The *-l* option prints a report of exceptional usage by login name for the specified date. This option is used to determine which users are consuming excessive amounts of system resources. The limits for exceptional usage are kept in the file */usr/lib/acct/ptelus.awk* and can be edited to reflect your installation's requirements.
- Valid only for the current day's accounting, the *-c* option is used to get a report of exceptional resource usage by command. This option is used to determine which commands are using excessive amounts of system resources. The limits for exceptional usage are maintained in the file */usr/lib/acct/ptecms.awk* and can be edited to reflect your system's needs.

The reports produced by *runacct* were described briefly in the previous sub-section. Now the reports are discussed in more detail.

## Daily Line Usage Report

In the first part of this report, the FROM/TO banner should alert you to the period reported on. The times are the date-time that the last report generated by *runacct*, and the date-time that the current report was generated. It is followed by a log of system reboots, shutdowns, power failure recoveries, and any other records dumped into *wtmp* by the *acctwtmp* command.

The second part of the report is a breakdown of line utilization. The TOTAL DURATION shows how long the system was in a multi-user run-level. The columns of the report are defined in the following table:

| Column  | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LINE    | The terminal line or access port being reported on.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| MINUTES | The total number of minutes that the line was in use during the accounting period.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| PERCENT | The percentage of TOTAL DURATION that the line was in use:<br>$\text{PERCENT} = (\text{MINUTES} / \text{TOTAL DURATION}) * 100$                                                                                                                                                                                                                                                                                                                                                                                                                     |
| # SESS  | Shows the number of times that this port was accessed for a <i>login</i> session.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| # ON    | Historically, this column displayed the number of times that the port was used to log a user on; but since <i>login</i> can no longer be executed explicitly to log in a new user, this column should be identical to # SESS.                                                                                                                                                                                                                                                                                                                       |
| # OFF   | This column reflects not only the number of times a user logged off, but also any interrupts that occurred on the line. Generally, interrupts occur on a port when <i>getty(1M)</i> is first invoked when the system is brought down to a multi-user run-level. This column comes into play when # OFF exceeds # ON by a large factor. This usually indicates that the multiplexer, modem, or cable is going bad, or that there is a bad connection somewhere. The most common cause of this is an unconnected cable dangling from the multiplexer. |

During real time, *wtmp* should be monitored as this is the file that connect session accounting is taken from. If it grows rapidly, execute *acctcon1* to determine which line is the noisiest. If the interrupting is occurring at a furious rate, general system performance will be affected.

### **Daily Resource Usage Report**

This report gives a by-user breakdown of system resource usage. The format of this report is the same as that produced by the *prtacct* command. See the Report Format table for the *prtacct* command for definitions of the columnar data found in this report.

### **Daily and Monthly Command Summary**

These two reports are the same, except that the Daily Command Summary reports information only for commands executed since the last invocation of *runacct*; the Monthly Command Summary contains information on commands executed since the last invocation of *monacct*.

The output of this report is identical to that produced by *acctcms*. For definitions of the data found in this report, see the discussion of *acctcms* in the “Process Accounting” section.

### **Last Login**

This report simply shows the last date and time that each user logged in. The longer it has been since a particular user logged in, the more likely it is that the user’s files could be archived, or maybe even that the user could be removed from the system.

## **Creating Monthly Accounting Reports – monacct**

*monacct* creates monthly summary files and reports; the resulting output is stored in the directory */usr/adm/acct/fiscal*. After creating its monthly reports, it removes the old daily accounting files from the directory */usr/adm/acct/sum* and replaces them with new summary accounting files.

*monacct* should be invoked once each month or accounting period. Its syntax is:

```
monacct number
```

where *number* indicates the which month or period it is (01=January, 12=December). If *number* is not specified, *monacct* assumes that it is being invoked for the current month; this default is useful if *monacct* is executed via *cron* on the first day of each month (as described in the “Daily Usage and Installation” section).

Descriptions of the files created in the *acct/fiscal* directory follow:

- *cms?*—contains the total command summary file for the accounting period denoted by ?. The file is stored in internal summary format. Therefore, to display this file, you must use the *acctcms* command. The following example shows how to display this file for the month of June:

```
$ acctcms -a -s /usr/adm/acct/nite/fiscal/cms06
```

- *fiscrpt?*—contains a report similar to that produced by *prdaily*. The report shows line and resource usage for the month represented by ?. The following would display the fiscal accounting file for the month of November:

```
$ cat /usr/adm/acct/nite/fiscal/fiscrpt11
```

- *tacct?*—is the total accounting file for the month represented by ?. To display this file, you must use the *prtacct* command. The following would display the total accounting summary file for the month of January:

```
$ prtacct /usr/adm/acct/fiscal/tacct01 "JANUARY TOTAL ACCOUNTING"
```

---

## Updating the Holidays File

The file `/usr/lib/acct/holidays` contains the information that System Accounting needs to distinguish between prime and non-prime time. It contains the following information:

1. **Comment Lines.** Comment lines are entered by placing an asterisk (\*) as the first character in the line; they may appear anywhere in the file.
2. **Year Designation Line.** This line should be the first non-comment line in the file and must appear only once. The line consists of three four-digit numbers (leading blanks and tabs are ignored). The first number designates the year; the second denotes the time (in 24-hour format) that prime time starts; the third gives the time that prime time ends and non-prime time starts.

For example, to specify the year as 1985, prime time at 9:00 a.m., and non-prime time at 4:30 p.m., the following entry would be appropriate:

```
1982 0900 1630
```

A special condition allowed for in the time field is that 2400 is automatically converted to 0000.

3. **Company Holiday Lines.** These entries follow the year designation line. Company holidays are days when few people should be using the computer. Therefore, System Accounting assumes that non-prime time is in effect during the entire 24 hours of a specified holiday.

Company holiday lines have the following format:

```
day_of_year Month Day Description of Holiday
```

The *day\_of\_year* field is a number in the range 1 through 366, corresponding to the day of the year for the particular holiday (leading blanks and tabs are ignored). The remaining fields are simply commentary and are not used by other programs.

---

### Note

As delivered, the *holidays* file contains valid entries for Hewlett-Packard's prime/non-prime time, and holidays. You should check this file and edit it as necessary to reflect your organization's requirements.

---

---

## Fixing Corrupted Files

System Accounting files may become corrupted or lost. Some of these files can simply be ignored or restored from the file save backup. However, certain files must be fixed in order to maintain the integrity of System Accounting.

### Fixing wtmp Errors

The *wtmp* files seem to cause the most problems in the daily operation of System Accounting. When the date is changed and HP-UX is switched into multi-user mode, a set of date change records is written into */etc/wtmp*. The *wtmpfix* command is designed to adjust the time stamps in the *wtmp* records when a date change is encountered. However, some combinations of date changes and reboots won't be caught by *wtmpfix* and cause *acctcon1* to fail. The following steps show how to "patch" a damaged *wtmp* file.

```
$ cd /usr/adm/acct/nite
$ fwtmp <wtmp.MMDD >wtmp.temp
 Using an editor, delete corrupted records or
 delete all records from beginning up to the date change
$ fwtmp -ic <wtmp.temp >wtmp.MMDD
$ rm wtmp.temp
```

If the *wtmp* file is beyond repair, create a null *wtmp* file. This will prevent any charging of connect time. *acctprc1* will not be able to determine which login owned a particular process, but it will be charged to the login that is first in the password file for that user ID.

## Fixing tacct Errors

If your installation is using System Accounting to charge users for system resource usage, the integrity of *sum/tacct* is quite important. If *sum/tacct* ever becomes corrupted, then check the contents of *sum/tacctprev* with the command *prtacct*. If it looks correct, then the latest *sum/tacct.MMDD* should be patched up, and *sum/tacct* should then be recreated. A simple patch procedure would be:

```
$ cd /usr/adm/acct/sum
$ acctmerg -a -v <tacct.MMDD >tacct.temp
 Using an editor, remove the bad records and
 write duplicate UID records to another file
$ acctmerg -i <tacct.temp >tacct.MMDD
$ acctmerg tacctprev <tacct.MMDD >tacct
$ rm tacct.temp
```

Remember that *monacct* removes all the *tacct.MMDD* files; therefore, *sum/tacct* can be recreated by merging these files together.

---

## Sample Accounting Shell Scripts

### **grpdu<sup>sg</sup>**

This shell script displays disk space usage totals for the users who are members of a specified group. The syntax of this command is:

```
grpdusg group_name
```

where *group\_name* is the name of the group for which disk space accounting information is to be generated.

For example,

```
$ grpdusg pseudo
```

generates disk space usage information for all the users in the group **pseudo**.

## The Shell Script

```
Check for the group-name parameter.
#
if [$# -ne 1]
then echo "\nUsage: grpdusg group-name\n"
 exit 1
fi
echo "\nOne moment please...\n"
#
Use the find command to find all the files whose owners are members of
group-name. Pipe the output from find into acctdusg which will accumulate
disk space usage information for the users in group-name.
Note:
- accounting data is temporarily stored in _${1}_tmp
- error messages are stored temporarily in _${1}_err
- if files exist that have no owners, then the names of
these files are stored in _no_owners
#
fn=_${1}_
find / -group $1 -print 2>${fn}err |acctdusg -u _no_owners >${fn}tmp
#
Remove the _no_owners file if its size is not greater than zero.
#
if [-s _no_owners]
then echo "\nFiles having no owners exist--check _no_owners\n"
else rm _no_owners
 echo "\nAll files have owners-- _no_owners not created\n"
fi
#
Use echo and awk to display disk usage totals for this group.
#
echo "\nDisc space usage information (group is ${1}): \n"
awk 'BEGIN {print "\n_UID___USER NAME_____BLOCKS"}
 { sum += $3 ; # add up total disk blocks used
 print $0 # display information for user
 END { print "\nTOTAL DISC SPACE USAGE= ", sum, "blocks" }' ${fn}tmp
#
Remove temporary files, then exit.
#
rm ${fn}*
```

## acct\_bill

*acct\_bill* takes as input a total accounting file and produces as output billing totals for all users found in the input file. The syntax of *acct\_bill* is:

```
acct_bill [mmdd]
```

If the optional *mmdd* is not specified, then *acct\_bill* takes as input the current day's total accounting file (*acct/nite/daytacct*); if *mmdd* is given, then input is taken from the total accounting file for the date specified by *mmdd* (*acct/sum/tacctmmdd*). Output is written to the file *billsmmdd*, where *mmdd* is the date given with the command, or the current date if *mmdd* was not specified with the command.

### Examples

To generate billing information for the current day, simply enter:

```
$ acct_bill
```

and the billing information will be stored in the file *acct/sum/billsmmdd*, where *mmdd* is the current date.

To create billing information for January 23rd, you would enter:

```
$ acct_bill 0123
```

after which the billing information would be stored in the file called *acct/sum/bills0123*.

To automatically generate daily billing totals for all users, you should call *acct\_bill* without the date argument from the **USEREXIT** run-level of *runacct*.

### Output Produced by acct\_bill

The output of *acct\_bill* contains one line per user and has the following format:

```
user_ID user_name billing_amount
```

where *user\_ID* and *user\_name* identify the user who is being billed, and *billing\_amount* shows the total amount that the user is to be charged.

*billing\_amount* is computed by multiplying *accounting coefficients* (found in the shell script) by columns of the report generated by *prtacct*. Assuming that billing amounts are in dollars, the coefficients (as they are currently shown) produce the following billing amounts:

- 10 cents for every minute of prime CPU time consumed
- five cents for every minute of non-prime CPU time consumed
- a half cent for every prime kcore minute used
- two-tenths of a cent for every non-prime kcore minute
- a half cent for every prime connect time minute
- two-tenths of a cent for every non-prime connect minute
- two-and-a-half cents for every block of disk space used
- two-and-a-half cents for every process spawned by the user
- ten cents for every connect session
- each fee unit charged via *chargefee* counts as one cent

You should experiment with this command by altering the coefficients to see how *billing\_amount* is affected. After gaining confidence with this shell script, you can alter the coefficients to suit your installation's needs.

## The Shell Script

```
_date='date +%m%d'
_outfile=/usr/adm/acct/sum/bills
_infile=/usr/adm/acct
#
Set _infile and _outfile, based on whether or not MMDD was given
#
if [$# -eq 0]
then
 # Generate billing data for current day.
 _infile=${_infile}/nite/daytacct
 _outfile=${_outfile}/${_date}
else
 # Create billing data for date given (MMDD).
 _infile=${_infile}/sum/tacct${1}
 _outfile=${_outfile}/${1}
fi
#
Create a file containing the ASCII equivalent of the input total
accounting file (tacct_ASC.tmp_). The file can then be supplied as input
to awk, which will generate billing data for each user.
#
acctmerg -a -t <$_infile >tacct_ASC.tmp_ # output TOTAL amount first
acctmerg -a <$_infile >>tacct_ASC.tmp_ # append users' total accounting
records
#
Using awk, compute billing totals for each user in the total accounting file.
#
awk 'BEGIN {
 # *****
 # A C C O U N T I N G C O E F F I C I E N T S
 # *****
 cpu_P =0.10 # 0.10 monetary units per minute of prime CPU time
 cpu_NP=0.05 # 0.05 monetary units per non-prime CPU minute used
 kcm_P =0.005 # for prime kcore minutes consumed
 kcm_NP=0.002 # for non-prime kcore minutes used
 con_P =0.005 # prime connect (real) time
 con_NP=0.002 # non-prime connect time used
 blk = 0.025 # number of blocks used
 prc = 0.025 # number of processes spawned
 ses = 0.10 # number of connect sessions
 fee = 0.01 # 100 charge units per monetary unit
 # *****
}
Start computing billing amounts for each user.
{
 _sum = cpu_P*$3 + kcm_P*$5 + con_P*$7 # compute prime usage
 _sum+= cpu_NP*$4+ kcm_NP*$6+ con_NP*$8 # add non-prime usage
 _sum+= blk*$9 + prc*$10 + ses*$11 + fee*$13 # add remaining amounts
 printf "%-8s %-10s %10.3f\n", $1, $2, _sum # display user total
}' tacct_ASC.tmp_ >$_outfile # write output from awk to appropriate file
rm tacct_ASC.tmp_ # remove the temporary ASCII file
```

---

## System Accounting Files

Descriptions of the different files processed by HP-UX System Accounting are found in this section. The files are grouped according to the directory in which they are found.

### Files in the */usr/adm* directory

| Filename        | Contents                                                                    |
|-----------------|-----------------------------------------------------------------------------|
| <i>diskdiag</i> | Diagnostic output from the execution of disk space accounting commands.     |
| <i>dtmp</i>     | Output from the <i>acctdusg</i> program.                                    |
| <i>fee</i>      | Output from the <i>fchargefee</i> command (ASCII total accounting records). |
| <i>pacct</i>    | The current active process accounting file.                                 |
| <i>pacct?</i>   | Process accounting files switched via <i>turnacct switch</i> .              |

### Files in the */usr/adm/acct/nite* directory

| Filename                | Contents                                                                                                                                                                 |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>active</i>           | Used by <i>runacct</i> to record progress. It contains warning and error messages. <i>activeMMDD</i> is the same as <i>active</i> after <i>runacct</i> detects an error. |
| <i>ctacct.MMDD</i>      | Total accounting records created from connect session accounting.                                                                                                        |
| <i>ctmp</i>             | Output of <i>acctcon1</i> —connect session records.                                                                                                                      |
| <i>daycms</i>           | ASCII daily command summary used by <i>prdaily</i> .                                                                                                                     |
| <i>dayacct</i>          | Total accounting records for current day.                                                                                                                                |
| <i>disktacct</i>        | Total accounting records created by the <i>dodisk</i> command.                                                                                                           |
| <i>fd2log</i>           | Diagnostic output from the execution of <i>runacct</i> (see <i>crontab</i> entry).                                                                                       |
| <i>lastdate</i>         | The last day that <i>runacct</i> was executed, in <i>date +%m%d</i> format. (See <i>date(1)</i> for a description of <i> +%m%d</i> date format.)                         |
| <i>lock &amp; lock1</i> | Used to control serial use of <i>runacct</i> .                                                                                                                           |
| <i>lineuse</i>          | Terminal (tty) line usage report used by <i>prdaily</i> .                                                                                                                |
| <i>log</i>              | Diagnostics output from <i>acctcon1</i> .                                                                                                                                |

|                      |                                                                                  |
|----------------------|----------------------------------------------------------------------------------|
| <i>logMMDD</i>       | Same as <i>log</i> after <i>runacct</i> detects an error.                        |
| <i>reboots</i>       | Contains beginning and ending dates from <i>wtmp</i> , and a listing of reboots. |
| <i>statefile</i>     | Used to record the current run-level being executed by <i>runacct</i> .          |
| <i>tmpwtmp</i>       | <i>wtmp</i> file, corrected by <i>wtmpfix</i> .                                  |
| <i>wtmperror</i>     | Error messages, if any, from <i>wtmpfix</i> .                                    |
| <i>wtmperrorMMDD</i> | Same as <i>wtmperror</i> after <i>runacct</i> detects an error.                  |
| <i>wtmp.MMDD</i>     | The previous day's <i>wtmp</i> file.                                             |

### Files in the `/usr/adm/acct/sum` directory

| Filename          | Contents                                                                                                           |
|-------------------|--------------------------------------------------------------------------------------------------------------------|
| <i>cms</i>        | Total command summary file for current month in internal summary format.                                           |
| <i>cmsprev</i>    | Command summary file without latest update.                                                                        |
| <i>daycms</i>     | Command summary file for previous day in internal summary format.                                                  |
| <i>loginlog</i>   | Shows the last login date for each user.                                                                           |
| <i>pacct.MMDD</i> | Concatenated version of all process accounting files for the date <i>MMDD</i> . This file is removed after reboot. |
| <i>rptMMDD</i>    | Daily accounting report for date <i>MMDD</i> .                                                                     |
| <i>tacct</i>      | Cumulative total accounting file for current month.                                                                |
| <i>tacctprev</i>  | Same as <i>tacct</i> without latest update.                                                                        |
| <i>tacctMMDD</i>  | Total accounting file for date <i>MMDD</i> .                                                                       |
| <i>wtmp.MMDD</i>  | Saved copy of <i>wtmp</i> file for <i>MMDD</i> . Removed after reboot.                                             |

## Files in the `/usr/adm/acct/fiscal` directory

| Filename        | Contents                                                      |
|-----------------|---------------------------------------------------------------|
| <i>cms?</i>     | Total command summary for month ? in internal summary format. |
| <i>fiscrpt?</i> | Report similar to <i>prdaily</i> for the month ?.             |
| <i>tacct?</i>   | Total accounting file for the month ?.                        |

---

# Notes

# Using the FSCK Command

---

## Introduction

The file system consistency check (`/etc/fsck`) corrects inconsistent information in your file system. You must have a thorough understanding of the file system before making any `fsck` decisions. Read “File System Implementation” in Chapter 4 before proceeding.

`fsck` should be performed in the following situations:

- `fsck` will run automatically during bootup if you had an unclean shutdown. This will be the case if you had a system crash or power failure.

The `fsck` will run as the system enters run-level 2. As shipped, your system will do this automatically if it detects an improper shutdown, via the `bcheckrc` entry in `/etc/inittab`. An improper shutdown means you didn't shut down your system using the `shutdown` or `reboot` commands described in “Shutting Down the System” in Chapter 4. `fscklean` is used to detect an improper shutdown.

- You should run `fsck` any time you suspect problems with the HP-UX file system. There is no specific problem you can relate to file system corruption. If your HP-UX system doesn't behave like you think it should, run `fsck`.
- You should run `fsck` occasionally even though `fscklean` (run from `/etc/bcheckrc`) does not indicate the need to do so (particularly if your system exhibits unusual behavior). The backup script has an option to run `fsck -n` after the backup is performed; you should use this option. `fsck -n` reports discrepancies, but does not fix them, so it can be safely run by `cron`.

The remainder of this article explains:

- how the file system is updated
- how the file system can be corrupted
- how corrective actions used by `fsck` can recover a corrupted disk

---

## Updating the HP-UX File System

Every time a file is modified, the HP-UX Operating System performs a series of file system updates. These updates are designed to ensure a consistent file system. The problem occurs when this series of updating tasks is interrupted. Since some of these tasks may have completed, it is important to know their execution order so that good decisions can be made when repairing a corrupted disk.

There are five types of file system updates:

- Super-block
- i-nodes
- file-attribute file
- data blocks (directories and files)
- free map

### Super-Block

The super-block contains:

- an identification of the disk format (HP-UX)
- a flag describing the integrity of the directory structure
- the root directory name
- the volume block size
- the location and size of the boot area
- the location of the file attributes file
- the largest addressable block

The super-block of a mounted file system is written to the file system whenever a **umount** or **sync** command is issued. The root file system is always mounted.

## **I-nodes**

An i-node contains information about:

- the type of i-node (directory, data, or special)
- the name and i-node of it's parent directory
- the list of blocks and extents claimed by the i-node
- the size of the file
- protection, access, user and group affiliation
- date and time stamps

An i-node is written to the file system upon closure of the file associated with the i-node. All in-core blocks are also written to the file system upon execution of a **sync** system call.

## **File Attributes File**

The file attribute file contains information about:

- the i-node for the root directory
- the free map
- an entry for each file on the file system
- file extents

The location of the file attribute file is maintained in the super-block, and is used in conjunction with i-nodes to maintain the location and integrity of the data in your HP-UX system.

## **Data Blocks**

A data block may contain either file or directory entries. Each directory entry consists of a file name and an i-node number.

Data blocks are written to the file system whenever they have been modified and released by the operating system.

## **Free Map Blocks**

The file attribute file contains a map of the file system (the free map), which is used to determine available file space. In the free map, each bit represents a block on the volume. If a bit is set, then it's corresponding block is being used; if not, then that block is free.

Free map blocks are written to the file system whenever they have been modified and released by the operating system.

---

## Corruption of the File System

A file system can become corrupt in a variety of ways. The most common ways are **improper shutdown procedures** and **hardware failures**.

### Improper System Shutdown and Startup

File systems may become corrupt when proper shutdown procedures are not observed:

- not having a quiescent system before stopping the CPU
- forgetting to **sync** the system prior to halting the CPU
- not executing the **shutdown** command when halting the system
- physically write-protecting a mounted file system
- taking a mounted file system off-line

File systems may become further corrupted if proper startup procedures are not observed:

- not checking a file system for inconsistencies
- not repairing inconsistencies

Allowing a corrupted file system to be further modified can be disastrous.

### Hardware Failure

While your Hewlett-Packard Series 500 computer system and disks are highly reliable, it is good to remember that any piece of hardware can fail at any time. This isn't a prediction of gloom, but merely a word of caution to you as the system administrator, to make small steps of precaution. By following the preventative maintenance outlined in your installation guides and in this manual, you should be able to avert any serious problems. Failures can be as subtle as a bad block on a disk pack, or as blatant as a non-functional disk controller.

---

## Detection and Correction of Corruption

A quiescent file system may be checked for structural integrity by executing **fsck**. The **fsck** command checks on the data which is intrinsically redundant in a file system. The redundant data is either read from the file system or computed from known values. A quiescent state is important during the checking of a file system because of the multipass nature of the **fsck** program.

When an inconsistency is discovered, **fsck** reports the inconsistency for the system administrator. The system administrator then must choose a corrective action.

One of the most commonly corrupted items is the super-block. The super-block is prone to corruption because every change to the file system's blocks or i-nodes modifies the super-block.

The super-block and its associated parts are most often corrupted when the computer is halted and the last command involving output to the file system was not a **sync** command.

### File-System Size and I-node-List Size

The file-system size must be larger than the number of blocks used by the super-block and the number of blocks used by the list of i-nodes. The number of i-nodes must be less than 65,535. The file system size and i-node list size are critical pieces of information to the **fsck** program. While there is no way to actually check these sizes, **fsck** can check for them being within reasonable bounds. All other checks of the file system depend on the correctness of these sizes. **fsck** also checks that the last allocated block can be read as a test for possible corruption of the super-block.

The file attribute file and the i-node list can be checked for:

- incorrect link counts
- blocks not accounted for anywhere
- bad i-node format
- files pointing to unallocated i-nodes
- i-node numbers out of range
- multiply linked directories
- link to the parent directory

## Free Map

The free map is part of the **file attribute file** (also known as the file attribute list or FAL), a file which represents all of the inodes on a volume. This map describes all blocks on the volume, including the boot area, super-block, file attribute file, and the rest of the volume. In the FAL, inode 0 (the inode for the FAL) and inode 1 (the inode for the root directory) are first allocated.

Inodes 3 through the end of the free map are allocated to represent all the blocks on the volume. Each block is represented by a single bit in the free map. Since the free map takes up an integral number of inode entries in the FAL, and each inode entry takes 128 bytes (representing  $128 \times 8 = 1024$  logical blocks on a disk), the number of inode entries that the free map will consume will be:

$$\left( \frac{\text{number bytes on disk}}{\text{block size}} - 1 \right) \div (128 \times 8) + 1$$

For example, consider an HP 7935 (a 404 Mbyte disk) which has been initialized with a logical block size of 1024. Using our formula, 386 inode entries in the FAL will be devoted to the free map, so inodes 3 thru 388 will be allocated as the free map on that disk.

**fsck** will check each free map entry for:

- blocks claimed by more than one i-node, or by the free map
- blocks claimed by an i-node or the free list outside the range of the file system

A check is made to see that all the blocks in the file system were found.

---

## Executing the FSCK Command

Only the system administrator should run **fsck**. If this check discovers an inconsistency, corrective action must be taken.

**fsck** should be executed using a **character special device file**, not a block special device file. All file systems except the root and virtual memory file systems should be unmounted. If you shut down the system using **shutdown**, all file systems except root will be unmounted and you will be in run-level s. Refer to “Adding Peripheral Devices” in Chapter 5 for a discussion on block and character devices, and naming conventions for device files.

The syntax for fsck is:

```
/etc/fsck [-y] [-n] [-s] [-d] [-p] [-P] [file_system]
```

where all the arguments are optional. A description of each follows:

*file\_system* The character device file of the volume you wish to check, such as */dev/rdsk/1s0*. Usually you will want to do an **fsck** on all volumes connected to your system. If you do not supply the *file\_system* argument, the fsck command will check all file systems listed in the */etc/checklist* file and marked rw or ro.

default Interactive mode.

The interactive mode allows you to choose whether or not to perform a corrective action.

-p Preening option.

This option fixes many potential problems, but never removes data. When you preen the system, you may be checking some file systems in parallel and are not running interactively. **fsck** will decide what to do, and if it can't deal with a situation, it will terminate. For the inconsistencies the preening option can fix, it will print a message identifying the file system, and the corrective action taken.

Since it was created to be run non-interactively, when it finishes it does not tell you if you need to reboot the system. You must determine that from the return code (refer to **fsck(1M)**).

**-p** The preening option is the option used if **bcheckrc** detects an unclean shutdown during system boot. This option operates the same as the **preen (-p)** option except all file systems which were cleanly unmounted will not be checked. For a discussion on clean file systems refer to the chapter “System Startup and Shutdown”, the section, “HP-UX Starts the Init Process”. Using this option can greatly decrease the amount of time required to reboot a system which was brought down cleanly.

**-y** Yes option.  
Using the **-y** option can be very dangerous. This option causes **fsck** to answer YES to all questions, which might remove data. **Do not use the -y option if you have important data on your file system** unless you have first used the **-n** option and understand the potential damage.

**-n** No option.  
Using the **-n** option causes **fsck** to answer NO to all questions. This will never remove data, so is very safe. You can use the **-n** option any time; multi-user, single-user, or background.

If you use **fsck** with the **-n** option in multi-user mode, you may come up with some inconsistencies due to file system action. However, you will never damage your system.

**-d** When checking the integrity of your file system, you may desire to have more than the cursory phase summaries printed at your console. This is especially true if you are trying to pinpoint where you are having problems. To do this, **fsck** has been written with the **-d** option.

```
/etc/fsck -d /dev/rdisk/0s0
```

**fsck** was designed with five levels of debug information (hence **-d**); you can have additional levels of these messages printed by increasing the number of **-d**'s. Of course since there are five levels of debug information, the most you can do is:

```
/etc/fsck -dddd /dev/rdisk/0s0
```

Some caution should be used when specifying the debug option—using more than two **-d**'s will produce copious output (probably more than you would want to wade through, unless you are really serious about reading it). In the discussion which follows, we'll be walking through an **fsck** on an example system, with two levels of debug information.

**-s** This option reconstructs the free map. In the first pass of executing **fsck** you may find a conflict between the free map and a file. As an example, the file system may think a block on the volume is free, but you know that your mother-in-law's mailing list really resides there. Since you don't want to lose this data, you need some way to tell the system that a file really is using this block.

To do this, use the **-s** argument to unconditionally reconstruct the free map:

```
/etc/fsck -s /dev/rdisk/0s0
```

When **fsck** executes, it will calculate what blocks are **really** free and then build a new free map in memory. When this is done, the program will overwrite the old free map (which resides in the file-attribute file).

If **-s** is used to correct a problem on a virtual memory device (which will be the case if you only have one disk on your system), there is a high probability that the final step in **fsck** will fail and you will be forced to re-boot. Should this occur, an appropriate error message will be printed. No damage should occur.

**In any situation in which you use the -s option**, once complete you should always execute **fsck** again to certify that your system is clean.

You should always run the **shutdown** command before executing **fsck**. **shutdown** will put your system into run-level **s** (the system administrative run-level). Running **fsck** when there is file system activity may cause loss of data. For more information on shutting down your Series 500, see the "Shutting Down Your System" section of Chapter 4.

A directory with the name **/lost+found** must exist on the file system being examined **before fsck** is run. **/lost+found** should have been created on your root volume when you installed HP-UX on your system. The **fsck** command uses this directory for any problem files that it finds. After you run **fsck**, examine the files placed in **/lost+found** and move them to where they belong or remove them. You should clear the **/lost+found** directory before you execute **fsck** again.

To place these files, follow this procedure:

1. Change to the `lost+found` directory for the file system. For example, `cd /lost+found` for the root file system.
2. Find out what type of file it is (executable, text, etc), and who owns the file, by typing:

```
file *
ll *
```

If the file is text, see what's in it by typing:

```
more filename
```

3. If the file is executable, then:
  - a. If the file has an SCCS ID string, the `what` command will list it.
  - b. If the file does not have an SCCS ID string, use the `strings` command to print the literal strings from the file. The strings (for example, error message strings) may help identify the owner.
4. From this information, determine where the file belongs, or who it belongs to, and move the file to the correct directory.

## A Walk Through

To best illustrate the use of the `fsck` command, let's walk through a file system integrity check on a common configuration. This `fsck` was done on a Model 540 (pod mount) system with one HP 7914 disk drive. Since our example system has only one disk, we know that:

- the HP 7914 will be the root file system,
- the root file system will be mounted,
- and this disk will also be the virtual memory device.

Normally you would want to run `fsck` on an unmounted file system, but since we are using the only disk, this is impossible. Because of this, `fsck` will print some warning messages—don't worry about them.

```
/etc/fsck -dd /dev/rdisk/0s0
```

```
Checking /dev/rdisk/0s0
```

```
WARNING: This device is the root device.
```

```
WARNING: This device is used by virtual memory.
```

These messages are normal on most systems, since the root and virtual memory volumes will be the device in `/etc/checklist`. If you are not in a quiescent state, you may get a warning similar to:

```
WARNING: 22 superfluous processes are running.
For accurate diagnostics, only init, a shell, and fsck should be running.
```

```
Quit? yes
```

You do not want to run an `fsck` while in this state, so type `yes` in response to `Quit?` The program will terminate.

### Volume Header Information

As the first step of the file system integrity checking process, a summary of volume header (super-block) information will be printed:

```
Volume Header:
 format = 0x700
 corrupt = 0
 block size = 1024
 max block = 129023
 FA file starts at block 69087
```

For more information on the meaning of this information, see the *fs(5)* entry in the *HP-UX Reference* manual.

### Phase 1: Checking Directories

After printing the volume header information, `fsck` next creates a list of all extents (groups of contiguous disk blocks), that the system believes are claimed by a file or that are free (as identified by the free map). Each entry in the list consists of the starting address of an extent and the size of the extent.

During this phase of its execution, `fsck` also traverses all directories in the file system, creating a map of all i-nodes pointed to by directory entries (a map of all i-nodes in the file system). Since we are printing two levels of debug information, we will also see which directory is currently being searched:

```

**Checking Directories.
 Finding inodes.
 Traversing directories.
 Processing directory /users/hpux/marka/BASIC/CH11
 Processing directory /users/hpux/clarke
 Processing directory /users/hpux/michael
 :
 Processing directory /users/hpux/michael/man1m
 Processing directory /users/hpux/marc
 :
 Processing directory /image/demo/LIBRARY
 Processing directory /image/docs
 Building extent tree.

```

As you can see, printing all directories on the system produces copious output; in our example, `fsck` produced 12 pages of `Processing directory` messages (our example is a 22 user system). Following all these messages are some summary statistics.

```

Free map built. Number of free blocks = 19255. Last block = 129023.
Max tree depth = 133
Number of nodes in tree = 15522

```

Don't be alarmed if an `fsck` on your system results in values different from these (even if you have an HP 7914 connected to a Model 540); how a system is used, how big it's boot area is and other factors affect `fsck` results more than the actual hardware. What you should be concerned about are results which totally conflict with anything you've seen in the past.

## Phase 2: Checking Blocks

Once phase 1 (checking directories) is completed, phase 2 begins in which `fsck` begins looking for inconsistencies. It examines the list of extents built previously in phase 1. The list identifies all disk allocations. In a consistent file system, this list includes every block on the disk. Any extents not claimed by either a file or the free map are reported at the end of this process along with the total number of unclaimed blocks in the file system.

## **\*\*Checking Blocks.**

Number of tree nodes checked: 15522

Number of unclaimed blocks: 23.

**MULTIPLE FILES CLAIM THE SAME SPACE ON THIS DISC!!**

Multiply claimed extents:

82344 to 82503, claimed by inodes 2220 and 9340

Unclaimed extents:

54896 to 54907

101595 to 101605

Similarly, any extents claimed by more than one i-node are reported at this time. The system issues a report as shown above, where **82344 to 82503** identifies the disk blocks in the extent claimed by inodes **2220 and 9340**. When an i-node value equals -1, it specifies that the free map is one of the i-nodes claiming the extent. If one of the i-node values reported is the free map, re-running **fsck** with the **-s** option corrects the situation by re-building the free map. However, if neither i-node is the free map, then two valid files claim the same extent. In this instance you should examine the file associated with each i-node and remove one of the files (usually the oldest file is removed). To find the name of each file associated with each i-node, enter the following commands:

```
/bin/find / -inum 2220 -print
/bin/find / -inum 9340 -print
```

Once you know the name of each file claiming a common extent, you can examine each file and remove the file(s) that are improperly claiming the extent. When one of the files is removed, its claim on the extent is transferred to the free map. Then, when **fsck** is re-run with the **-s** option, the situation is corrected. **fsck** with the **-s** option must be run immediately after removing the file to prevent the operating system from reallocating its space to yet another file. A consistent file system contains no multiply-claimed extents.

## **Phase 3: Checking the File Attribute File**

In the next phase, **fsck** attempts to locate orphaned files. First, the list of i-nodes created in step 1 above is examined. Any i-node not included in the list is examined to identify the disk space it claims. An i-node can claim space and yet not be recognized as a file if the i-node exists but has no links from a directory. If the space claimed by the i-node is part of the unclaimed blocks list, the file is termed an “orphan” (how terrible). An orphan is an i-node that represents a valid file but has no link from a directory.

## **\*\*Checking the File Attribute File**

The system next examines the size of the orphaned file (i-node). If the size is 0, the system asks if it may clear the i-node and restore its extents to the free map. An affirmative reply corrects the inconsistency while a negative reply causes no action and leaves the file system corrupt. If the size of the orphan is non-zero, the system asks if it should attempt to restore the file. An affirmative response causes the orphan's i-node to be linked to the **lost+found** directory located at the root level of the volume you are checking. If you are checking the root file system, this directory is called **/lost+found** and is shipped with your HP-UX system. If you are checking an unmounted file system volume, then the **lost+found** directory is located at that file system's root level. For example, assuming that you have a file system called **"/database"**, the directories full pathname is **"/database/lost+found"**.

---

### **Note**

If you initialize and mount an independent file system volume to the file system root, you must create the **lost+found** directory for it. Once this directory is created, unmount the volume before using **fsck**. You cannot execute **fsck** on it unless the **lost+found** directory already exists.

---

## **Phase 4: Checking Extent Maps**

I-nodes are not the only aspects of the file system that can be "orphaned", and the first thing phase 4 does is to check for orphaned extent maps. When an i-node claims more than four extents, it must use one or more extent maps to identify the additional extents. Occasionally, when a file becomes corrupt, the i-node may be cleared but the extent map(s) claimed by the i-node is not cleared. When this happens, an orphaned extent map is created.

### **\*\*Checking Extent Maps.**

If the orphaned extent map claims blocks listed in the unclaimed block list (created in phase 1), and if all orphaned files have been restored, the system asks if you wish to add the blocks claimed by the orphaned extent map to the free map. An affirmative response causes the claimed blocks to be added to the free map. A negative response causes no action; the file system remains corrupt.

## Phase 5: Checking Link Counts

The system begins verifying the number of links to each i-node in phase 5. Each i-node keeps track of the number of directory entries linked to it. Additionally, as **fsck** executes, it creates a separate list with which to cross check the i-node link count. If the link counts disagree, the system displays the messages:

```
**Checking Link Counts.

Wrong link count for inode 3042.
It's currently 4 but should be 1.
Shall I fix it? yes
```

where 4 is the link count maintained by the i-node and 1 is the link count created by **fsck**. An affirmative response to the prompt resets the i-node link count such that it agrees with the count maintained by **fsck**. A negative response prohibits corrective action from taking place; the file system remains corrupt.

## Phase 6: Checking The Free Map

If, during any of the previous steps, you have failed to take a suggested corrective action (and thus leaving the file system corrupt), the following message is displayed and the checks described in this step are not performed:

```
**Unable To Check Free Map.
```

This message specifies that the file system still has some uncorrected problems. If the file system is consistent and no further corrections are needed, the following message is displayed and the checks described in this step are not performed:

```
**No Need To Check Free Map.
There are no unclaimed blocks.
```

This is an informational message stating that nothing is wrong. If all of the corrective actions specified by **fsck** have been taken, and if the free map is not known to be current, **fsck** displays:

```
**Checking The Free Map.
Shall I return lost blocks to the free map? yes
```

Next, the current state of the file system is compared to the disk's free map. If the system finds an inconsistency between the two, a message is displayed specifying that the free map is out of date. You are then asked if you wish to update it (the free map). An affirmative response causes the system to re-build the free map such that it is consistent with the current state of the file system. A negative response causes no corrective action to be taken; the file system remains corrupt.

## Phase 7: Updating Kernel Data Structures

Finally, the system updates the internal information it keeps about the file system root or virtual memory volume, as indicated by the display:

```
**Updating kernel data structures.
```

If this update fails (the update will always fail when checking an unmounted volume), the system displays the message:

```
Kernel failed to update its data structures for /dev/rdisk/1s0
```

If, as in our example system, the volume being checked is the file system root or the virtual memory device, you should re-boot the system at this time. You will get a message similar to this:

```
Kernel reclaimed 23 blocks for existing virtual objects.
```

Do not be alarmed! This is normal for an `fsck` of the root and virtual memory volume. If the update succeeds (or the volume being checked is not mounted), `fsck` next reports:

```
/dev/rdisk/0s0 statistics:
total number of files: 9376
total number of blocks: 129024
number of user blocks: 106654
number of free blocks: 19278
percent of disc unused: 14
```

If the file system has not been fully repaired, the following message is displayed:

```
THIS FILE SYSTEM IS NOT COMPLETELY RESTORED.
```

**You should fully repair the system before allowing access to it.** However, some errors in the file system are more dangerous than others. Unless the file system contains multiply-claimed extents, you can probably use the file system without further corrupting the system. If the file system contains multiply-claimed extents, you must correct the situation (by re-running `fsck`).

---

### Note

You should always be able to successfully execute **fsck** without errors before you restore your Series 500 system to normal use.

---

Occasionally, a file system is too corrupt to be repaired by **fsck**. In this instance, you must initialize the media and then restore the file system from its last backup. If the HP-UX file system is too corrupt to be repaired, you may have to re-install the system and then restore the file system from your last backup. In the event that you do not have the current installation tapes, you should consult your Sales Office for assistance.

### FSCK and Virtual Memory

One of the devices that **fsck** can be called upon to check is the virtual memory device (as in our example). Unfortunately, **fsck** requires a great deal of memory for its own use and this means that the file system is often not quiescent when checking the virtual memory device. However, consider the following points:

- **fsck** reads the free map fairly early in the checking sequence before it gets the space to keep track of file system extents. This means that **fsck** thinks that any existing virtual memory extents are unclaimed (and treats them as such). A number of these extents may be associated with **fsck**'s encompassing shell, existing processes, and what little memory **fsck** has already gotten.
- As **fsck** grabs more memory, it is not reflected in its internal copy of the free map.
- When **fsck** rebuilds the free map, all virtual memory extents are marked as "free". Although this is a potentially dangerous situation, **fsck** immediately notifies the operating system, which restores the true status of the virtual memory extents in the free map.

Thus, under normal circumstances, it should be safe to run **fsck** on any virtual memory volume. However, if there is any other virtual memory activity occurring on the volume, especially while the operating system is updating its virtual memory data structures, the volume could be corrupted or destroyed.

# System Loader Messages

---

## Introduction

The **system loader** is a program which permanently resides in the computer and causes the computer to search for and load an operating system. If the computer is unable to locate and load the TEST System, (or any operating system), a message is displayed. Each of these messages is explained below. Possible causes for many of the messages are provided. If the message begins with **ERROR:**, the system halts after issuing the message. If the message begins with **NOTE:**, the message provides information and the computer continues operating.

If the message you receive indicates a hardware failure, run the Module Self Test or, if present, the System Integrity Test before calling your HP Customer Engineer for service.

Often, the computer attempts to identify the device to which it was “talking” when the message was generated. The trailer **SELECT CODE NN** is appended to the message to indicate which select code (I/O port) of the computer caused the message. Select codes 0 through 7 are on the computer and are controlled by the first **I/O processor** (IOP). Select codes 8 through 15 are on the first I/O expander and are controlled by the second IOP. Select codes 16 through 23 are on the second I/O expander and are controlled by the third IOP (only 2 IOP’s can be used with the Model 550).

How the select codes 0 through 7 are associated with the slots in your computer’s I/O card cage depends on what model you have:

- The Model 520 has four I/O slots available which are associated with select codes 2 through 5, the top one being select code 2. Select codes 0, 1, 6, and 7 refer to the internal peripherals.
- The Models 530 and 540 have 7 I/O slots available which are associated with select codes 0 through 6, the top one being select code 0. Select code 7 refers to the internal SCM board.
- The Model 550 has 7 I/O slots available which are associated with select codes 0 through 6, as well as an internal HP-IB card. If the internal HP-IB is used, it is counted as select code 5 by default and you only have 6 available slots left (however, the HP-IB can be set to be on select codes 0 thru 6). Select code 7 refers to the internal SCM board (the internal physical printed circuit board actually contains both the HP-IB and SCM functions).

On an I/O expander, the upper left slot, when viewed from the rear, is always the lowest number select code on that I/O expander.

As an example, suppose the message:

```
NOTE: BAD CARD OR DEVICE: SELECT CODE 18
```

is printed. This indicates that the failure is associated with select code 18, which is the third slot on the second I/O expander. In this case, either the I/O card in that slot has failed its self-test or if it is an HP-IB card connecting a mass storage device, the mass storage device failed its self-test.

---

## Messages

**Loader XXX**—informational message identifying the revision of the system loader. This message is usually followed by a single line message identifying the operating system the computer is attempting to load.

**Testing Memory ...**—informational message that follows the **Loader XXX** message indicating that the loader is performing memory tests and configuring memory. This can take up to 15 seconds.

**Looking for System ...**—informational message that follows the **Testing Memory ...** message indicating that the loader is searching for an operating system.

**Please mount next volume.** informational message. The loader is ready to load another portion of the operating system. Mount the volume containing an un-loaded portion of the operating system. Volumes may be mounted in any order without affecting the loading process.

**SYSTEM NOT FOUND; WILL RETRY IN XXX**—unable to find an operating system on any mass storage device. The loader will attempt to find an operating system again in **XXX** seconds. Possible causes: mass storage device not powered up, no media in mass storage device, wrong disk in disk drive, computer or mass storage device hardware failure, media failure, incompatible loader/system revision numbers, etc.

**BAD SYSTEM FILE: SELECT CODE NN**—operating system loaded; however, an error has been detected in the operating system code during loading. Possible causes: corrupt system, media failure, mass storage hardware failure or computer hardware failure.

**NOT ENOUGH USABLE MEMORY; TOTAL IS XXXX** The amount of usable memory is too small to load the operating system. The total amount of good memory is: **XXXX** bytes. The amount of memory available for the operating system is **XXXX-98 304** bytes. Possible causes: corrupt system or hardware (memory) failure.

**BAD CARD OR DEVICE: SELECT CODE NN**—informational message. A hardware failure has been detected (interface card or mass storage device did not pass Module Self-Test). The loader continues searching for an operating system.

**MEDIA/DEVICE NOT READY: SELECT CODE NN**—while loading, the media (volume) was removed from the device (e.g. a floppy disk was pulled out of a disk drive), the device went offline, or a hardware problem caused the device to become otherwise “not ready”.

**UNRECOVERABLE DATA: SELECT CODE NN**—part of the operating system is not readable. Possible causes: media failure or mass storage hardware failure.

**END OF VOLUME: SELECT CODE NN** attempt to address or read past the end of a volume. Possible causes: corrupt system, media failure or mass storage device hardware failure.

**CTRLR/UNIT FAULT: SELECT CODE NN**—hardware passed initial self-test: however, it failed while being used to load the operating system. Possible causes: computer (interface card) hardware failure or mass storage device hardware failure.

**IO TIMEOUT: SELECT CODE NN**—mass storage device failed to respond fast enough while attempting to load from it. Possible causes: computer hardware failure or mass storage device hardware failure.

**CS80 DEVICE: SELECT CODE NN**—indicates a mass storage device hardware failure.

**TAPE DEVICE: SELECT CODE NN**—usually indicates a tape device (HP 7970, HP 7974, HP7978) hardware failure. Can also indicate a failure on the HP 27110A HP-IB Interface. Tape errors covered are: “Command Rejected”, “Interface Busy”, “Rewinding”, “Tape Run-Away”, “Data Timing Error”, and “Command Parity Error”.

**HPIB CARD: SELECT CODE NN**—transaction to the indicated HPIB interface card was terminated due to a probable interface card failure.

**KBD/SCM NOT FOUND**—indicates a computer hardware failure (keyboard) on a Model 520 Computer; computer hardware failure (system control module) on a Model 530, 540 or 550 Computer.

**BAD IO BUS:** **SELECT CODE NN**—indicates a computer hardware failure on the computer's first I/O Processor.

**BAD NVM:** **SELECT CODE NN**—indicates that NVM (Non-volatile Memory) failed self-test. Possible cause: computer hardware error.

**BAD RTC:** **SELECT CODE NN**—indicates that the computer's built-in real time clock is not functioning.

**BAD SP:** **SELECT CODE NN**—indicates that the Model 530/540 Computer's service processor failed self-test.

# Glossary

---

The following terms and definitions are defined as they apply to the Series 500 HP-UX operating system.

## **address**

In the context of peripheral devices, a set of values which specify the location of an I/O device to the computer. The address is composed of up to four elements: select code, bus address, unit number and volume number. You can read about addresses in the *Peripheral Installation Guide* and in “Adding/Moving Peripherals” in Chapter 5 of this manual.

## **Asynchronous Interface (ASI)**

With the exception of an ITE as found on a Model 520 or on a Model 550 with the HP 98700 display device, every terminal on your system must communicate with the host via either an ASI or MUX card. The ASI and MUX cards communicate in an RS-232C compatible protocol, and support the standard 25 pin connector.

## **block**

The fundamental unit of information Series 500 HP-UX uses for access and storage allocation on a mass storage medium (such as a CS/80 disc). A block is usually 1024 bytes.

## **block mode**

Buffered I/O: data is transferred one block at a time. Block size for buffered I/O is not the same as block size on the file system. Block size for block mode is defined as `BLKDEV_IOSIZE` in `/usr/include/sys/param.h`.

## **boot or boot-up**

The process of loading, initializing and running an operating system.

## **boot area**

Each Structured Directory Format (SDF) volume has one boot area consisting of zero or more contiguous logical blocks. This area contains the kernel, device drivers and some optional products if installed, and is read into the memory of your Series 500 computer by the boot ROM upon power up. The boot area is completely outside the file area, and cannot be used for data storage. Its size is determined when the volume is initialized. To change the size of a boot area you must re-initialize the volume.

**boot ROM**

A program residing in ROM (Read Only Memory) that executes each time the computer is powered-up. The function of the boot ROM is to run tests on the computer's hardware, find all devices accessible through the computer and then load either a specified operating system or the first operating system found according to a specific search algorithm. The bootstrap program uses the boot ROM's mass storage drivers to load and pass control to the kernel. When the kernel gains control, it completes the job of bringing up the HP-UX operating system. Details of the boot ROM's search algorithm are given in chapter 4 ("System Boot and Login").

Depending on your boot ROM version, the boot ROM displays may differ slightly from those shown in this manual; any differences between boot ROM versions are noted in this manual when the topic in question is discussed. The boot ROM identifies its version when power is applied to the computer.

**bus address**

Part of an address used for devices, especially devices on an HP-IB (HP Interface Bus); a number determined by the switch setting on a peripheral which allows the computer to distinguish between two devices connected to the same interface. A bus address is sometimes called a "device address", and no two devices on the same HP-IB can have the same bus address.

**connect session**

This denotes the period of time in which a user is connected to the system. It starts when the user logs in and finishes when the user logs out.

**cron**

This process wakes up every minute to execute commands at specified dates and times, according to instructions in files contained in the directory */usr/spool/cron/crontabs*. See the *cron(1M)* and *crontab(1)* entries in the *HP-UX Reference* for more details.

**CS/80**

A family of mass storage devices that communicate with a computer via the CS/80 (Command Set '80) or SS/80 (Sub Set '80) command set. A list of CS/80 and SS/80 devices supported on HP-UX can be found in the *HP 9000 Series 500 Configuration Information and Order Guide* supplied with your system.

**destination device**

The mass storage device on which HP-UX is to be installed. The destination device must be a CS/80 device other than the HP 9000 Model 520's built-in flexible disc drive or its built-in Winchester disc drive. The built-in cartridge tape drive of a CS/80 device should not be used as a destination device when installing the system.

**driver number**

A pointer to the part of the kernel needed to use the device. The driver number, for a particular device, can be found in the tables in “Adding/Moving Peripheral Devices” in the “Toolbox” chapter.

**disc**

The term used for a collection of recording platters contained in a single disc drive. Disc is synonymous with disc pack.

**/etc/rc**

This is the system initialization shell script. The actions that it performs depend on the state in which it is invoked. To automatically start System Accounting whenever the system is switched to multi-user mode, a command must be added to *rc*. See the chapter “System Boot and Login” in this manual, and *rc(8)* in the *HP-UX Reference* for more details on the use of *rc*.

**/etc/shutdown**

A shell script that has the primary function of terminating all currently running processes in an orderly and cautious manner. See *shutdown(8)* for details on this shell.

**file**

A discrete collection of information described by an inode and residing on a mass storage medium.

**fileset**

A collection of related files on an installation or an update tape.

**file types**

Several file types are recognized by HP-UX. The file type is established at the time of the file's creation. The types are:

- Regular files - Contains a stream of bytes. Characters can be either ASCII or non-ASCII. This is generally the type of file a user considers to be a file: object code, text files, nroff files, etc.

- Directory - HP-UX treats directories like regular files, with the exception that writing directly to directories is not allowed. Directories contain information about other files.
- Block special files - Device files that buffer the I/O. Reads and writes to block devices are done in block mode.
- Character special files - Device files that do not buffer the I/O. Reads and writes to character devices are in raw mode.
- Network special files - contain the address of another system.
- Pipes - A temporary file used with command pipelines. When you use a pipeline, HP-UX creates a temporary buffer to store information between the two commands. This buffer is a file, and is called a pipe.
- FIFO - A named pipe. A FIFO (First In/First Out) has a directory entry and allows processes to send data back and forth.

### **file system**

The organization of files and directories, associated with a block special file, on a hard disc. The SDF file system is an implementation of the HP-UX directory structure.

### **HP-UX directory structure**

The hierarchical grouping of directories and files on HP-UX.

### **HP 88140 cartridge tape drive**

The built-in cartridge tape drive of a CS/80 or SS/80 disc drive.

### **inode**

A data structure containing information about a file such as file type, pointers to data, owner, group, and protection information.

### **Internal Terminal Emulator (ITE)**

The “device driver” code contained in the HP-UX kernel and associated with the built-in keyboard and display on the Series 500 Model 520, or with the HP 98700 display device configuration on the Model 550.

**Kbyte or kilobyte**

1024 bytes.

**kernel**

The core of the HP-UX operating system. The kernel is the compiled code responsible for managing the computer's resources; it performs such functions as allocating memory and scheduling programs for execution. The kernel resides in RAM (Random Access Memory) whenever HP-UX is running.

**LIF**

Logical Interchange Format. LIF is Hewlett-Packard's standard file format, used for transferring files between Hewlett-Packard systems. Since LIF is a standard, files with LIF format can easily be transferred between different Hewlett-Packard computers (see the *LIF(5)* entries in the *HP-UX Reference*).

**login**

The process of a user gaining access to HP-UX. This process consists of entering a valid user name and its associated password (if one exists).

**major number**

Same as driver number.

**Mbyte or megabyte**

1 048 576 bytes.

**minor number**

A hexadecimal number made up of a select code, bus address, unit number, and volume number of the device.

**multi-user state**

A state of HP-UX when terminals in addition to the system console allow communication between the system and its users. The multi-user state (not to be confused with a multi-user system) is usually state 2.

**MUX**

An interface card which communicates via the backplane to the I/O processor of your Series 500. MUX is an abbreviation for Asynchronous Multiplexer. There are two flavors of MUX cards available for the Series 500: the HP 27130A 8-channel MUX card, and the HP 27140A 6-channel modem MUX which supports modem protocol. Each channel is an RS-232C port which is normally associated with a */dev/ttyXX* file.

**path name**

A series of directory names separated by / characters, and ending in a directory name or a file name.

**process**

A process is the environment in which a program (or command) executes. It includes the program's code, data, status of open files, value of variables, and the directory in which the process resides. For example, whenever you execute an HP-UX command, you are creating a process; whenever you log in, you create a process. For additional information on processes, read the chapter "Concepts."

**raw mode**

Unbuffered I/O. Data is transferred directly between the device and the user program requesting the I/O, rather than going through the file system buffer cache.

**root**

Root refers to the highest level directory (root directory or /). Root also refers to the superuser login.

**root volume**

The mass storage volume upon which the root (i.e. /) directory resides. A disc may be marked as the root volume but not have a boot area. See the description of the boot ROM's search algorithm in chapter 4 ("System Boot and Login").

**select code**

Part of an address used for devices; a number determined by which slot in the I/O bus a particular interface card is inserted. Each interface card is in turn connected to a peripheral. Multiple peripherals connected to the same interface card share the same select code.

**shell**

A program that interfaces between the user and the operating system. HP-supported shells are:

```
/bin/sh
/bin/csh
/bin/rsh
```

**single-user state**

A state of HP-UX when the system console provides the only communication mechanism between the system and its users.

**source device**

The mass storage device from which HP-UX is installed. The source device must be a CS/80 cartridge tape drive.

**special file**

Often called a device file, this is a file associated with an I/O device. Special files are read and written just like ordinary files, but requests to read or write result in activation of the associated device. These files normally reside in the */dev* directory.

**superblock**

A data structure containing global information about the file system.

**system console**

A keyboard and display (or terminal) given a unique status by HP-UX and associated with the special device file */dev/console*. All boot ROM error messages (messages sent prior to loading HP-UX), HP-UX system error messages, and certain system status messages are sent to the system console. Under certain conditions (for example, the single-user state), the system console provides the only mechanism for communicating with HP-UX.

**unit number**

Part of an address used for devices; a number whose meaning is software- and device-dependent but which is often used to specify a particular disc drive in a device with a multi-drive controller. When referring to single-controller integrated disc/tape or disc/flexible disc drive, a unit is used to distinguish between disc and cartridge tape drives or hard disc and flexible disc drive.

The unit number also selects a single partition on the 913x series.

**volume number**

Part of an address used for devices; a number whose meaning is software- and device-dependent but which is often used to specify a particular volume on a multi-volume disc drive. The volume number is also used to inform the device driver of special handling semantics (such as printer drivers skipping over perforations).

---

## Notes

# Subject Index

---

## a

|                                                |              |
|------------------------------------------------|--------------|
| absolute address space .....                   | 69, 70, 71   |
| adding kernel segments .....                   | 217          |
| adding peripheral devices .....                | 113          |
| adding users .....                             | 34, 147, 149 |
| address .....                                  | 86           |
| advisory lock .....                            | 59           |
| allocating memory .....                        | 69           |
| application program execution from login ..... | 102          |
| archive backup .....                           | 156, 157     |
| ASI card settings .....                        | 16           |
| autoboot .....                                 | 105          |
| autochanger cartridge tape drive .....         | 161          |

## b

|                                   |                   |
|-----------------------------------|-------------------|
| backing up the system:            |                   |
| archive backup .....              | 156, 157          |
| automatic backups .....           | 168               |
| backing up selected files .....   | 163, 164          |
| backup device file .....          | 161               |
| description .....                 | 156               |
| error message .....               | 162               |
| file restoration .....            | 164, 166, 167     |
| incremental backup .....          | 157               |
| media .....                       | 158               |
| scripts .....                     | 156               |
| system clock considerations ..... | 168               |
| times .....                       | 158, 160          |
| using cron .....                  | 168               |
| backup script .....               | 156               |
| backup system .....               | 107               |
| baud rate .....                   | 98, 130           |
| bcheckrc .....                    | 341, 349          |
| bits per inch (bpi) .....         | 62                |
| block device .....                | 85, 115, 116, 138 |

|                                   |                   |
|-----------------------------------|-------------------|
| block size .....                  | 207               |
| blocking factor .....             | 21                |
| boot area .....                   | 21, 194, 208, 219 |
| boot ROM:                         |                   |
| autoboot .....                    | 105               |
| general description .....         | 92                |
| loading HP-UX .....               | 94                |
| search sequence .....             | 13, 95            |
| booting the recovery system ..... | 195, 198          |
| bootup:                           |                   |
| errors .....                      | 95                |
| problems .....                    | 105, 109, 194     |
| booting the system .....          | 91, 92            |
| <b>fsck</b> .....                 | 94, 105, 341      |
| problems .....                    | 167, 199          |
| buffer area .....                 | 71                |
| buffer cache .....                | 83, 185           |
| bus address .....                 | 15, 86, 95, 115   |

## C

|                                       |                    |
|---------------------------------------|--------------------|
| cache buffer size configuration ..... | 185, 208           |
| cartridge tape:                       |                    |
| autochanger .....                     | 161                |
| for backups .....                     | 158                |
| setting up .....                      | 134                |
| changing a password .....             | 170                |
| changing access permissions .....     | 54                 |
| changing run-levels .....             | 98, 108            |
| character device file .....           | 85, 115, 116, 138  |
| charging fees .....                   | 275                |
| child process .....                   | 41                 |
| clean byte .....                      | 97, 221, 341       |
| code segment .....                    | 72                 |
| communication protocol .....          | 86, 100            |
| compatibility, files .....            | 53, 54             |
| configuring:                          |                    |
| terminals .....                       | 16, 128            |
| the operating system .....            | 100, 185, 188, 189 |
| connect session accounting .....      | 270, 273, 286      |
| continuous process .....              | 100                |
| conventions .....                     | 3, 4               |

|                                        |                    |
|----------------------------------------|--------------------|
| corrupted file system .....            | 345                |
| crash .....                            | 109, 156, 341, 345 |
| creating a LIF volume .....            | 210                |
| creating a login directory .....       | 150                |
| creating a recovery system .....       | 194, 196           |
| critical system files .....            | 200                |
| <b>cron</b> .....                      | 168, 176           |
| <b>.cshrc</b> .....                    | 177, 179           |
| customization .....                    | 100                |
| customization, environment files ..... | 98                 |
| cyclic redundancy check .....          | 62                 |

## d

|                                        |          |
|----------------------------------------|----------|
| daily archival .....                   | 156      |
| data block .....                       | 342, 344 |
| data loss .....                        | 156      |
| data safe .....                        | 156      |
| datacomm parameters .....              | 129      |
| date, setting .....                    | 32, 182  |
| default configuration parameters ..... | 189      |
| demand load .....                      | 78       |
| device class major numbers .....       | 122      |
| device classes .....                   | 85       |
| device files:                          |          |
| general .....                          | 113, 116 |
| block .....                            | 154      |
| creating .....                         | 117      |
| digitizers .....                       | 145      |
| magnetic tape drive .....              | 138      |
| mass storage media .....               | 134      |
| miscellaneous devices .....            | 124      |
| modems .....                           | 126      |
| naming conventions .....               | 146, 228 |
| plotters .....                         | 145      |
| ports .....                            | 126      |
| printers .....                         | 141      |
| pseudo terminals .....                 | 133      |
| recovery system .....                  | 199, 200 |
| system console .....                   | 132      |
| digitizers, setting up .....           | 145      |
| directory protection .....             | 56       |

|                                                     |               |
|-----------------------------------------------------|---------------|
| directory structure .....                           | 278, 279      |
| dirty pages .....                                   | 80            |
| disk crash .....                                    | 109           |
| disk organization .....                             | 47            |
| disk (see also mounting, unmounting, file systems): |               |
| removing from the system .....                      | 155           |
| setting up .....                                    | 134           |
| disk usage .....                                    | 190, 273, 281 |
| display memory size configuration .....             | 186           |
| drivers .....                                       | 86            |
| dynamic region .....                                | 71            |

## e

|                           |                  |
|---------------------------|------------------|
| effective group ID .....  | 45, 56           |
| effective user ID .....   | 45, 56           |
| end of tape (EOT) .....   | 62               |
| enforcement mode .....    | 59               |
| environment .....         | 41               |
| environment file:         |                  |
| .cshrc .....              | 177, 179         |
| /etc/btmp .....           | 178              |
| /etc/csh.login .....      | 103, 182         |
| /etc/group .....          | 177              |
| /etc/motd .....           | 177              |
| /etc/passwd .....         | 147, 177         |
| /etc/profile .....        | 103, 177, 182    |
| /etc/rc .....             | 98, 176, 182     |
| /etc/utmp .....           | 178              |
| /etc/wtmp .....           | 178              |
| .exrc .....               | 180              |
| local .....               | 177, 179         |
| .login .....              | 177, 179         |
| .profile .....            | 177, 179         |
| /etc/checklist .....      | 98, 180          |
| /etc/inittab .....        | 97, 99, 176, 341 |
| /etc/issue .....          | 182              |
| /etc/securetty .....      | 179              |
| /etc/ttytype .....        | 183              |
| general information ..... | 176              |
| /usr/lib/terminfo .....   | 180              |

|                       |                        |
|-----------------------|------------------------|
| environment variable: |                        |
| TZ                    | 178                    |
| EXINIT                | 179                    |
| HOME                  | 179                    |
| PATH                  | 98, 103, 178, 179, 268 |
| PS1                   | 179                    |
| PS2                   | 179                    |
| TERM                  | 103                    |
| TZ                    | 98, 103, 182           |
| erase character       | 132                    |
| /etc/bckcheckrc       | 97                     |
| /etc/btmp             | 178                    |
| /etc/checklist        | 98, 154, 180           |
| /etc/cron             | 98                     |
| /etc/csh.login        | 182                    |
| /etc/fsck             | 341                    |
| /etc/group            | 177                    |
| /etc/init             | 94, 97                 |
| /etc/inittab          | 94, 97, 99, 176, 341   |
| /etc/issue            | 182                    |
| /etc/mnttab           | 98                     |
| /etc/motd             | 177                    |
| /etc/passwd           | 102, 177, 282          |
| /etc/profile          | 177, 182               |
| /etc/rc               | 98, 176, 182, 266      |
| /etc/securetty        | 179                    |
| /etc/shutdown         | 266                    |
| /etc/ttytype          | 183                    |
| /etc/utmp             | 178                    |
| /etc/wtmp             | 178                    |
| evaluating user needs | 9                      |
| exec                  | 42                     |
| execute permission    | 54, 56                 |
| .exec                 | 180                    |
| extents               | 49, 352                |
| external data segment | 73                     |

## f

|                                           |                                  |
|-------------------------------------------|----------------------------------|
| file attribute file .....                 | 342, 343, 354                    |
| file system:                              |                                  |
| backup .....                              | 99, 108, 156                     |
| buffer cache .....                        | 83                               |
| checking (fsck) .....                     | 94, 105, 341                     |
| clean byte .....                          | 97                               |
| corruption .....                          | 345                              |
| crash .....                               | 109                              |
| creation .....                            | 191                              |
| data integrity .....                      | 216                              |
| definition .....                          | 154                              |
| errors .....                              | 341                              |
| hierarchy .....                           | 96, 223                          |
| implementation .....                      | 47                               |
| monitoring .....                          | 216                              |
| mounting .....                            | 98, 155, 176, 221, 222           |
| organization .....                        | 47                               |
| recovering the root file system .....     | 199                              |
| restoring from a backup .....             | 164, 166, 167                    |
| root .....                                | 96, 97, 154, 180, 200            |
| unmounting .....                          | 221, 225                         |
| updates .....                             | 342                              |
| using the recovery system to repair ..... | 194                              |
| file:                                     |                                  |
| compatibility .....                       | 53, 54                           |
| format .....                              | 53                               |
| locking .....                             | 58, 59, 60                       |
| logging .....                             | 99                               |
| organization .....                        | 47                               |
| protection .....                          | 53, 54, 101                      |
| restoration .....                         | 164, 166, 167                    |
| sharing and locking .....                 | 58                               |
| transfer .....                            | 211                              |
| flexible disks, setting up .....          | 134                              |
| fork .....                                | 41                               |
| format, file .....                        | 53                               |
| formatting storage media .....            | 205                              |
| free list .....                           | 79                               |
| free map .....                            | 49, 342, 344, 347, 350, 352, 356 |
| free pages .....                          | 80                               |

|                        |         |
|------------------------|---------|
| <b>fsck:</b>           |         |
| checklist file .....   | 154     |
| description .....      | 341     |
| during bootup .....    | 94, 105 |
| preen mode .....       | 97      |
| running manually ..... | 97      |
| <b>fsclean</b> .....   | 341     |

## g

|                           |     |
|---------------------------|-----|
| <b>getty</b> .....        | 94  |
| global data segment ..... | 73  |
| group membership .....    | 193 |

## h

|                                            |               |
|--------------------------------------------|---------------|
| halting the recovery system .....          | 199           |
| halting the system .....                   | 107, 108      |
| hard disks, setting up .....               | 134           |
| hard reset of a terminal .....             | 132           |
| hardware failure .....                     | 345           |
| hardware installation and testing .....    | 12, 14, 16    |
| <b>HP-UX:</b>                              |               |
| activating a newly configured kernel ..... | 107           |
| configuring the operating system .....     | 100, 185, 188 |
| installation .....                         | 11, 19        |
| updates .....                              | 247           |

## i

|                                       |          |
|---------------------------------------|----------|
| i-node .....                          | 342, 343 |
| i-node value .....                    | 47       |
| immediate response .....              | 66       |
| incremental backup .....              | 157      |
| independent file system volume .....  | 355      |
| initialization of storage media ..... | 205      |
| initialization times,disk .....       | 24       |

|                                      |                 |
|--------------------------------------|-----------------|
| installation:                        |                 |
| installing the system .....          | 11, 19, 194     |
| optional products .....              | 247, 258        |
| system accounting .....              | 265             |
| troubleshooting .....                | 36, 37          |
| integrity, media .....               | 216             |
| interactive time configuration ..... | 187             |
| interface card .....                 | 15, 107, 114    |
| interleave factor .....              | 21, 24, 70, 206 |
| internal cartridge tape drive .....  | 14              |
| I/O address .....                    | 86              |

## k

|                                            |     |
|--------------------------------------------|-----|
| kernel:                                    |     |
| activating a newly configured kernel ..... | 107 |
| configuring .....                          | 185 |
| keyboard conventions .....                 | 4   |
| kill character .....                       | 132 |

## l

|                            |            |
|----------------------------|------------|
| LAN .....                  | 176        |
| LIF format .....           | 209        |
| LIF utilities .....        | 213        |
| LIF volume, creating ..... | 210        |
| line printer spooler ..... | 99         |
| link count .....           | 356        |
| links .....                | 51         |
| loading HP-UX .....        | 91, 92     |
| local environment file:    |            |
| <b>.login</b> .....        | 104        |
| <b>.profile</b> .....      | 104        |
| locking files .....        | 58, 59, 60 |
| logging files .....        | 99, 176    |
| <b>.login</b> .....        | 177, 179   |
| login directory .....      | 150        |

|                                     |     |
|-------------------------------------|-----|
| login:                              |     |
| history .....                       | 178 |
| process .....                       | 101 |
| prompt .....                        | 99  |
| root .....                          | 179 |
| tracking logins .....               | 101 |
| after bootup .....                  | 94  |
| application program execution ..... | 102 |
| /etc/passwd file .....              | 102 |
| shell .....                         | 102 |
| lost+found .....                    | 350 |
| LP scheduler .....                  | 244 |
| LP spooler .....                    | 235 |

## m

|                                       |              |
|---------------------------------------|--------------|
| magnetic tape:                        |              |
| immediate response .....              | 66           |
| preventive maintenance .....          | 65           |
| streaming .....                       | 65           |
| definitions .....                     | 61           |
| density .....                         | 61, 64       |
| for backups .....                     | 158          |
| setting up .....                      | 116, 138     |
| major number .....                    | 86, 135      |
| man pages .....                       | 181          |
| mass storage media device files ..... | 134          |
| master device .....                   | 133          |
| media integrity .....                 | 216          |
| media utilities .....                 | 205          |
| memory address .....                  | 69           |
| memory allocation .....               | 69           |
| memory controller .....               | 70           |
| memory volume .....                   | 125          |
| message queue configuration .....     | 187          |
| minimum protections .....             | 30           |
| minor number .....                    | 86, 135, 139 |
| mkrs .....                            | 195, 197     |

|                                 |                        |
|---------------------------------|------------------------|
| modem .....                     | 126                    |
| mounting file systems .....     | 98, 155, 176, 221, 222 |
| moving peripheral devices ..... | 113                    |
| multi-user .....                | 4, 94, 171             |
| multiple links .....            | 51                     |

## n

|                                                |                  |
|------------------------------------------------|------------------|
| naming conventions .....                       | 3, 133, 146, 228 |
| nine-track tape (see also magnetic tape) ..... | 138              |
| non-prime time .....                           | 270              |
| number of cache buffers configuration .....    | 185              |

## o

|                                                 |          |
|-------------------------------------------------|----------|
| on-line documentation .....                     | 181      |
| operating system installation .....             | 11, 19   |
| optional products and file sets, removing ..... | 231      |
| optional products, installing .....             | 247, 258 |
| orphaned files .....                            | 354      |

## p

|                                             |                        |
|---------------------------------------------|------------------------|
| page clustering .....                       | 81                     |
| page frame pool .....                       | 79                     |
| page frame pool size configuration .....    | 186                    |
| page size configuration .....               | 185                    |
| page swap time configuration .....          | 185                    |
| page table .....                            | 79                     |
| paged segment .....                         | 79                     |
| paging area .....                           | 71                     |
| parent process .....                        | 41                     |
| partitions .....                            | 72                     |
| password:                                   |                        |
| changing .....                              | 170                    |
| creating a password .....                   | 147, 152               |
| root .....                                  | 30, 194                |
| PATH environment variable .....             | 98, 103, 178, 179, 268 |
| periodic administration procedures .....    | 98                     |
| peripheral devices, adding and moving ..... | 113                    |
| permission, read, write, execute .....      | 54, 56, 123            |
| plotters, setting up .....                  | 145                    |
| pointers .....                              | 49                     |
| port number .....                           | 86, 126                |

|                                         |               |
|-----------------------------------------|---------------|
| power failure .....                     | 109           |
| powering down the computer .....        | 106, 107      |
| powering up the system .....            | 91, 92        |
| preen mode in <b>fsck</b> .....         | 97            |
| prime time .....                        | 270           |
| printer:                                |               |
| as a spooled device .....               | 144           |
| setting up .....                        | 141           |
| starting the line printer spooler ..... | 99            |
| process accounting .....                | 270, 274, 293 |
| process creation .....                  | 41            |
| process ID .....                        | 45            |
| process termination .....               | 43            |
| processes .....                         | 41            |
| processes per user configuration .....  | 186           |
| <b>.profile</b> .....                   | 177, 179      |
| protecting directories .....            | 56            |
| protecting files .....                  | 53, 54        |
| protection .....                        | 30, 54        |
| protocol, communication .....           | 86, 100       |
| pseudo terminal .....                   | 133           |
| pseudo-device .....                     | 113           |

## r

|                                      |        |
|--------------------------------------|--------|
| read ahead level .....               | 84     |
| read ahead level configuration ..... | 185    |
| read me first document .....         | 12, 33 |
| read permission .....                | 54, 56 |
| real group ID .....                  | 45     |
| real user ID .....                   | 45     |
| reboot .....                         | 107    |
| recovering lost data .....           | 156    |
| recovery from a power failure .....  | 109    |

|                                          |                            |
|------------------------------------------|----------------------------|
| recovery system:                         |                            |
| boot area                                | 195                        |
| booting                                  | 107, 198                   |
| creating                                 | 194, 196                   |
| device files                             | 195, 196, 197, 199         |
| files contained in recovery system       | 195                        |
| recovering the root file system          | 199                        |
| recreating                               | 194                        |
| shutting down                            | 199                        |
| using                                    | 199                        |
| removing kernel segments                 | 218                        |
| removing optional products and file sets | 231                        |
| removing users                           | 147, 153                   |
| respawn                                  | 100                        |
| root device                              | 15, 115, 200               |
| root file system                         | 96, 97, 154, 180, 195, 199 |
| root user                                | 30, 34, 46, 58, 179, 194   |
| root volume                              | 96                         |
| run-level:                               |                            |
| 2                                        | 99                         |
| changing                                 | 98, 108, 171, 172          |
| creating                                 | 171, 173                   |
| default                                  | 94, 98                     |
| description                              | 97, 176                    |
| initdefault                              | 98                         |
| resuming normal operating                | 107                        |
| <i>runacct</i>                           | 321                        |
| s                                        | 94, 105, 106, 108, 171     |

## S

|                               |                 |
|-------------------------------|-----------------|
| <b>sbt</b> ab                 | 195             |
| SDF file system               | 47              |
| security                      | 101, 102        |
| segment area                  | 71              |
| segment table                 | 69, 72          |
| segments, adding and removing | 217, 218        |
| select code                   | 15, 86, 95, 115 |
| semaphore configuration       | 187             |
| sequential access             | 81              |
| set group ID bit (sgid)       | 56              |
| set user ID bit (suid)        | 56              |

|                                             |                          |
|---------------------------------------------|--------------------------|
| setting the date .....                      | 182                      |
| setting the sticky bit .....                | 58                       |
| setting the system clock .....              | 30, 31                   |
| shared code .....                           | 41, 58, 76               |
| shared files .....                          | 58, 167                  |
| shared memory configuration .....           | 188                      |
| shell .....                                 | 102                      |
| shutdown:                                   |                          |
| command syntax .....                        | 106                      |
| /etc/mnttab .....                           | 98                       |
| improper .....                              | 97, 341, 345             |
| resuming normal operating run-level .....   | 107                      |
| shutting down the system .....              | 106, 114                 |
| shutting down the recovery system .....     | 199                      |
| single-user .....                           | 4, 94, 171               |
| slave device .....                          | 133                      |
| software support services .....             | 29                       |
| special files (see also device files) ..... | 85                       |
| spooled device .....                        | 144                      |
| spooler .....                               | 99                       |
| stack segment .....                         | 72                       |
| stack size configuration .....              | 187                      |
| sticky bit .....                            | 58, 77                   |
| streaming tape .....                        | 65                       |
| super-block .....                           | 97, 221, 342, 346, 352   |
| super-user .....                            | 30, 34, 46, 58, 179, 194 |
| suspending a user .....                     | 153                      |
| swap space .....                            | 74                       |
| swap time configuration .....               | 185                      |
| system access, temporary .....              | 34                       |
| system accounting:                          |                          |
| charging fees .....                         | 275                      |
| command options .....                       | 317                      |
| connect session .....                       | 270, 273, 286            |
| corrupted files .....                       | 330                      |
| directory structure .....                   | 278, 279                 |
| disk space .....                            | 281                      |
| disk usage .....                            | 273                      |
| failure .....                               | 322                      |
| files .....                                 | 337                      |
| general .....                               | 263                      |

|                                  |                         |
|----------------------------------|-------------------------|
| holidays .....                   | 329                     |
| individual summaries .....       | 271                     |
| installation .....               | 265, 272                |
| logging in .....                 | 278                     |
| non-prime time .....             | 270                     |
| overview .....                   | 269                     |
| prime time .....                 | 270                     |
| process accounting .....         | 270, 274, 293           |
| record selection options .....   | 303                     |
| reports .....                    | 268, 302                |
| starting .....                   | 176                     |
| summarizing and reporting .....  | 275, 314                |
| total accounting records .....   | 271, 284, 289           |
| system administration mode ..... | 94, 105, 106            |
| system administrator tasks ..... | 5, 111                  |
| system clock .....               | 30, 31, 168, 232        |
| system console .....             | 13, 31, 98, 132         |
| system crash .....               | 156, 166, 167, 341, 345 |
| system deadlock .....            | 60                      |
| system maintenance .....         | 107                     |
| system news .....                | 177                     |
| system partition .....           | 72                      |
| system protection .....          | 30                      |
| system recovery .....            | 109                     |
| system security .....            | 101, 102, 196           |
| system shutdown .....            | 97, 98, 106, 114, 345   |
| system startup .....             | 91, 92, 345             |

## t

|                                 |                  |
|---------------------------------|------------------|
| tape density .....              | 61, 64           |
| tape drives .....               | 14               |
| tape streaming .....            | 65               |
| temporary system access .....   | 34               |
| TERM environment variable ..... | 103              |
| terminal:                       |                  |
| affiliation .....               | 44               |
| configuration .....             | 16, 128          |
| hard reset .....                | 132              |
| setting up .....                | 130, 183         |
| timezone (see also TZ) .....    | 31, 98, 182, 183 |
| total accounting records .....  | 271, 284, 289    |

|                                        |                   |
|----------------------------------------|-------------------|
| total message size configuration ..... | 187               |
| transferring files .....               | 211               |
| troubleshooting .....                  | 36                |
| turning off the computer .....         | 106               |
| TZ environment variable .....          | 98, 103, 178, 182 |

## U

|                               |               |
|-------------------------------|---------------|
| unit number .....             | 86            |
| unmounting file systems ..... | 221, 225, 226 |
| update:                       |               |
| backup script .....           | 159           |
| updating the system .....     | 156, 342      |
| use count .....               | 76            |
| used pages .....              | 80            |

## V

|                                           |         |
|-------------------------------------------|---------|
| verifying the hardware .....              | 14, 16  |
| <b>vfork</b> .....                        | 43      |
| virtual address space .....               | 69      |
| virtual code .....                        | 41      |
| virtual data .....                        | 41      |
| virtual memory .....                      | 73, 358 |
| virtual memory device configuration ..... | 185     |
| volume header .....                       | 53, 352 |
| volume number .....                       | 86      |

## W

|                                          |                 |
|------------------------------------------|-----------------|
| working set pages .....                  | 80              |
| working set ratio configuration .....    | 188             |
| write permission .....                   | 54, 56, 65, 249 |
| write-protect mechanism .....            | 17              |
| write/read errors on magnetic tape ..... | 64              |

---

## Notes

# MANUAL COMMENT CARD

## HP-UX System Administrator Manual

HP Part Number 97089-90059

4/87

Please help us improve this manual. Circle the numbers in the following statement that best indicate how useful you found this manual. Then add any further comments in the spaces below. **In appreciation of your time, we will enter your name in a quarterly drawing for an HP calculator.** Thank you.

The information in this manual:

|                      |   |   |   |   |   |                   |
|----------------------|---|---|---|---|---|-------------------|
| Is poorly organized  | 1 | 2 | 3 | 4 | 5 | Is well organized |
| Is hard to find      | 1 | 2 | 3 | 4 | 5 | Is easy to find   |
| Doesn't cover enough | 1 | 2 | 3 | 4 | 5 | Covers everything |
| Has too many errors  | 1 | 2 | 3 | 4 | 5 | Is very accurate  |

---

Particular pages with errors? \_\_\_\_\_

Comments: \_\_\_\_\_

Name: \_\_\_\_\_

Job Title: \_\_\_\_\_

Company: \_\_\_\_\_

Address: \_\_\_\_\_

Check here if you wish a reply.




NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

**BUSINESS REPLY MAIL**  
FIRST CLASS      PERMIT NO. 37      LOVELAND, COLORADO

POSTAGE WILL BE PAID BY ADDRESSEE

Hewlett-Packard Company  
Fort Collins Systems Division  
Attn: Customer Documentation  
3404 East Harmony Road  
Fort Collins, Colorado 80525

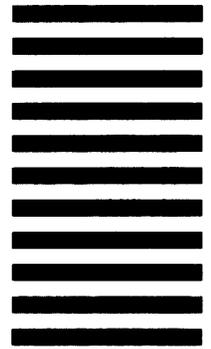





**HP Part Number  
97089-90059**

Microfiche No. 97089-99059  
Printed in U.S.A. 4/87



**97089-90629**

For Internal Use Only