



**SERIES IV
SOFTWARE UPGRADE INSTRUCTIONS
FOR RELEASE 2.8**

**SERIES IV
SOFTWARE UPGRADE INSTRUCTIONS
FOR RELEASE 2.8**

Order Number: 134860-001



This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A Computing Device pursuant to Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

Additional copies of this manual may be obtained from:

Technical Publications, M/S DV2/292
 Integrated Systems Operation - South
 Intel Corporation
 2402 W. Beardsley Road
 Phoenix, Arizona 85027

Other Intel literature may be obtained from:

Literature Department
 Intel Corporation
 3065 Bowers Avenue
 Santa Clara, CA 95051

The information in this document is subject to change without notice.

Intel Corporation makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties to merchantability and fitness for a particular purpose. Intel Corporation assumes no responsibility for any errors that may appear in this document. Intel Corporation makes no commitment to update nor to keep current the information contained in this document.

Intel Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in an Intel product. No other circuit patent licenses are implied.

Intel software products are copyrighted by and shall remain the property of Intel Corporation. Use, duplication or disclosure is subject to restrictions stated in Intel's software license, or as defined in ASPR 7-104.9(a)(9).

No part of this document may be copied or reproduced in any form or by any means without the prior written consent of Intel Corporation.

The following are trademarks of Intel Corporation and its affiliates and may be used only to describe Intel products:

AEDIT	iDBP	iOSP	MULTIMODULE
BITBUS	iDIS	iPDS	Plug-A-Bubble
BXP	iLBX	iRMX	PROMPT
COMMputer	i _m	iSBC	Promware
CREDIT	iMMX	iSBX	QUEX
Data Pipeline	Insite	iSDM	QUEST
GENIUS	int _l	iSXM	Ripplemode
i	int _l IBOS	Library Manager	RMX/80
Δ	Intelevision	MCS	RUPI
iATC	int _l elligent Identifier	Megachassis	Seamless
i ₂ ICE	int _l elligent Programming	MICROMAINFRAME	SOLO
ICE	Intellec	MULTIBUS	SYSTEM 2000
iCS	Intellink	MULTICHANNEL	UPI

and the combination of ICE, iCS, iRMX, iSBC, iSBX, or MCS and a numerical suffix.

REV	REVISION HISTORY	DATE
-001	Original Release	5/16/84

INTEL

PREFACE

This manual is provided for the customer or Intel Customer Engineer who is upgrading the operating system on the local Winchester drive of an Intellec Series IV Development System to Software Release 2.8. It consists of the following information:

- Series IV Software Upgrade Instructions for Release 2.8, provides procedures to install Release 2.8 software on a standalone Series IV Development System.

Related Publications

For more information on the Series IV system, refer to the following manuals:

Intellec Series IV Operating and Programming Guide, Order No. 121753

Intellec Series IV Microcomputer Development System Overview, Order No. 121752

Intellec Series IV Installation and Checkout Manual, Order No. 121757

If the Series IV is being used as a network workstation, refer to the following manuals:

NDS-II Network Resource Manager User's Guide, Order No. 134300

NDS-II Software Upgrade Instructions for Release 2.8, Order No. 134861

INTEL

**SERIES IV
SOFTWARE UPGRADE
INSTRUCTIONS FOR RELEASE 2.8**

GENERAL

This document contains the information necessary for the user to upgrade the operating system on the local Winchester drive of an Inteltec Series IV Development System to Software Release 2.8. If the Series IV is being used as a workstation on an NDS-II System, the operating system must also be upgraded at the NRM (refer to the NDS-II Software Upgrade Instructions for Release 2.8).

SYSTEM INVENTORY

Verify that all items listed below have been received in the iMDX-430-U28 SIV Field Upgrade Kit. As a safety precaution, backup copies of the diskettes should be made using the SDCOPY CUSP prior to performing the upgrade.

a. Literature:

- Dear Customer Letter (Order No. 135065)
- Series IV Product Release Notes (Order No. 121942)
- Series IV Operating And Programming Guide (Order No. 121753)

b. Diskettes:

- SIV/3 iNDX.S31 Operating System (P/N 133640-007); for systems without a SPU Board
- SIV/4 iNDX.S41 Operating System (P/N 133639-007); for systems with a SPU Board
- SIV iNDX.CUSPS (P/N 133641-004)
- ISIS System Install Disk (P/N 114193-005)
- SIV Supplemental Diagnostics (P/N 134444-002)

RELEASE 2.8 SOFTWARE INSTALLATION

Perform the following procedure to install the software:

1. Ensure that the Configuration switches are set to select Floppy Drive 0 (FL0) as the boot device (see Table 3-1 in the Installation and Checkout Manual).
2. Power-up the system by setting the circuit breaker (left rear of system) to the ON (1) position.
3. Insert the appropriate diskette, as defined below, in Drive 0. Ensure that the diskette is **NOT** write protected (no tab over the Write-Enable slot).

iNDX.S31 diskette - Series IV without SPU Board (SIV/3)
iNDX.S41 diskette - Series IV with SPU Board (SIV/4)

4. Momentarily depress the RESET switch located on the right-hand corner at the back of the unit. After the power-up diagnostic tests have completed, the operating system will be booted from the diskette and the following message will be displayed:

```
SIV Boot Vx.y
Mini-floppy dr 0
```

```
WAITING FOR WINCHESTER INIT, ...
Copyright 1982, 1983, 1984 Intel Corporation
User space has xxxK bytes
iNDX-Sx1 (Vx.y)
```

```
ENTER DATE (mm/dd/yy <CR>):
```

Enter the date in the requested format.

5. The system will then prompt for the time as follows:

```
ENTER TIME (hh:mm:ss <CR>):
```

Enter the time in the 24 hour format.

6. After a few seconds, the iNDX sign-on message and prompt character ">" are displayed as follows:

```
iNDX-Sx1 (Vx.y) Logon Version Vx.y
>
```

The LOGON, IMPORT and EXIT command options are displayed in reverse video on the command line (line 25).

NOTE

Only the letters shown in upper case in the command line (line 25 on the screen) must be typed by the user when entering a command. The remainder of the word is completed by the Syntax Builder feature of the operating system. The FILL command may be used to disable or modify this feature (refer to the Inteltec Series IV Operating and Programming Manual). In the following procedures all user input is shown in boldface.

7. Logon by typing:

>**Logon SUPERUSER<cr>**

When queried for the password, enter PASSME (default password) or the existing superuser password.

NOTE

If a new system disk is installed and needs to be formatted or the target system disk needs to be reformatted, refer to Chapter 2 of the Inteltec Series IV Installation and Checkout Manual for instructions on performing a **SYSTEM.BUILD**. Note that when this command is used, all data on the target system disk will be destroyed.

8. To copy the new operating system onto an existing system disk without destroying data files, type the following:

>**Submit /iNDX.Sx1/SYSTEM.COPY (FL0,sdt,vrd)<cr>**

where:

iNDX.Sx1 = iNDX.S31 or iNDX.S41

FL0 = source floppy device name.

sdt = target system disk device type; for example,
 - WM0 (integral 5 1/4-inch Winchester)
 - WD0 (8-inch Winchester in P-Box)
 - HD0 (iMDX-740 fixed platter)

vrd = Volume Root Directory of the target System Disk (e.g.; W0, MW, WINI0, SYS.DSK). Use the original volume name.

example: **SUBmit /iNDX.S31/SYSTEM.COPY (fl0,wm0,wini0)**

NOTE

A log file will be produced under the following pathname:

/vrd/SYSTEM/SYSCPY.LOG

If problems are encountered during the SYSTEM.COPY, this log file should be examined to help determine the cause of the problem.

9. After the SYSTEM.COPY is complete and a prompt is displayed on line 23, logoff the system by typing:

>LOGOff<cr>

10. A Logoff message followed by a prompt is output. Remove the diskette (iNDX.S31 or iNDX.S41) from Floppy Drive 0.

NOTE

The System Disk now contains the operating system and several of the iNDX files. From this point on, you will boot from, LOGON, and run the system from the System Disk.

11. Set the Configuration switches to select the System Disk as the boot device (refer to Table 3-1 in the Installation and Checkout Manual).
12. Momentarily depress the RESET switch to boot the operating system from the System Disk.
13. When prompted, enter the DATE and then the TIME in the format used in steps 5 and 6.
14. Refer to step 7 and Logon as SUPERUSER and enter the password.

15. Insert the iNDX.CUSPS Diskette into Floppy Drive 0 and type:

```
>SUBmit /vrd/CUSPS.COPY (vrd)<cr>
```

where:

vrd = Volume Root Directory (same as used in
SYSTEM.COPY)

example: SUBmit /WINI0/CUSPS.COPY (WINI0)

16. When the CUSPS Copy has completed, a single prompt will be displayed on line 23. At this time, remove the iNDX.CUSPS diskette.

NOTE

A log file will be produced under the following
pathname:

```
/vrd/SYSTEM/CSPCPY.LOG
```

If problems are encountered during the
CUSPS.COPY, this log file should be examined
to help determine the cause of the problem.

17. To copy the ISIS operating system, verify that the write-
enable tab is removed from the ISIS System Install diskette,
insert it into Floppy Drive 0 and type:

```
SUBmit /ISIS.SYS/ISIS.COPY (ISIS.SYS,vrd)<cr>
```

where:

vrd = Volume Root Directory (same as used in
SYSTEM.COPY)

example: SUBmit /ISIS.SYS/ISIS.COPY (ISIS.SYS,WINI0)

18. When the ISIS.COPY is complete, remove the ISIS System
Install diskette from Floppy Drive 0.

NOTE

A log file will be produced under the following pathname:

/vrd/SYSTEM/ISISCP.LOG

If problems are encountered during the ISIS.COPY, this log file should be examined to help determine the cause of the problem.

19. Execute Sysgen to configure the system options by typing:

>SYSGen<cr>

See Figure 1 for an illustration of the SYSGEN screen.

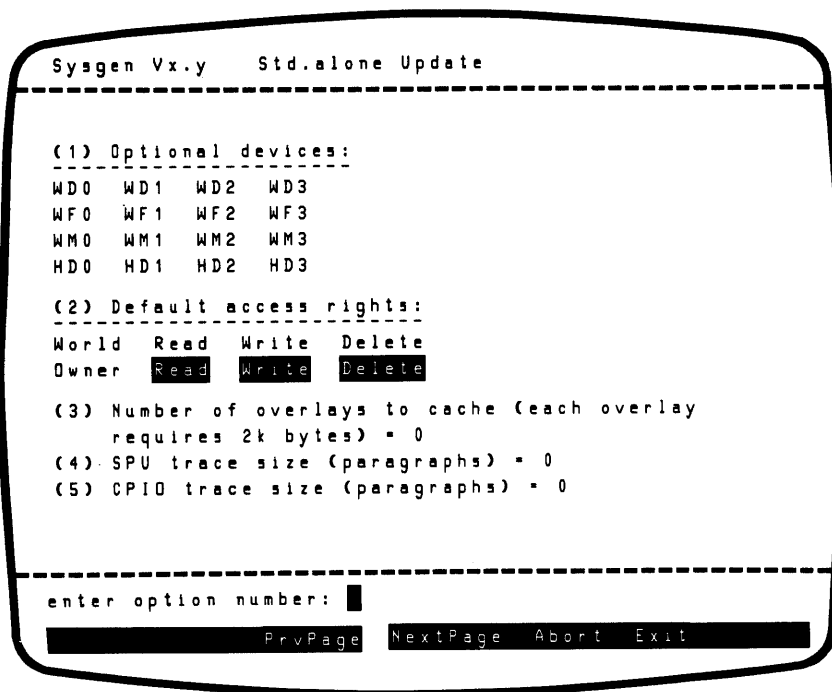


Figure 1. SYSGEN Screen

NOTE

Refer to Chapter 4 of the Operating and Programming Guide for detailed instructions on configuring the system using SYSGEN.

20. When the new SYSGEN information has been entered, type EXIT to create the new configuration. After the prompt appears, logoff the system by typing:

>LOGOff<cr>
21. Momentarily depress the RESET switch to boot the operating system from the System Disk.
22. When prompted, enter the DATE and then the TIME in the format used in steps 5 and 6.
23. Refer to step 7 and Logon as SUPERUSER and enter the password.
24. The Release 2.8 System Software is now completely installed and the Series IV is ready for use as a standalone system.



REQUEST FOR READER'S COMMENTS

Intel's Technical Publications Departments attempt to provide publications that meet the needs of all Intel product users. This form lets you participate directly in the publication process. Your comments will help us correct and improve our publications. Please take a few minutes to respond.

Please restrict your comments to the usability, accuracy, readability, organization, and completeness of this publication. If you have any comments on the product that this publication describes, please contact your Intel representative. If you wish to order publications, contact the Intel Literature Department (see page ii of this manual).

1. Please describe any errors you found in this publication (include page number).

2. Does the publication cover the information you expected or required? Please make suggestions for improvement.

3. Is this the right type of publication for your needs? Is it at the right level? What other types of publications are needed?

4. Did you have any difficulty understanding descriptions or wording? Where?

5. Please rate this publication on a scale of 1 to 5 (5 being the best rating.) _____

NAME _____ DATE _____

TITLE _____

COMPANY NAME/DEPARTMENT _____

ADDRESS _____

CITY _____ STATE _____ ZIP CODE _____
(COUNTRY)


Please check here if you require a written reply

WE'D LIKE YOUR COMMENTS . . .

This document is one of a series describing Intel products. Your comments on the back of this form will help us produce better manuals. Each reply will be carefully reviewed by the responsible person. All comments and suggestions become the property of Intel Corporation.



NO POSTAGE
NECESSARY
IF MAILED
IN U.S.A.

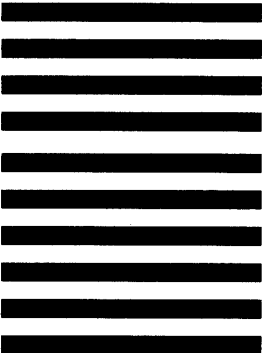

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 1040 SANTA CLARA, CA

POSTAGE WILL BE PAID BY ADDRESSEE

Intel Corporation
Attn: Technical Publications M/S DV2-291
2402 West Beardsley Road
Phoenix, Arizona 85027



INTEL CORPORATION, 3065 Bowers Avenue, Santa Clara, California 95051 (408) 987-8080

Printed in U.S.A.

ARS/0684/750 LW

Development Systems